NAVIGATION ECU

REPLACEMENT

6709E–01

HINT:

COMPONENTS: See page 67–1

1. REMOVE LUGGAGE COMPARTMENT FLOOR MAT


2. REMOVE SPARE WHEEL COVER ASSY

3. REMOVE LUGGAGE COMPARTMENT SIDE COVER SUB–ASSY RH

4. REMOVE LUGGAGE COMPARTMENT TRIM HOOK NO.1
(See page 76–5)


5. REMOVE REAR FLOOR FINISH PLATE
(See page 76–5)

6. REMOVE LUGGAGE COMPARTMENT TRIM COVER INNER LH
(See page 76–5)

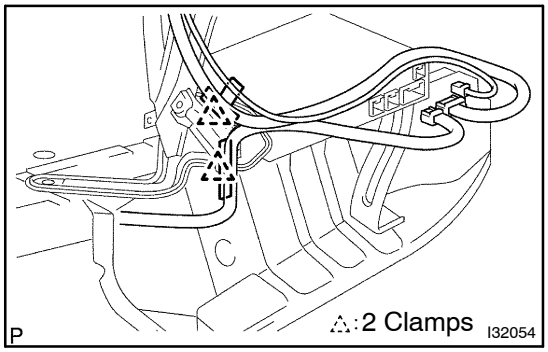


7. REMOVE NAVIGATION ECU

(a) Disconnect the connectors and remove the 2 clamps.

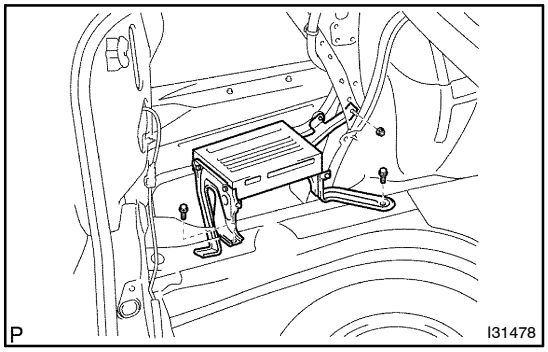


(b) Remove the nut and 2 bolts, then remove the navigation ECU.

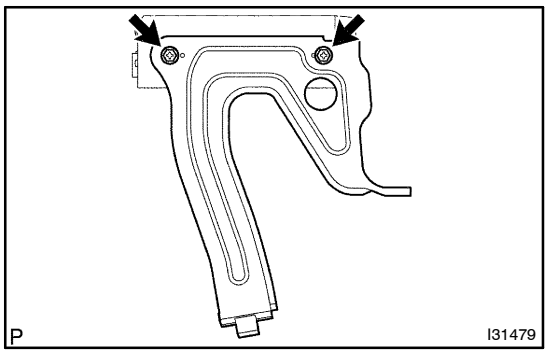

8. REMOVE DISC PLAYER BRACKET

(a) Remove the 2 screws and disc player bracket.

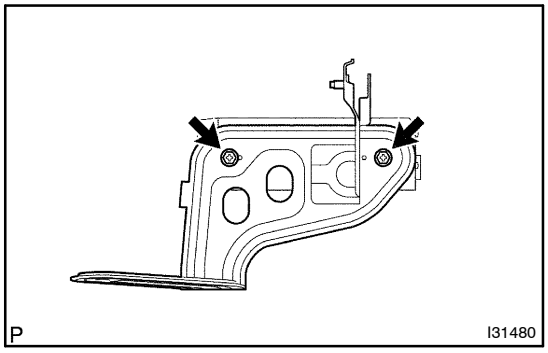

9. REMOVE DISC PLAYER BRACKET NO.2

(a) Remove the 2 screws and disc player bracket No.2.