NAVIGATION ANTENNA ASSY

REPLACEMENT

6709N–01

HINT:

COMPONENTS: See page 67–1

1. **REMOVE LUGGAGE COMPARTMENT FLOOR MAT**

2. **REMOVE SPARE WHEEL COVER ASSY**


3. **REMOVE LUGGAGE COMPARTMENT TRIM HOOK NO.1**
   (See page 76–5)
4. **REMOVE REAR FLOOR FINISH PLATE**
   (See page 76–5)
5. **REMOVE LUGGAGE COMPARTMENT TRIM COVER INNER LH**
   (See page 76–5)
6. **REMOVE REAR SEAT CUSHION ASSY(See page 72–21)**
7. **REMOVE REAR SEAT BACK ASSY RH(See page 72–21)**
8. **REMOVE REAR SEAT BACK ASSY LH**
9. **REMOVE REAR SIDE SEAT BACK ASSY RH(See page 72–21)**
10. **REMOVE REAR SIDE SEAT BACK ASSY LH**
11. **REMOVE ROOF SIDE GARNISH INNER RH(W/O CURTAIN SHIELD AIR BAG)**
    (See page 76–21)
12. **REMOVE ROOF SIDE GARNISH INNER LH(W/O CURTAIN SHIELD AIR BAG)**

13. **REMOVE ROOF SIDE GARNISH INNER RH(W/ CURTAIN SHIELD AIR BAG)**
    (See page 76–21)
14. **REMOVE ROOF SIDE GARNISH INNER LH(W/ CURTAIN SHIELD AIR BAG)**

15. **REMOVE REAR SEAT SHOULDER BELT COVER RH**
    (See page 61–13)
16. **REMOVE PACKAGE TRAY TRIM PANEL ASSY**
    (See page 67–7)
17. **REMOVE REAR SEAT 3 POINT TYPE BELT ASSY OUTER**
    (See page 61–13)
18. **REMOVE REAR SEAT INNER W/CENTER BELT ASSY RH**
    (See page 61–13)
19. **REMOVE REAR SEAT INNER W/CENTER BELT ASSY LH**
    (See page 61–13)
20. **REMOVE ROOM PARTITION BOARD LH**
    (See page 67–7)
21. **REMOVE ROOM PARTITION BOARD RH**
    (See page 67–7)

22. **REMOVE NAVIGATION ANTENNA ASSY**

(a) Disconnect the connector.

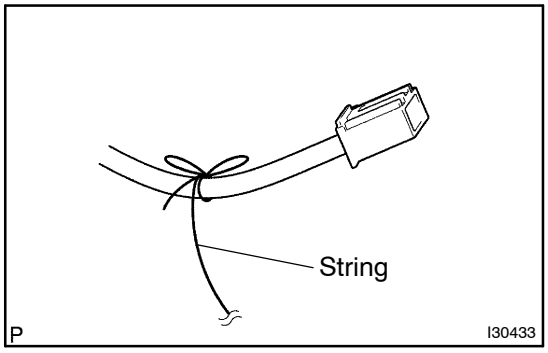


(b) Tie the string at the tip of the cable of the navigation antenna assy.

(c) Remove the screw.

(d) Remove the 2 clamps and navigation antenna assy.

NOTICE:

As the string is used at the time of installation,remain it putting through the luggage room and the room side.

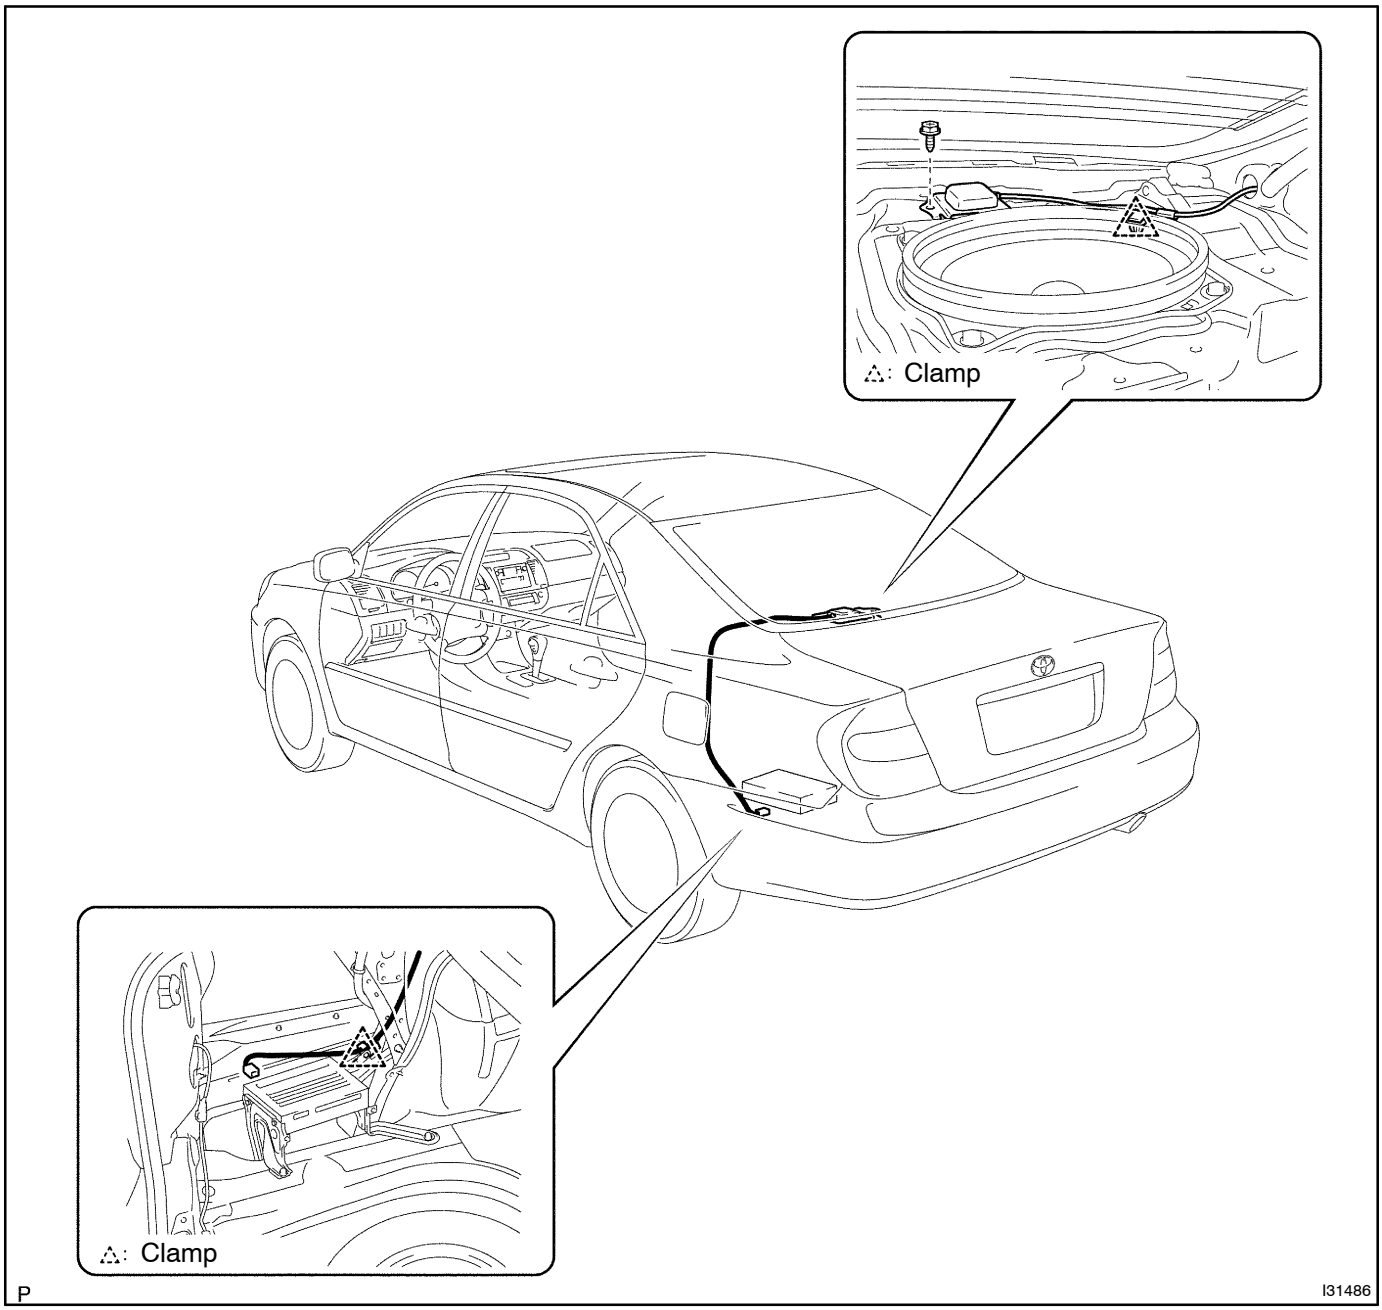

23. INSTALL NAVIGATION ANTENNA ASSY

(a) Detach the string put through the luggage room and the room side from the connector and attach it with a new navigation antenna assy.
(b) Using this string put the navigation antenna assy through the luggage room and the room side.

NOTICE:
To prevent the connector from being damaged, wrap protective tape around the tip of connector of the navigation antenna assy.

(c) Install the navigation antenna assy with screw and 2 clamps.
(d) Connect the connector.

24. INSTALL REAR SEAT INNER W/CENTER BELT ASSY LH
(See page 61–13)
25. INSTALL REAR SEAT 3 POINT TYPE BELT ASSY OUTER
(See page 61–13)
26. INSTALL REAR SEAT INNER W/CENTER BELT ASSY RH
(See page 61–13)
27. INSTALL REAR SIDE SEAT BACK ASSY LH
(See page 72–21)
28. INSTALL REAR SIDE SEAT BACK ASSY RH
(See page 72–21)
29. INSTALL REAR SEAT BACK ASSY RH(See page 72–21)
30. INSTALL REAR SEAT BACK ASSY LH