POWER POINT SOCKET ASSY RR

REPLACEMENT

6709I–01

HINT:


COMPONENTS: See page 67–1

1. REMOVE FLOOR SHIFT SHIFT LEVER KNOB SUB–ASSY(M/T TRANSAXLE)

2. REMOVE CONSOLE PANEL UPPER REAR
(See page 71–10)

3. REMOVE CONSOLE BOX CARPET


4. REMOVE RR CONSOLE BOX(See page 71–10)

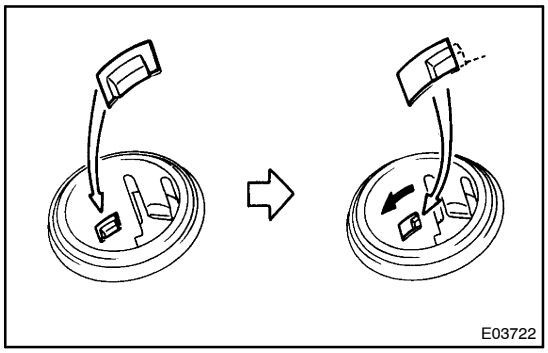

5. REMOVE POWER POINT SOCKET ASSY RR

(a) Remove the clamp.

(b) Turn the socket in the circumference direction as shown the illustration, disengage the claw between the socket and the power outlet socket cover RR, and push out the socket to the room side.

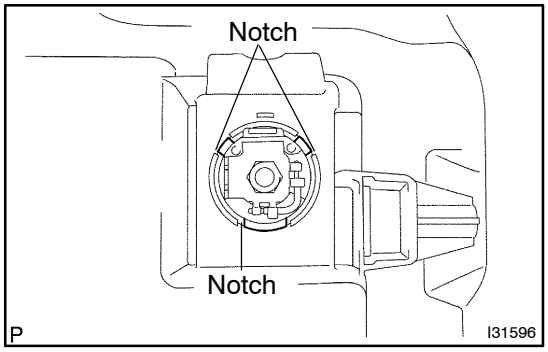

(c) Align the socket with the notch on the power outlet socket cover RR, remove the power point socket assy RR to the room side.

6. INSTALL POWER POINT SOCKET ASSY RR

(a) Align the socket with the notch on the power outlet socket cover RR, push the power point socket assy RR into as hard as possible and install it.