
INNER REAR VIEW MIRROR ASSY

700BU–01

REPLACEMENT

HINT:
Installation is according to the reverse order of the removal.

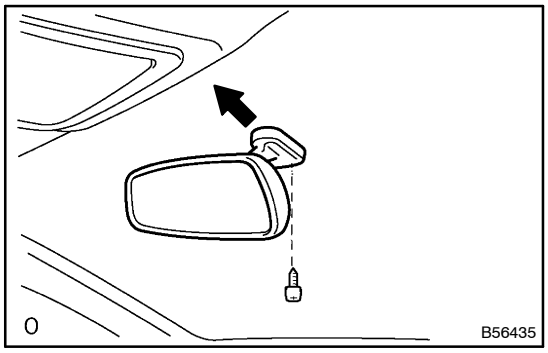

1. REMOVE INNER REAR VIEW MIRROR ASSY

(a) Remove the screw.
(b) w/ Erectro chromic inner mirror:
Remove the inner rear view mirror cover.
(c) w/ Erectro chromic inner mirror:
Disconnect the connector.
(d) Remove the rear view inner mirror assembly.