OUTER REAR VIEW MIRROR SUB–ASSY RH


700BW–01

REPLACEMENT

HINT:

In the LH side, work in the same procedure as in the RH side.

1. **REMOVE POWER WINDOW REGULATOR MASTER SWITCH ASSY(See page 75–8)**
2. **REMOVE FRONT DOOR LOWER FRAME BRACKET GARNISH RH(See page 75–8)**
3. **REMOVE FRONT DOOR INSIDE HANDLE BEZEL PLUG RH(See page 75–8)**
4. **REMOVE FRONT DOOR TRIM BOARD SUB–ASSY RH(See page 75–8)**

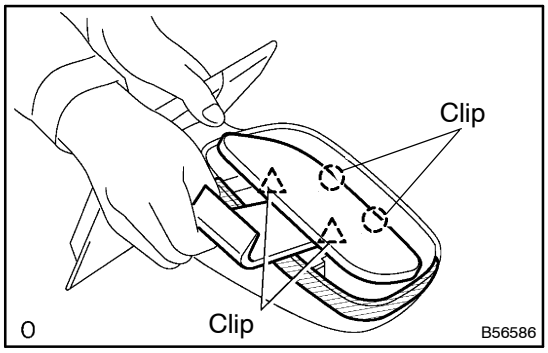


5. **REMOVE OUTER REAR VIEW MIRROR SUB–ASSY RH (W/O OUTER MIRROR HEATER)**

(a) Tape the outer mirror body with protection tape.

(b) Using a roof–moulding remover, disengage the clips placed in the lower part of mirror.

(c) Pull out the outer rear view mirror.

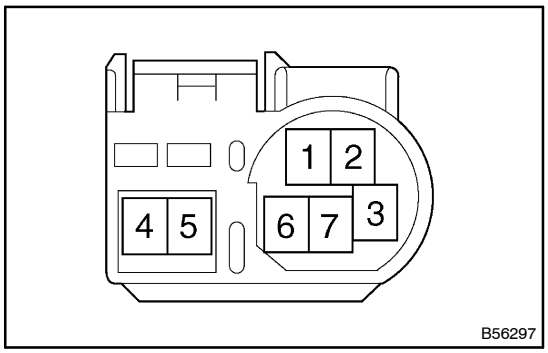

6. **REMOVE OUTER REAR VIEW MIRROR SUB–ASSY RH (W/ OUTER MIRROR HEATER)**


(a) Disconnect the wire harness of terminals 4 and 5 from the connector.

(1) Using a screwdriver to hold the connector lance up, pull out the wire harness terminal.

(b) Tape the outer mirror body with protection tape.

(c) Using a roof–moulding remover, disengage the clips placed in the lower part of mirror.

(d) Pull out the outer rear view mirror.

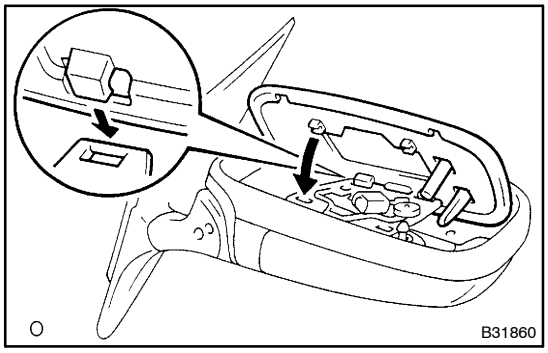

7. **INSTALL OUTER REAR VIEW MIRROR SUB–ASSY RH (W/O OUTER MIRROR HEATER)**

(a) Insert the claws placed in the upper part of backside of the mirror into the actuator hole.

(b) Set the mirror in the actuator.

(c) Insert the lower portion of the mirror to engage the 2 clips securely.

8. INSTALL OUTER REAR VIEW MIRROR SUB–ASSY RH (W/ OUTER MIRROR HEATER)

(a) Insert the claws placed in the upper part of backside of the mirror into the actuator hole.

(b) Set the mirror in the actuator.

(c) Insert the lower portion of mirror to engage the 2 clips securely.

(d) Connect the wire harness terminal to the connector.