
7207A–01

OVERHAUL

HINT:
Installation is the revers order of the removal. But, the installation is indicated only when it has a point.

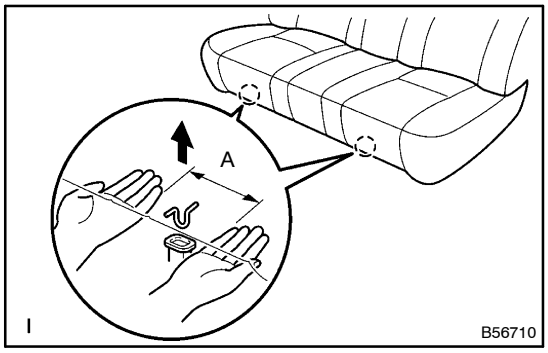

1. REMOVE REAR SEAT CUSHION ASSY

(a) Holding up the front end of the cushion assembly, disengage the clips and pull out the rear seat cushion assembly forward to remove it.
A: 100 mm (3.94 in.)

NOTICE:
The cushion frame will be deformed unless holding the clips around the roots.


2. REMOVE REAR SEAT HEADREST ASSY CENTER

3. REMOVE REAR SEAT HEADREST ASSY

4. REMOVE REAR SEAT BACK ASSY RH

(a) Tilting the seat forward, remove the 2 clips that are engaged with the floor.
(b) Remove the 2 bolts and the rear seat back assembly.
(c) Employ the same manner described above to the other side.

5. REMOVE REAR SEAT BACK ASSY LH

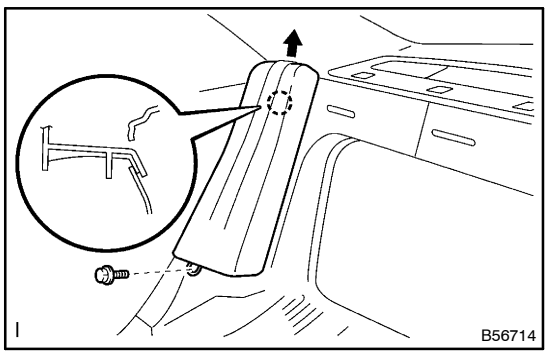

6. REMOVE REAR SIDE SEAT BACK ASSY RH

(a) Remove the bolt and pull it out in the illustrated direction to remove the side seat back assembly.
(b) Employ the same manner described above to the other side.

7. REMOVE REAR SIDE SEAT BACK ASSY LH


8. REMOVE REAR SEAT BACK HINGE COVER

9. REMOVE REAR SEAT ARMREST ASSY CENTER

(a) Remove bolt and the rear seat armrest assembly center.


10. REMOVE REAR SEAT SHOULDER BELT GUIDE CENTER

11. REMOVE REAR SEAT BACK LOCK CONTROL BEZEL

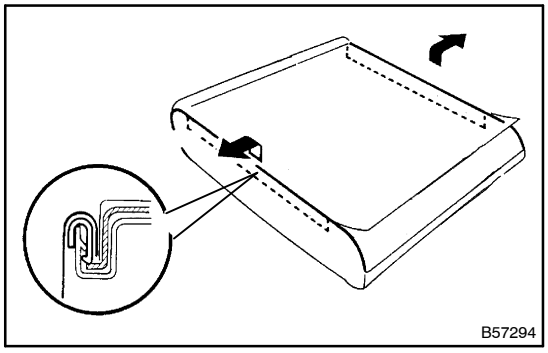

12. REMOVE SEPARATE TYPE REAR SEAT BACK COVER

(a) Disengage the back cover side, and then turn up the rear seat back carpet.
(b) Remove rear seat back lock release button

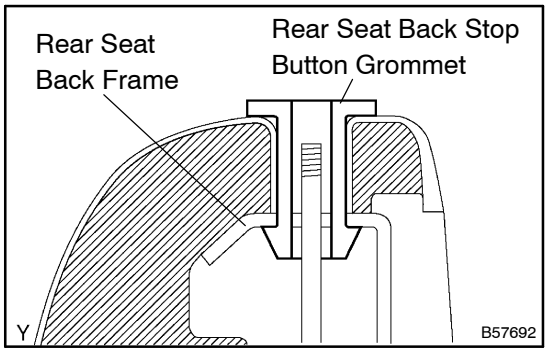

(c) Remove rear seat back stop button grommet
(d) Remove the hog rings, and hold up the seat back frame to remove the 2 headrest supports
(e) Remove the rear seat back cover together with the seat back pad.
(f) Remove the hog rings, and then take away the rear seat cover assembly from the rear seat back pad.


13. REMOVE SEPARATE TYPE REAR SEAT BACK COVER

14. REMOVE REAR SEAT BACK LOCK ASSY RH

(a) Remove the 2 bolts and the rear seat back lock assembly RH.
(b) Employ the same manner described above to the other side.

15. REMOVE REAR SEAT BACK LOCK ASSY LH

16. REMOVE BENCH TYPE REAR SEAT CUSHION COVER

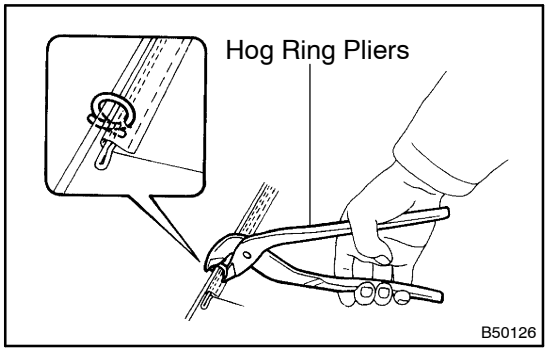


17. INSTALL BENCH TYPE REAR SEAT CUSHION COVER

(a) Using hog ring pliers, install new hog rings.

NOTICE:

- **Be careful not to damage the cover.**
- **When installing the hog rings, take care to prevent wrinkles as little as possible.**

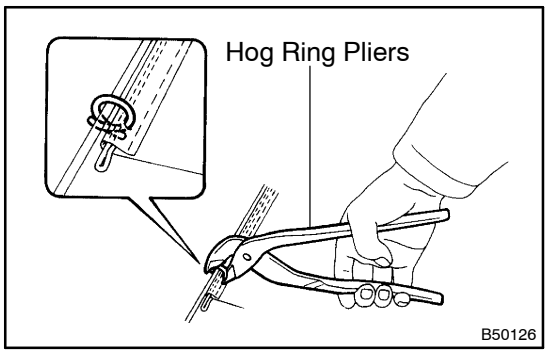

18. INSTALL SEPARATE TYPE REAR SEAT BACK COVER

(a) Using hog ring pliers, install new hog rings.

NOTICE:

- **Be careful not to damage the cover.**
- **When installing the hog rings, take care to prevent wrinkles as little as possible.**

19. INSTALL SEPARATE TYPE REAR SEAT BACK COVER

(a) Using hog ring pliers, install new hog rings.

NOTICE:

- **Be careful not to damage the cover.**
- **When installing the hog rings,take care to prevent wrinkles as little as possible.**

(b) Using hog ring pliers, install new hog rings.

20. INSTALL REAR SEAT BACK HINGE SUB–ASSY CENTER

(a) Install the rear seat back hinge center with the 2 bolts.
Torque: 18 N·m (183 kgf·cm, 13 ft·lbf)

21. INSTALL REAR SEAT BACK HINGE SUB–ASSY RH

(a) Install the 2 rear seat back hinge with the 2 bolts.
Torque: 18 N·m (183 kgf·cm, 13 ft·lbf)

22. INSTALL REAR SIDE SEAT BACK ASSY LH

(a) Install the rear side seat back assembly with the 2 bolts.
Torque: 18 N·m (183 kgf·cm, 13 ft·lbf)

(b) Employ the same manner described above to the other side.

23. INSTALL REAR SIDE SEAT BACK ASSY RH

(a) Install the rear side seat back assembly with the 2 bolts.
Torque: 18 N·m (183 kgf·cm, 13 ft·lbf)

24. INSTALL REAR SEAT BACK ASSY RH

(a) Install the rear seat back assembly with the 2 bolts.
Torque: 18 N·m (183 kgf·cm, 13 ft·lbf)

(b) Employ the same manner described above to the other side.

25. INSTALL REAR SEAT BACK ASSY LH