
73081–02

INSPECTION

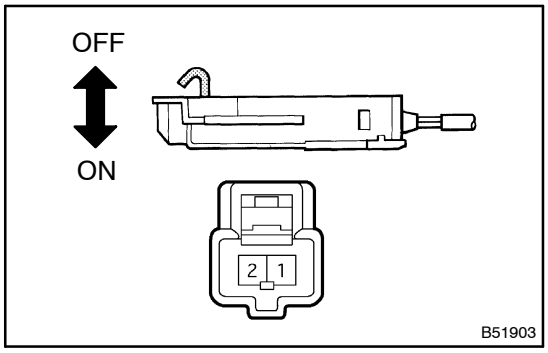


1. INSPECT UN–LOCK WARNING SWITCH ASSY

(a) Check the switch continuity.

Standard:

Terminal No.	Condition	Specification
1 ⇔ 2	Switch pressed in	Continuity
	Switch not pressed in	No continuity

If the continuity is not as specified, replace the switch.

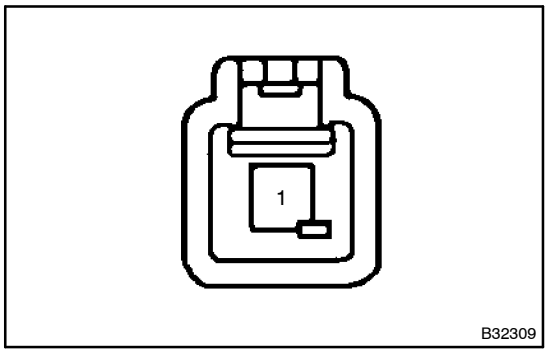

2. INSPECT COURTESY LAMP SWITCH

(a) Check the switch continuity.

Standard:

Terminal No.	Condition	Specification
1 ⇔ Switch body	FREE	Continuity
	PUSH	No continuity

If the continuity is not as specified, replace the switch.