
HOOD

ADJUSTMENT


7509G–01

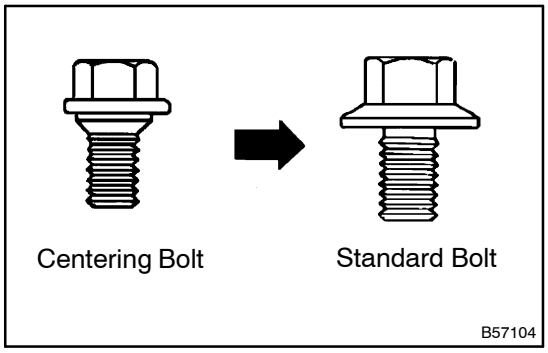


HINT:
Since the centering bolt is used as a hood hinge set bolt and hood lock set bolt, the hood and hood lock can not be adjusted with it on. Substitute a bolt with washer for the centering bolt.

1. INSPECT HOOD SUB–ASSY


(a) Check that the clearance is within the standard value.

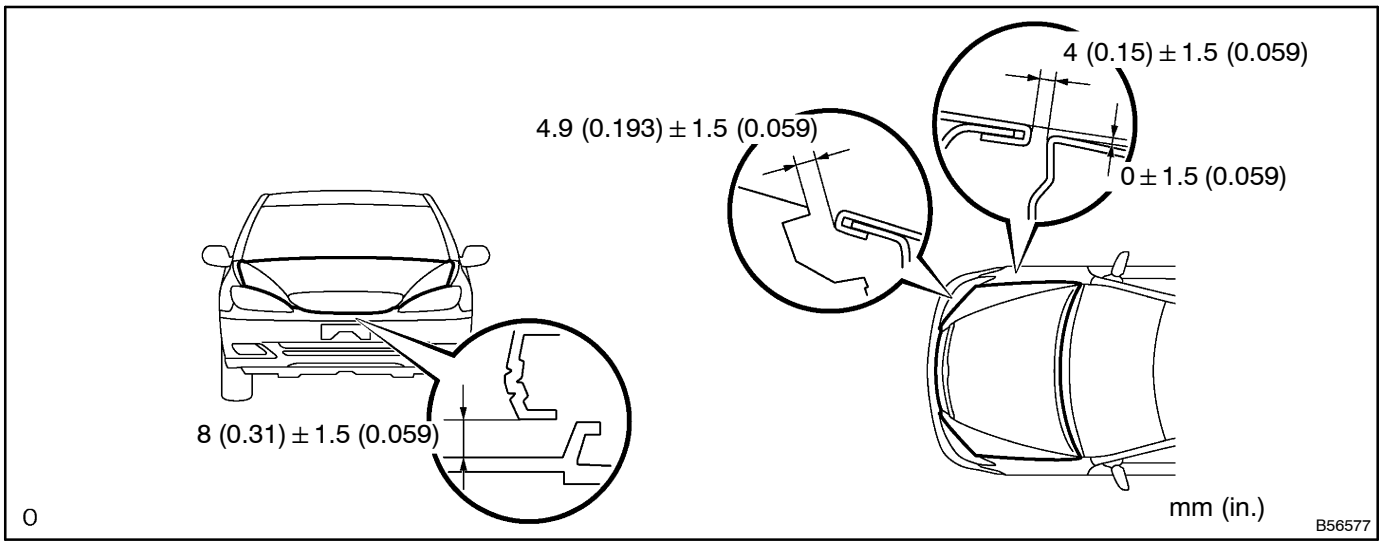

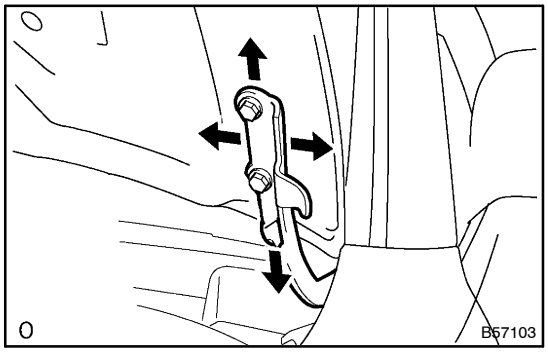


2. ADJUST HOOD SUB–ASSY

(a) Adjust the hood by loosening the hood side hinge bolts.
Torque: 26 N·m (265 kgf·cm, 19 ft·lbf)

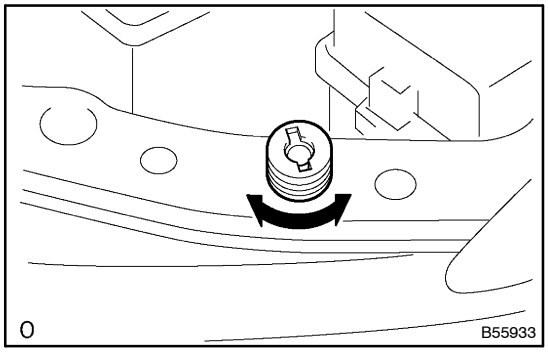

(b) Adjust the hood by turning the cushions.

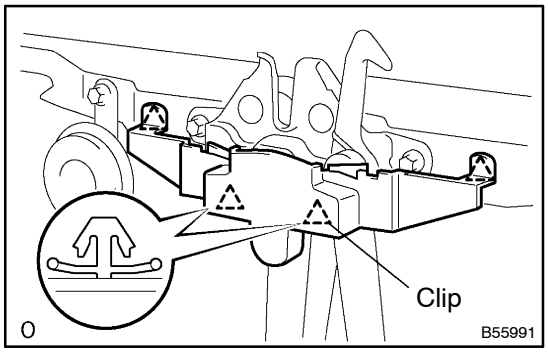


(c) Using a screwdriver, remove the hood lock release lever cover.

HINT:

Tape the screwdriver tip before use.

NOTICE:

Removing the protector damages the clips inside the protector, and therefore the use of a new protector is necessary on installation.

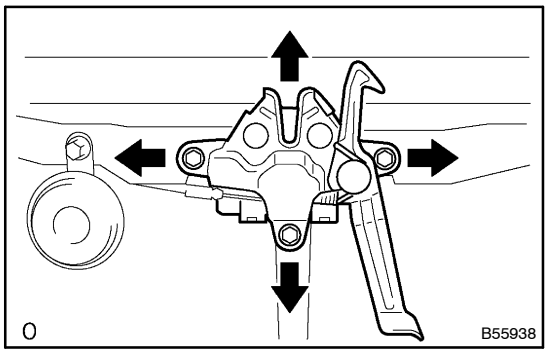

(d) Adjust the lock by loosening the bolts.