
HOOD SUPPORT ROD

REPLACEMENT

7509I–01

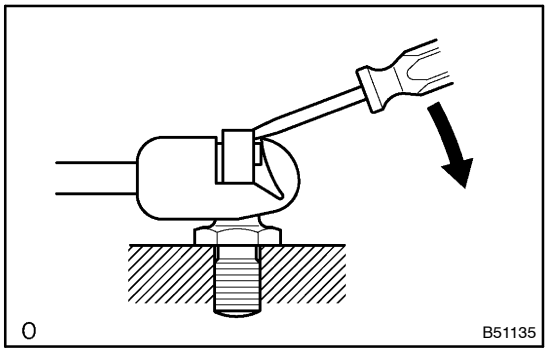

1. REMOVE HOOD SUPPORT ROD

(a) Using a screwdriver to hold the left spring, disengage the upper and lower parts of the support rod, and then remove the hood support rod.

NOTICE:

Removal should be done while the hood is being held up.

2. INSTALL HOOD SUPPORT ROD

NOTICE:

- **Install a metal socket onto the hood but a resinous one onto the body.**
- **After the installation, make sure that the socket is securely attached.**