
LUGGAGE COMPARTMENT DOOR

7509P–01

ADJUSTMENT

1. INSPECT LUGGAGE COMPARTMENT DOOR PANEL SUB–ASSY

(a) Check that the clearance is within the standard value.

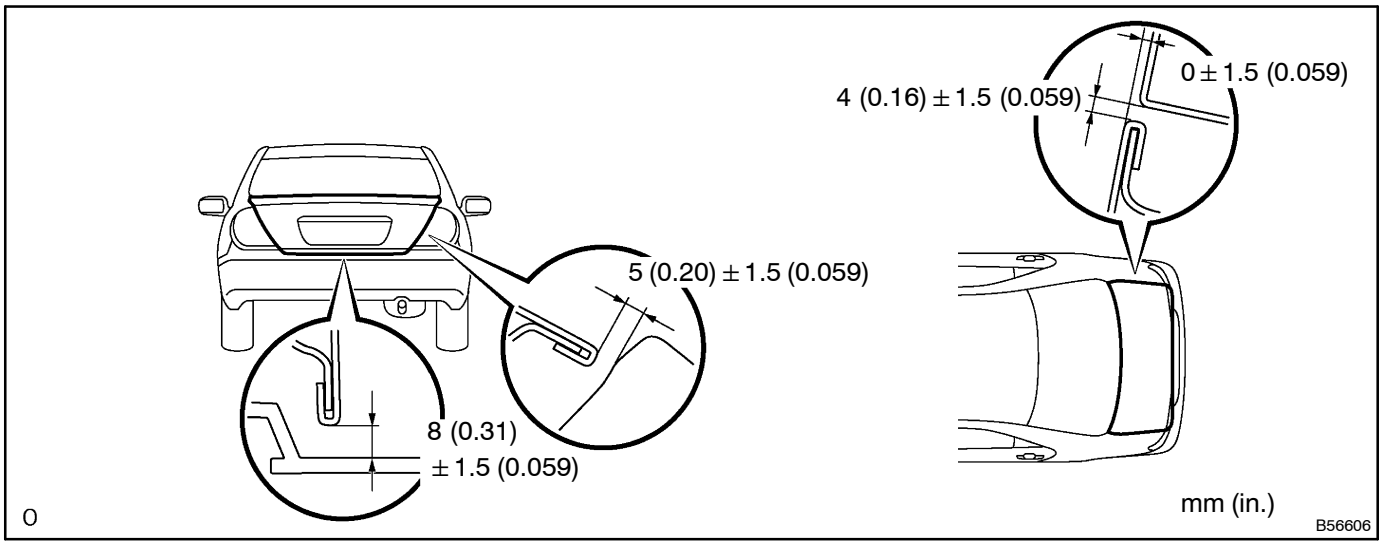

2. REMOVE LUGGAGE COMPARTMENT DOOR COVER(See page 76–5)


3. REMOVE LUGGAGE COMPARTMENT FLOOR MAT(See page 76–5)

4. REMOVE SPARE WHEEL COVER ASSY(See page 76–5)

5. REMOVE LUGGAGE COMPARTMENT SIDE COVER SUB–ASSY RH(See page 76–5)

6. REMOVE LUGGAGE COMPARTMENT TRIM HOOK NO.1(See page 76–5)


7. REMOVE REAR FLOOR FINISH PLATE(See page 76–5)

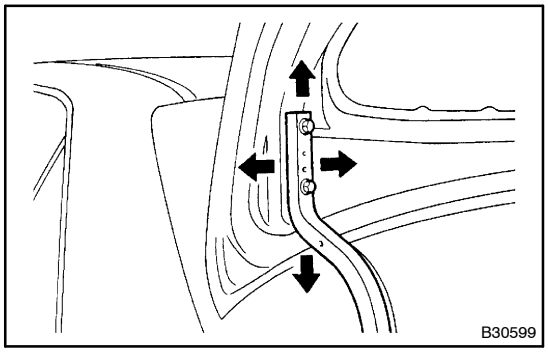

8. ADJUST LUGGAGE COMPARTMENT DOOR PANEL SUB–ASSY

(a) For forward/rearward and right/left adjustments, loosen the bolts.

(b) For a vertical adjustment of the door front end, increase or decrease the number of the washers between the hinge and door.

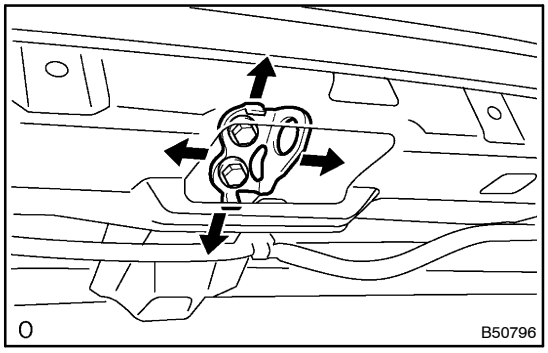

(c) Using a hammer and a brass bar, tap the striker to adjust it.