760CM–02

REPLACEMENT

HINT:

Installation is in the reverse order of the removal. But the installation is indicated only when it has a point.


1. REMOVE LUGGAGE COMPARTMENT FLOOR MAT

2. REMOVE SPARE WHEEL COVER ASSY

3. REMOVE LUGGAGE COMPARTMENT SIDE COVER SUB–ASSY RH

4. REMOVE LUGGAGE COMPARTMENT TRIM HOOK NO.1

(a) Remove the 2 bolts and luggage compartment trim hooks.

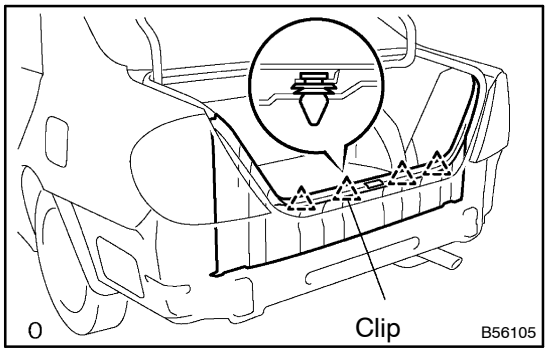


5. REMOVE REAR FLOOR FINISH PLATE

(a) Disengage the clips and remove the rear floor finish plate.

6. REMOVE LUGGAGE COMPARTMENT TRIM COVER INNER RH

(a) Using a clip remover, remove the 2 clips and luggage compartment trim cover inner.

7. REMOVE LUGGAGE COMPARTMENT TRIM COVER INNER LH

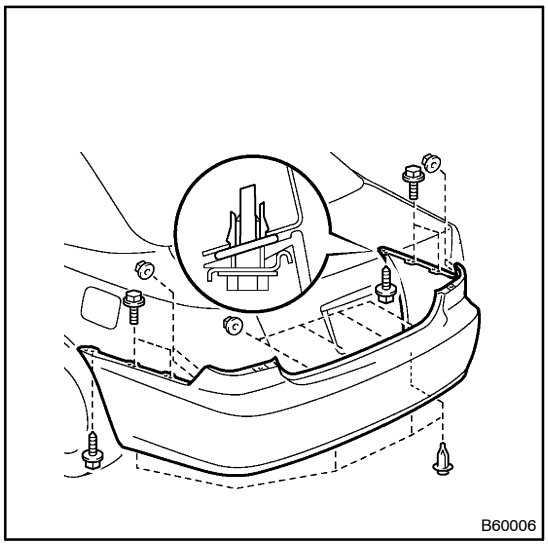

8. REMOVE REAR BUMPER COVER

(a) Remove the 8 nuts, 4 bolts and 4 clips.

(b) Remove the 2 screws and rear bumper cover.

(c) Disengage the rear bumper seal bracket and remove the rear bumper cover.

9. REMOVE REAR BUMPER SIDE RETAINER RH

(a) Remove the clip and rear bumper side retainer.

10. REMOVE REAR BUMPER SIDE RETAINER LH

11. REMOVE REAR BUMPER RETAINER UPPER RH

(a) Remove the 3 clips and rear bumper retainer upper.

12. REMOVE REAR BUMPER RETAINER UPPER LH

13. REMOVE REAR BUMPER ENERGY ABSORBER

14. REMOVE REAR BUMPER REINFORCEMENT SUB–ASSY

(a) Remove the 6 nuts and rear bumper reinforcement.

15. INSTALL REAR BUMPER REINFORCEMENT SUB–ASSY

(a) Install the front bumper reinforcement with 6 nuts.
Torque: 34 N·m (350 kgf·cm, 25 ft·lbf)