
FRONT FLOOR FOOTREST

REPLACEMENT

760BY–03

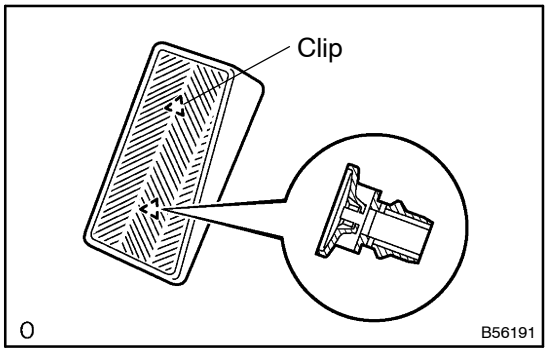

1. REMOVE FRONT FLOOR FOOTREST

(a) Holding the floor mat, disengage the clips from the upper with a screwdriver to remove the front floor footrest.

HINT:

Tape the screwdriver tip before use.

NOTICE:

Warm the inside of the vehicle well before removal.

(b) Disengage the footrest clips, and then remove the 2 clips from the front floor footrest.

2. INSTALL FRONT FLOOR FOOTREST

(a) Install the footrest clips by engaging the claws with the front floor footrest.

(b) Before installation, check that the part to be engaged with the clips of front floor footrest is not damaged.

NOTICE:

If it is damaged, replace it with a new one.