
760CH–01

REPLACEMENT

1. REMOVE FRONT SEAT ASSEMBLY RH (See page 72–14)
2. REMOVE FRONT SEAT ASSEMBLY LH (See page 72–14)
3. REMOVE REAR SEAT CUSHION ASSY (See page 72–21)
4. REMOVE REAR SIDE SEAT BACK ASSY RH (See page 72–21)
5. REMOVE REAR SIDE SEAT BACK ASSY LH (See page 72–21)
6. REMOVE REAR SEAT BACK ASSY (See page 72–21)
7. REMOVE CONSOLE PANEL UPPER REAR (See page 71–10)
8. REMOVE RR CONSOLE BOX (See page 71–10)
9. REMOVE CONSOLE BOX ASSY REAR (See page 71–10)
10. REMOVE CONSOLE PANEL UPPER (See page 71–10)
11. REMOVE CONSOLE BOX DUCT NO.1 (See page 55–21)
12. REMOVE AIR DUCT REAR NO.1 (See page 55–21)
13. REMOVE AIR DUCT REAR NO.2 (See page 55–21)
14. REMOVE FLOOR SHIFT ASSY(See page 40–46)

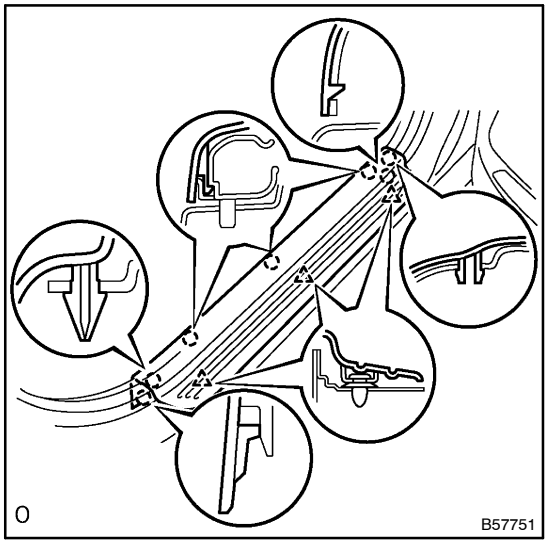

15. REMOVE FRONT DOOR SCUFF PLATE RH


(a) Using a screwdriver, remove the front door scuff plate.

HINT:

Tape the screwdriver tip before use.

(b) Employ the same manner described above to the other side.

16. REMOVE FRONT DOOR SCUFF PLATE LH

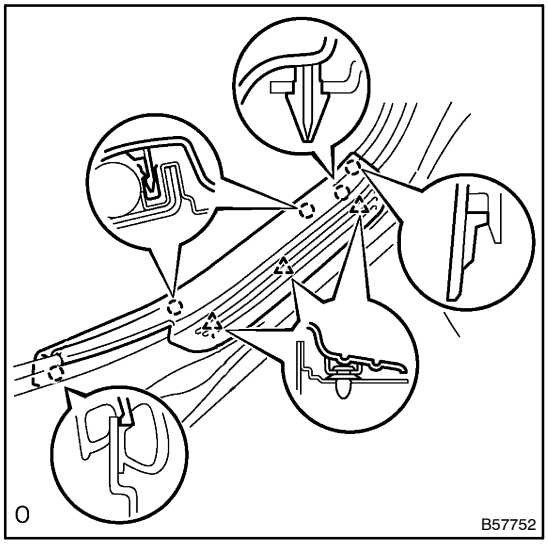

17. REMOVE REAR DOOR SCUFF PLATE RH

(a) Using a screwdriver, remove the rear door scuff plate.

HINT:

Tape the screwdriver tip before use.

(b) Employ the same manner described above to the other side.


18. REMOVE REAR DOOR SCUFF PLATE LH

19. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH

20. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP LH

21. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP RH

22. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP LH

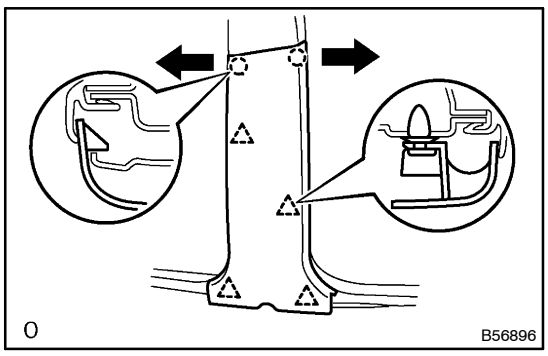


23. REMOVE CENTER PILLAR GARNISH LOWER RH

(a) Pull the center pillar lower garnish upward to remove it.

(b) Employ the same manner described above to the other side.

24. REMOVE CENTER PILLAR GARNISH LOWER LH

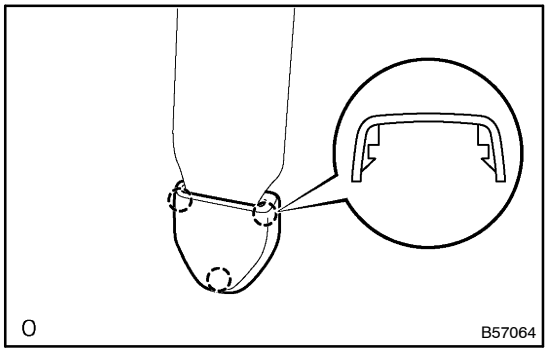


25. REMOVE CENTER PILLAR GARNISH UPPER RH

(a) Using a screwdriver, remove the lap belt outer anchor cover.

HINT:

Tape the screwdriver tip before use.

(b) Remove the bolt and front seat outer belt floor anchor.

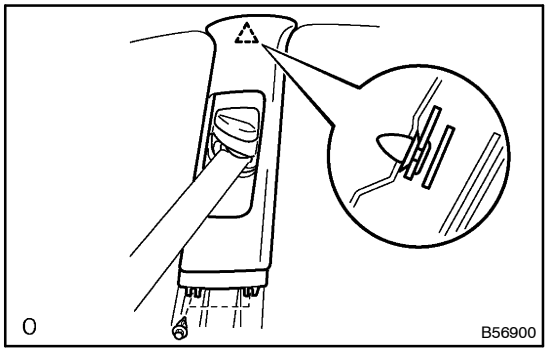


(c) Remove the 2 clips
(d) Using a screwdriver, remove the center pillar upper garnish.

HINT:
Tape the screwdriver tip before use.

(e) Employ the same manner described above to the other side.

26. REMOVE CENTER PILLAR GARNISH UPPER LH

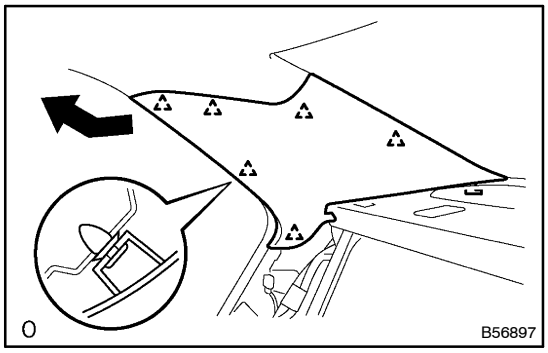


27. REMOVE ROOF SIDE GARNISH INNER RH(W/O CURTAIN SHIELD AIR BAG)

(a) Using a screwdriver, remove the roof side garnish inner.

HINT:
Tape the screwdriver tip before use.

(b) Employ the same manner described above to the other side.

28. REMOVE ROOF SIDE GARNISH INNER LH(W/O CURTAIN SHIELD AIR BAG)

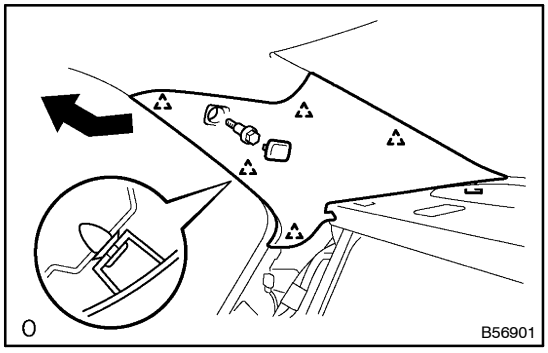

29. REMOVE ROOF SIDE GARNISH INNER RH(W/ CURTAIN SHIELD AIR BAG)


(a) Using a screwdriver, remove the roof side garnish inner cover.

HINT:
Tape the screwdriver tip before use.

(b) Remove the bolt.
(c) Using a screwdriver, remove the roof side garnish inner.

HINT:
Tape the screwdriver tip before use.

30. REMOVE ROOF SIDE GARNISH INNER LH(W/ CURTAIN SHIELD AIR BAG)

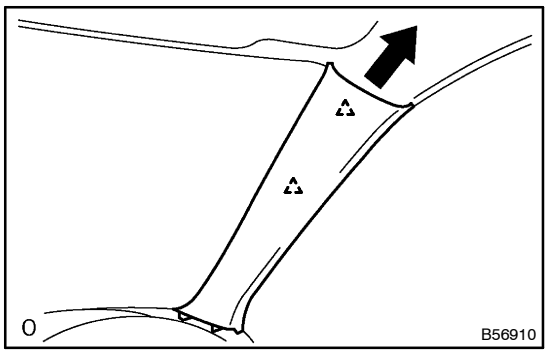


31. REMOVE FRONT PILLAR GARNISH RH(W/O CURTAIN SHIELD AIR BAG)

(a) Using a screwdriver, remove the front pillar garnish.

HINT:
Tape the screwdriver tip before use.

(b) Employ the same manner described above to the other side.

32. REMOVE FRONT PILLAR GARNISH LH(W/O CURTAIN SHIELD AIR BAG)

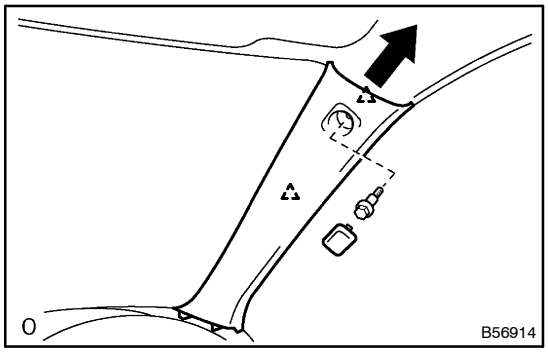

33. REMOVE FRONT PILLAR GARNISH RH(W/ CURTAIN SHIELD AIR BAG)

(a) Using a screwdriver, remove the front pillar garnish cover.

HINT:


Tape the screwdriver tip before use.

(b) Remove the bolt.

(c) Using a screwdriver, remove the front pillar garnish

HINT:

Tape the screwdriver tip before use.

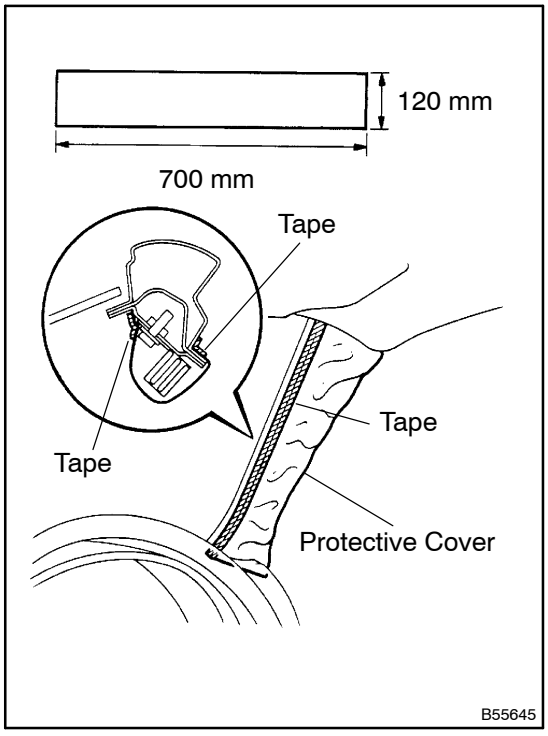

(d) Protect the curtain shield airbag.


NOTICE:

Cover the curtain shield airbag with the protection cover as soon as the front pillar garnish is removed.

(1) Cover the airbag with cloth or nylon of 700 mm (27.56 in.) × 120 mm (4.72 in.) and fix the ends of the cover with tape, as shown in the illustration.

(e) Employ the same manner described above to the other side.

34. REMOVE FRONT PILLAR GARNISH LH(W/ CURTAIN SHIELD AIR BAG)

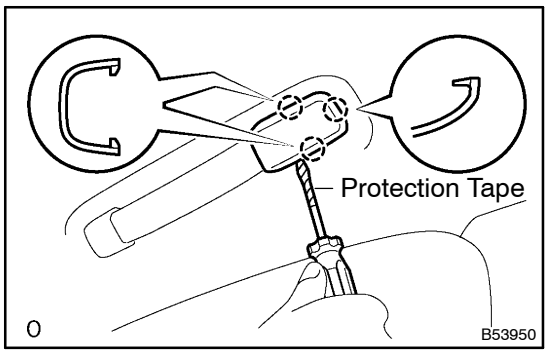


35. REMOVE ASSIST GRIP SUB–ASSY

(a) Using a screwdriver, remove the assist grip cover.

HINT:

Tape the screwdriver tip before use.

(b) Remove the 2 screws and assist grip.

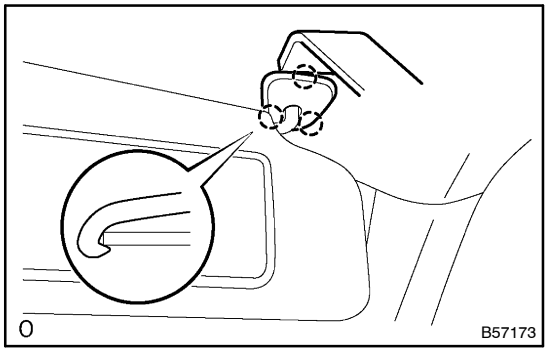


36. REMOVE RH VISOR ASSY

(a) Using a moulding remover, remove the visor bracket cover.

HINT:
Tape the screwdriver tip before use.

(b) Remove the 2 screws and assist grip.


37. REMOVE LH VISOR ASSY

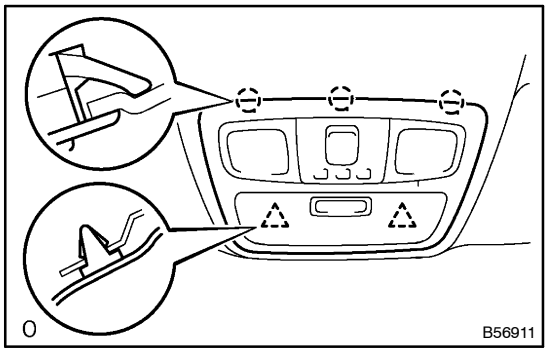

38. REMOVE ROOF CONSOLE BOX ASSY


(a) Using a screwdriver, remove the roof console box then disconnect the connector.

HINT:
Tape the screwdriver tip before use.

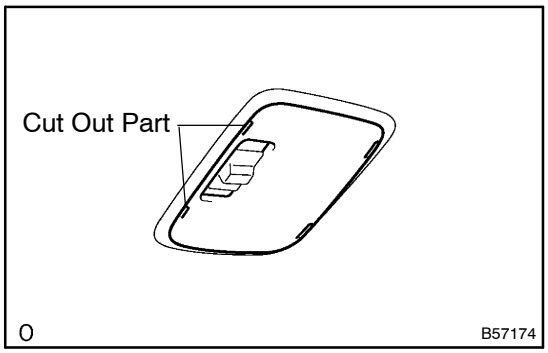


39. REMOVE ROOM LAMP ASSY NO.1

(a) Using a screwdriver, remove the lens.

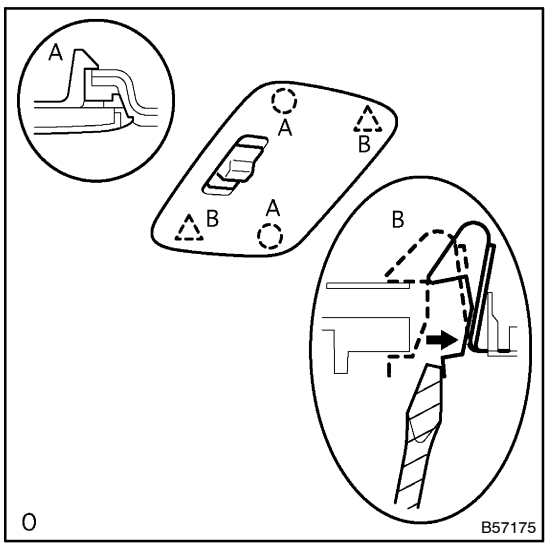

(b) Using a screwdriver, remove the room lamp assembly No.1 then disconnect the connector.


HINT:
Tape the screwdriver tip before use.

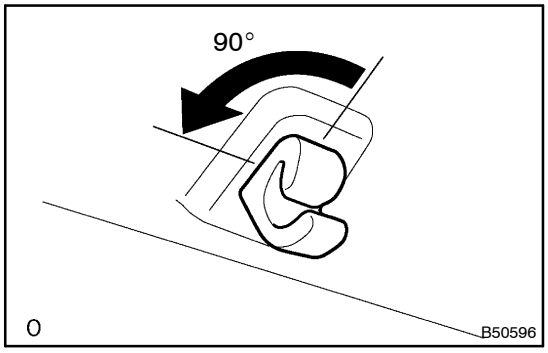

40. REMOVE VISOR HOLDER


(a) Remove the holder of the sun visor by turning it to the left.

41. REMOVE SUN ROOF OPENING TRIM MOULDING(W/ SLIDING ROOF)

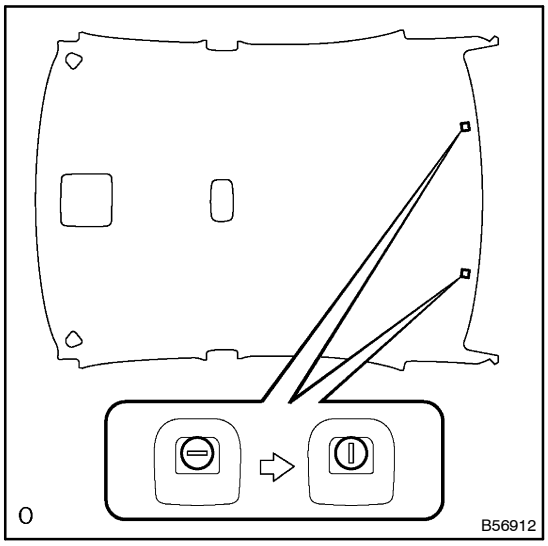


42. REMOVE ROOF HEADLINING ASSY

(a) Remove the 2 sunshade trim holder.
(b) w/ Erectro chromic inner mirror:
Remove the inner rear view mirror cover.
(c) Tear off the tape on the adhered part of the wire harness.

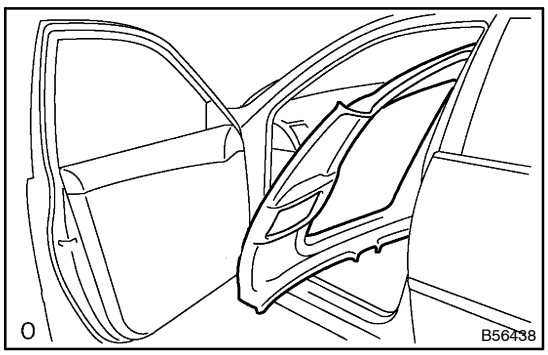

(d) Remove the headlining assembly from the passenger's door.

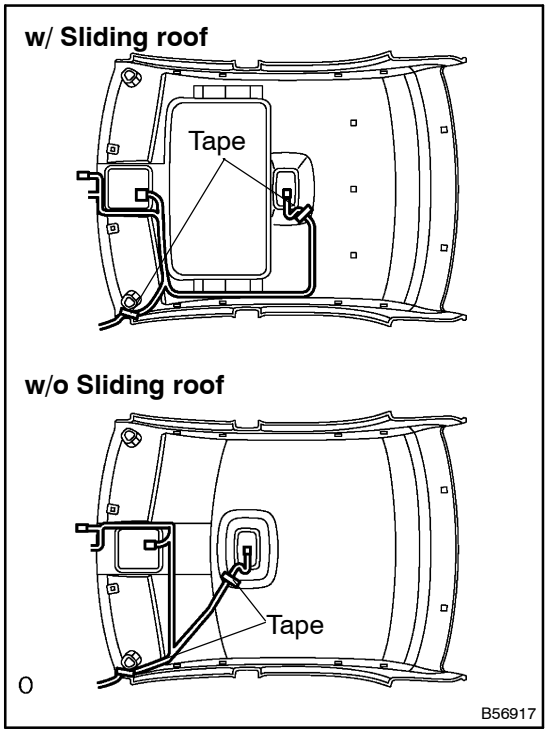

43. INSTALL ROOF HEADLINING ASSY

(a) Align the markings, then install the wire harness with tape.

HINT:

Be careful for dirt or foreign objects not to stick to the adhered part when peeling the double–stick tape.

(b) Attach the roof wire harness across the adhered part

NOTICE:

Roof wire harness should be attached securely.

44. INSTALL FRONT SEAT ASSEMBLY LH (See page 72–14)

45. INSTALL FRONT SEAT ASSEMBLY RH (See page 72–14)