
IGNITION OR STARTER SWITCH ASSY

8001U–01

REPLACEMENT

1. REMOVE INSTRUMENT PANEL SUB–ASSY LOWER
(See page 71–10)

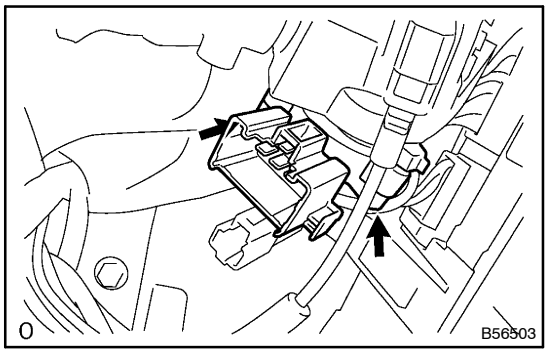

2. REMOVE IGNITION OR STARTER SWITCH ASSY

(a) Disconnect the ignition switch connector and unlock warning switch connector.
(b) Remove the clamp.
(c) Remove the 2 screws and ignition switch.