
CLUTCH SWITCH ASSY

8201S–01

REPLACEMENT

1. **REMOVE FRONT DOOR SCUFF PLATE LH**
   (See page 71–10)
2. **REMOVE COWL SIDE TRIM SUB–ASSY LH**
   (See page 71–10)
3. **REMOVE INSTRUMENT PANEL SUB–ASSY UPPER**
   (See page 71–10)

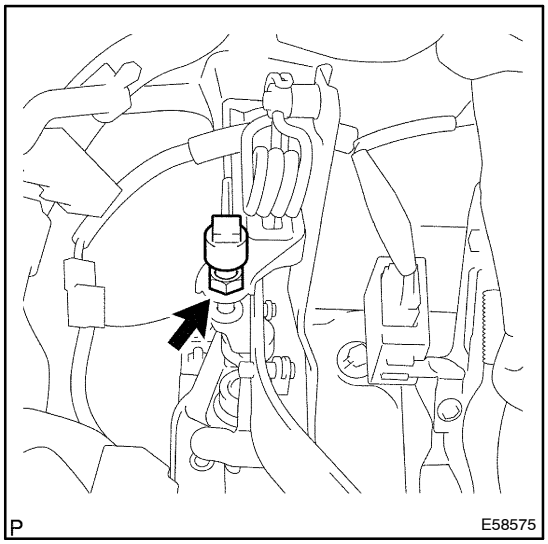

4. **REMOVE CLUTCH SWITCH ASSY**

(a) Disconnect the connector.
(b) Loosen the nut and remove the clutch switch assy.