
WATER PUMP ASSY (1AZ–FE/2AZ–FE)

1609C–01

INSPECTION

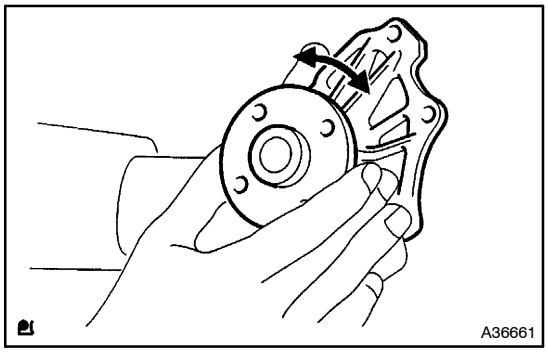

1. INSPECT WATER PUMP ASSY

(a) Visually check the drain hole coolant leakage.
(b) Turn the pulley, and check that the water pump bearing moves smoothly and quietly.