
WATER PUMP ASSY (1MZ–FE)

INSPECTION

1608Z–01

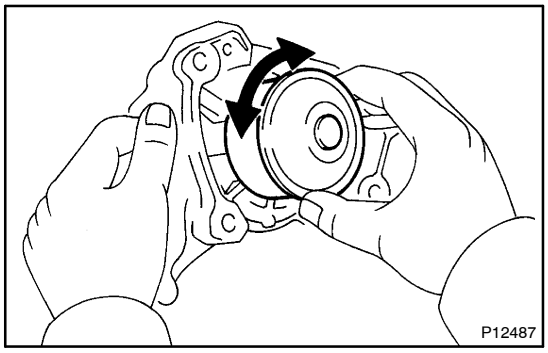

1. INSPECT WATER PUMP ASSY

(a) Visually check the drain hole for coolant leakage.
(b) Turn the pulley, and check that the water pump bearing moves smoothly and quietly.