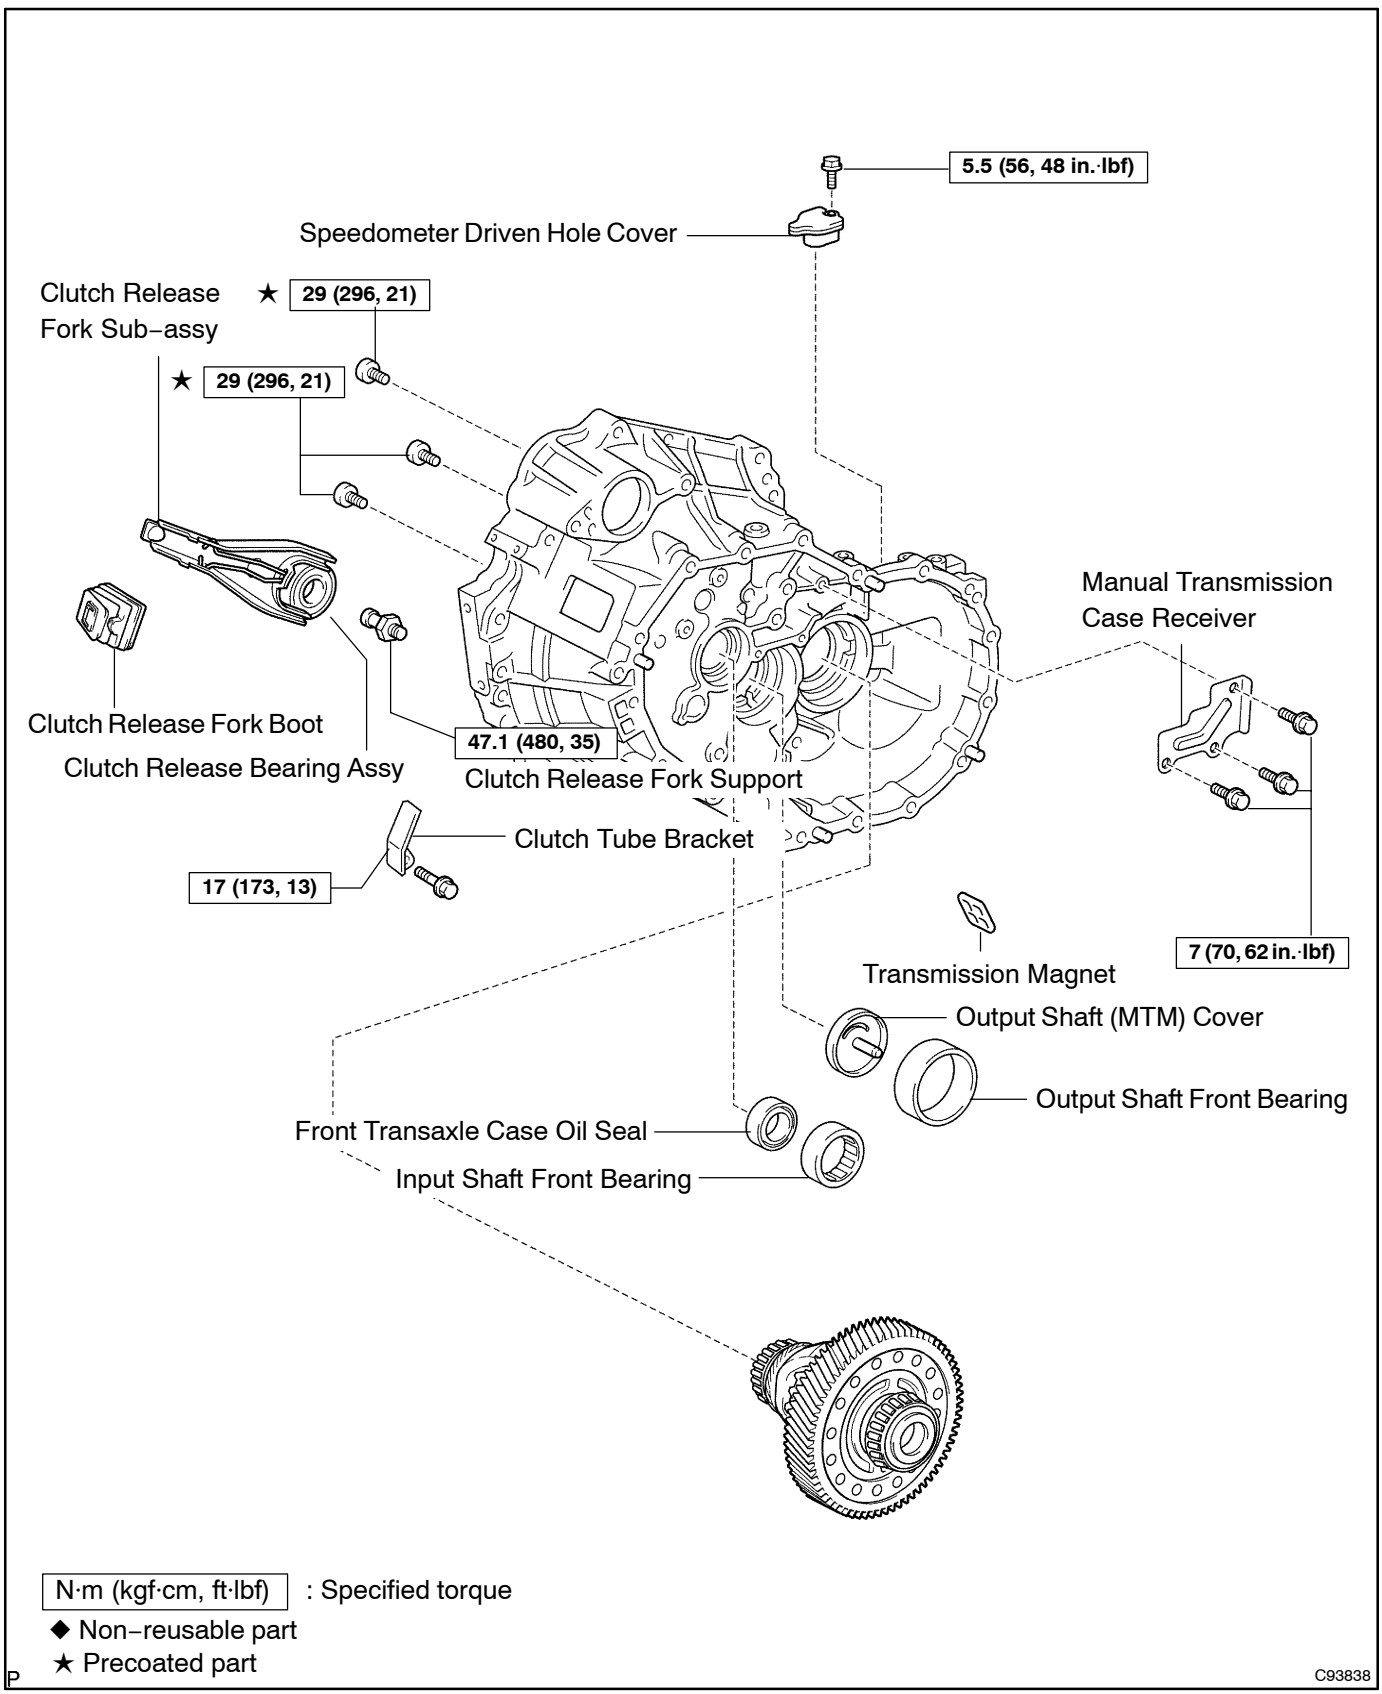
MANUAL TRANSMISSION / TRANSAXLE (E354)

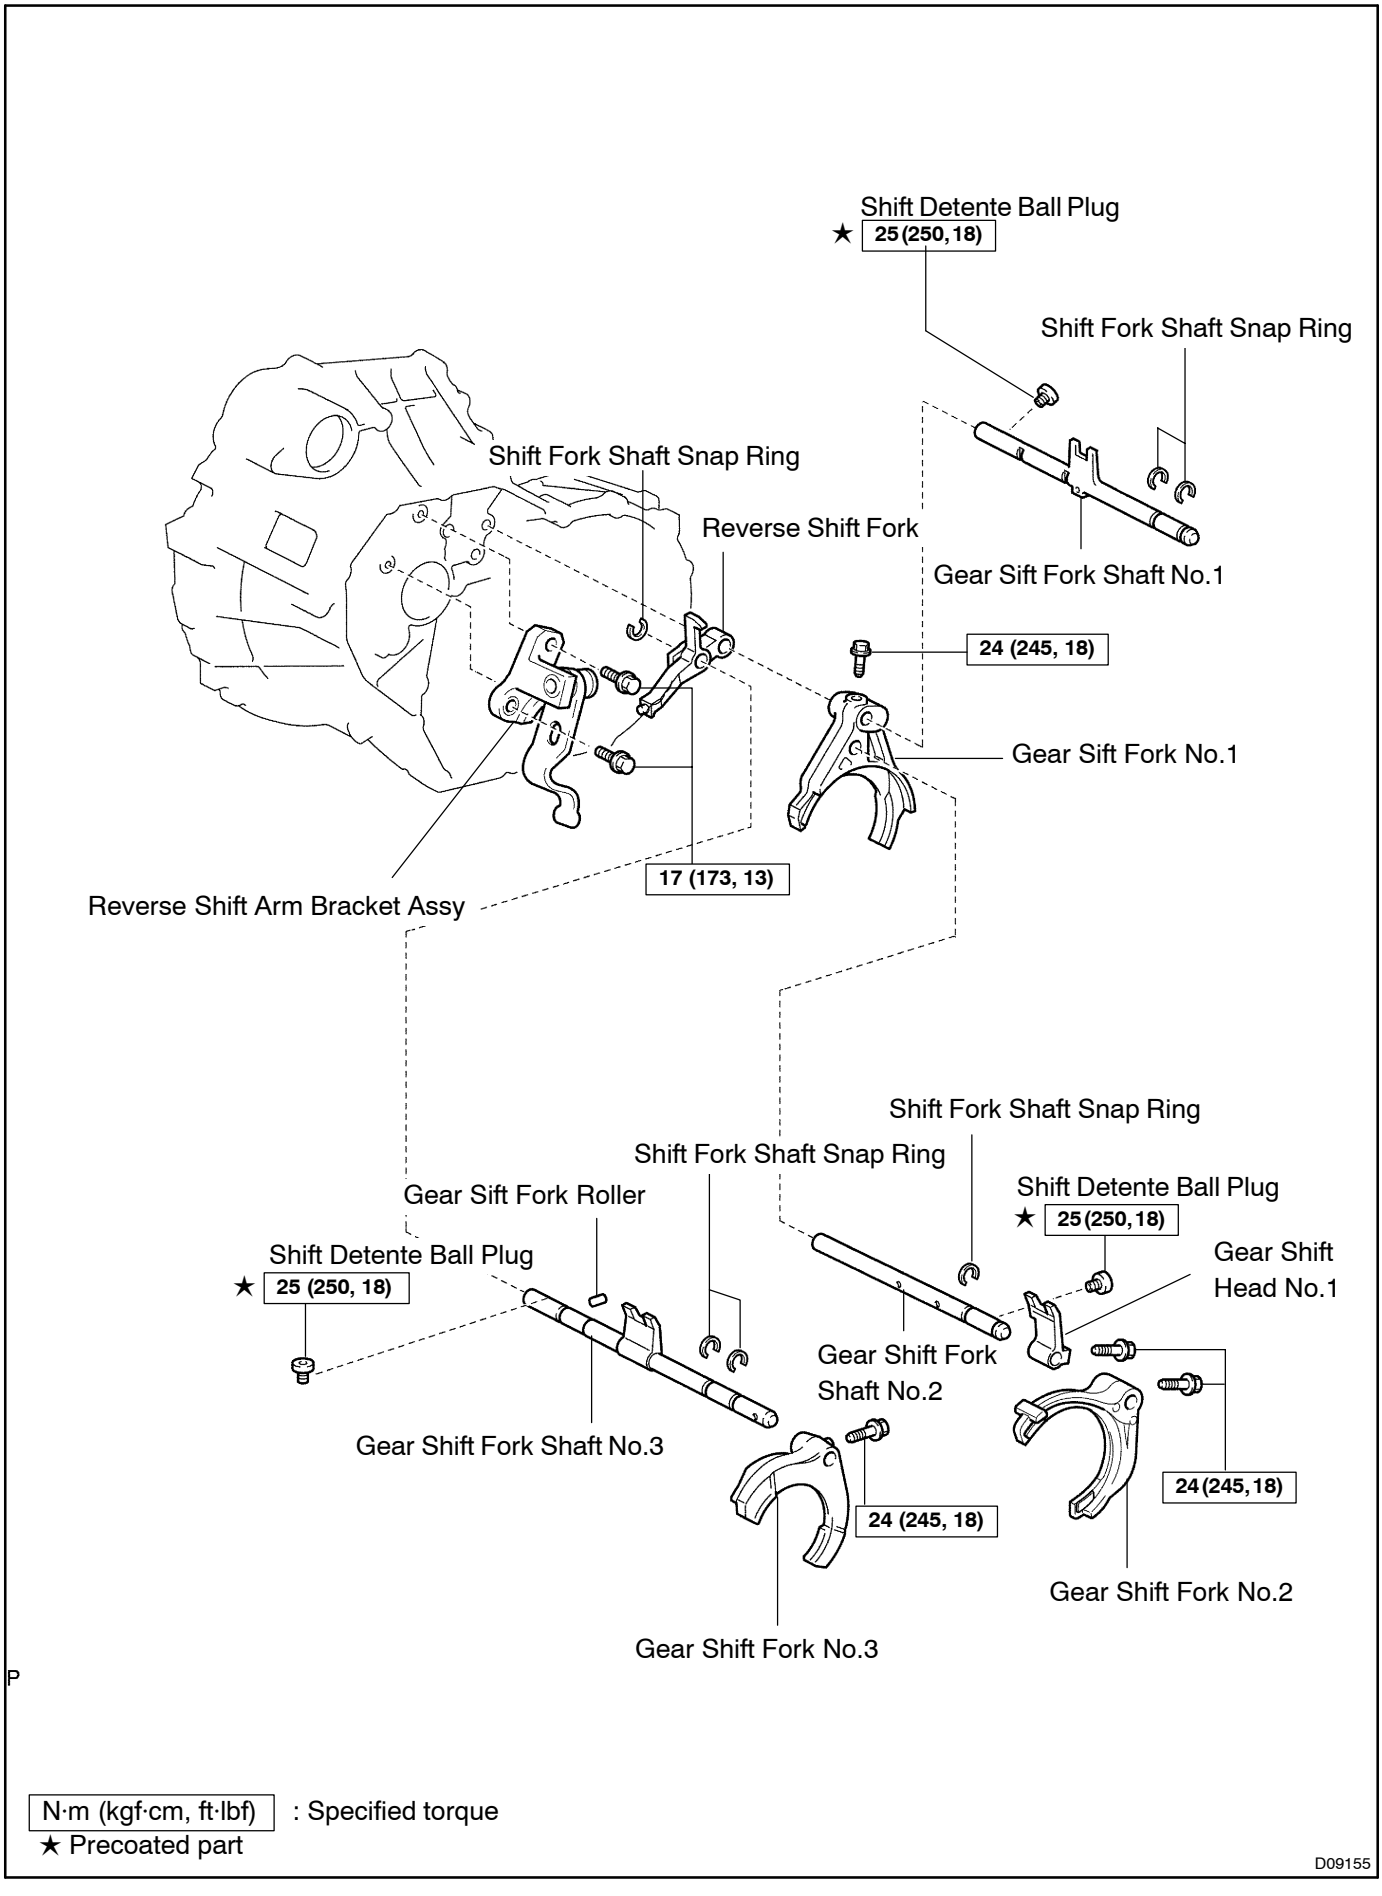
COMPONENTS

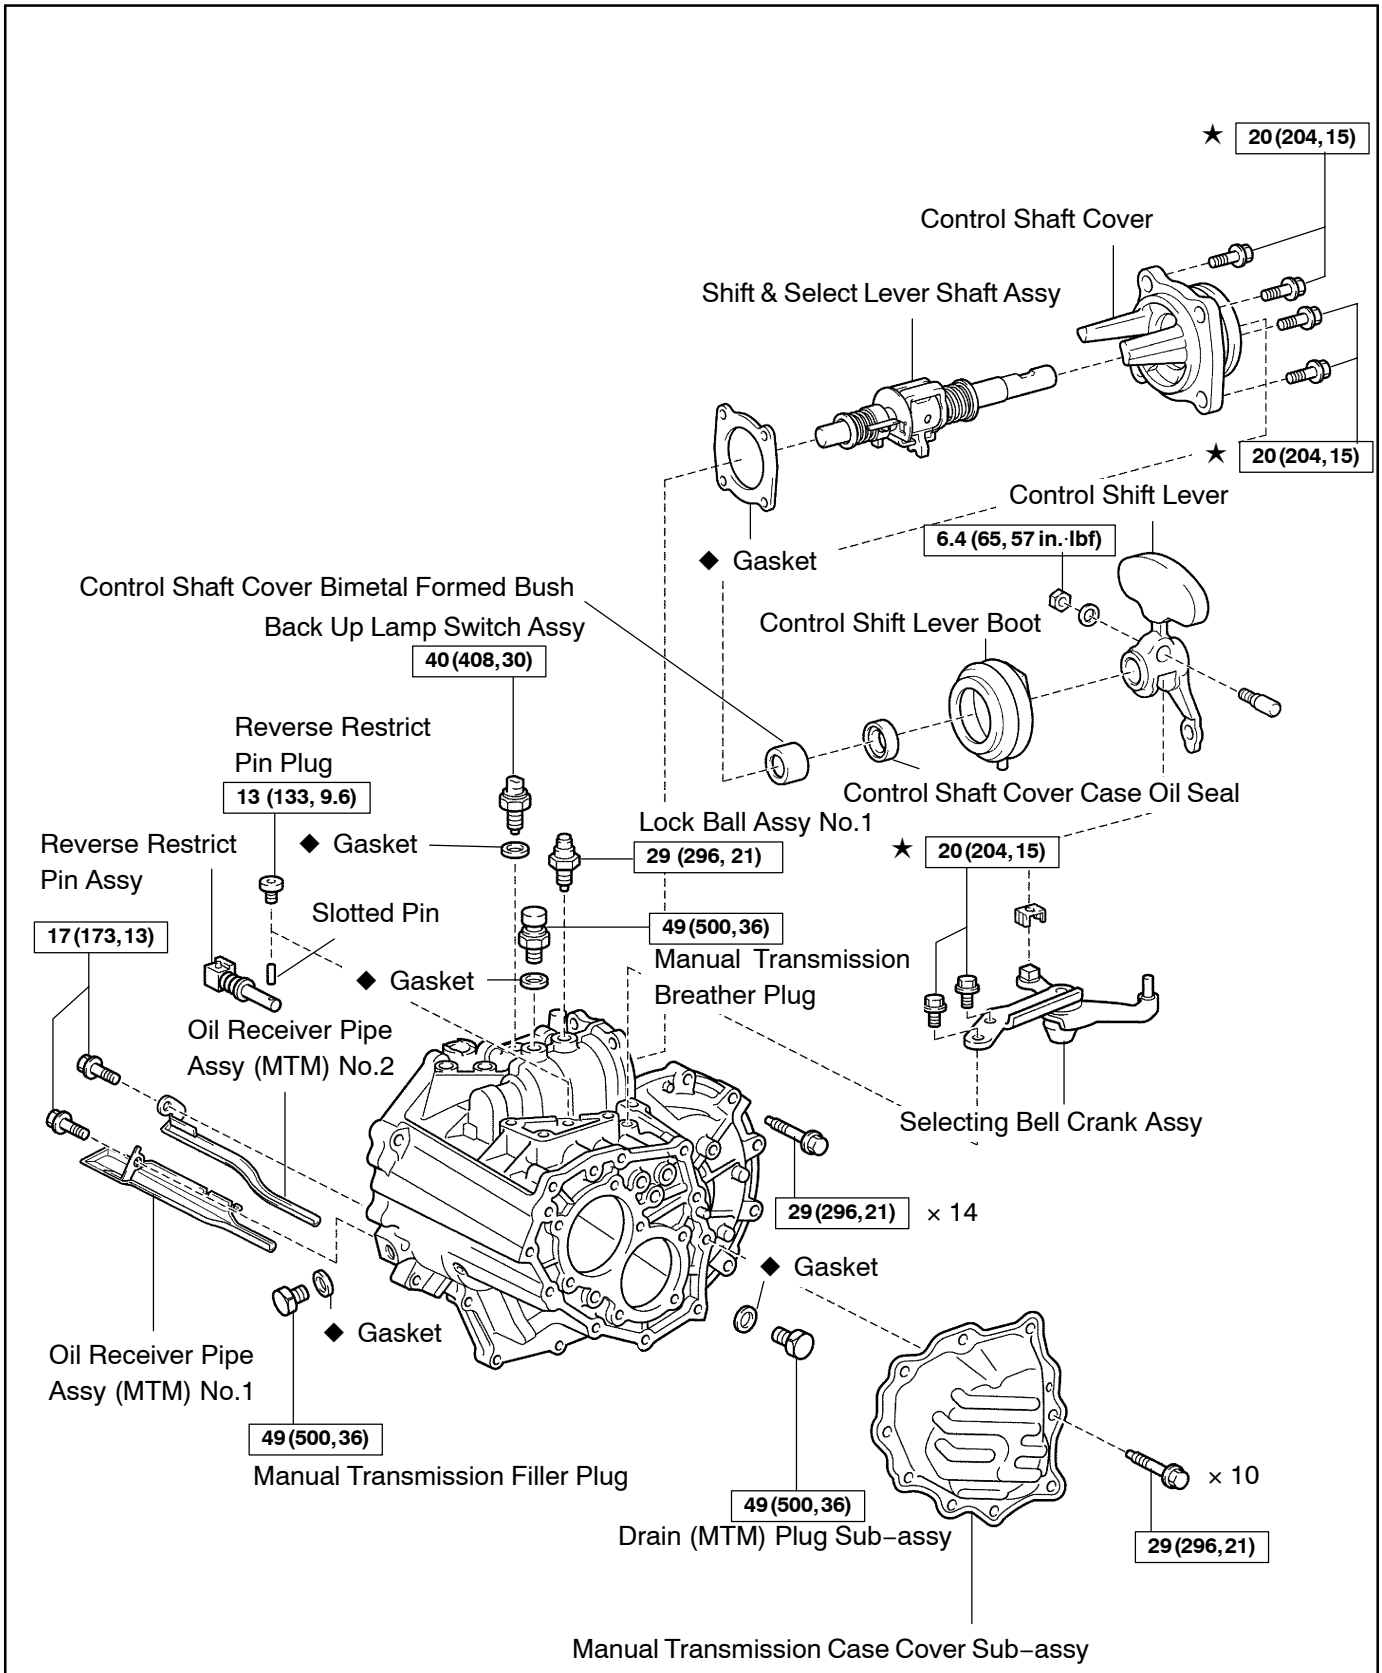
41057–01



N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
★ Precoated part

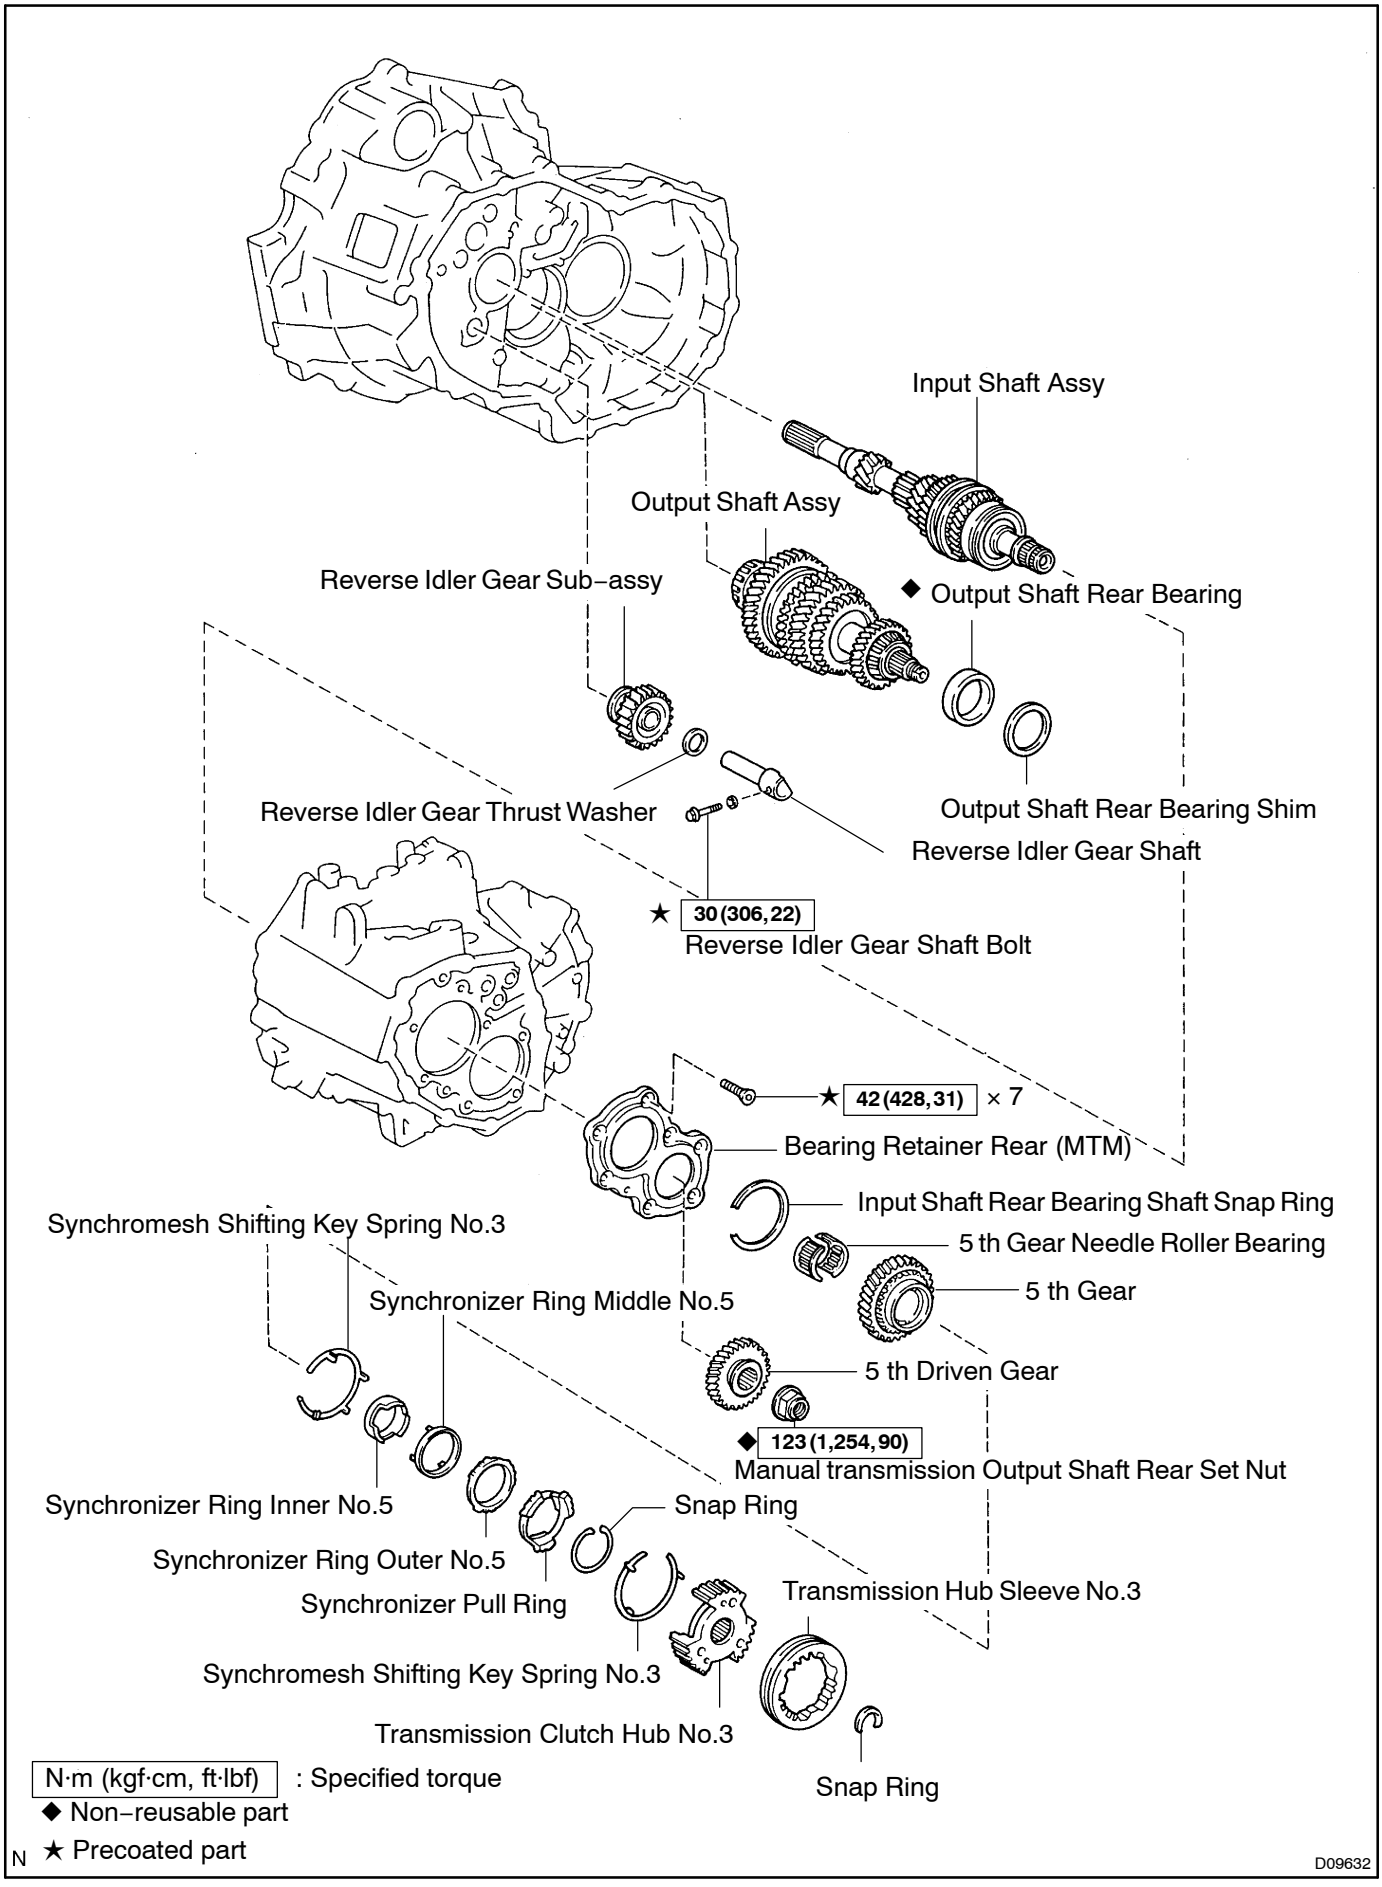
P C93838

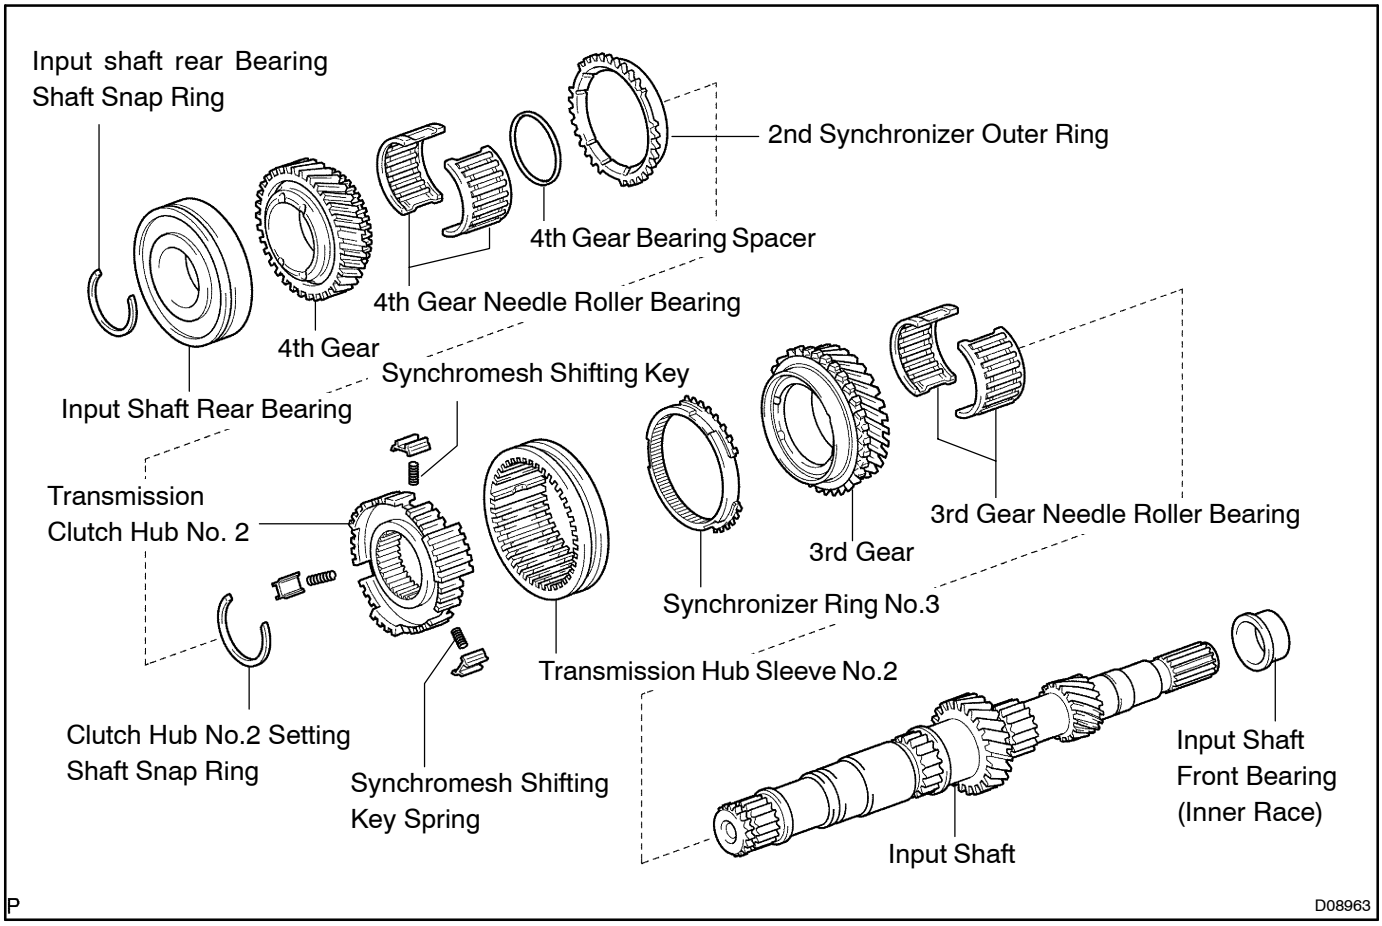

Shift Detente Ball Plug
★ 25 (250, 18)
Shift Fork Shaft Snap Ring
Shift Fork Shaft Snap Ring
Reverse Shift Fork
Gear Sift Fork Shaft No.1
24 (245, 18)
Gear Sift Fork No.1
17 (173, 13)
Reverse Shift Arm Bracket Assy
Shift Fork Shaft Snap Ring
Shift Fork Shaft Snap Ring
Shift Detente Ball Plug
★ 25 (250, 18)
Gear Sift Fork Roller
Shift Detente Ball Plug
★ 25 (250, 18)
Gear Shift Head No.1
Gear Shift Fork Shaft No.2
Gear Shift Fork Shaft No.3
24 (245, 18)
24 (245, 18)
Gear Shift Fork No.2
Gear Shift Fork No.3
P
N·m (kgf·cm, ft·lbf) : Specified torque
★ Precoated part
D09155

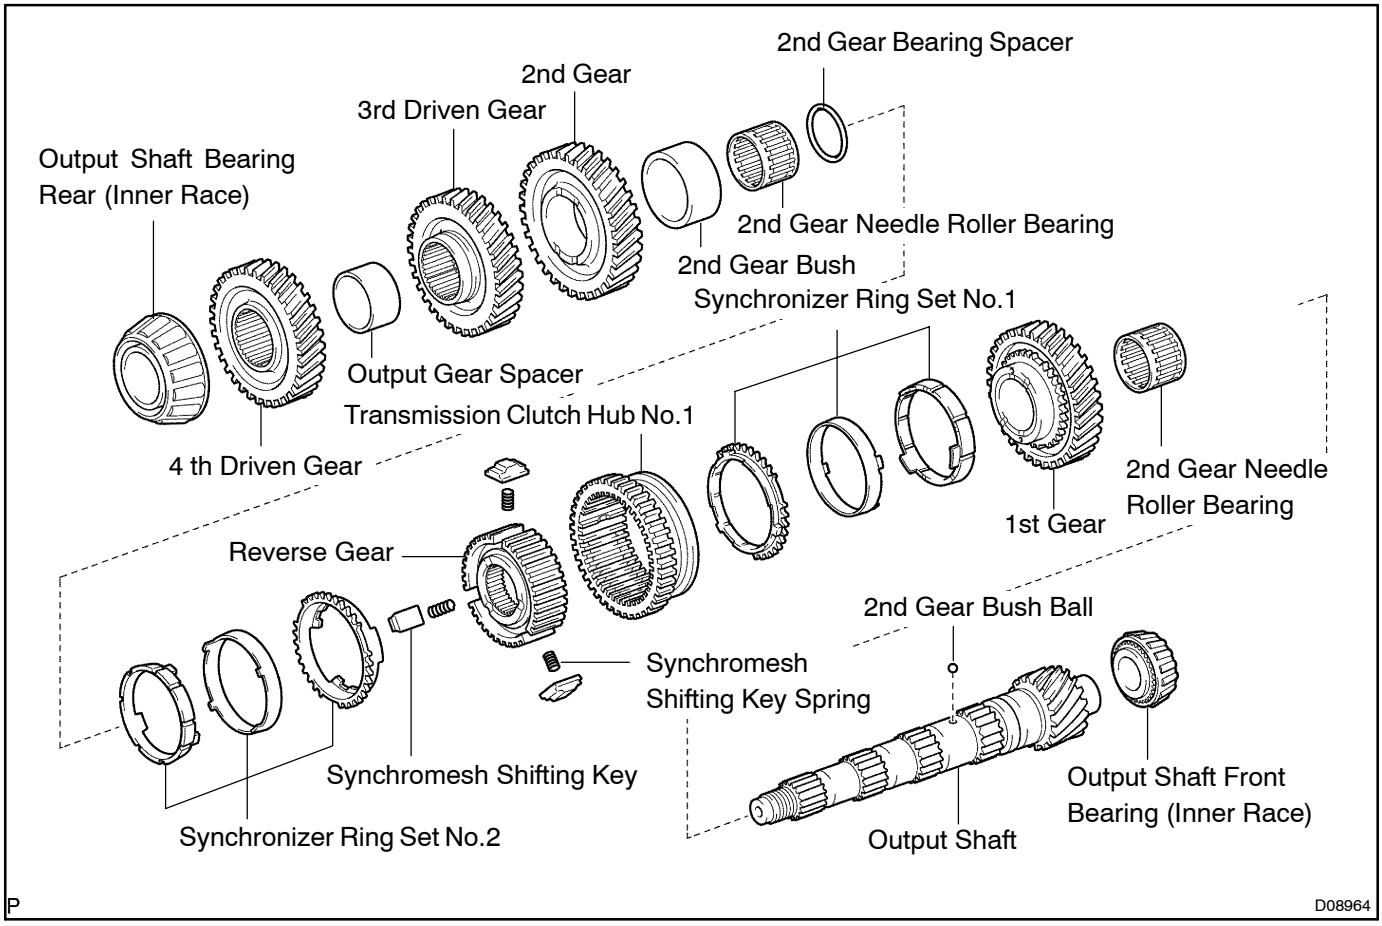


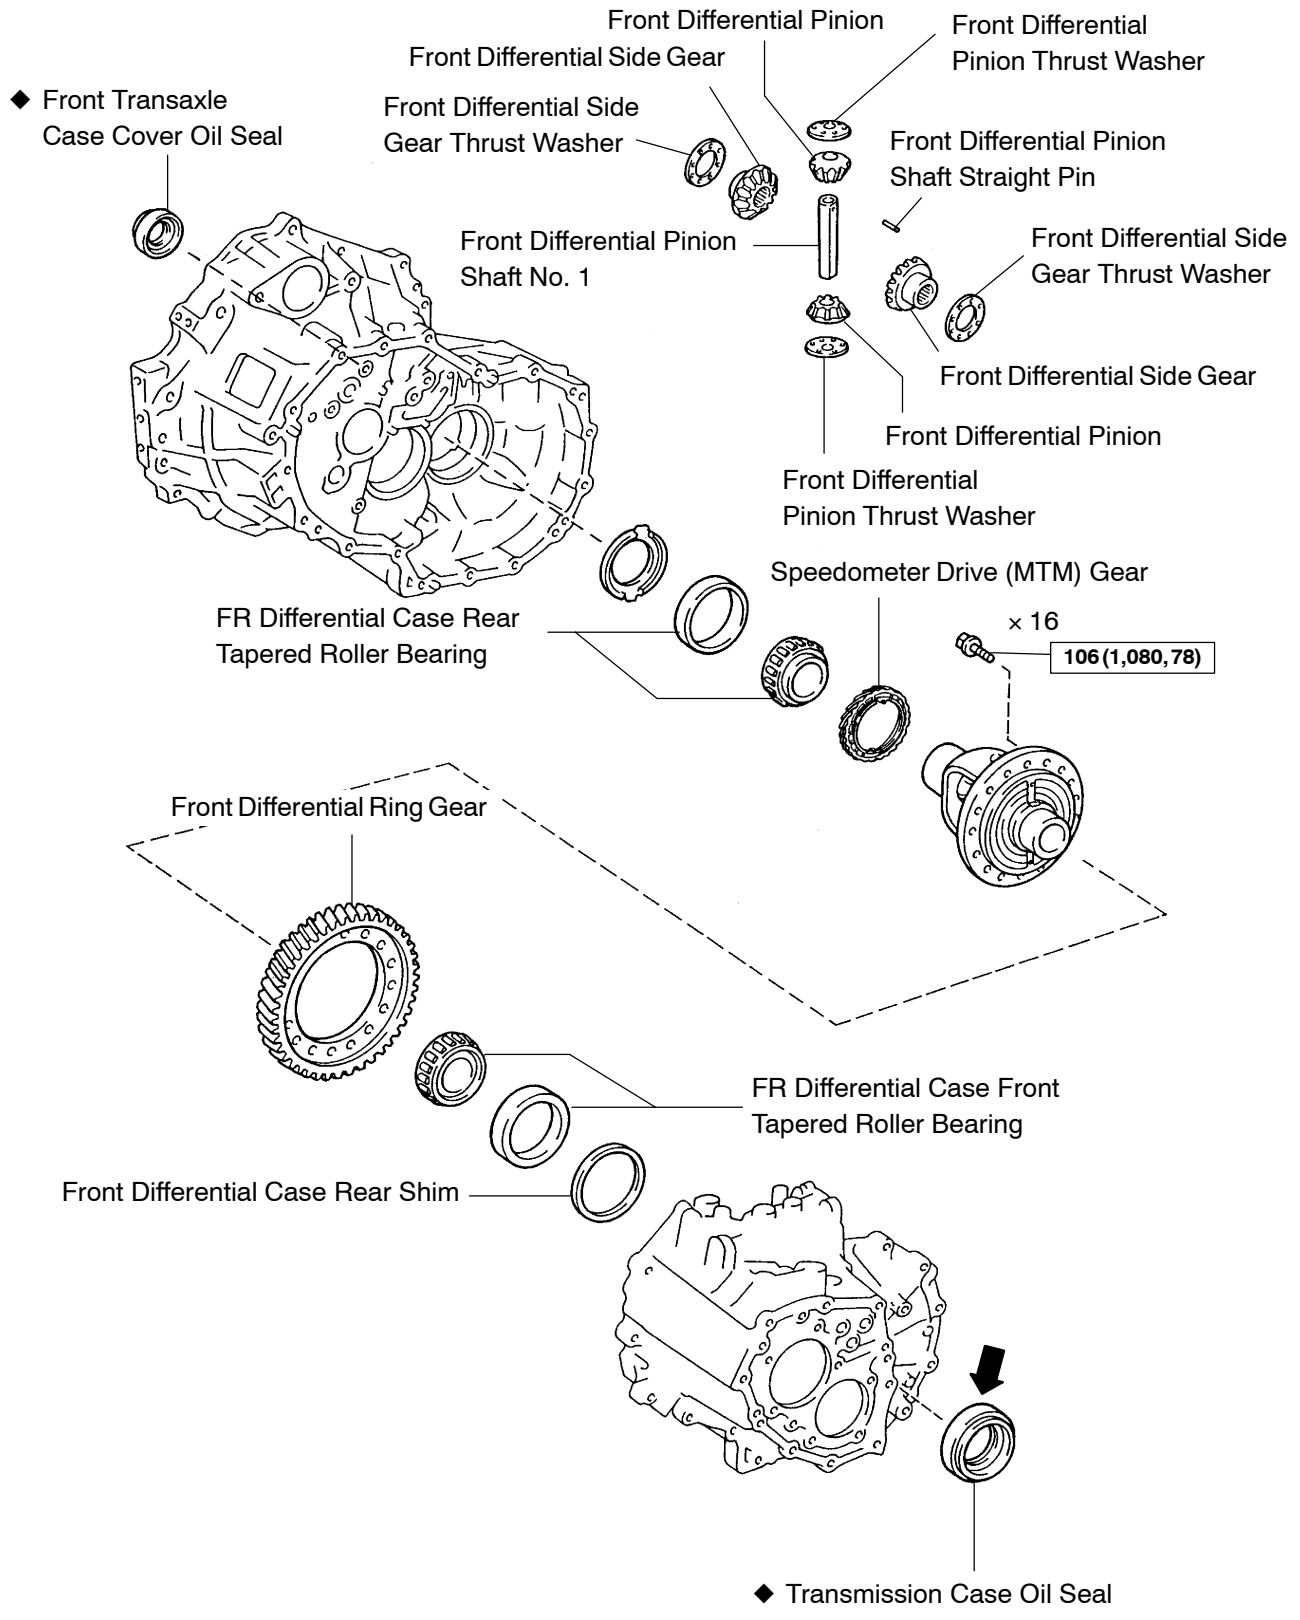
P N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
★ Precoated part

D09543


Input Shaft Assy
Output Shaft Assy
Reverse Idler Gear Sub–assy
◆ Output Shaft Rear Bearing
Reverse Idler Gear Thrust Washer
Output Shaft Rear Bearing Shim
Reverse Idler Gear Shaft
★ 30 (306, 22)
Reverse Idler Gear Shaft Bolt
★ 42 (428, 31) × 7
Bearing Retainer Rear (MTM)
Input Shaft Rear Bearing Shaft Snap Ring
Synchromesh Shifting Key Spring No.3
5 th Gear Needle Roller Bearing
5 th Gear
Synchronizer Ring Middle No.5
5 th Driven Gear
◆ 123 (1,254, 90)
Manual transmission Output Shaft Rear Set Nut
Synchronizer Ring Inner No.5
Snap Ring
Synchronizer Ring Outer No.5
Synchronizer Pull Ring
Transmission Hub Sleeve No.3
Synchromesh Shifting Key Spring No.3
Transmission Clutch Hub No.3
Snap Ring
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
★ Precoated part
N
D09632

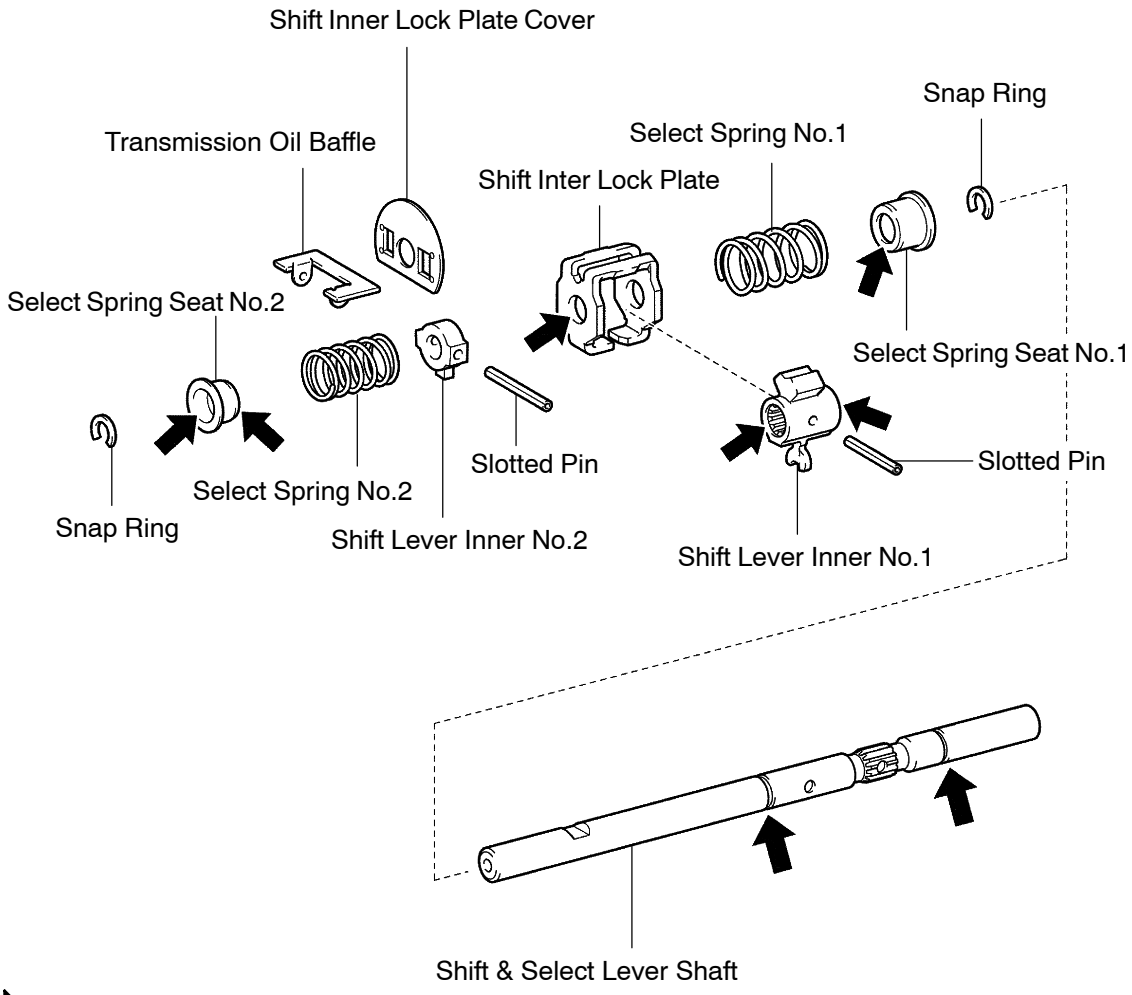

Input shaft rear Bearing
Shaft Snap Ring
2nd Synchronizer Outer Ring
4th Gear Bearing Spacer
4th Gear Needle Roller Bearing
4th Gear
Input Shaft Rear Bearing
Synchromesh Shifting Key
Transmission
Clutch Hub No. 2
3rd Gear Needle Roller Bearing
3rd Gear
Synchronizer Ring No.3
Transmission Hub Sleeve No.2
Clutch Hub No.2 Setting
Shaft Snap Ring
Synchromesh Shifting
Key Spring
Input Shaft
Input Shaft
Front Bearing
(Inner Race)
P
D08963


2nd Gear Bearing Spacer
2nd Gear
3rd Driven Gear
Output Shaft Bearing
Rear (Inner Race)
2nd Gear Needle Roller Bearing
2nd Gear Bush
Synchronizer Ring Set No.1
Output Gear Spacer
Transmission Clutch Hub No.1
4 th Driven Gear
2nd Gear Needle
Roller Bearing
1st Gear
Reverse Gear
2nd Gear Bush Ball
Synchromesh
Shifting Key Spring
Synchromesh Shifting Key
Output Shaft Front
Bearing (Inner Race)
Synchronizer Ring Set No.2
Output Shaft
P
D08964



N N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
➡ Apply MP grease

D08969


Shift Inner Lock Plate Cover
Transmission Oil Baffle
Snap Ring
Select Spring No.1
Shift Inter Lock Plate
Select Spring Seat No.2
Select Spring Seat No.1
Slotted Pin
Slotted Pin
Select Spring No.2
Snap Ring
Shift Lever Inner No.2
Shift Lever Inner No.1
Shift & Select Lever Shaft
Apply MP grease
P
D10974