


5 CAMRY


Power Source
Charging
1
2
3
4
* 1 : RHD 2AZ–FE
* 2 : Except RHD 2AZ–FE
* 3 : 1MZ–FE
* 4 : 2AZ–FE
I17
Ignition SW
ACC
IG1
ST1
IG2
ST2
AM1
AM2
W
W–R
B–Y
B–R
B–G
B–O
R–L
Y
Y–G(*3)
Y (*4)
B (*3)
B–G(*4)
IE5
1C
2A
2E
1E
1L
1A
2G
2O
2R
1M
2M
10A
IG2
5A
AM1
IG1 Relay
10A
GAUGE1
30A
AM2
5A
ALT
C 9
Combination
Meter
Charge
J 5(A), J 6(B)
Junction
Connector
IG1
120A ALT (*1)
100A ALT (*2)
FL MAIN
3. 0W
Battery
A10(A), A11(B)
Alternator
(RHD)
(LHD)
W–B
Instrument Panel
Reinforcement RH
Instrument Panel
Reinforcement LH
IM
II


(Cont. next page)

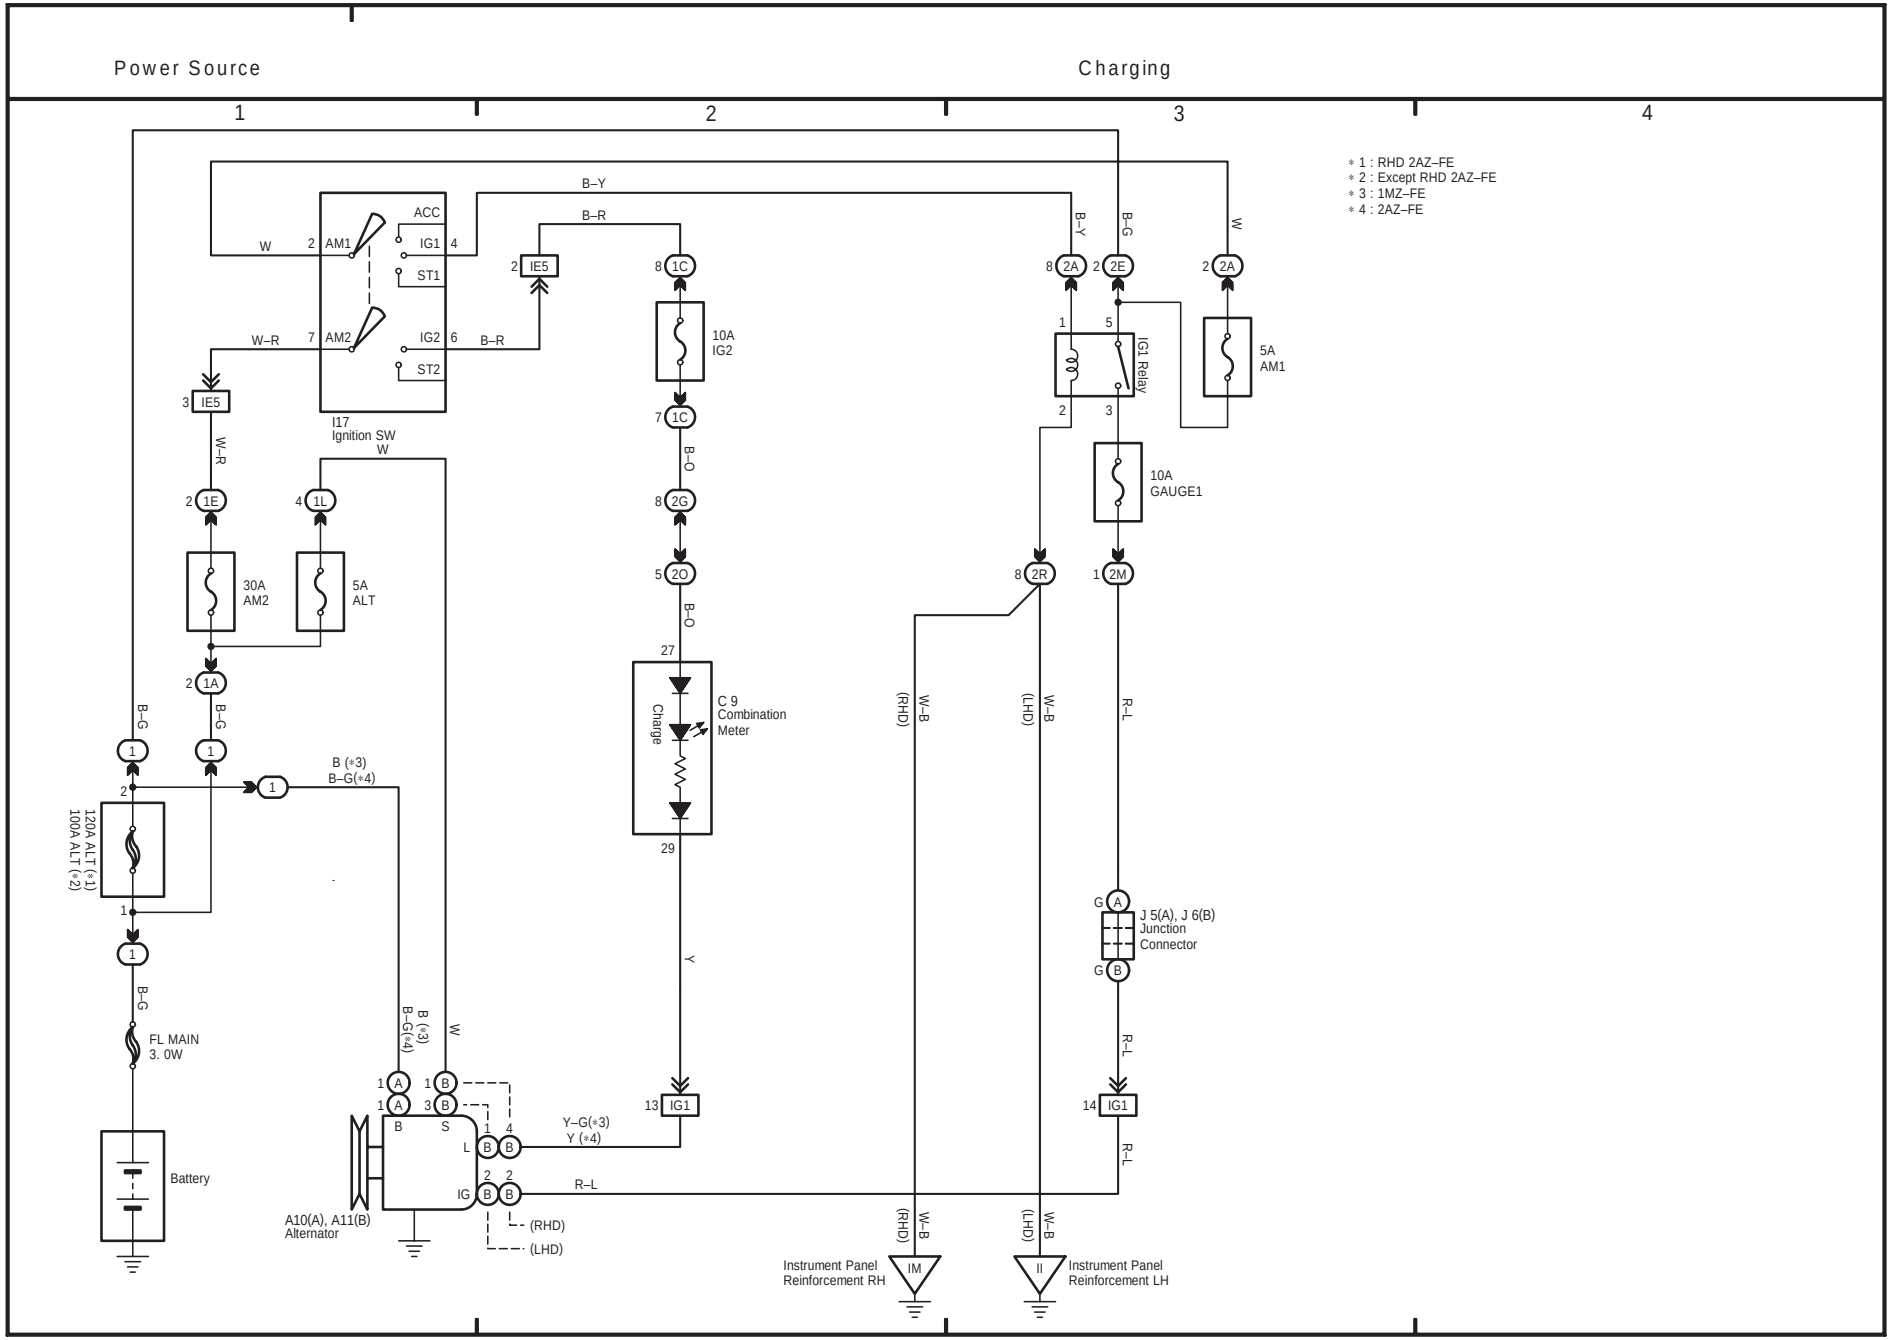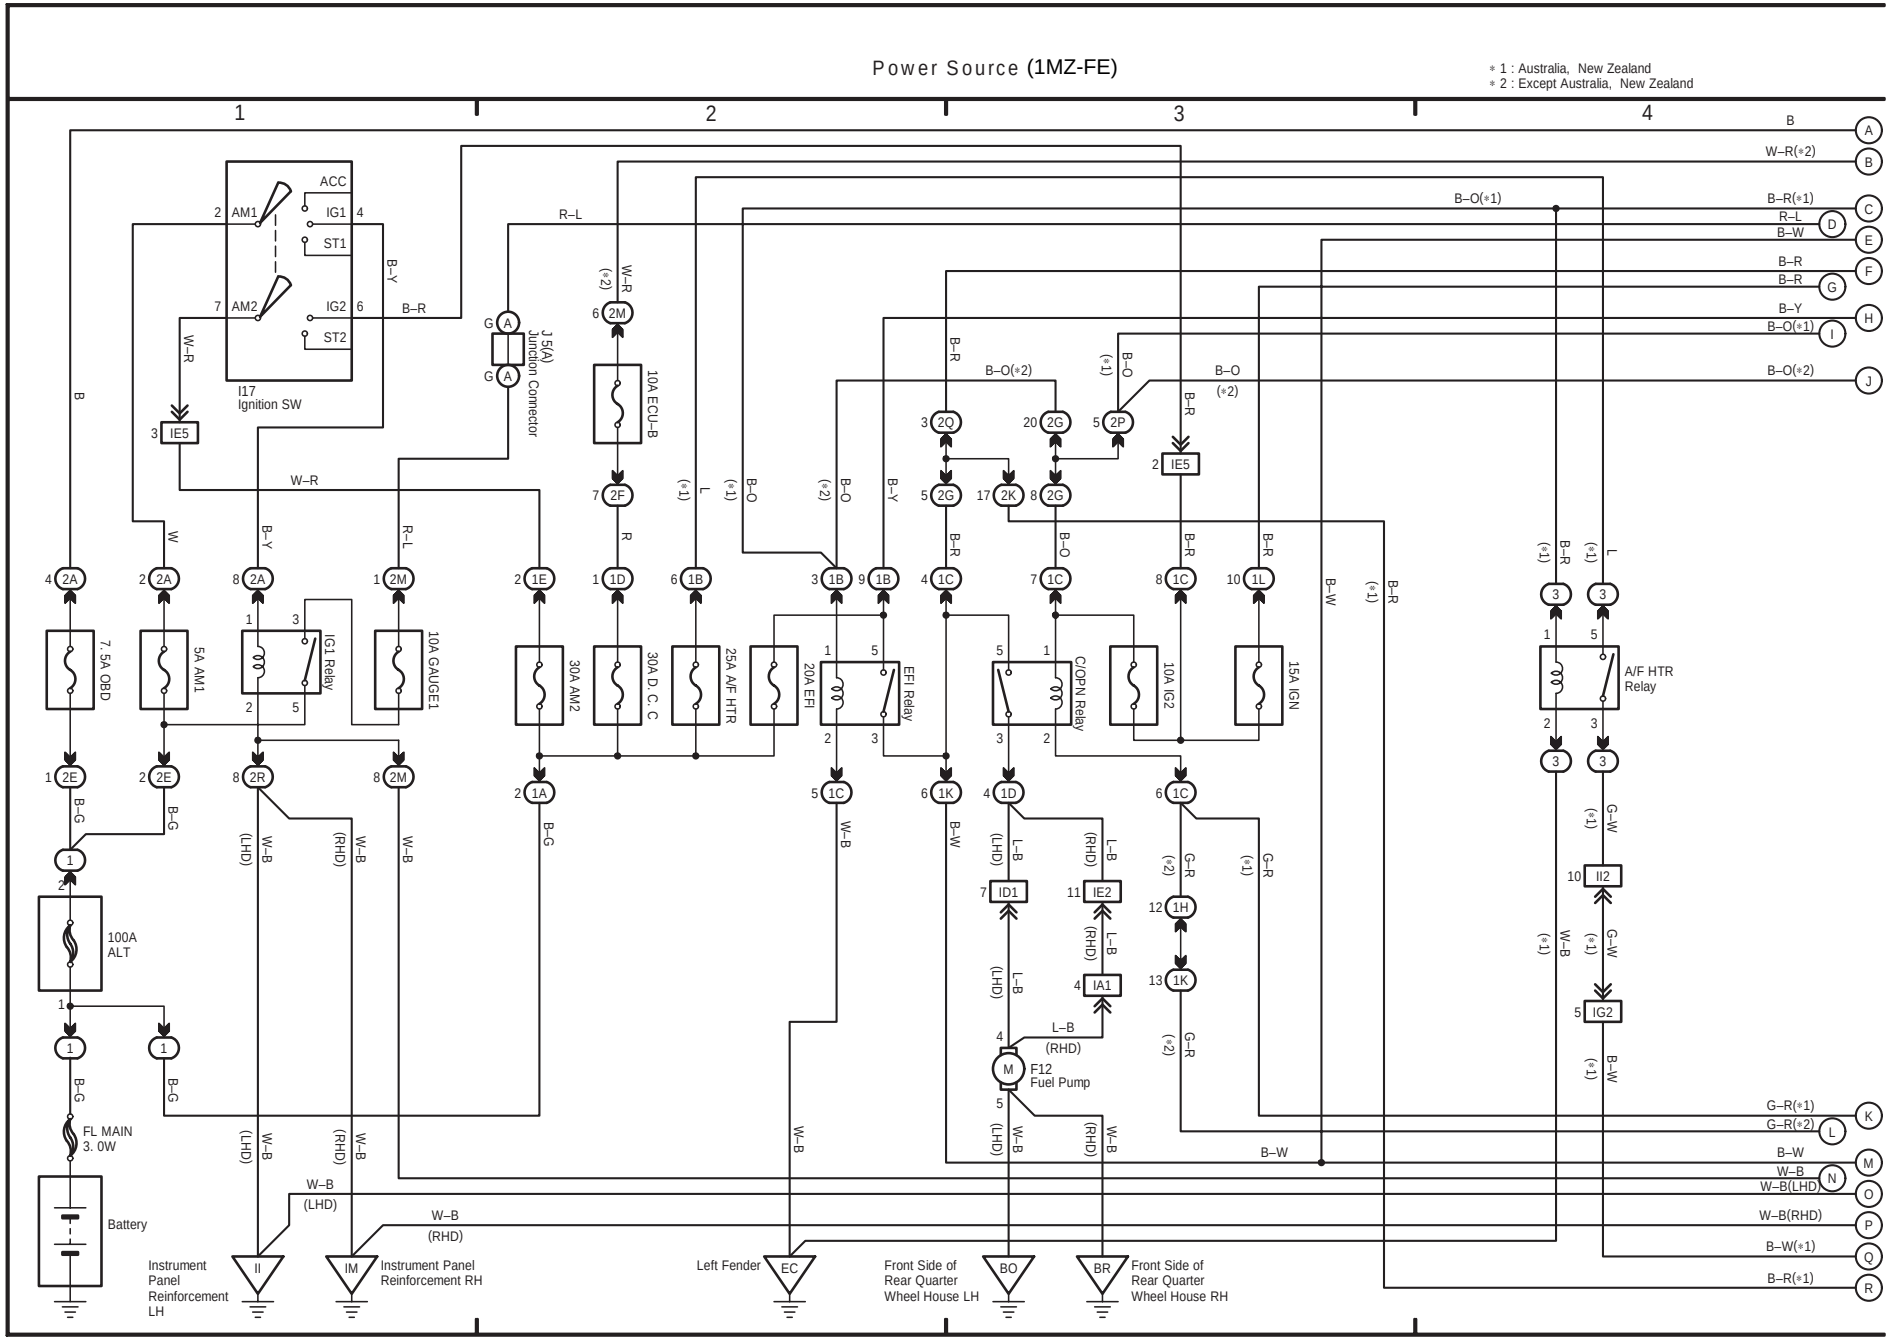


(Cont. next page)

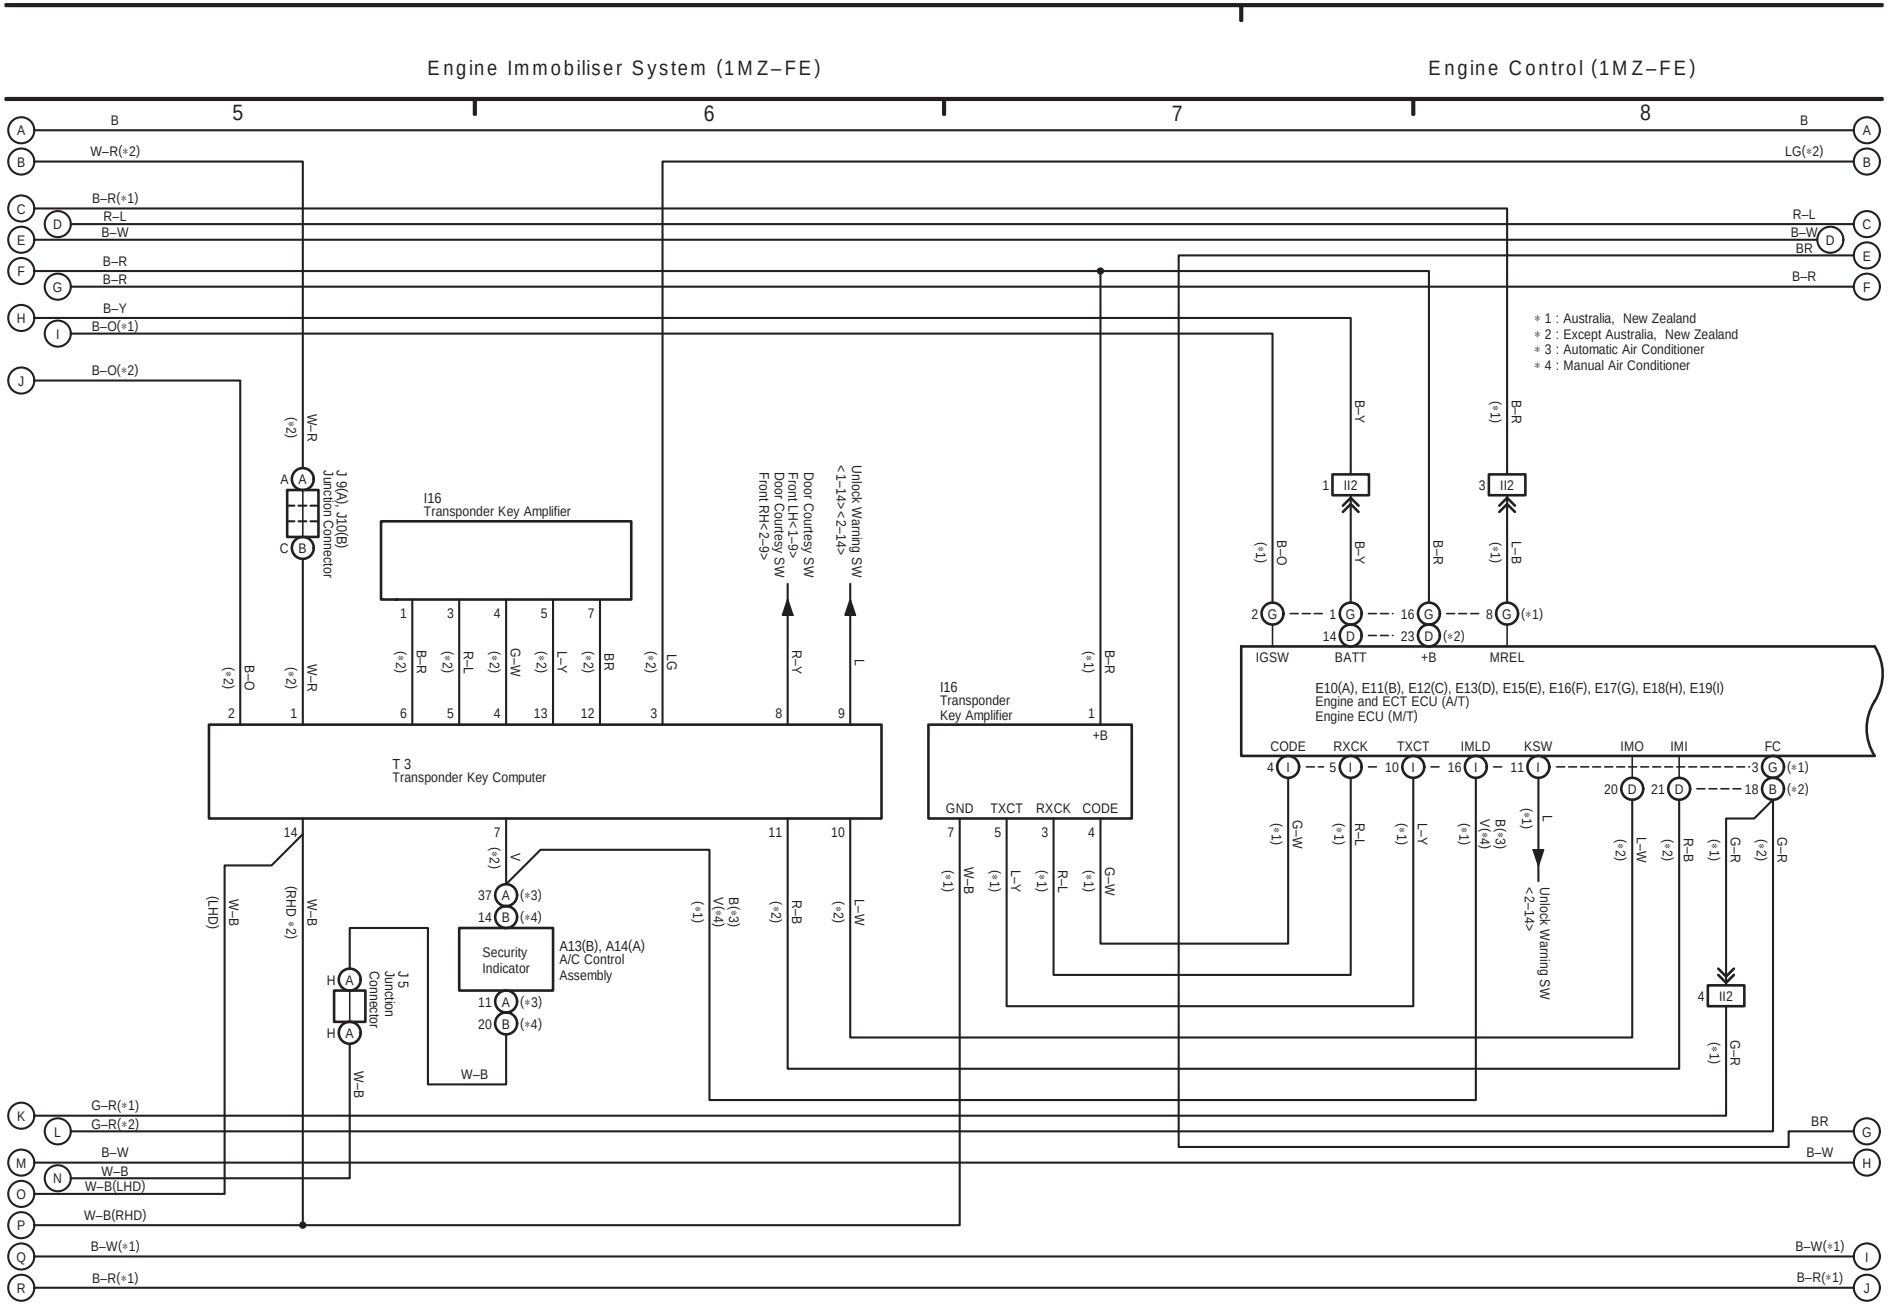


(Cont. next page)

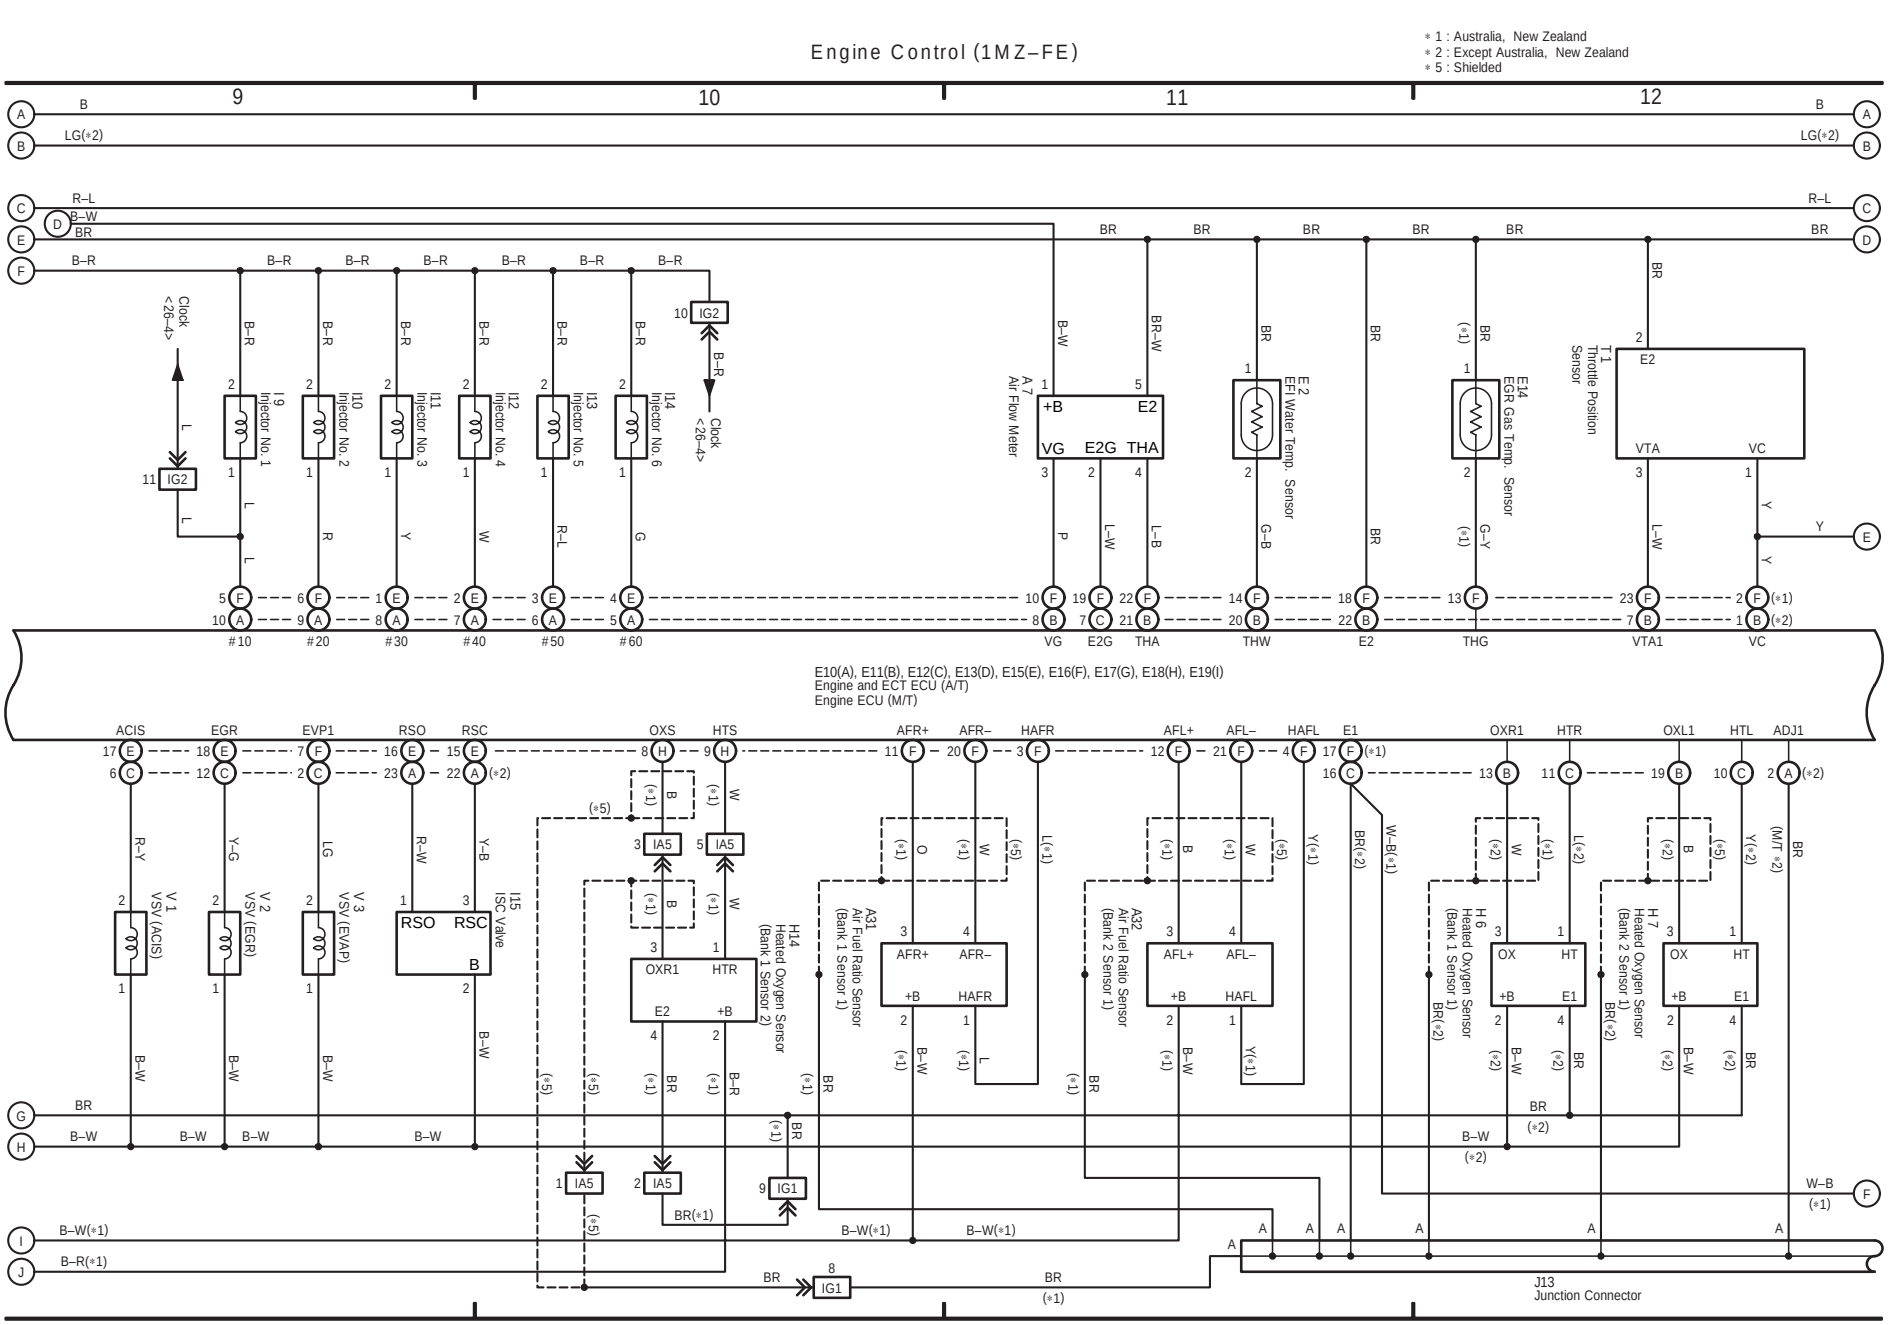


(Cont. next page)

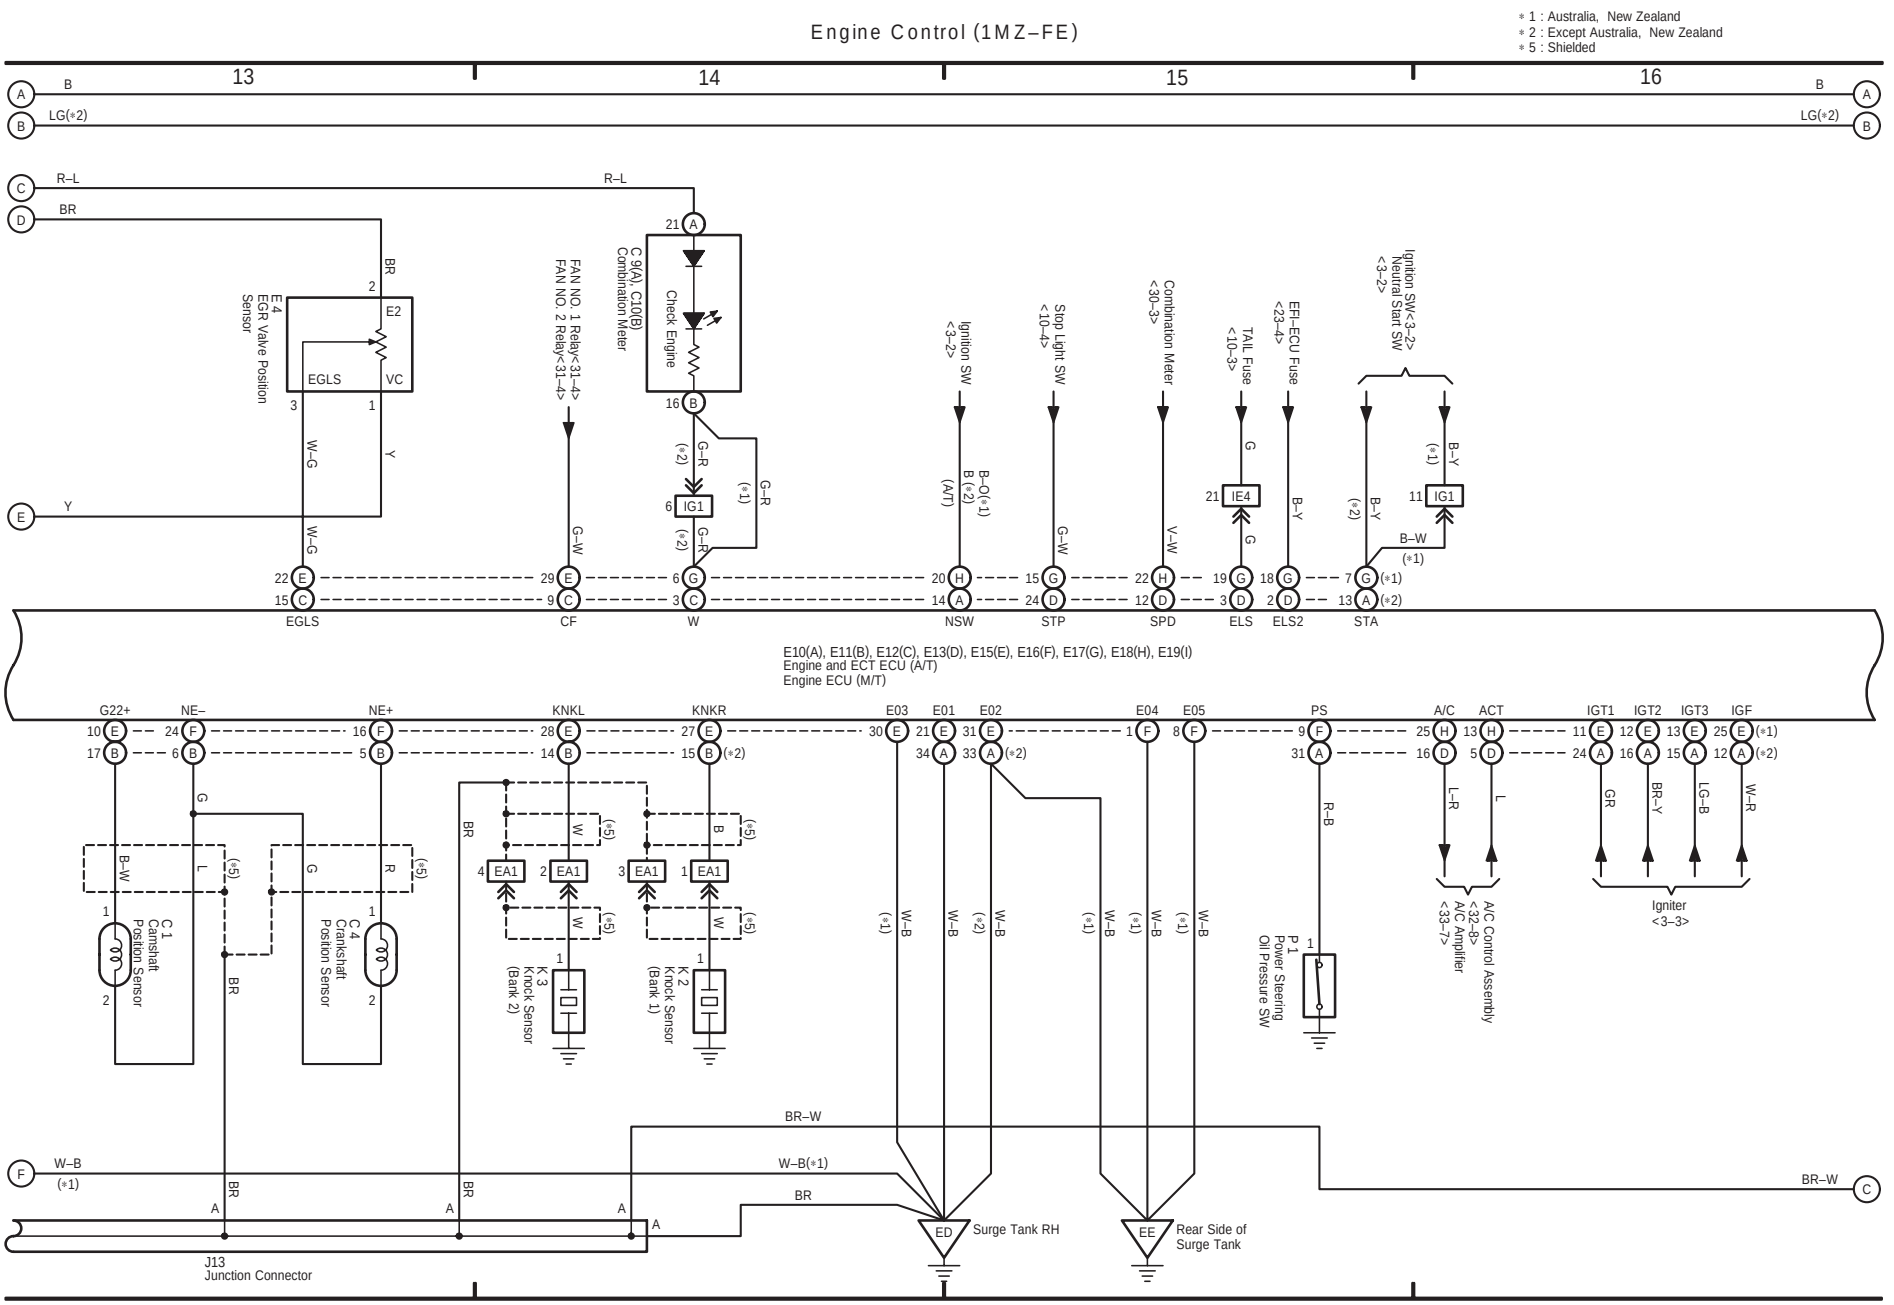


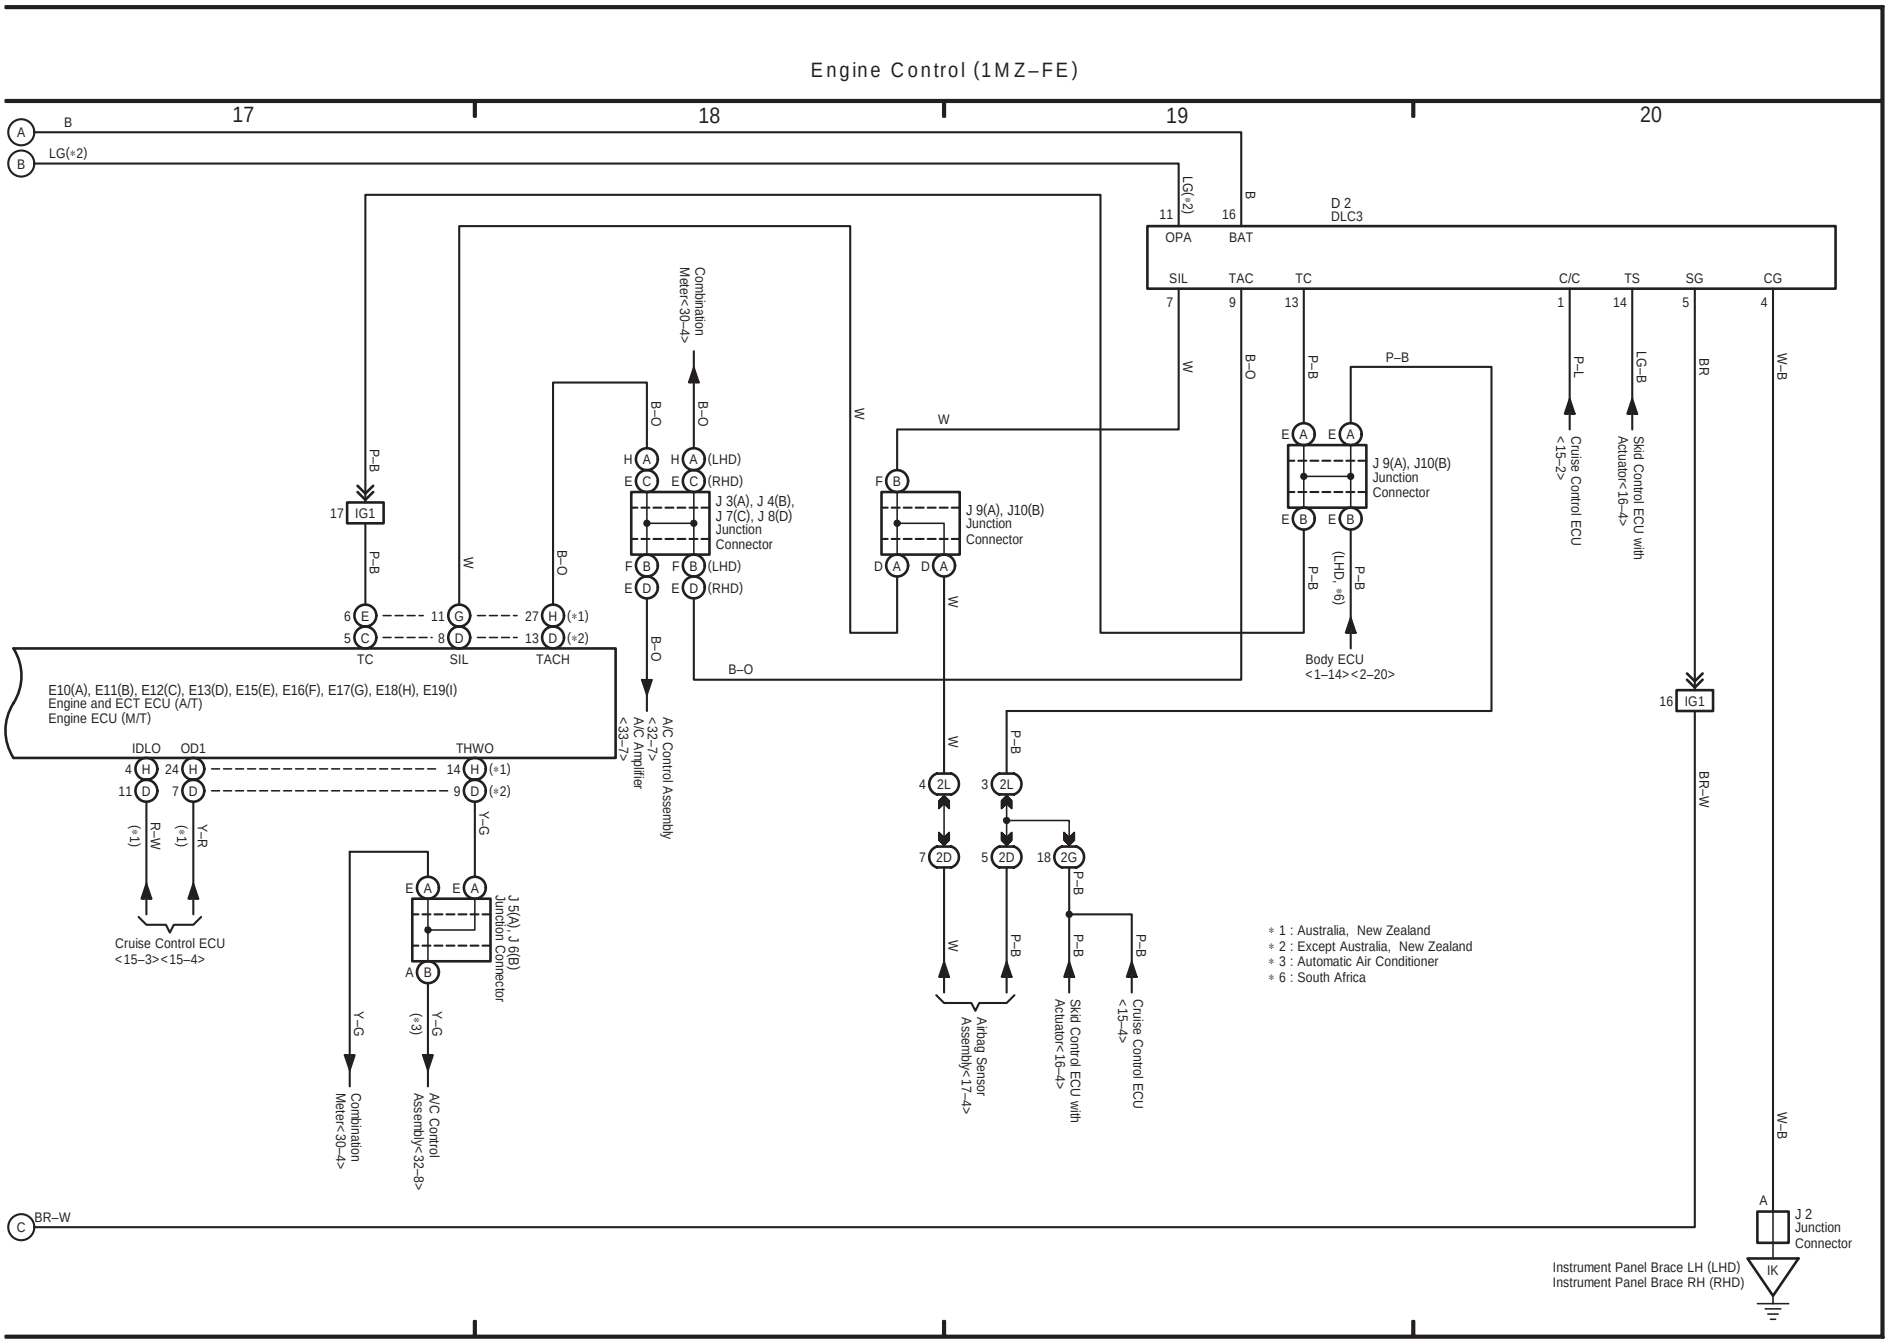
Engine Control (1MZ–FE)
17
18
19
20
B
LG(*2)
D 2
DLC3
OPA
BAT
SIL
TAC
TC
C/C
TS
SG
CG
Combination Meter<30–4>
J 3(A), J 4(B), J 7(C), J 8(D) Junction Connector
J 9(A), J10(B) Junction Connector
Cruise Control ECU <15–2>
Skid Control ECU with Actuator<16–4>
Body ECU <1–14><2–20>
IG1
E10(A), E11(B), E12(C), E13(D), E15(E), E16(F), E17(G), E18(H), E19(I)
Engine and ECT ECU (A/T)
Engine ECU (M/T)
IDLO
OD1
THWO
TC
SIL
TACH
A/C Control Assembly <32–7>
A/C Amplifier <33–7>
Cruise Control ECU <15–3><15–4>
J 5(A), J 6(B) Junction Connector
Airbag Sensor Assembly<17–4>
Skid Control ECU with Actuator<16–4>
Cruise Control ECU <15–4>
A/C Control Assembly<32–8>
J 2 Junction Connector
Instrument Panel Brace LH (LHD)
Instrument Panel Brace RH (RHD)
BR–W
W–B
* 1 : Australia, New Zealand
* 2 : Except Australia, New Zealand
* 3 : Automatic Air Conditioner
* 6 : South Africa


(Cont. next page)

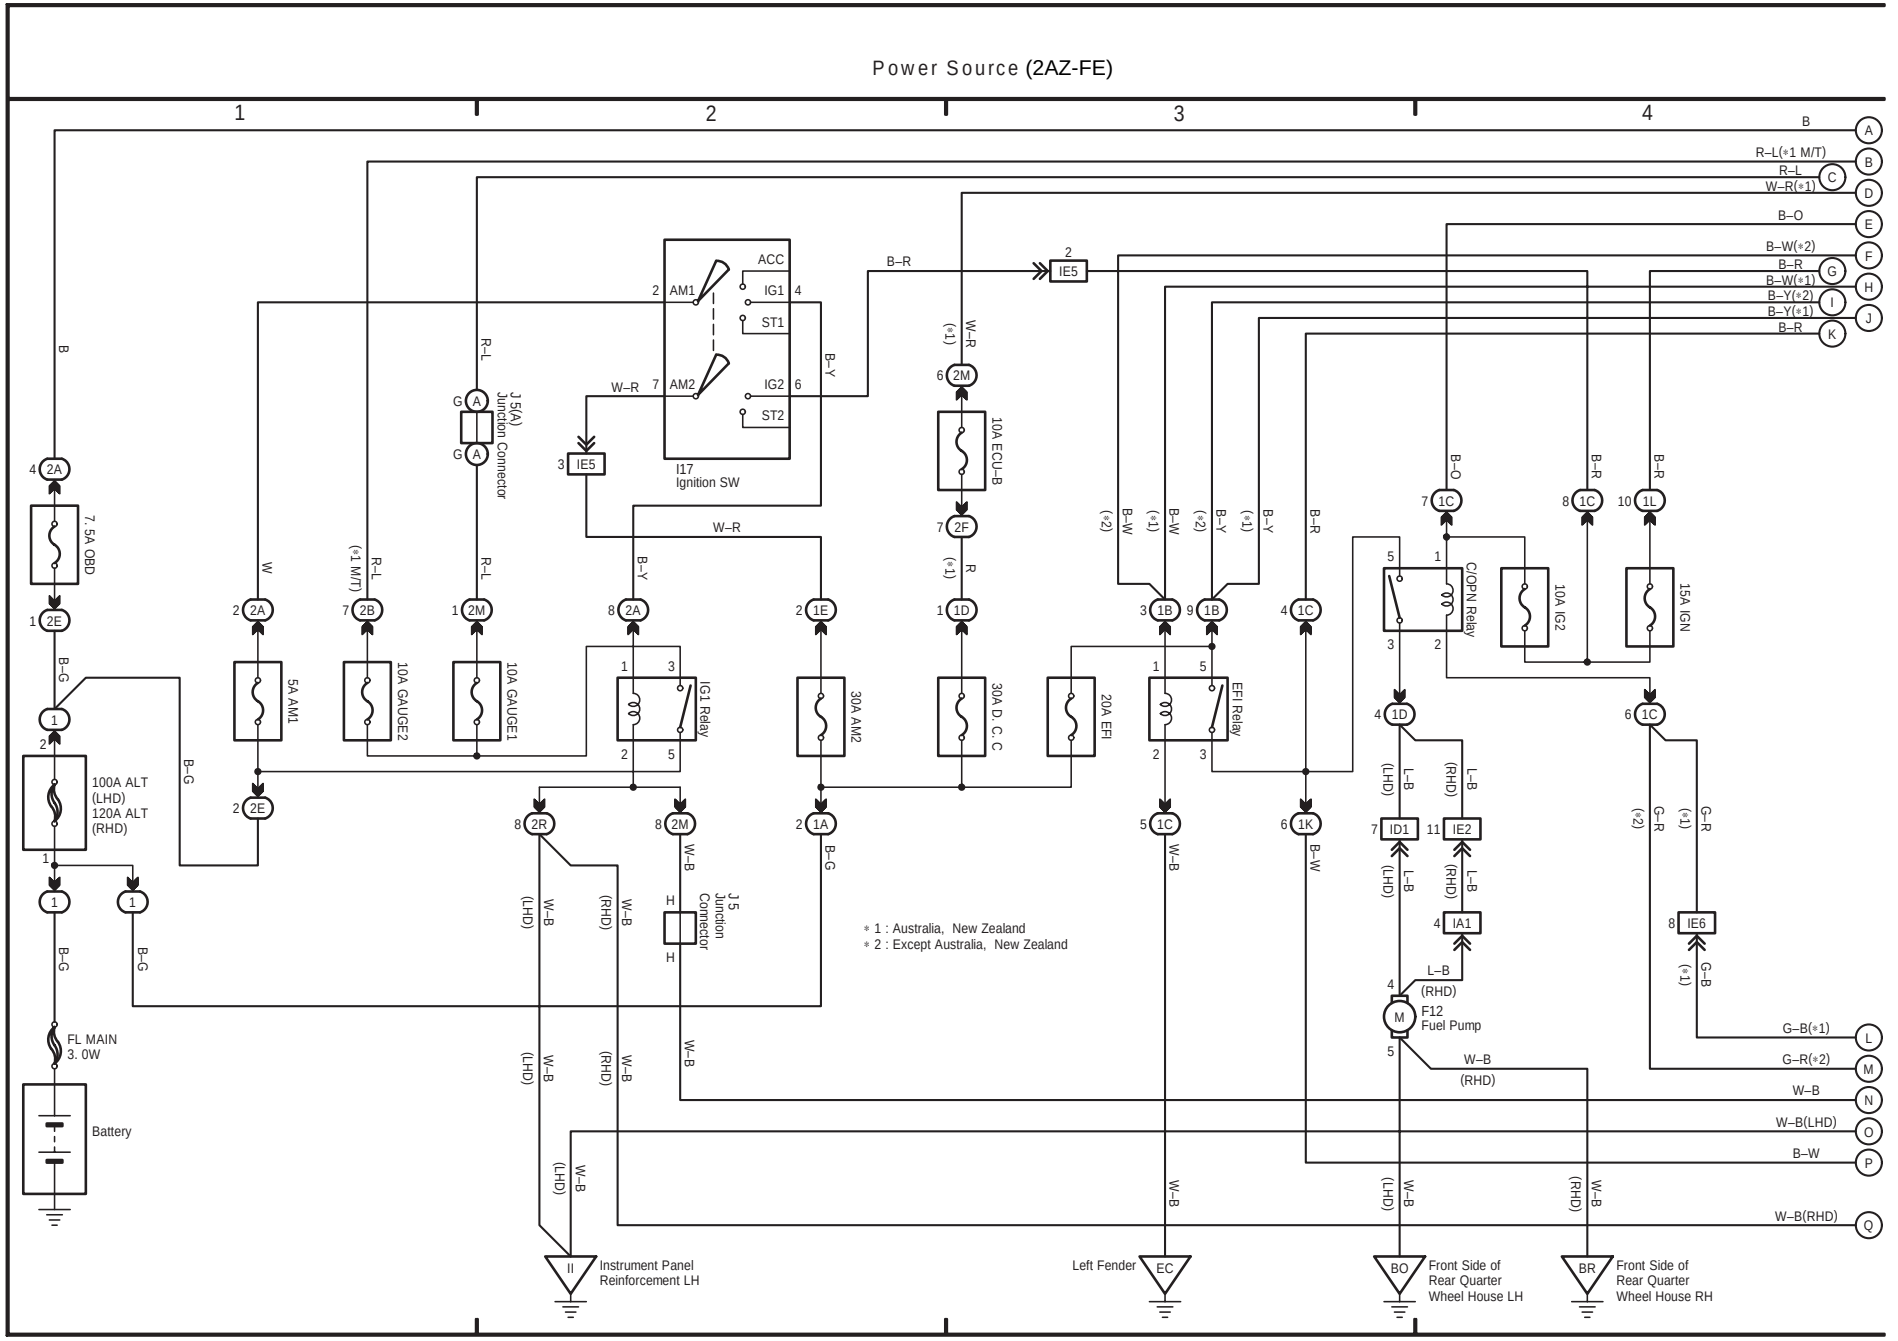


(Cont. next page)

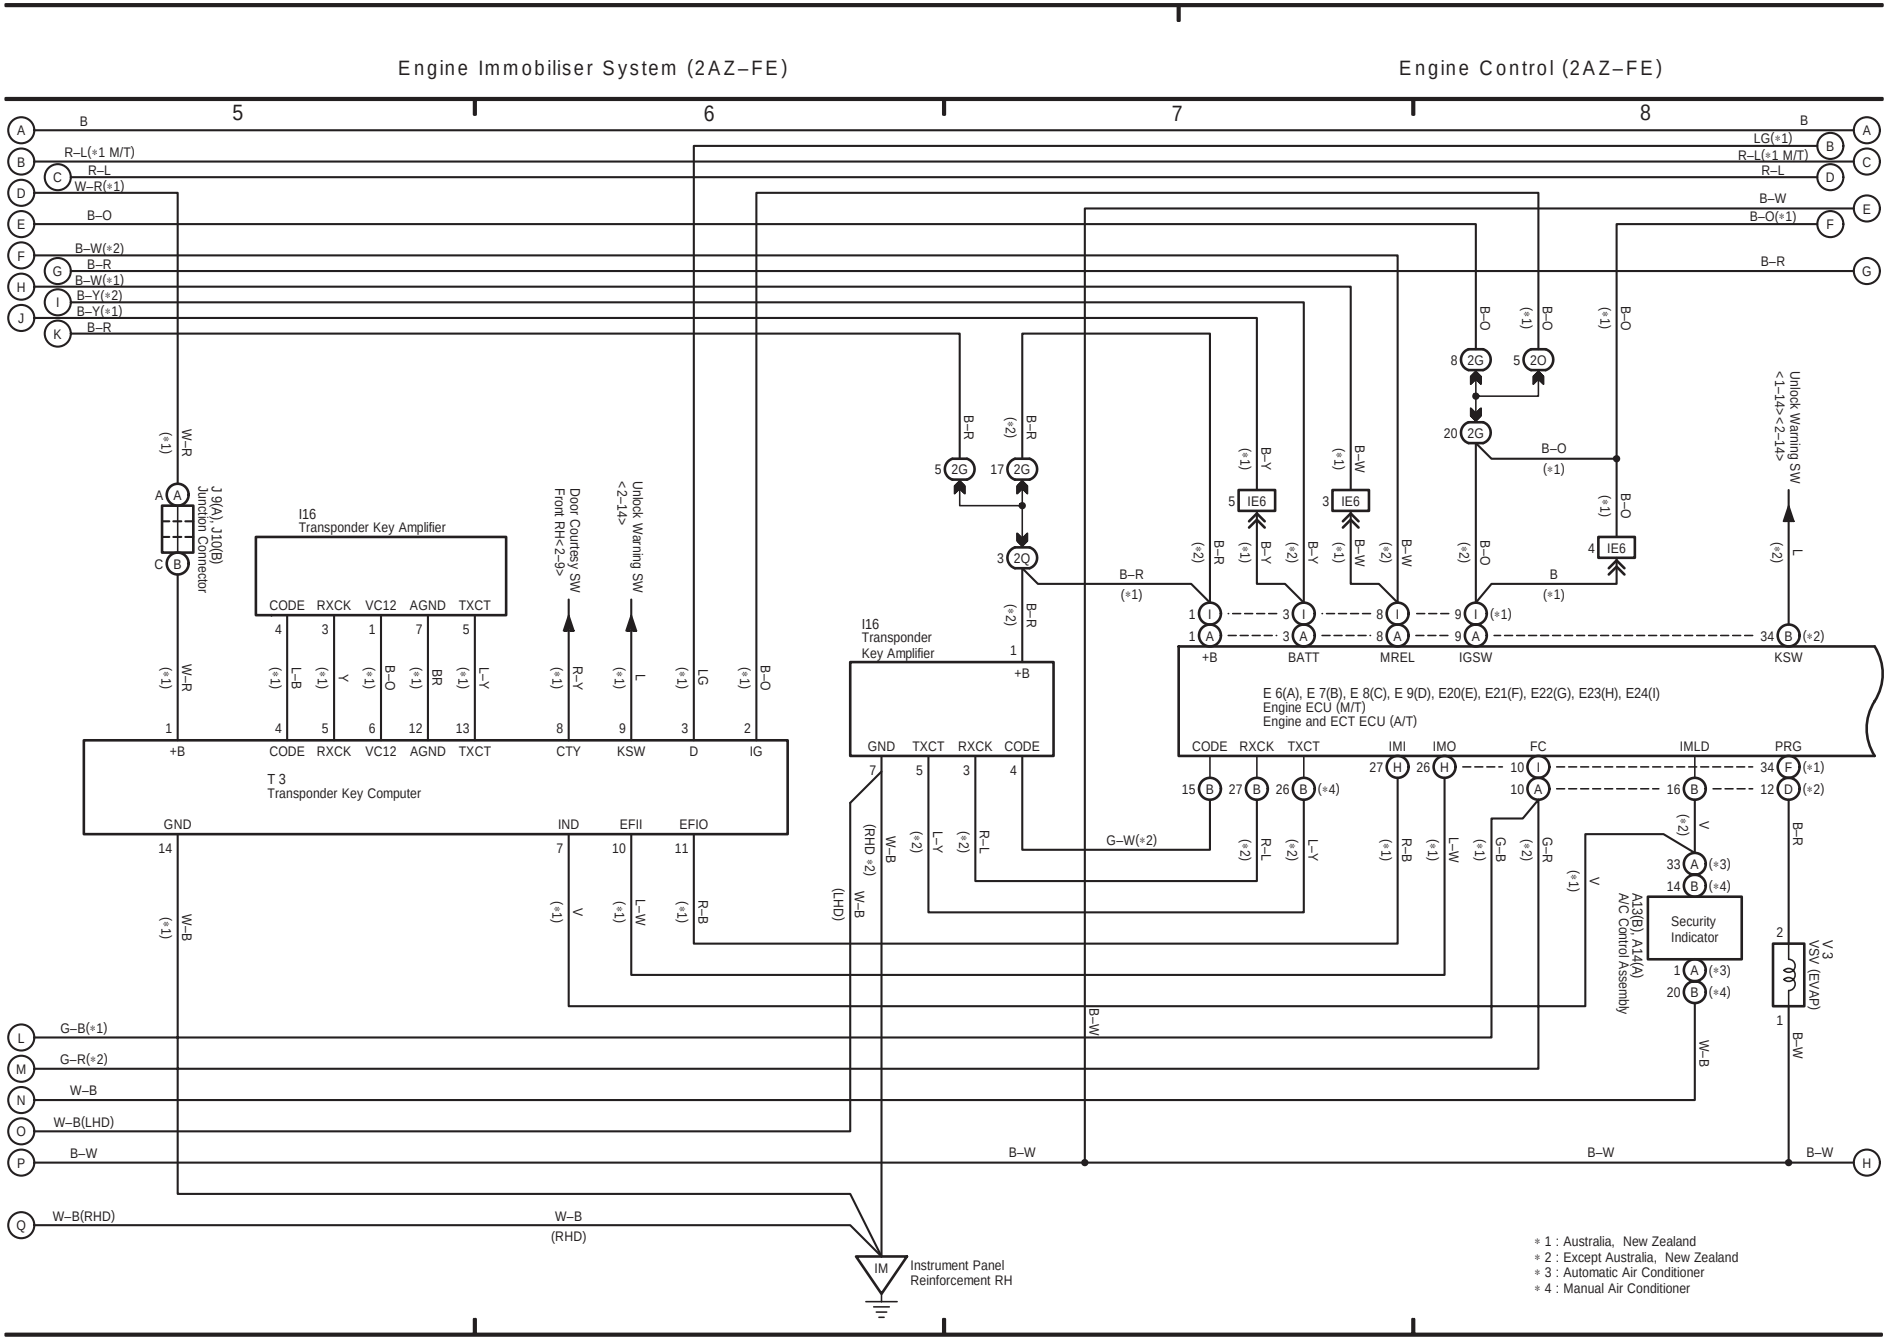



(Cont. next page)

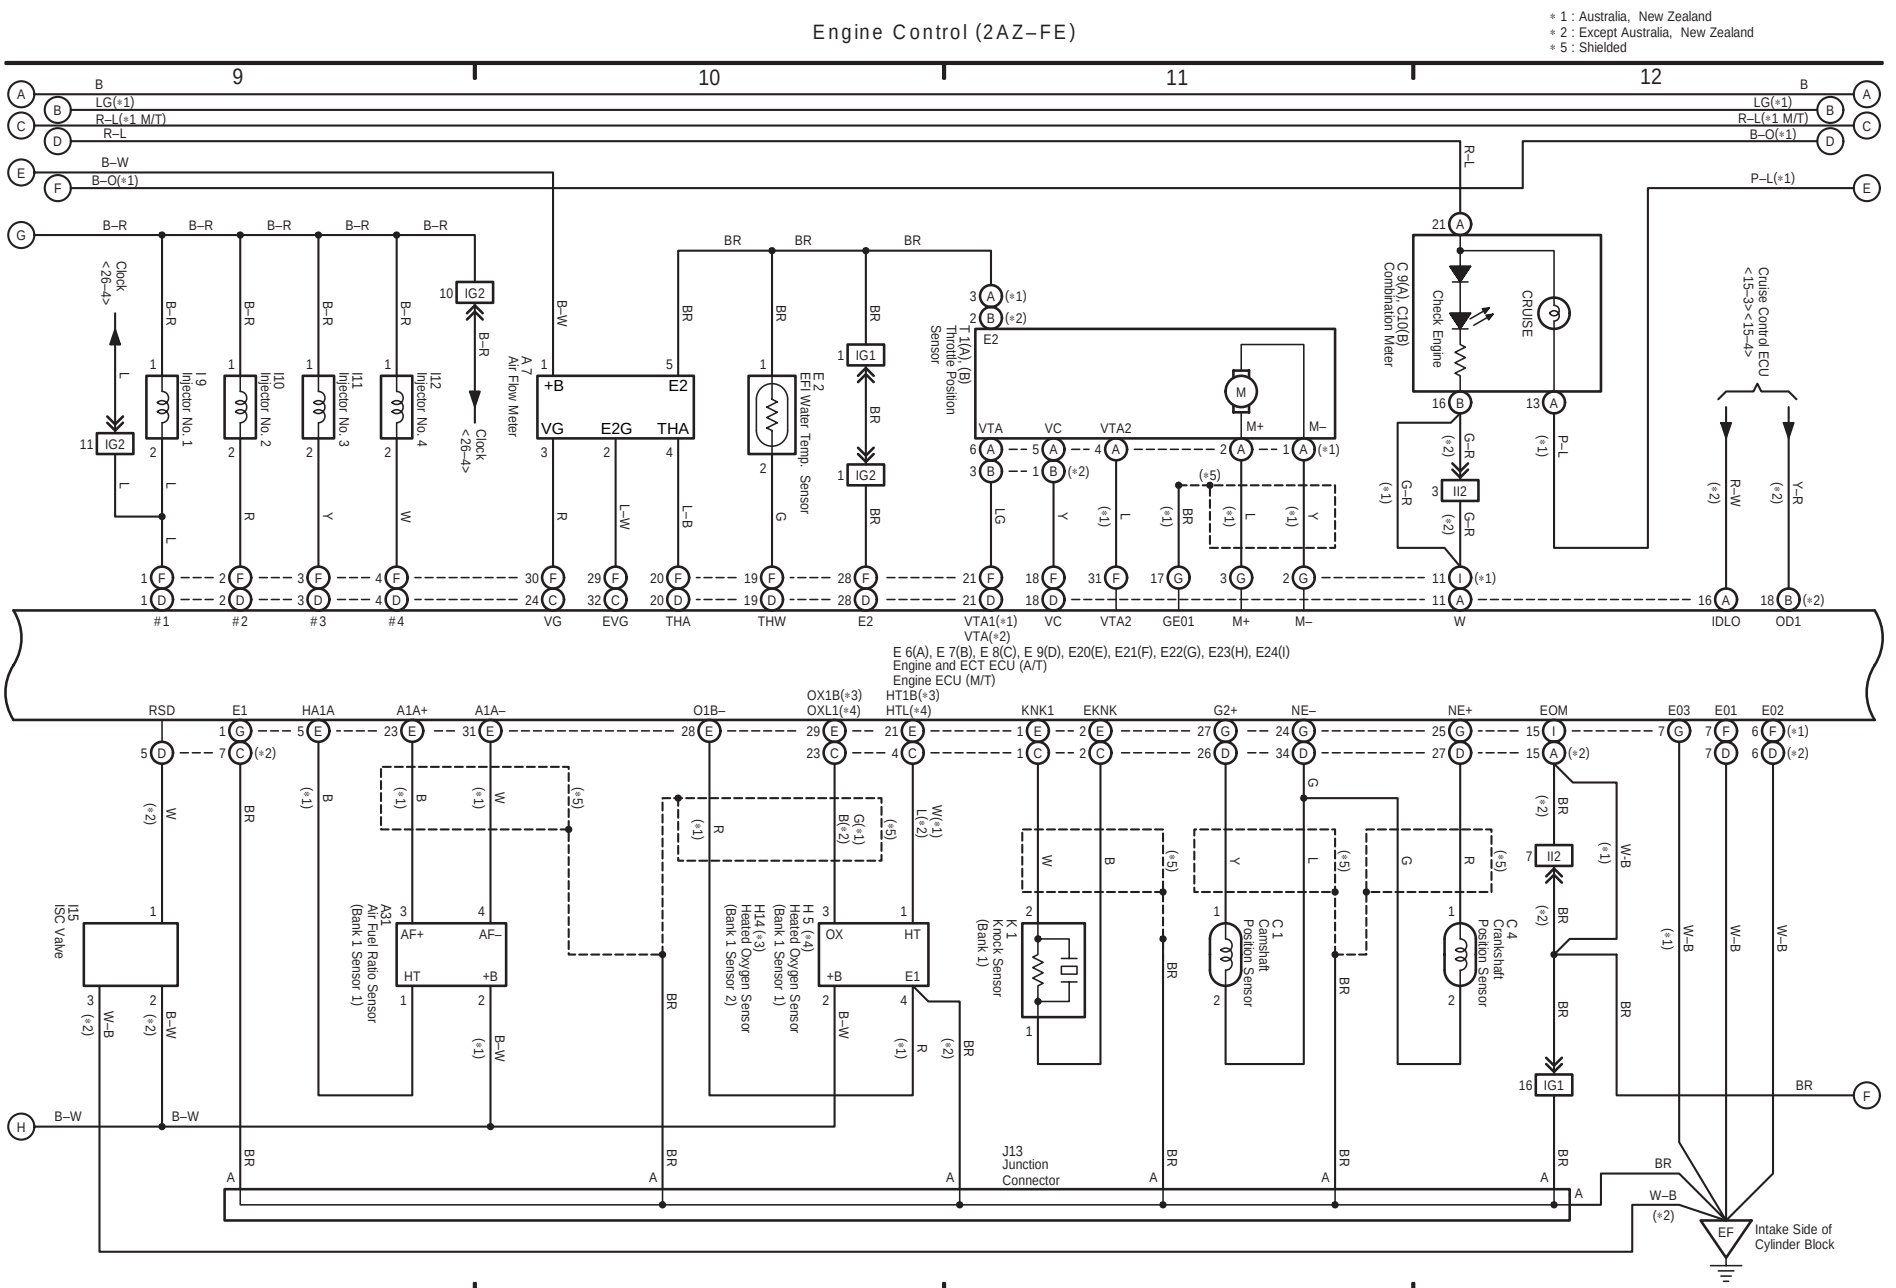



(Cont. next page)

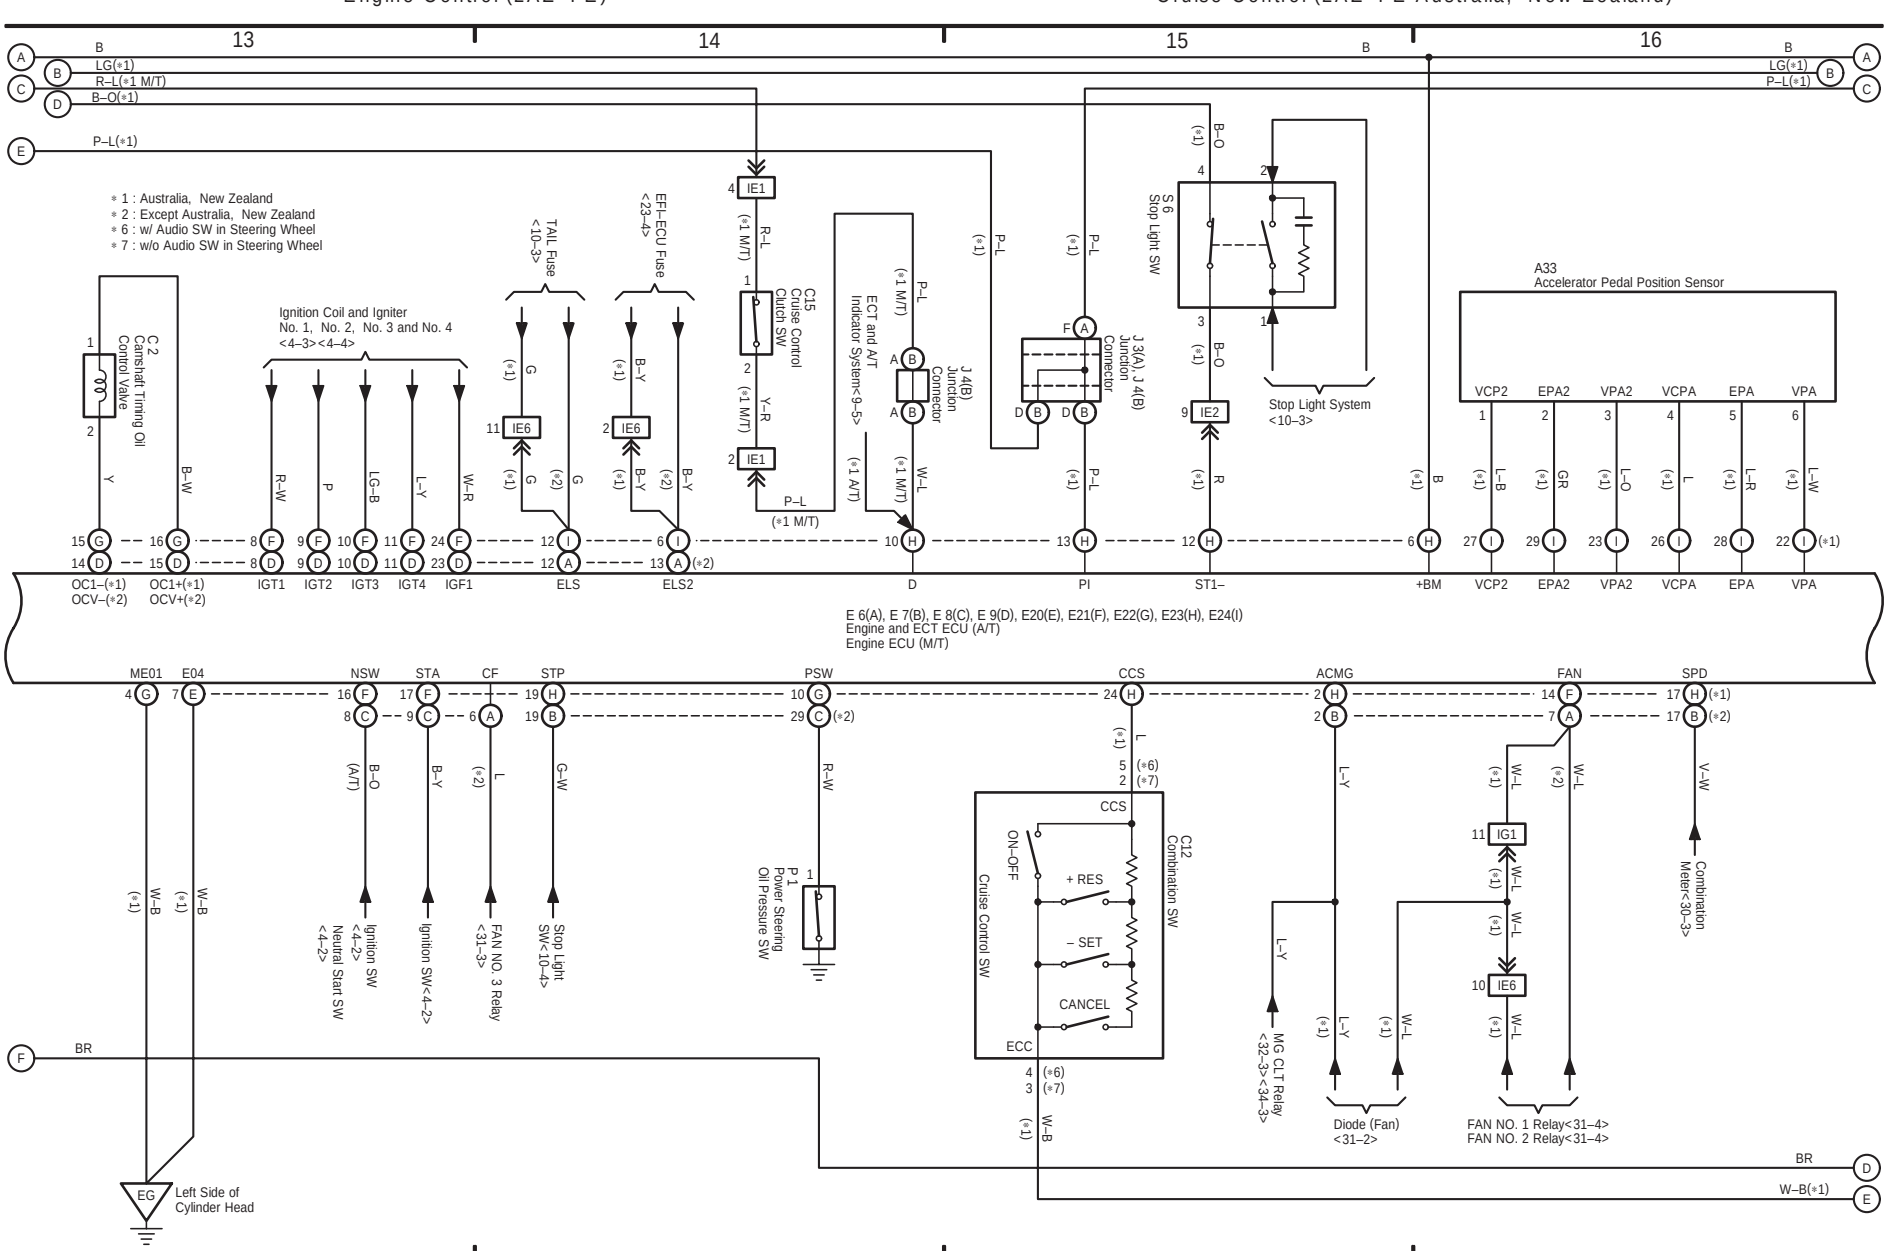

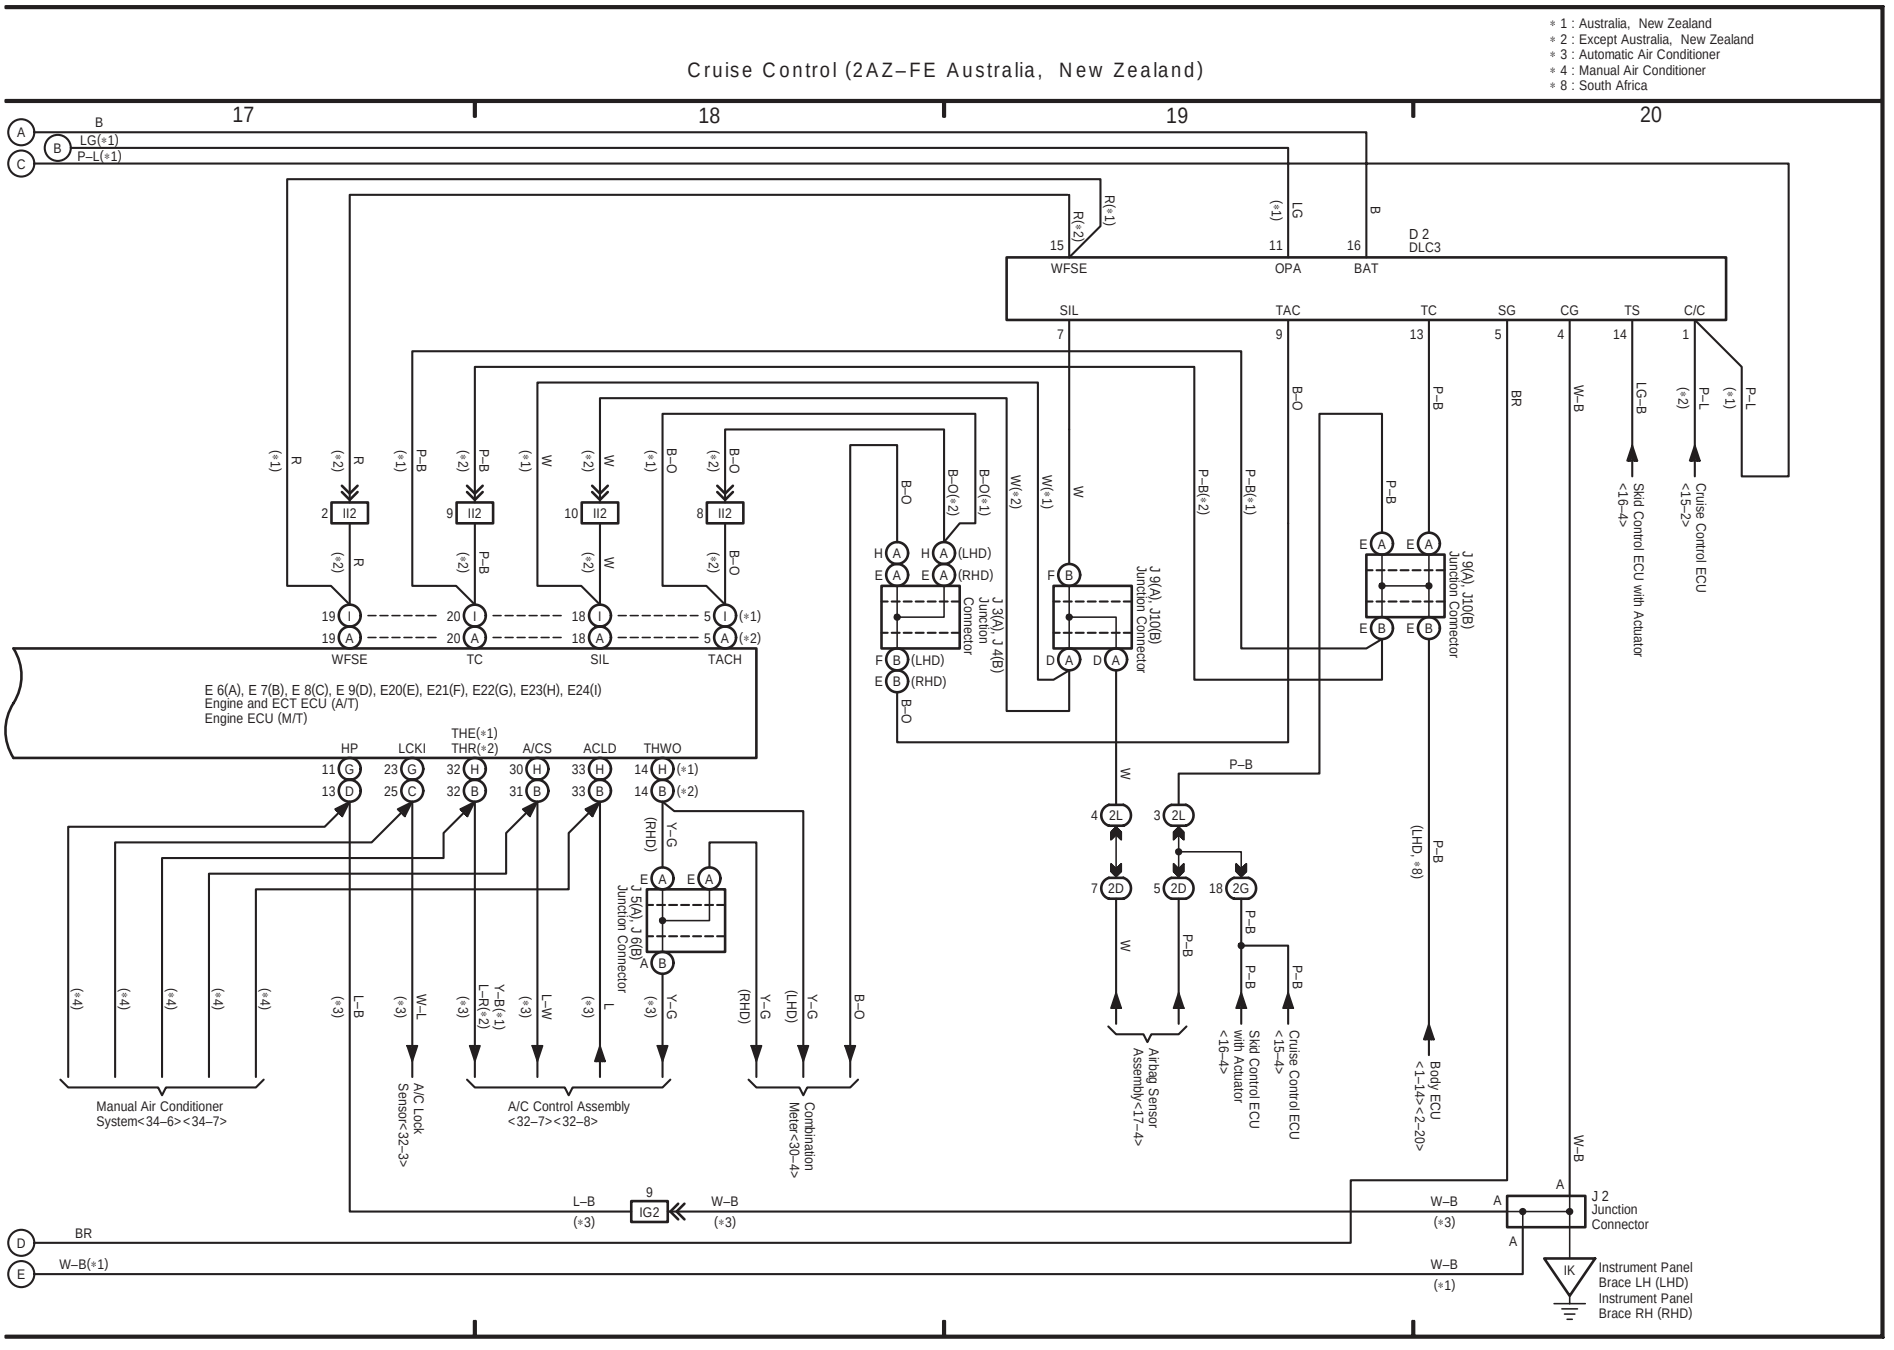

Cruise Control (2AZ–FE Australia, New Zealand)
* 1 : Australia, New Zealand
* 2 : Except Australia, New Zealand
* 3 : Automatic Air Conditioner
* 4 : Manual Air Conditioner
* 8 : South Africa
17
18
19
20
D 2
DLC3
WFSE
OPA
BAT
SIL
TAC
TC
SG
CG
TS
C/C
J 9(A), J10(B) Junction Connector
J 3(A), J 4(B) Junction Connector
J 5(A), J 6(B) Junction Connector
Skid Control ECU with Actuator <16–4>
Cruise Control ECU <15–2>
E 6(A), E 7(B), E 8(C), E 9(D), E20(E), E21(F), E22(G), E23(H), E24(I)
Engine and ECT ECU (A/T)
Engine ECU (M/T)
HP
LCKI
THR(*2)
A/CS
ACLD
THWO
THE(*1)
Manual Air Conditioner System<34–6><34–7>
A/C Lock Sensor<32–3>
A/C Control Assembly <32–7><32–8>
Combination Meter<30–4>
Airbag Sensor Assembly<17–4>
Body ECU <1–14><2–20>
J 2 Junction Connector
Instrument Panel Brace LH (LHD)
Instrument Panel Brace RH (RHD)

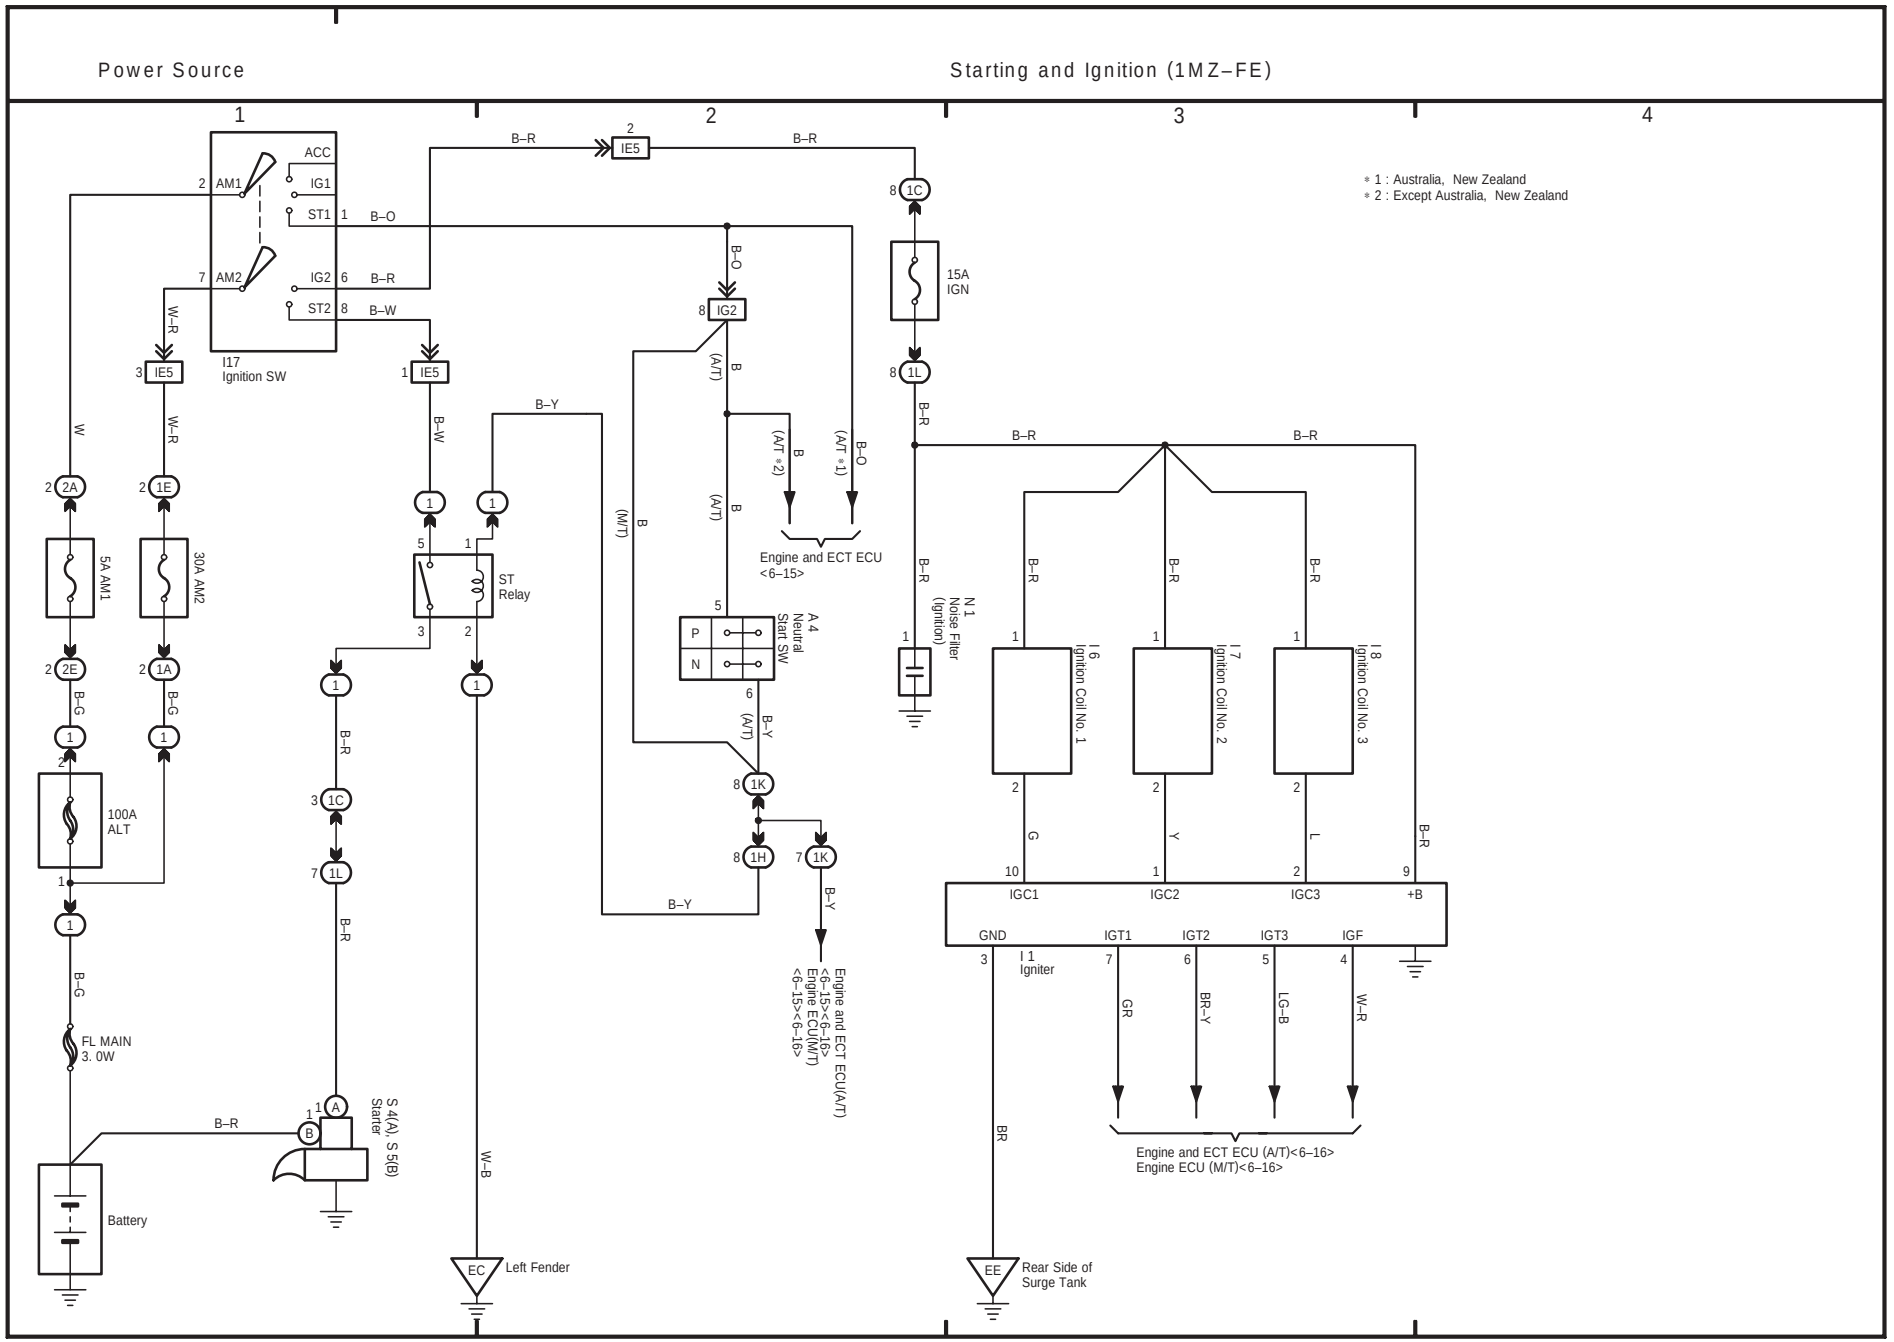
Power Source
Starting and Ignition (1MZ–FE)
1
2
3
4
* 1 : Australia, New Zealand
* 2 : Except Australia, New Zealand
I17 Ignition SW
ACC
IG1
ST1
IG2
ST2
AM1
AM2
IE5
1C
1L
15A IGN
5A AM1
30A AM2
2A
2E
1E
1A
100A ALT
FL MAIN 3. 0W
Battery
S 4(A), S 5(B) Starter
ST Relay
A 4 Neutral Start SW
P
N
Engine and ECT ECU <6–15>
N 1 Noise Filter (Ignition)
I 6 Ignition Coil No. 1
I 7 Ignition Coil No. 2
I 8 Ignition Coil No. 3
IGC1
IGC2
IGC3
+B
GND
IGT1
IGT2
IGT3
IGF
I 1 Igniter
Engine and ECT ECU (A/T)<6–16>
Engine ECU (M/T)<6–16>
Engine and ECT ECU(A/T) <6–15><6–16> Engine ECU(M/T) <6–15><6–16>
EC
Left Fender
EE
Rear Side of Surge Tank

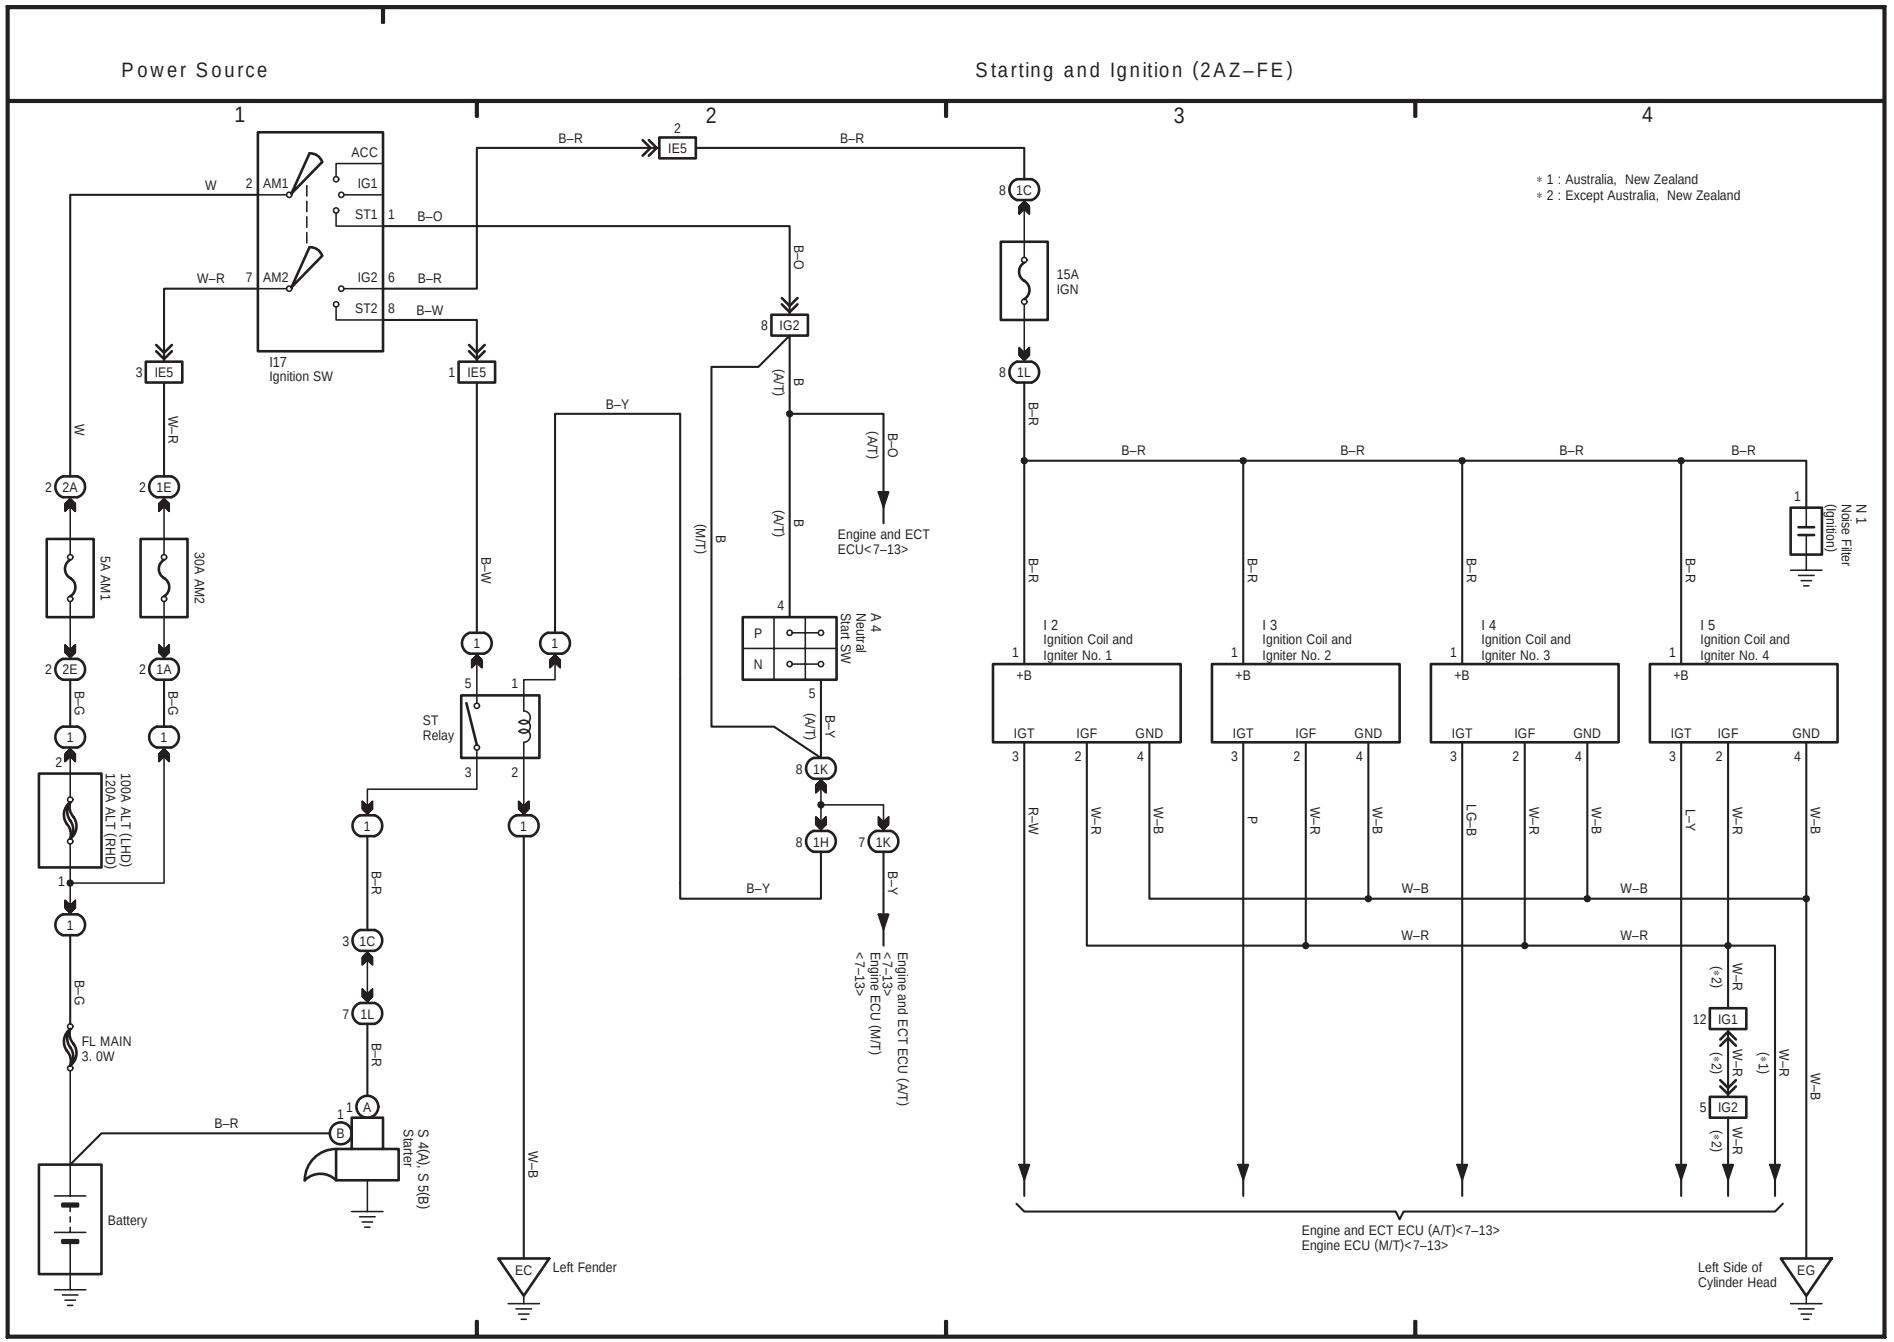

Power Source
Starting and Ignition (2AZ–FE)
1
2
3
4
∗ 1 : Australia, New Zealand
∗ 2 : Except Australia, New Zealand
I17 Ignition SW
ACC
IG1
ST1
IG2
ST2
AM1
AM2
5A AM1
30A AM2
100A ALT (LHD)
120A ALT (RHD)
FL MAIN 3. 0W
Battery
S 4(A), S 5(B) Starter
ST Relay
A 4 Neutral Start SW
15A IGN
I 2 Ignition Coil and Igniter No. 1
I 3 Ignition Coil and Igniter No. 2
I 4 Ignition Coil and Igniter No. 3
I 5 Ignition Coil and Igniter No. 4
N 1 Noise Filter (Ignition)
+B
IGT
IGF
GND
Engine and ECT ECU<7–13>
Engine and ECT ECU (A/T) <7–13> Engine ECU (M/T) <7–13>
Engine and ECT ECU (A/T)<7–13> Engine ECU (M/T)<7–13>
Left Fender
Left Side of Cylinder Head
EC
EG

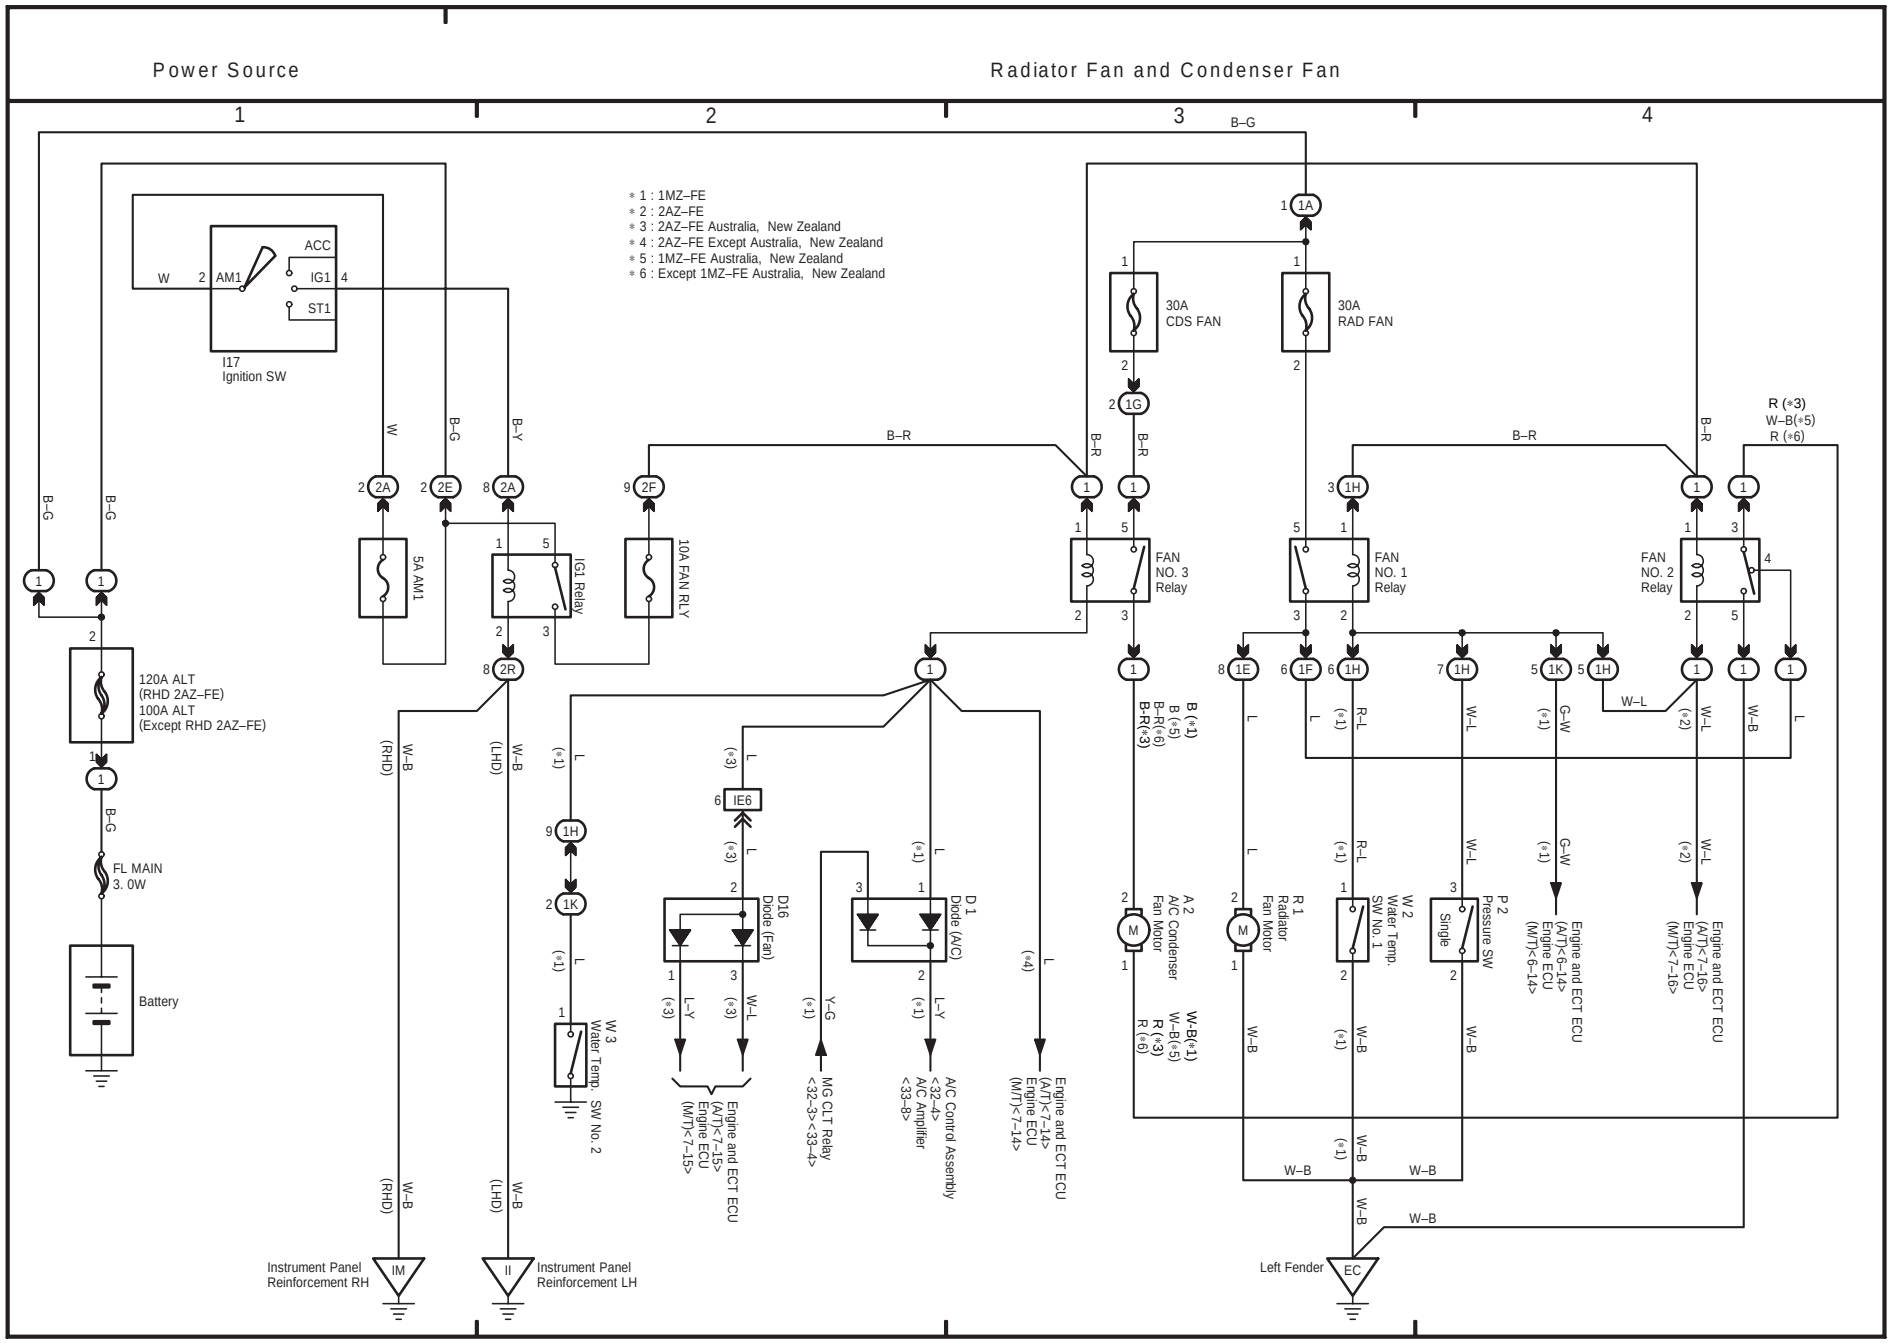
Power Source
Radiator Fan and Condenser Fan
1
2
3
4
∗ 1 : 1MZ–FE
∗ 2 : 2AZ–FE
∗ 3 : 2AZ–FE Australia, New Zealand
∗ 4 : 2AZ–FE Except Australia, New Zealand
∗ 5 : 1MZ–FE Australia, New Zealand
∗ 6 : Except 1MZ–FE Australia, New Zealand
I17
Ignition SW
ACC
AM1
IG1
ST1
30A
CDS FAN
30A
RAD FAN
FAN
NO. 3
Relay
FAN
NO. 1
Relay
FAN
NO. 2
Relay
IG1 Relay
5A AM1
10A FAN RLY
120A ALT
(RHD 2AZ–FE)
100A ALT
(Except RHD 2AZ–FE)
FL MAIN
3. 0W
Battery
D16
Diode (Fan)
D1
Diode (A/C)
A2
A/C Condenser
Fan Motor
R1
Radiator
Fan Motor
W2
Water Temp.
SW No. 1
P2
Pressure SW
W3
Water Temp. SW No. 2
MG CLT Relay
<32–3><33–4>
A/C Control Assembly
<32–4>
A/C Amplifier
<33–8>
Engine and ECT ECU
(A/T)<7–14>
Engine ECU
(M/T)<7–14>
Engine and ECT ECU
(A/T)<7–15>
Engine ECU
(M/T)<7–15>
Engine and ECT ECU
(A/T)<6–14>
Engine ECU
(M/T)<6–14>
Engine and ECT ECU
(A/T)<7–16>
Engine ECU
(M/T)<7–16>
Instrument Panel
Reinforcement RH
Instrument Panel
Reinforcement LH
Left Fender
R (∗3)
W–B(∗5)
R (∗6)


(Cont. next page)

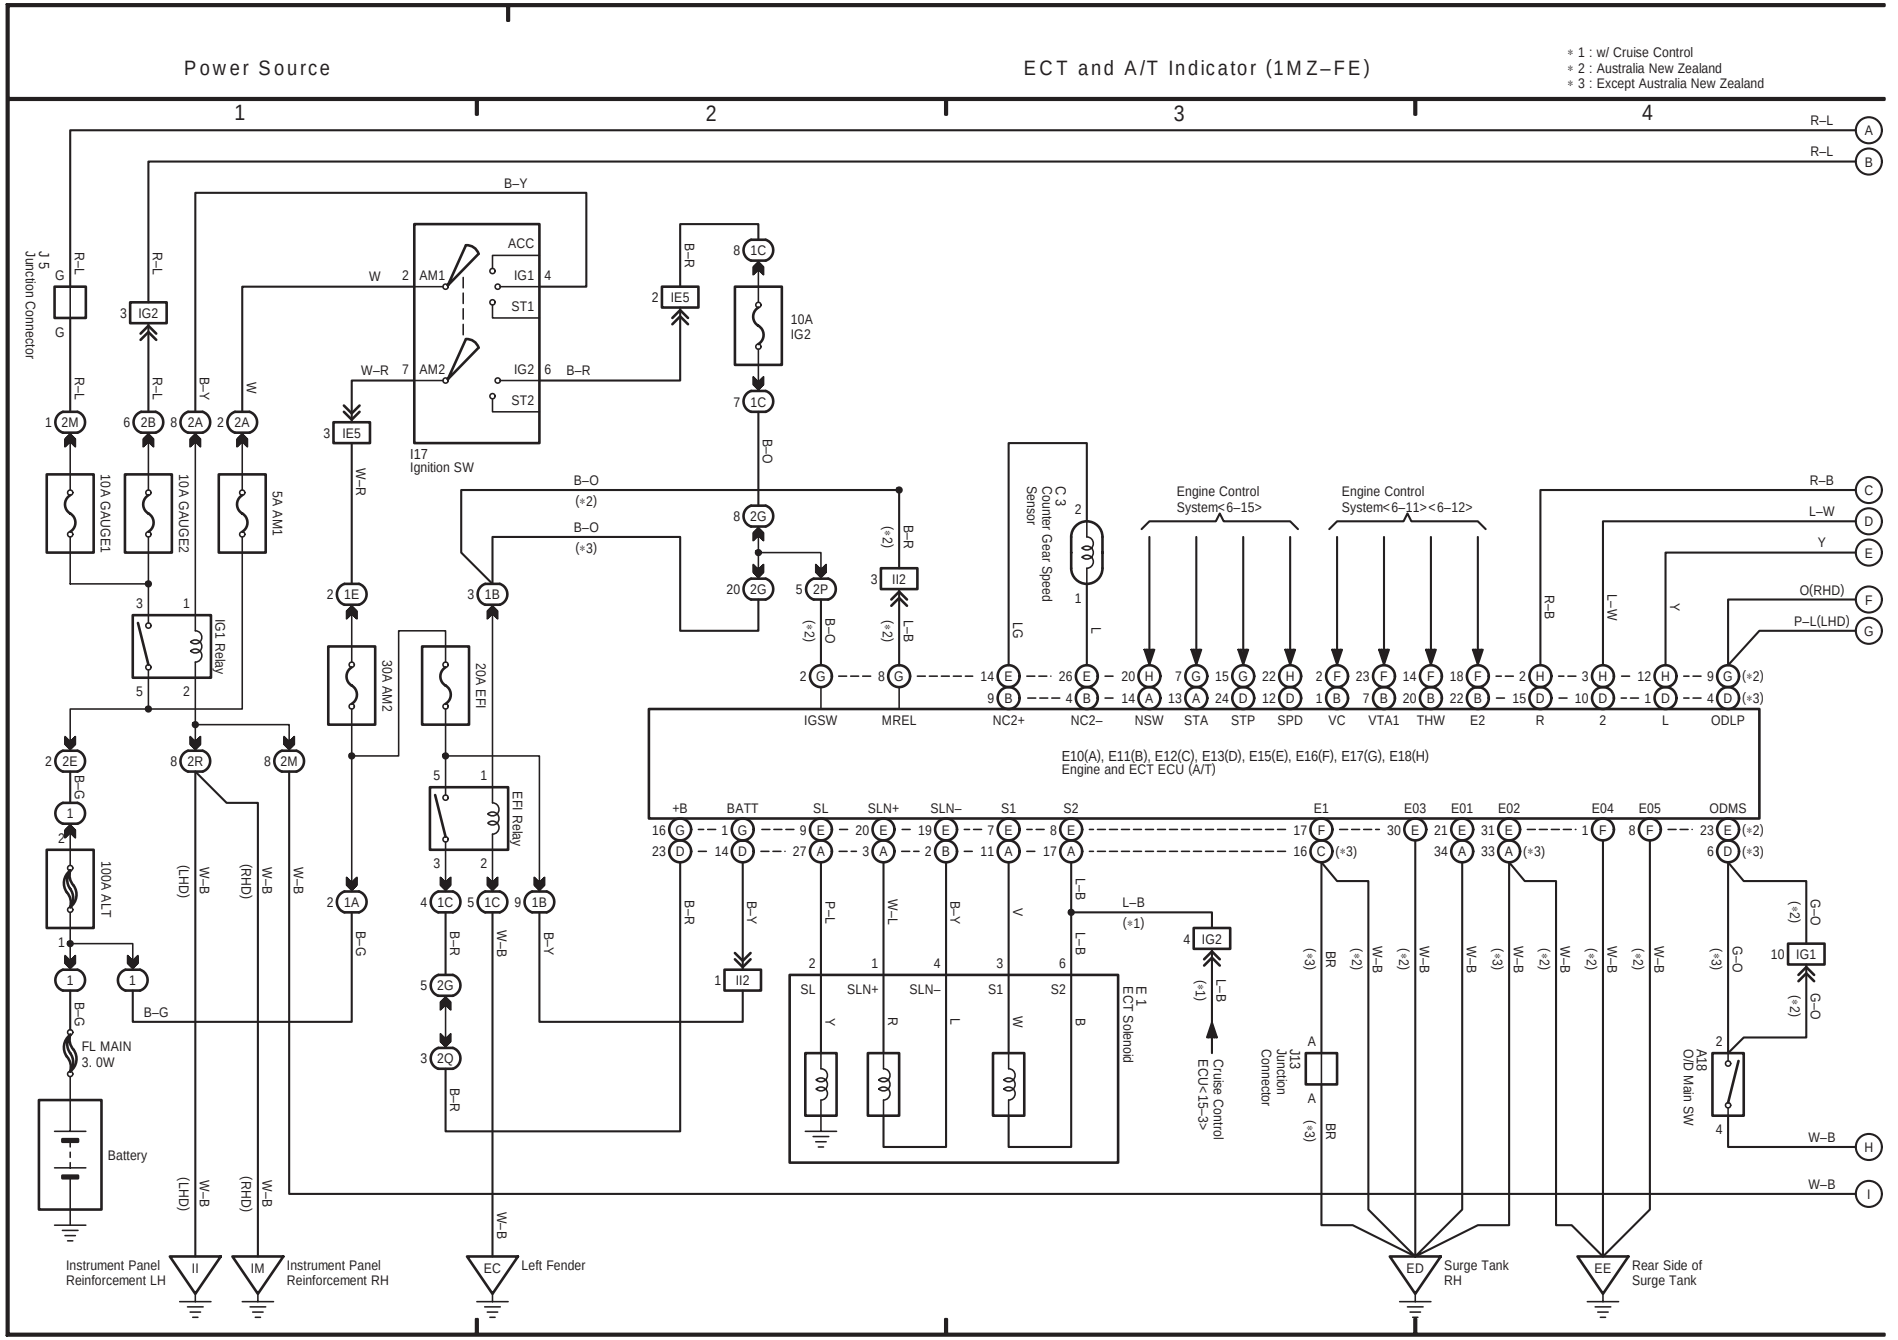


8 CAMRY (Cont' d)

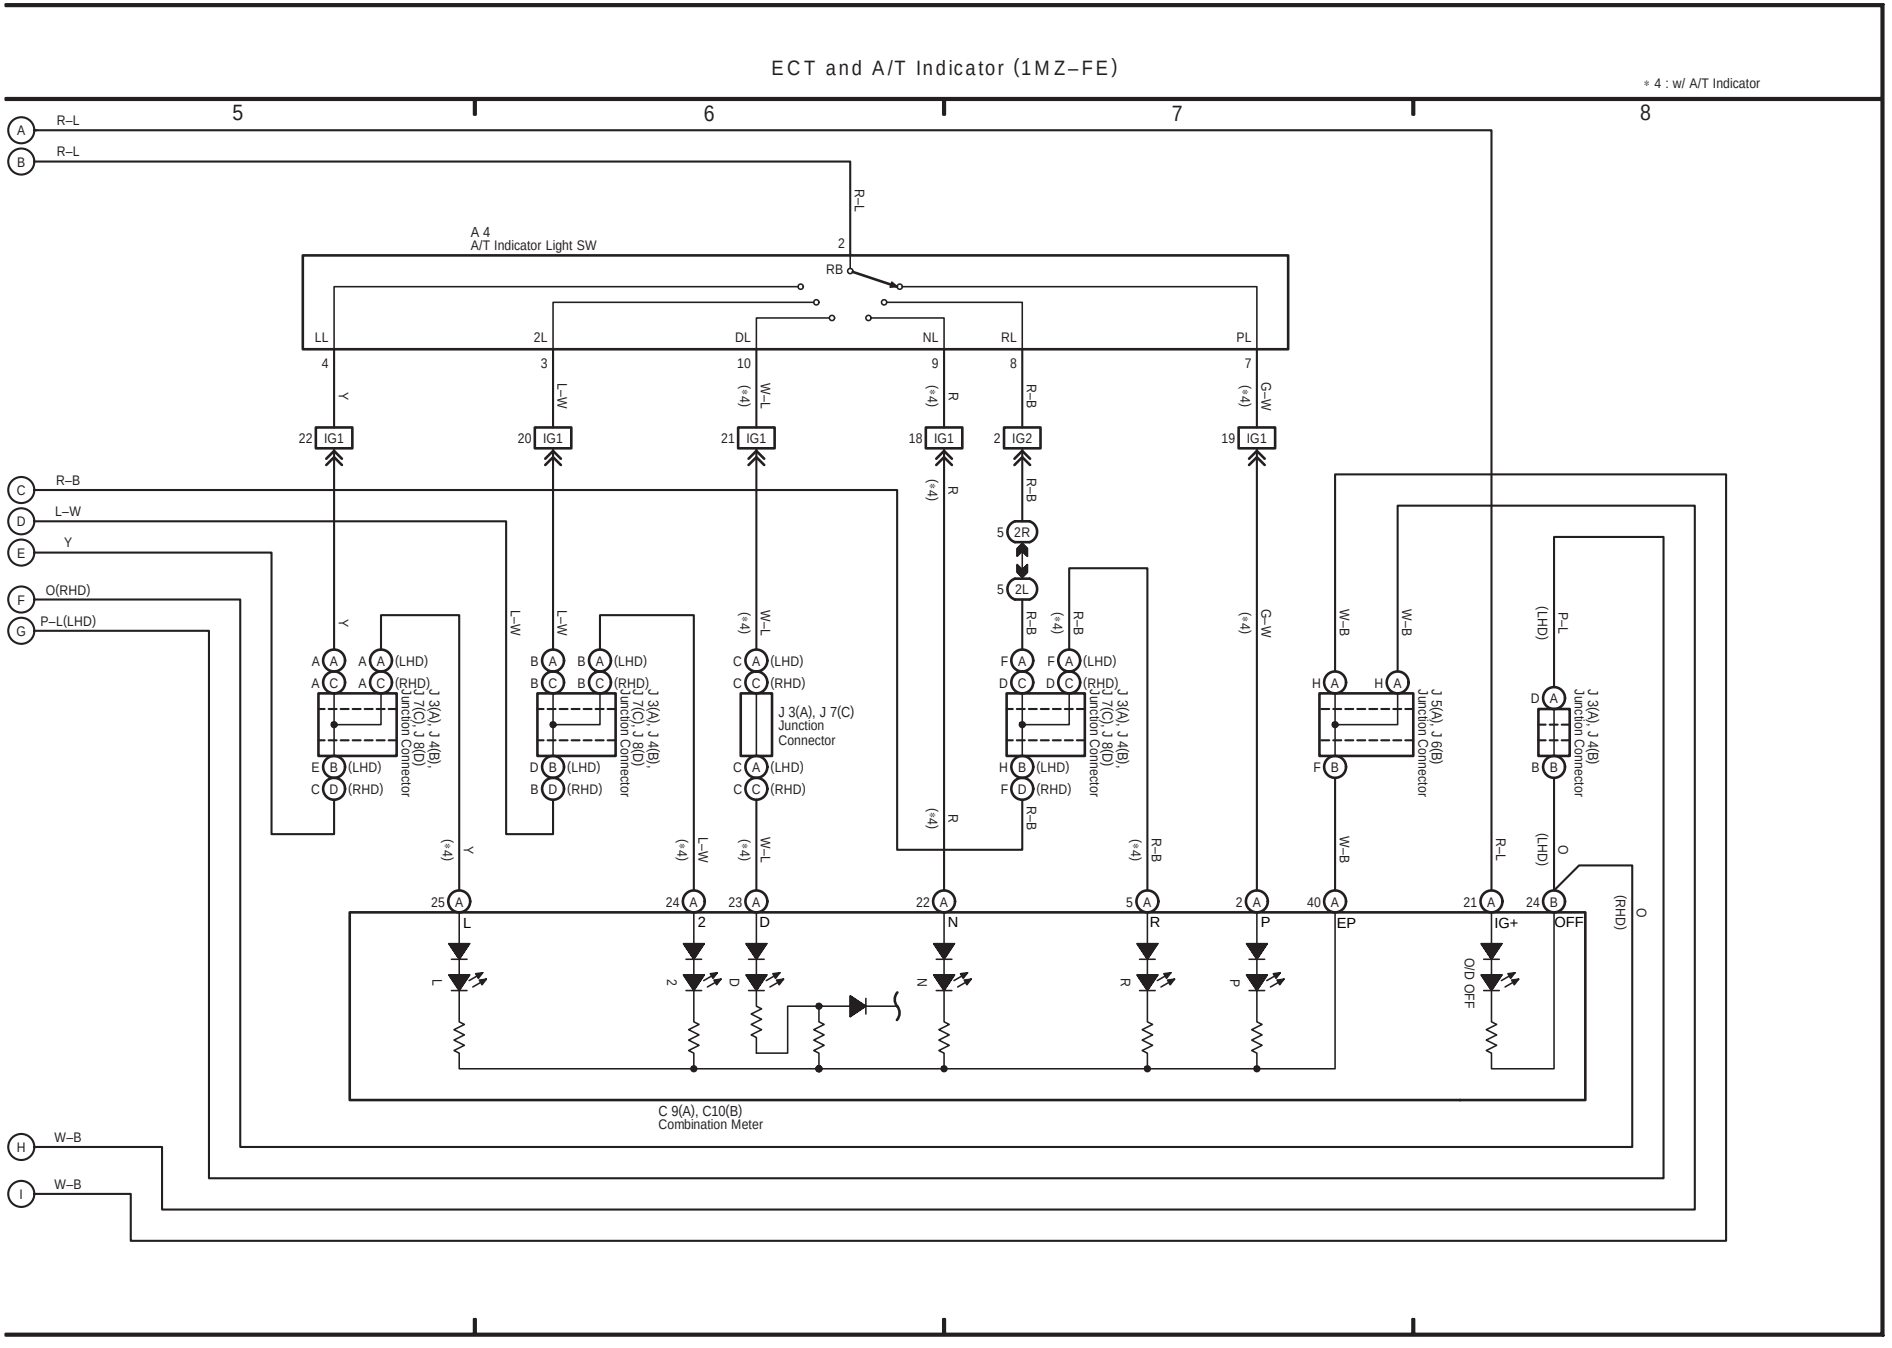


(Cont. next page)

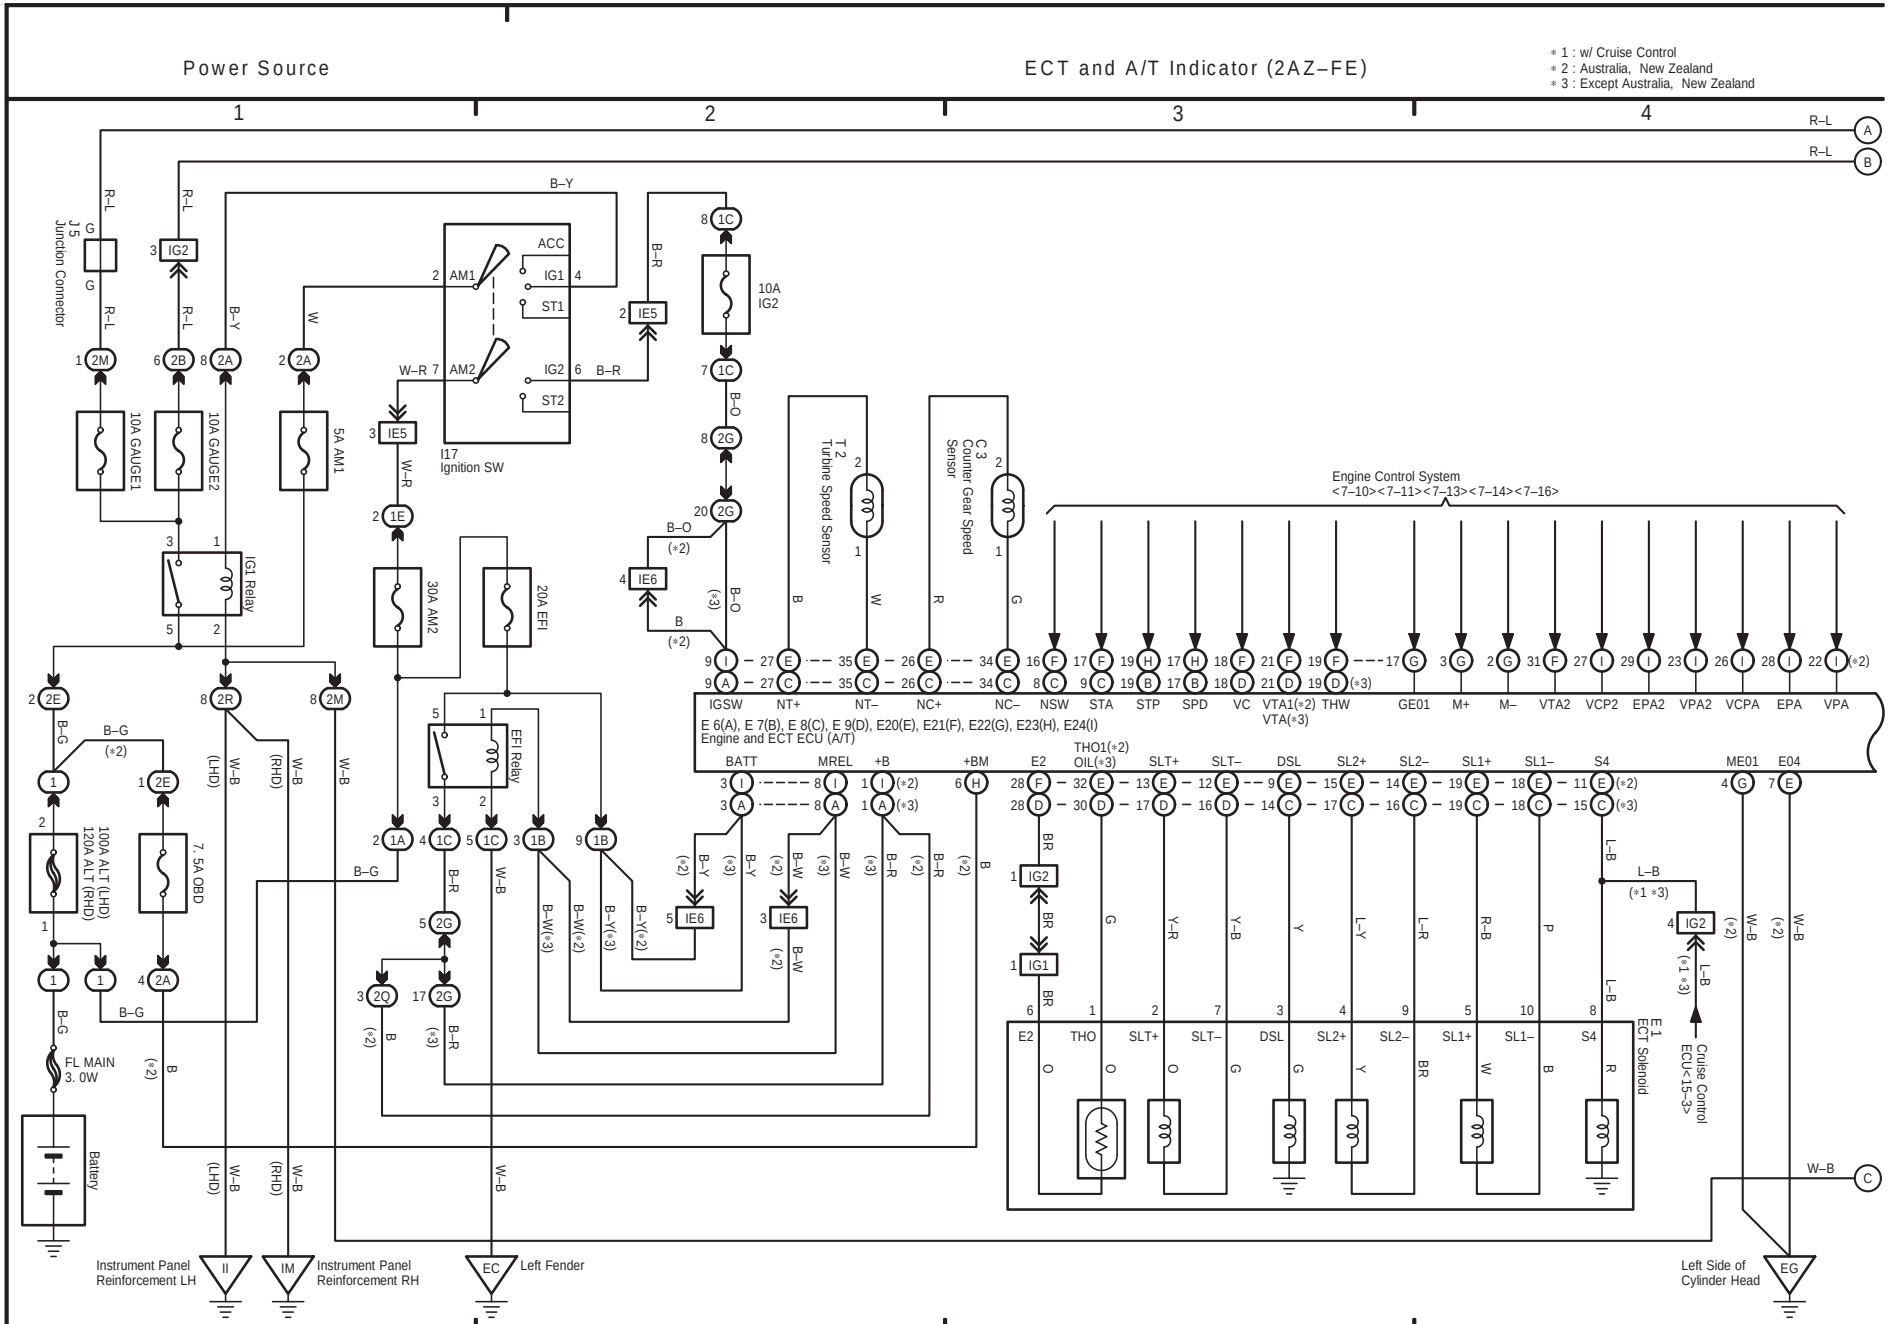


9 CAMRY (Cont' d)

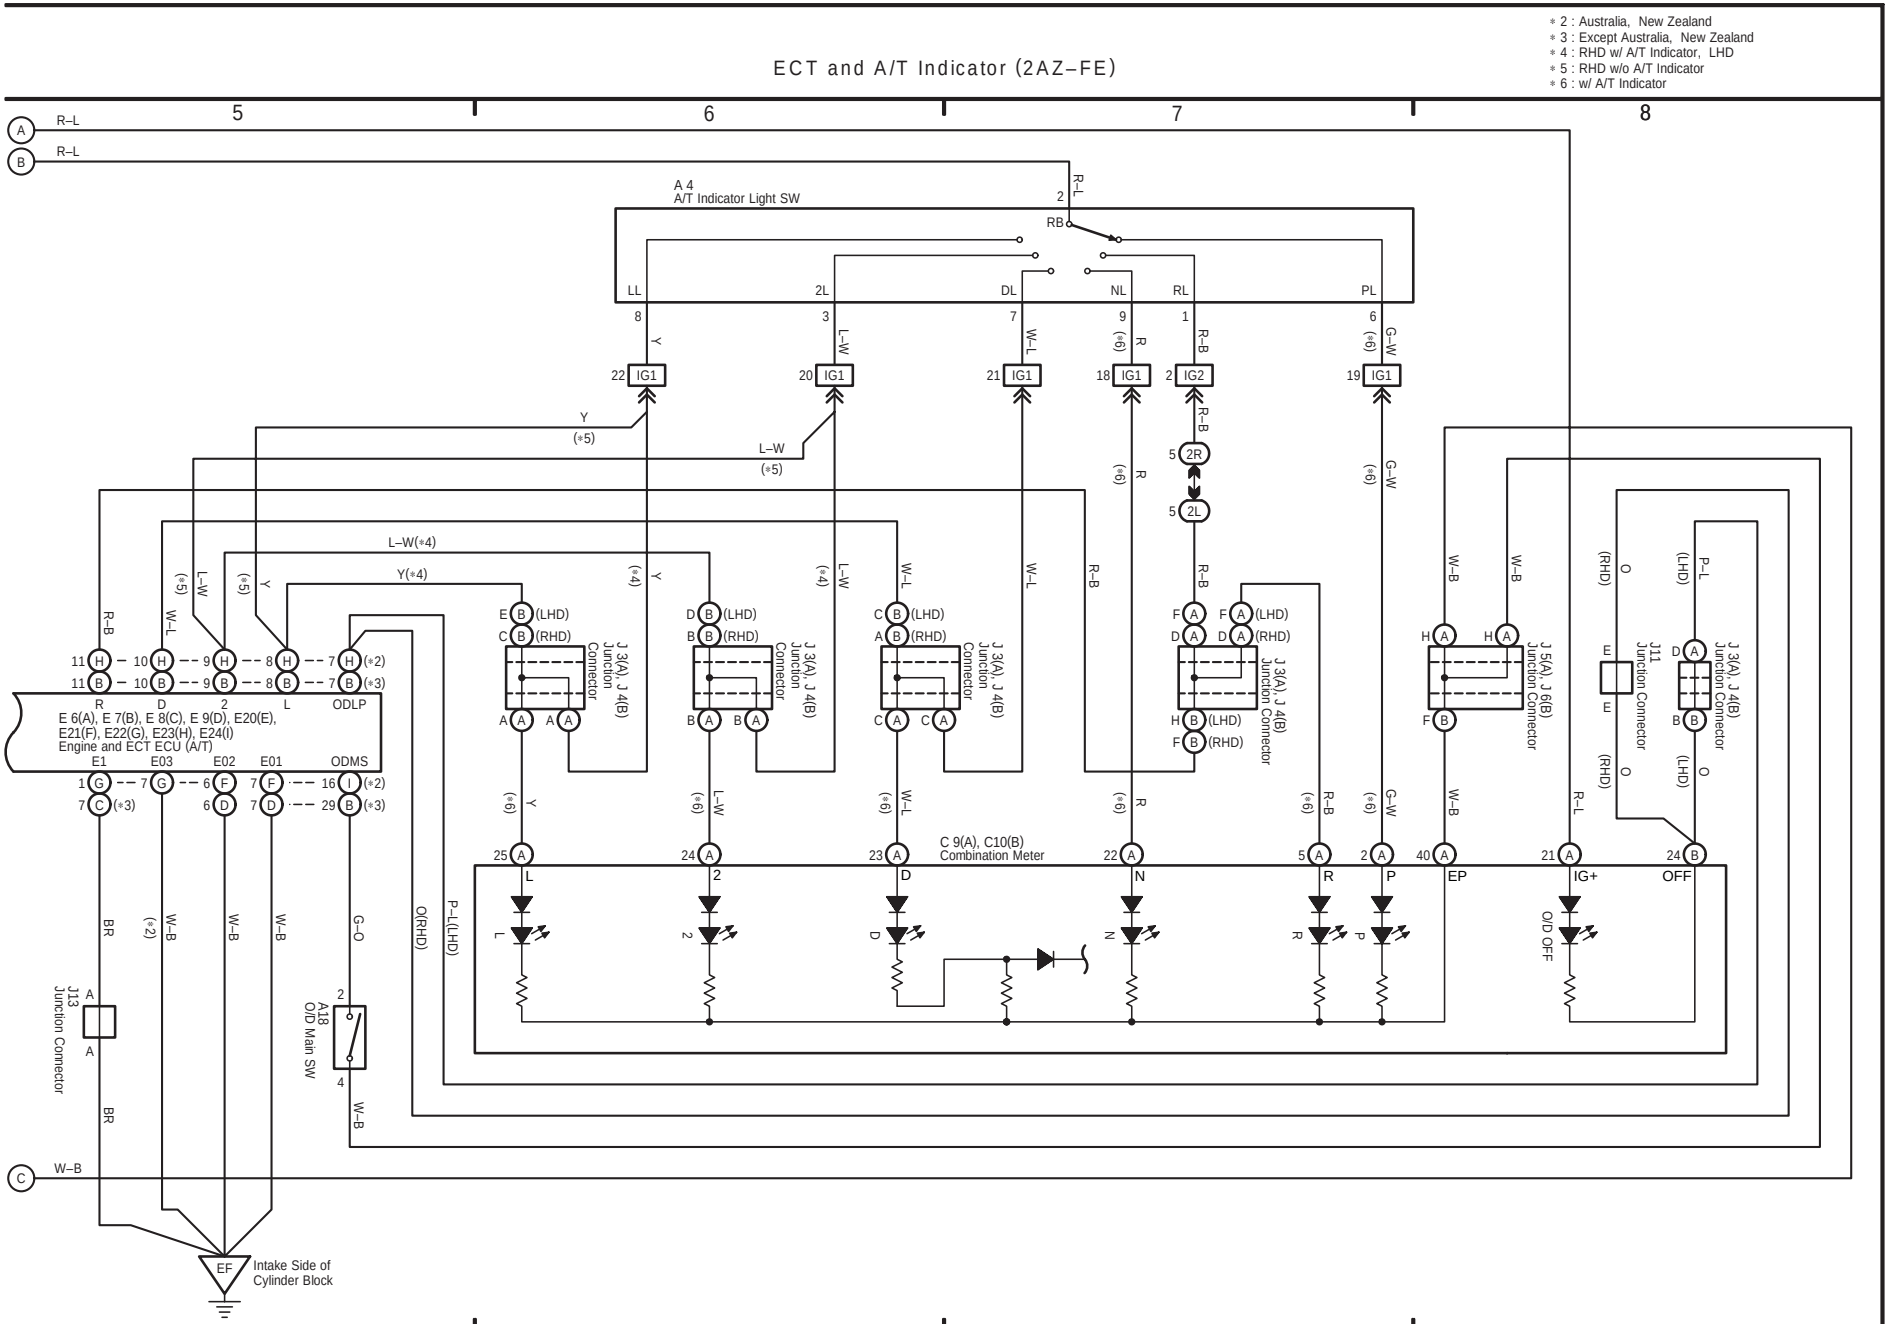

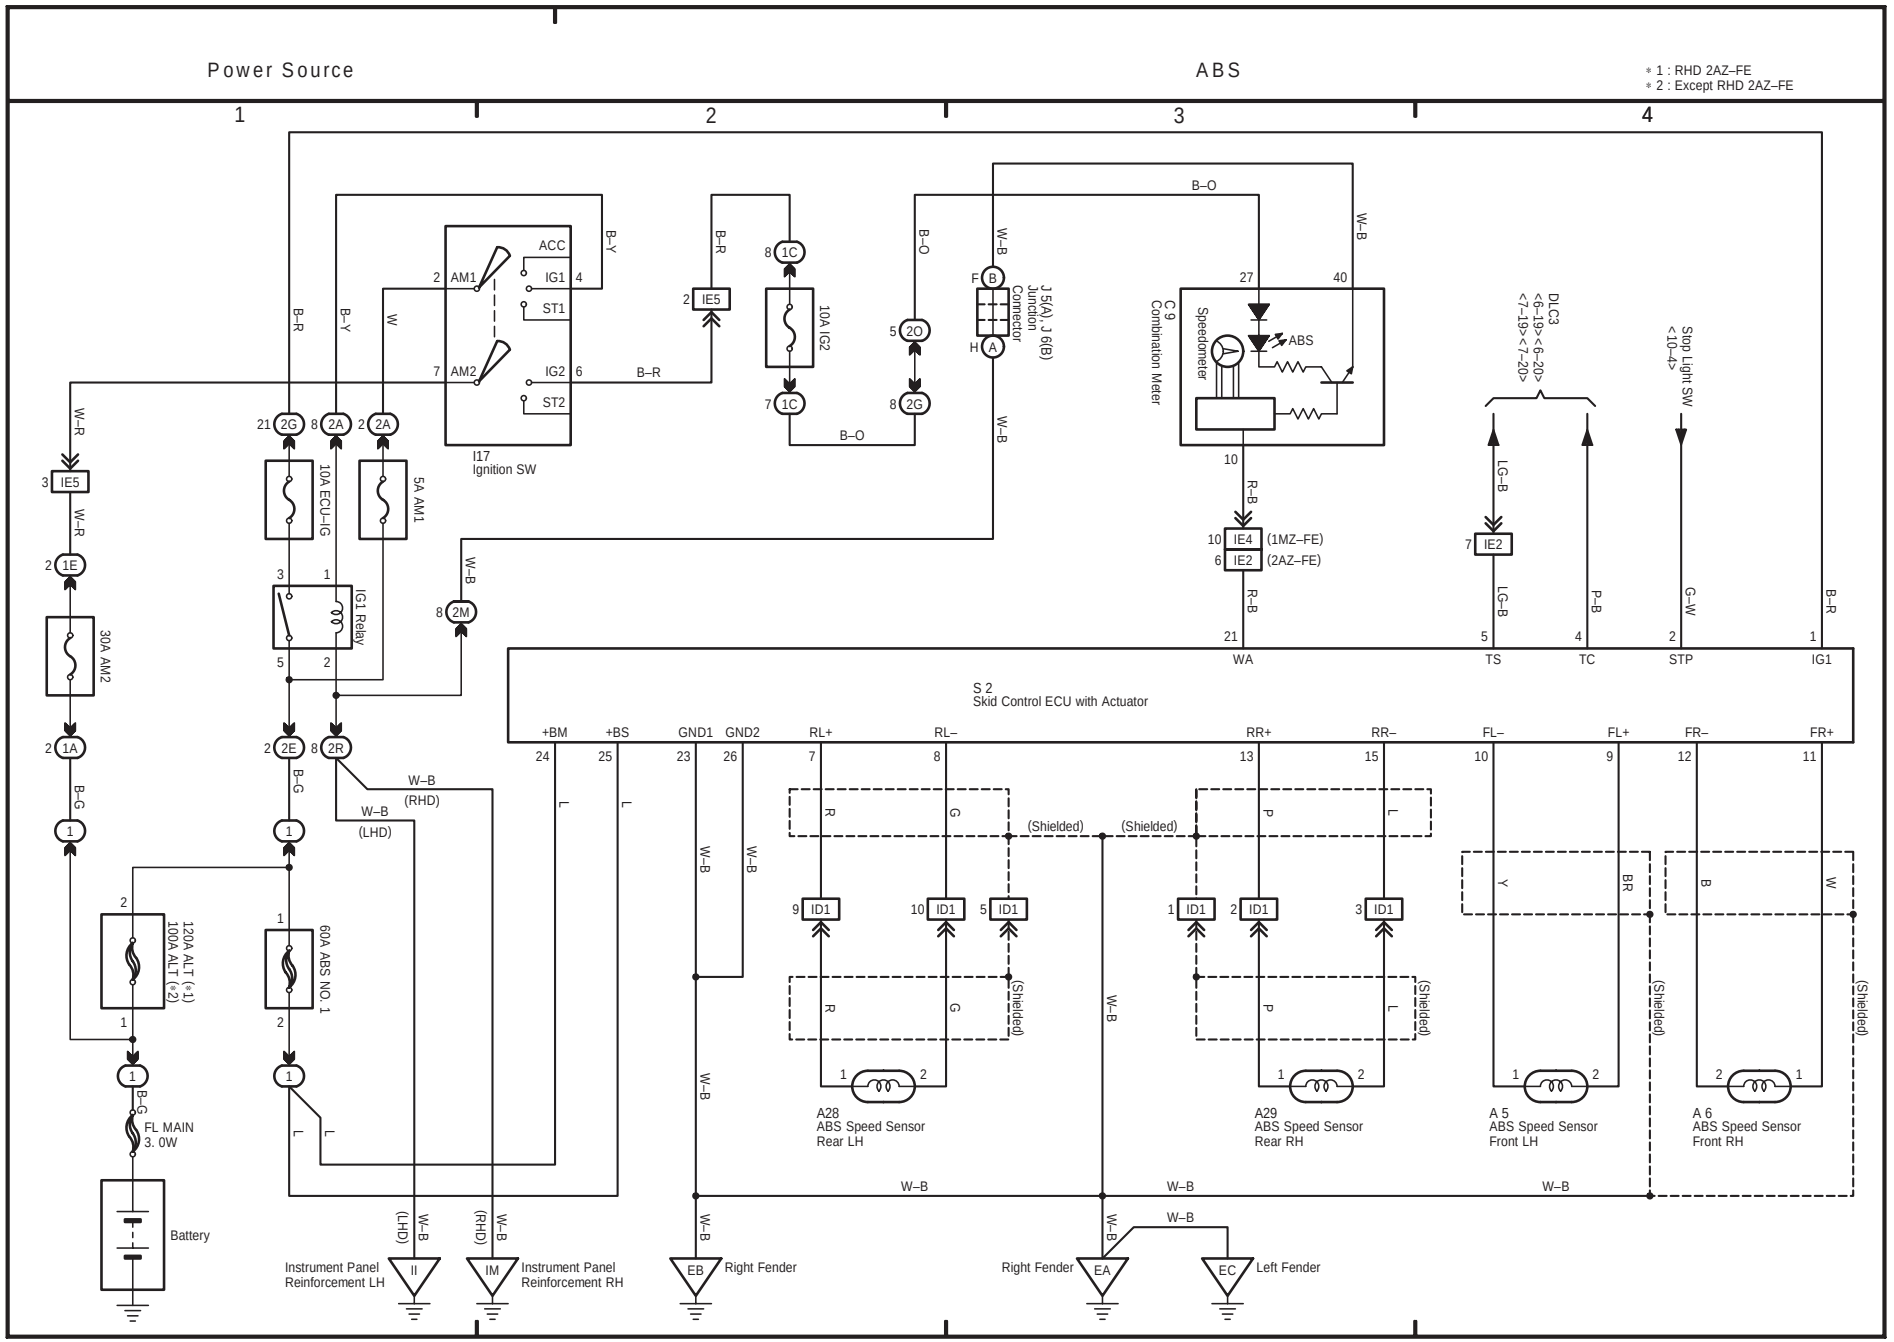

Power Source
ABS
* 1 : RHD 2AZ–FE
* 2 : Except RHD 2AZ–FE
1
2
3
4
I17
Ignition SW
ACC
IG1
ST1
IG2
ST2
AM1
AM2
10A IG2
J15(A), J16(B)
Junction
Connector
C9
Combination Meter
Speedometer
ABS
DLC3
<6–19><6–20>
<7–19><7–20>
Stop Light SW
<10–4>
10A ECU–IG
5A AM1
30A AM2
IG1 Relay
(1MZ–FE)
(2AZ–FE)
WA
TS
TC
STP
IG1
S 2
Skid Control ECU with Actuator
+BM
+BS
GND1
GND2
RL+
RL–
RR+
RR–
FL–
FL+
FR–
FR+
(Shielded)
A28
ABS Speed Sensor
Rear LH
A29
ABS Speed Sensor
Rear RH
A 5
ABS Speed Sensor
Front LH
A 6
ABS Speed Sensor
Front RH
120A ALT (*1)
100A ALT (*2)
60A ABS NO. 1
FL MAIN
3. 0W
Battery
(RHD)
(LHD)
Instrument Panel
Reinforcement LH
Instrument Panel
Reinforcement RH
Right Fender
Left Fender

(Cont. next page)


OVERALL ELECTRICAL WIRING DIAGRAM

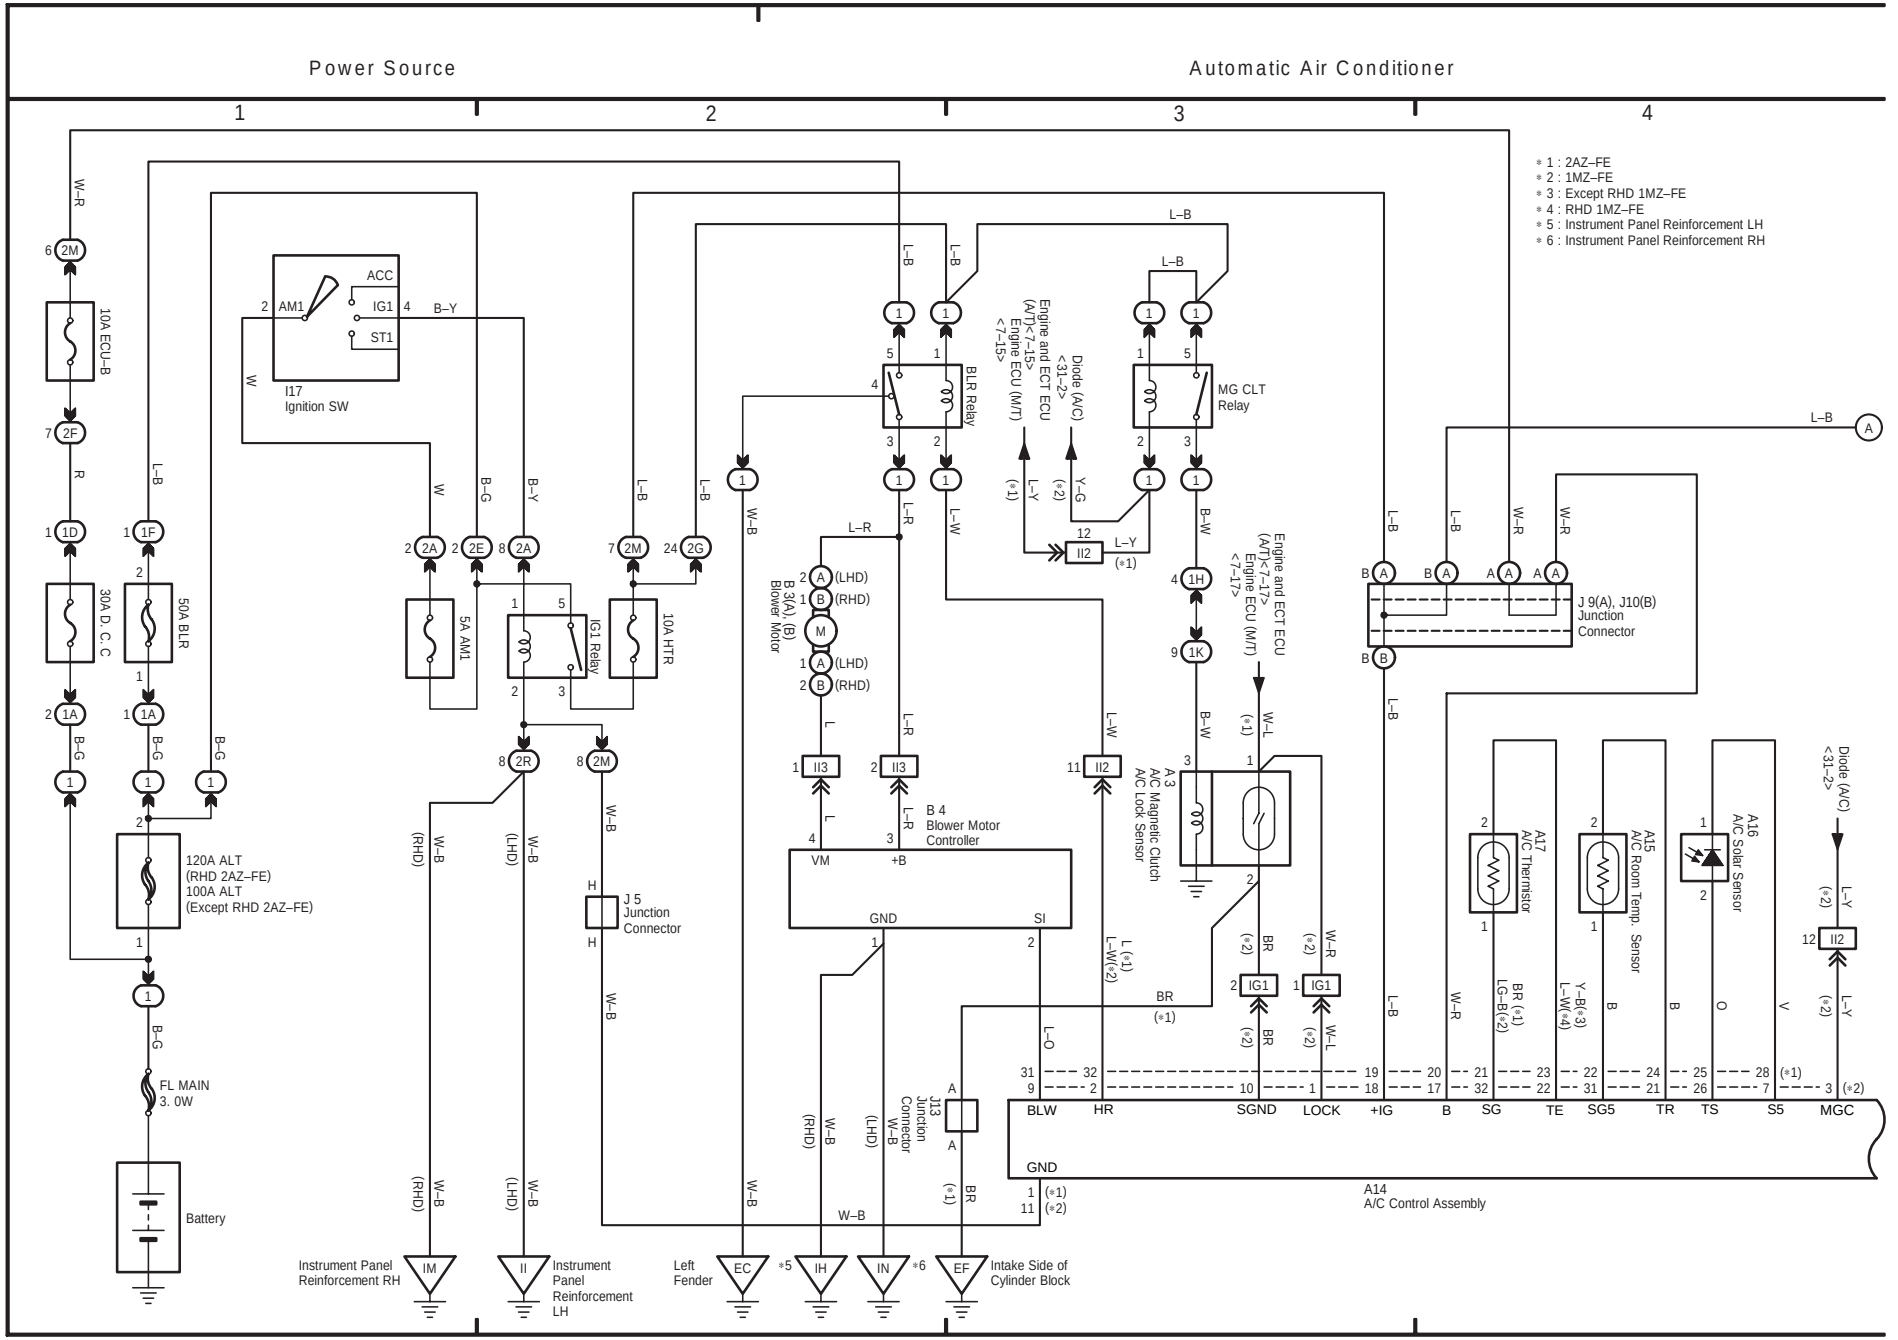


32 CAMRY (Cont' d)

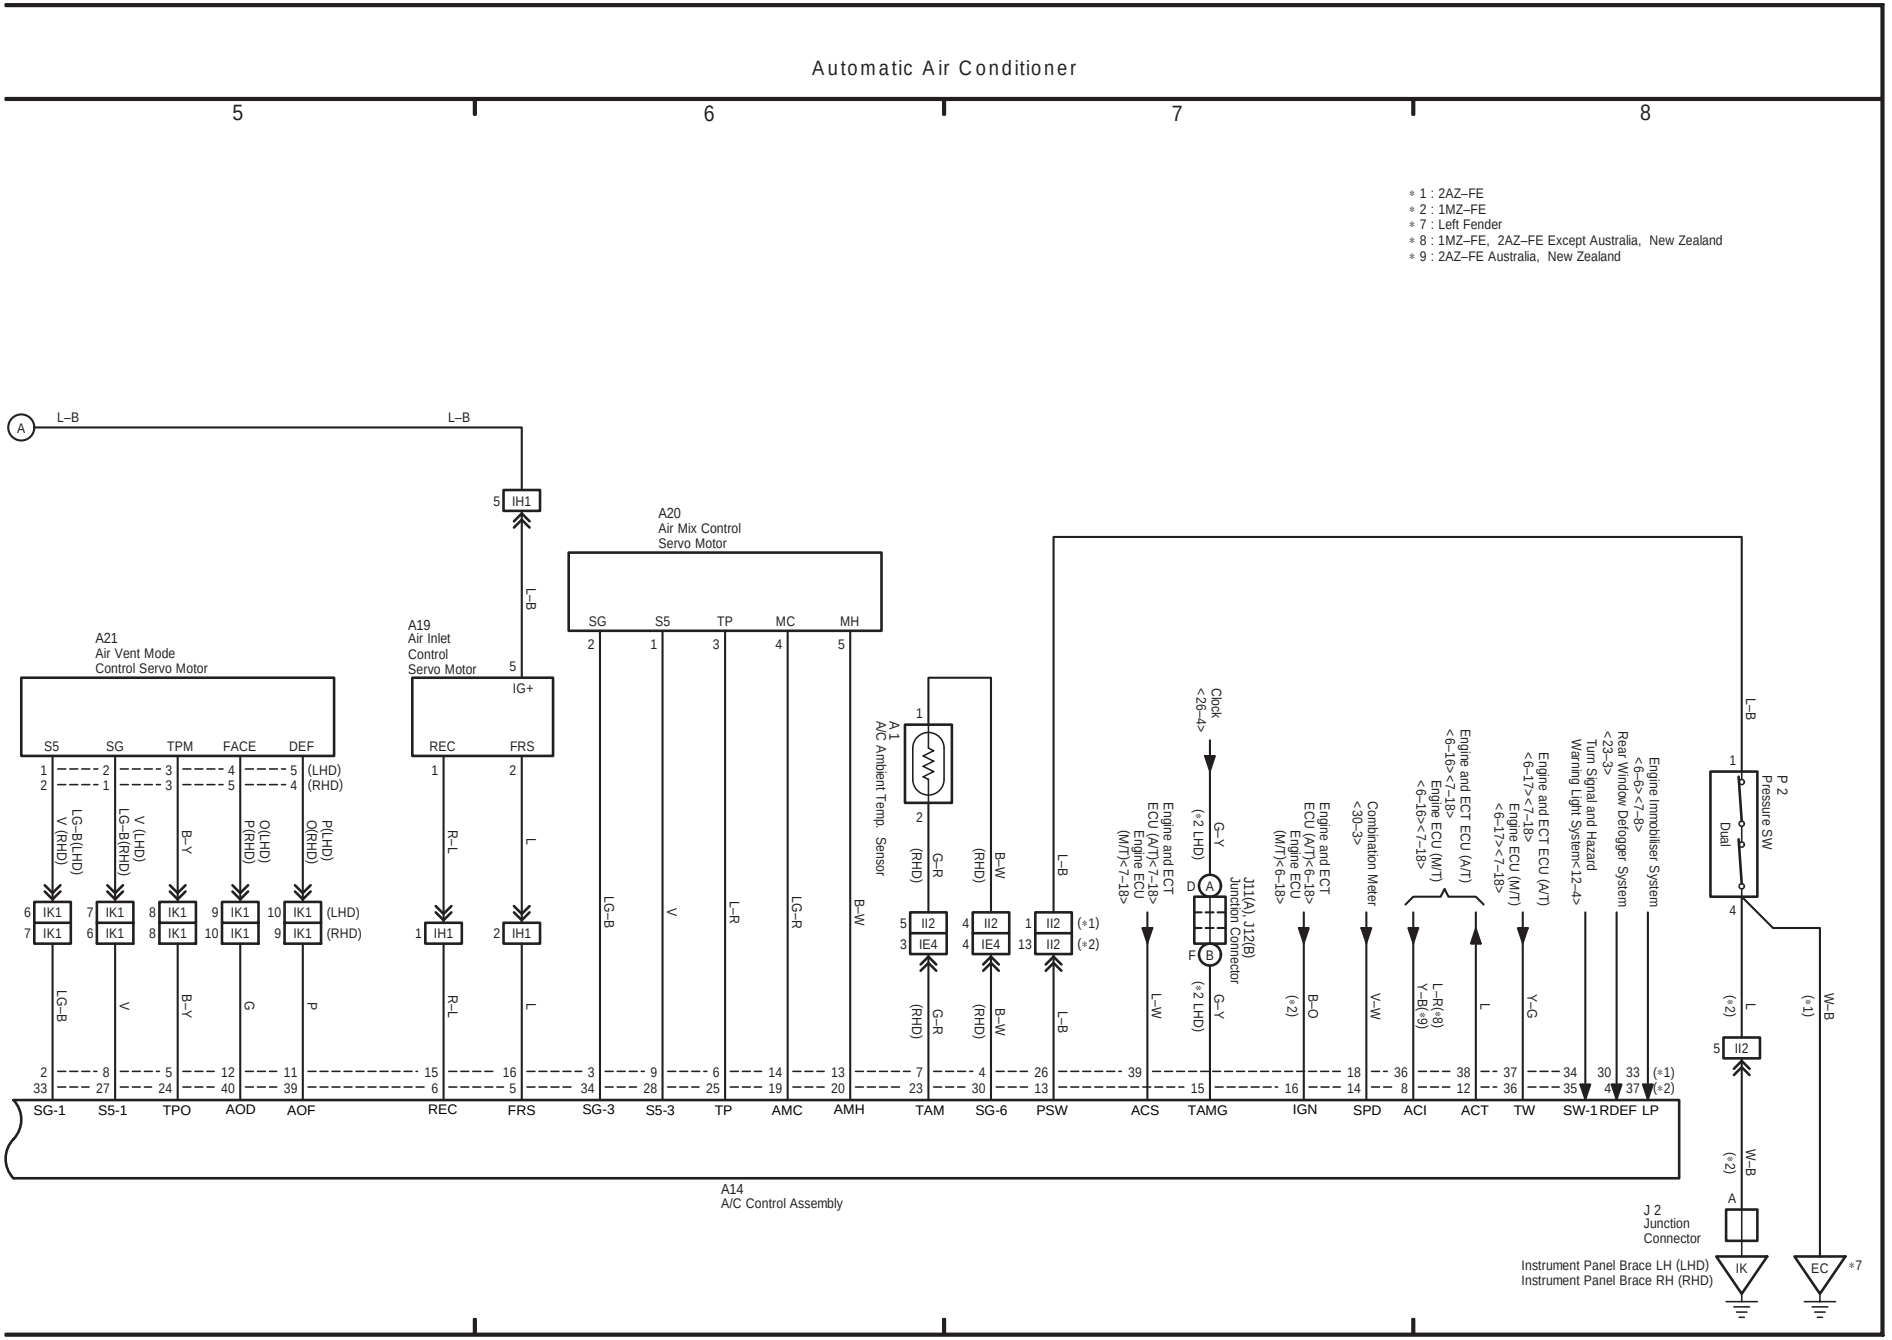


(Cont. next page)

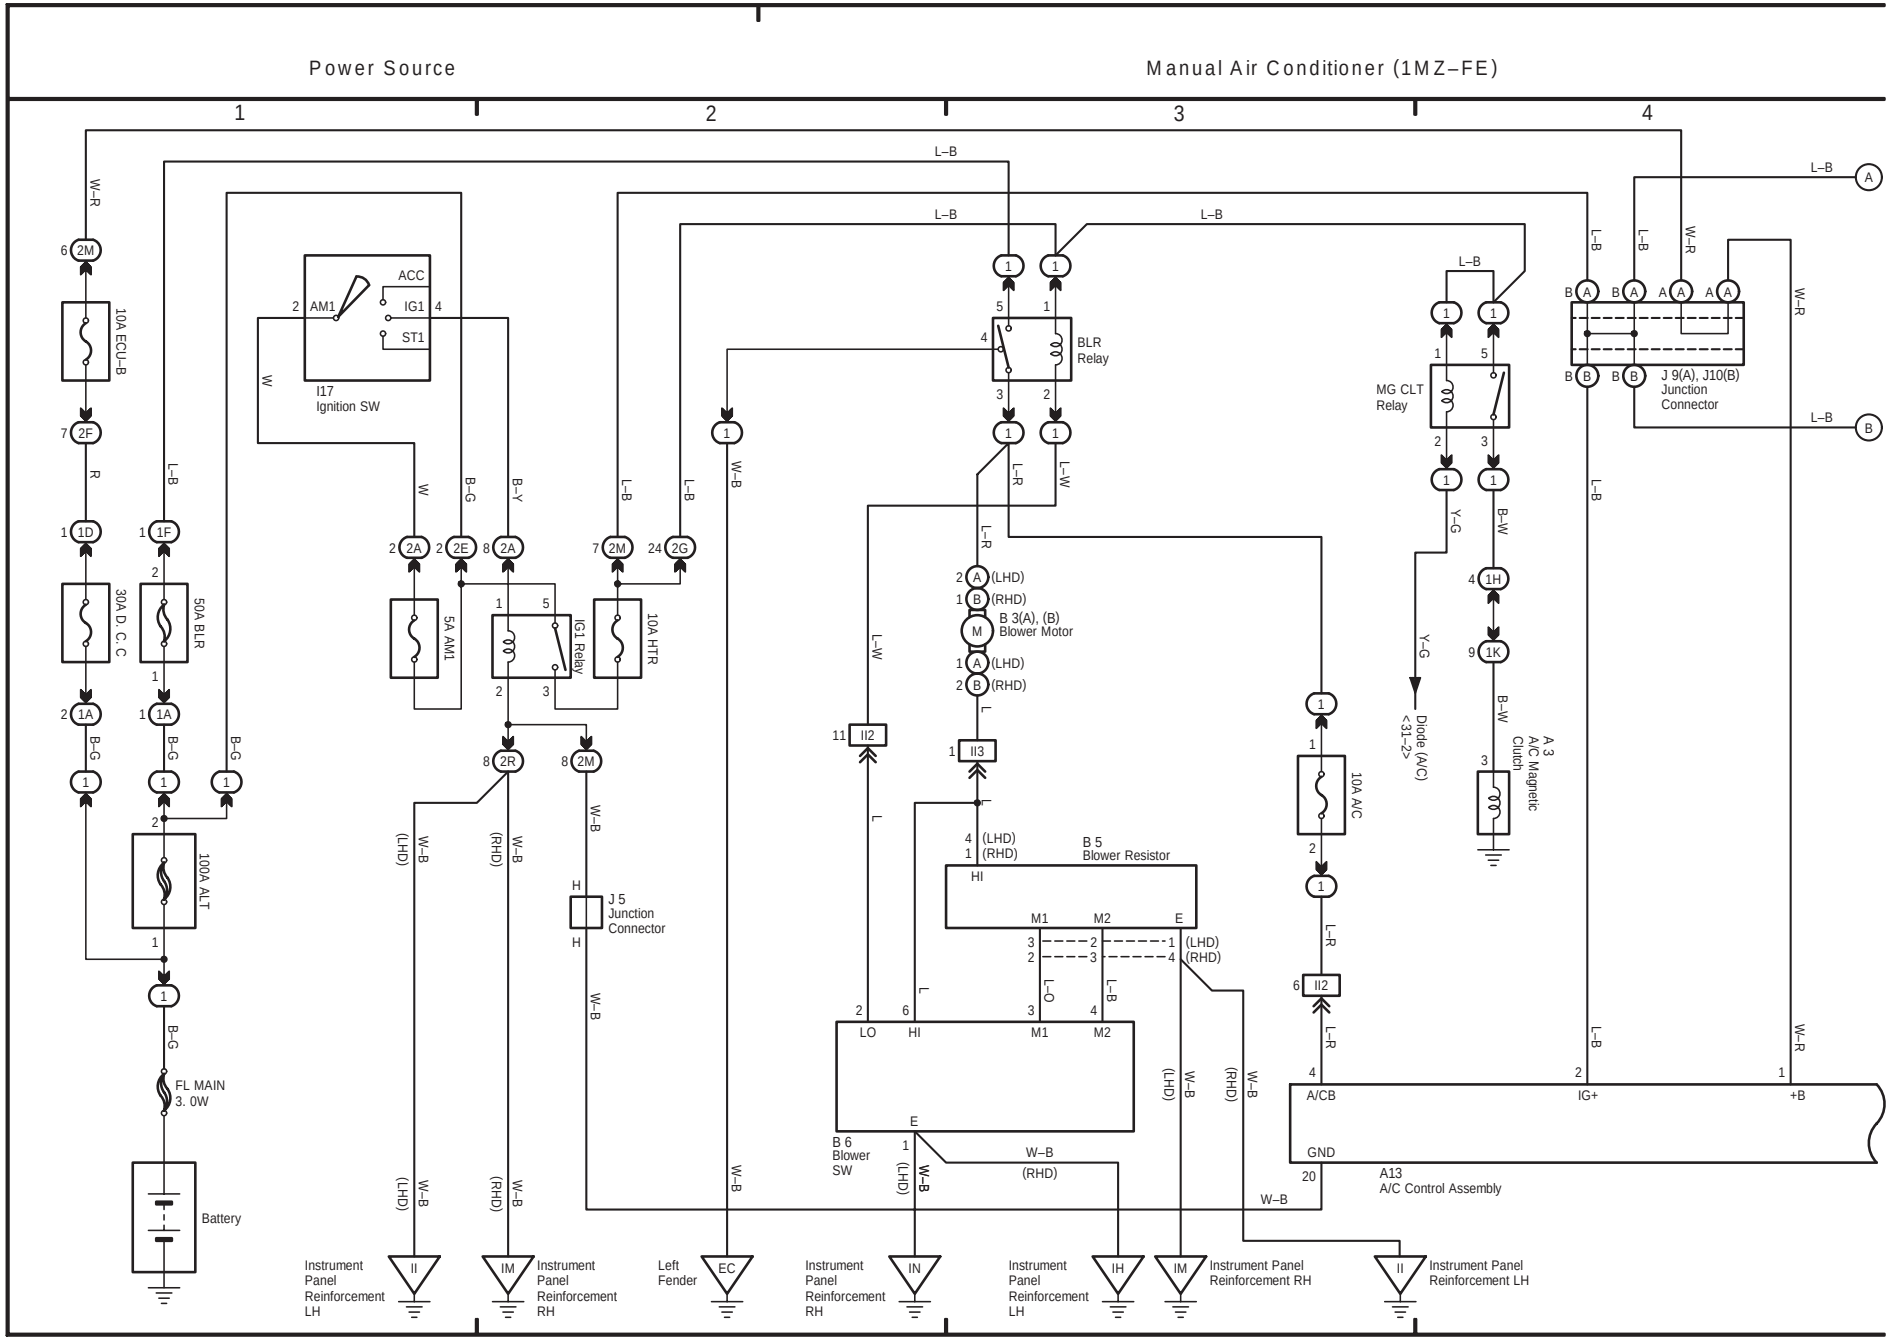

33 CAMRY (Cont' d)

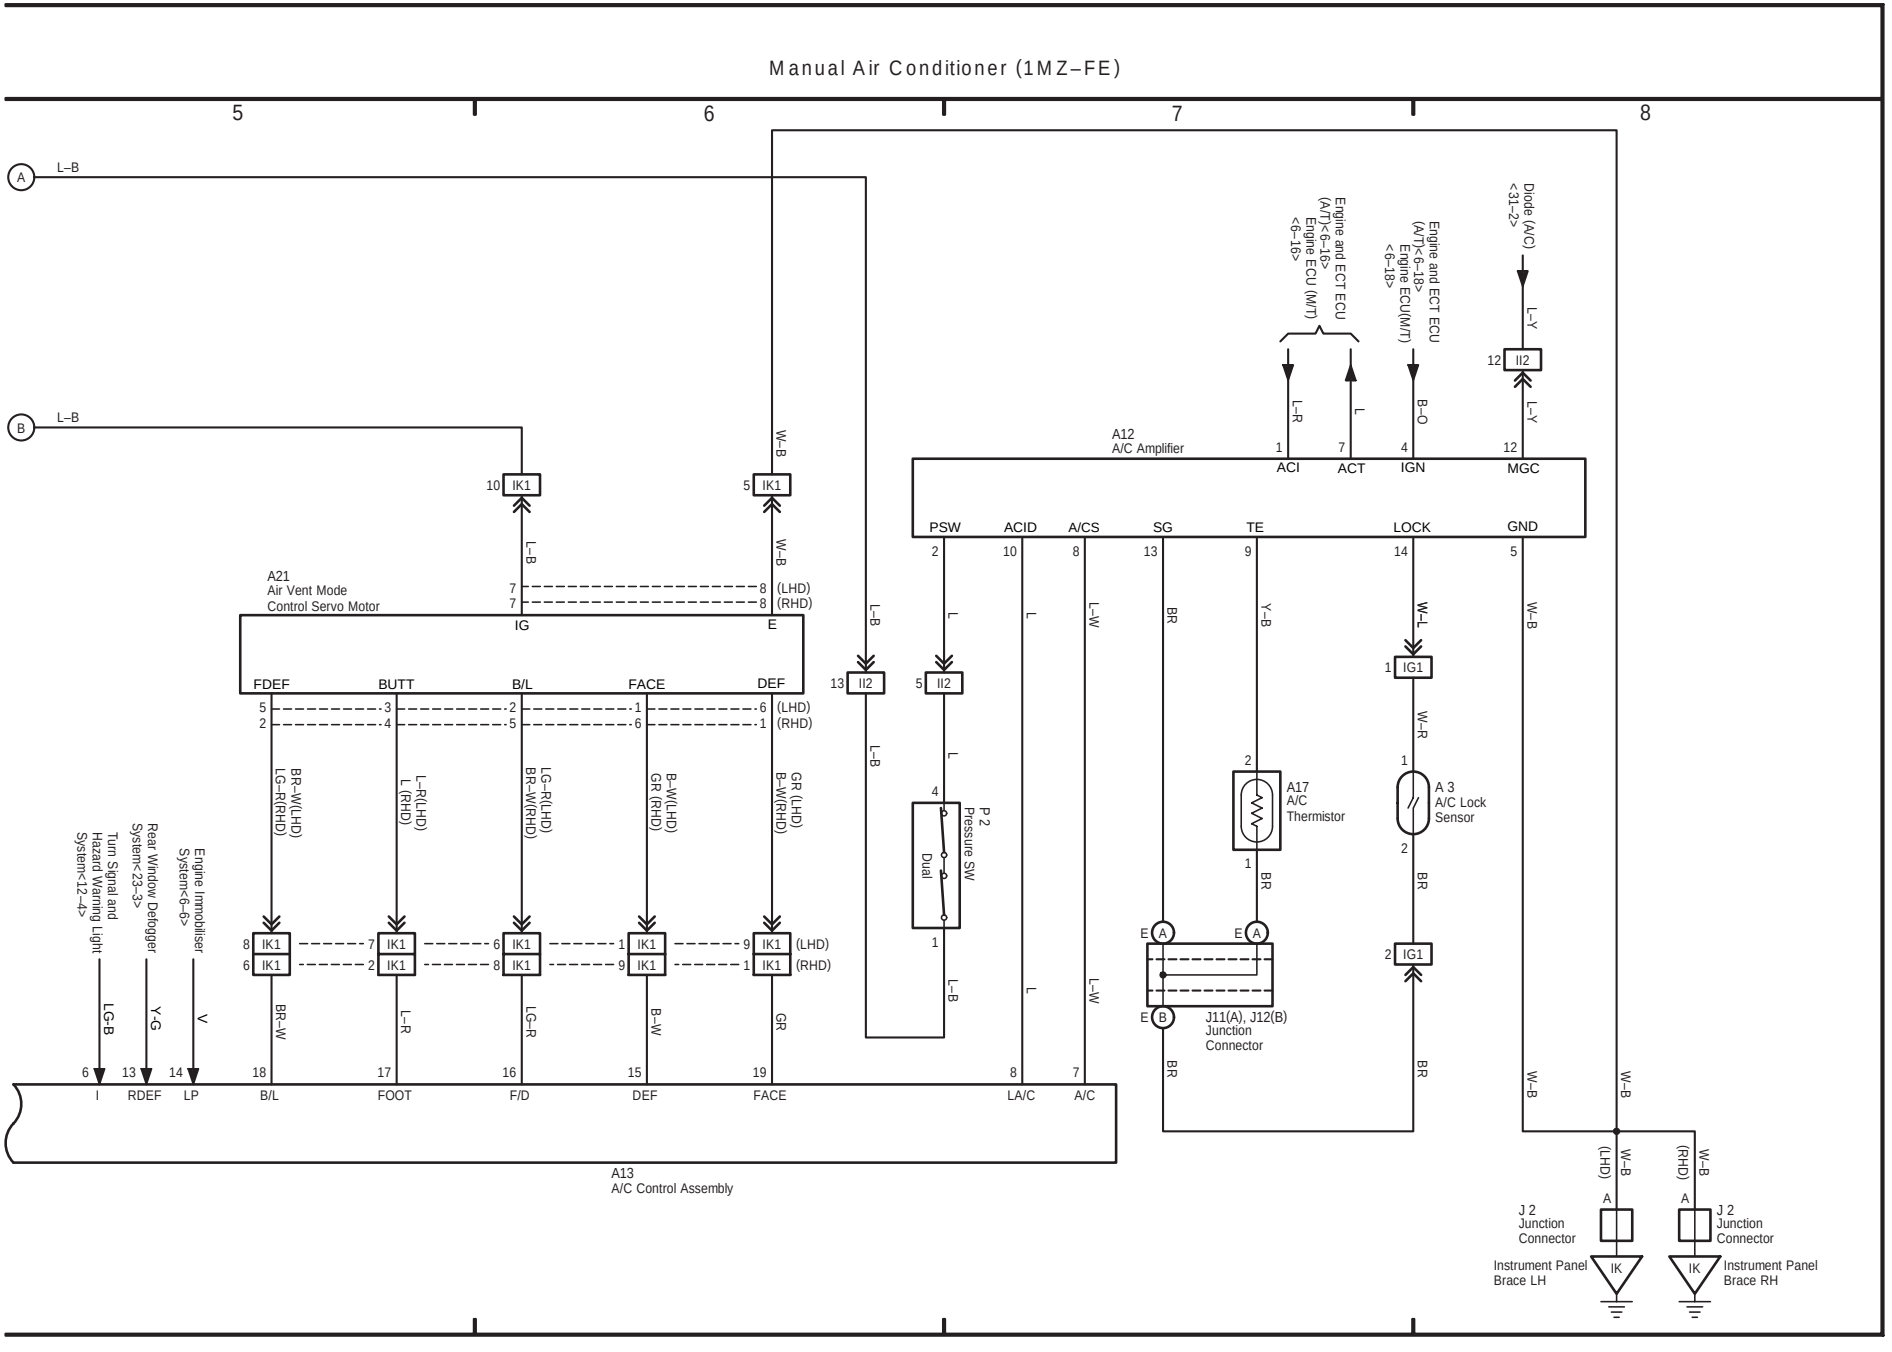


(Cont. next page)

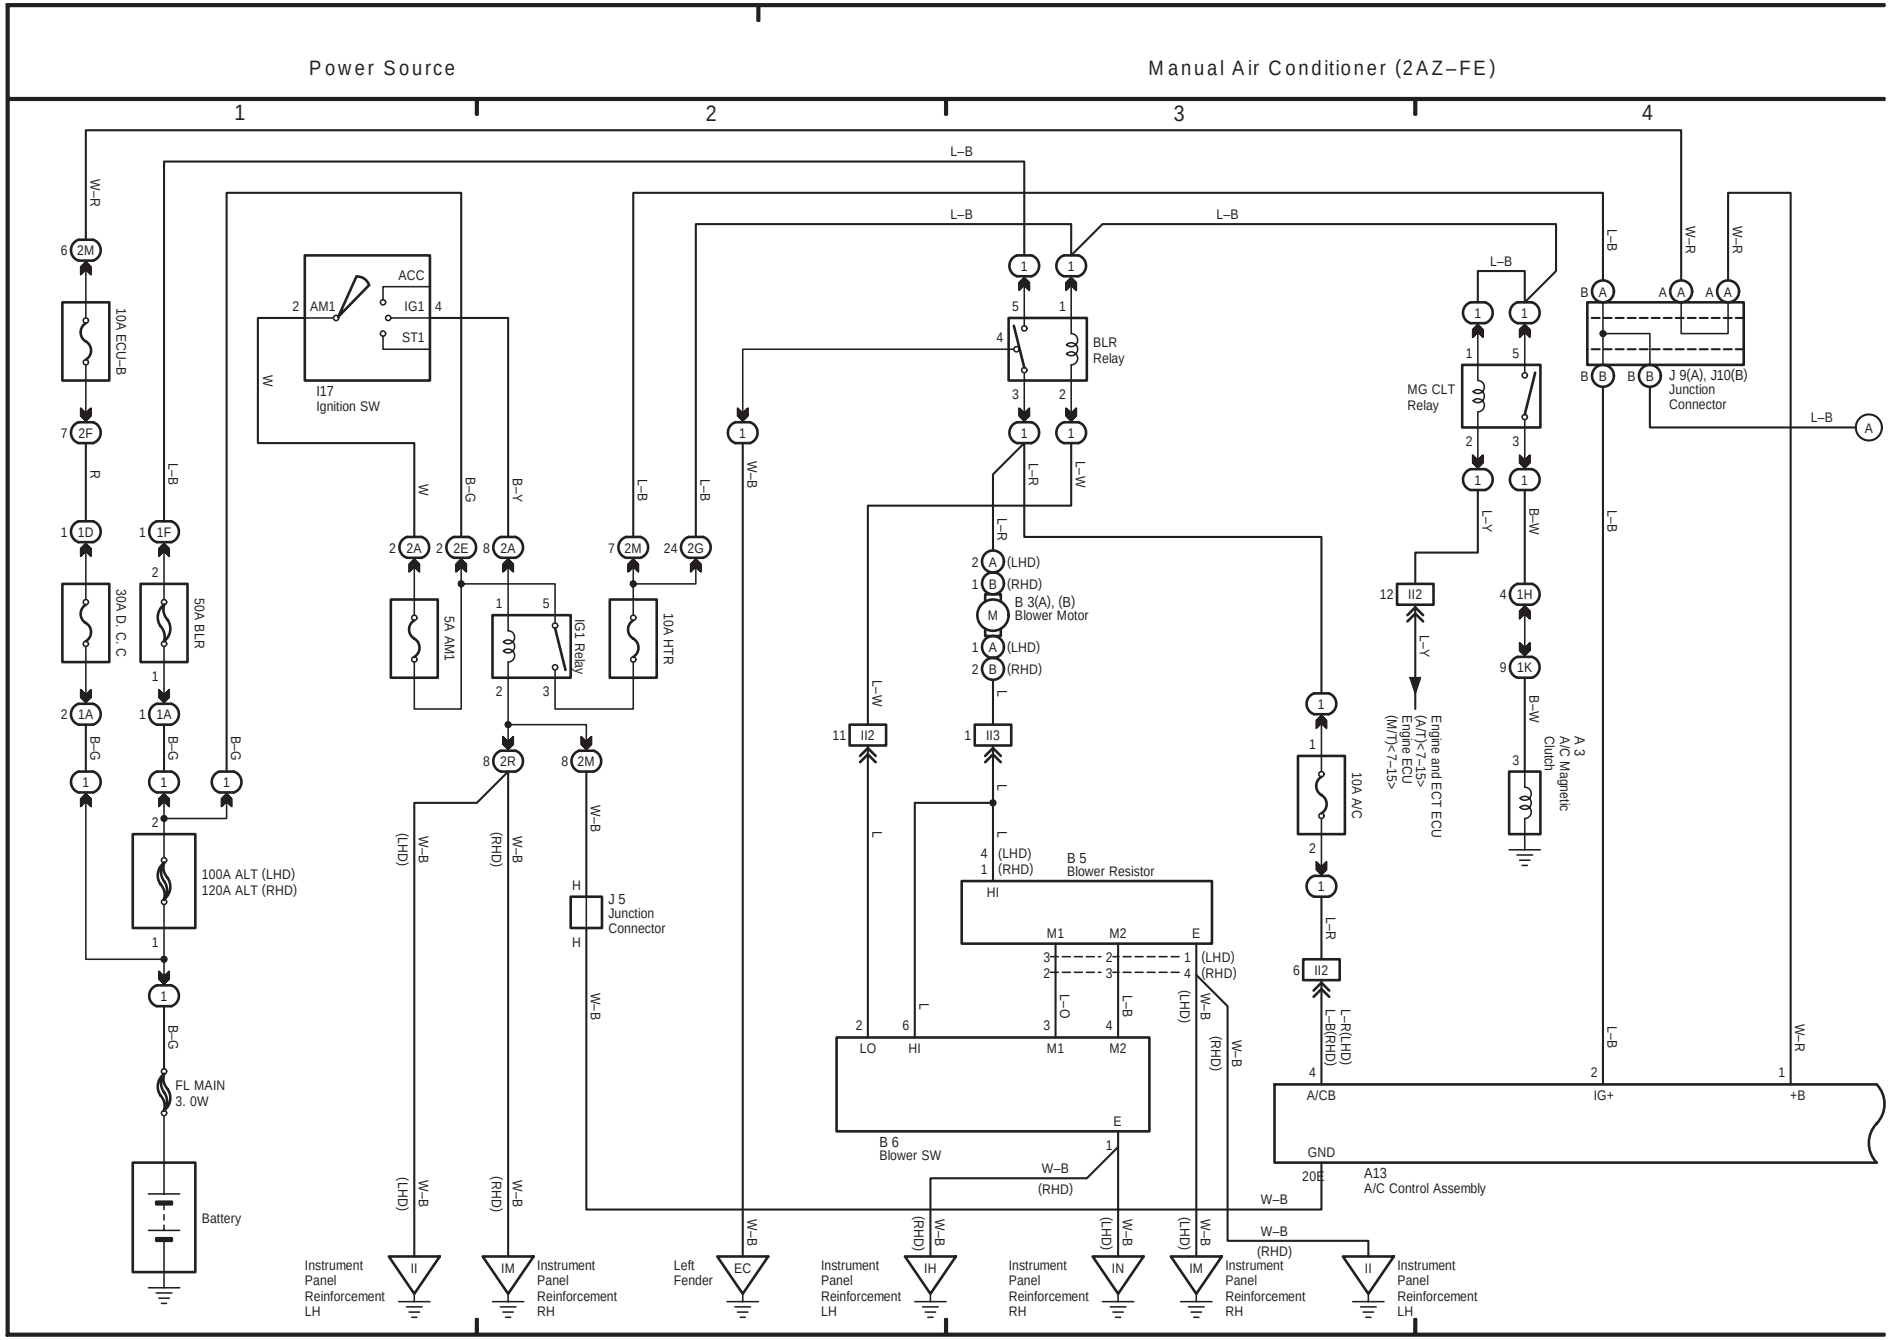



Manual Air Conditioner (2AZ–FE)

5 6 7 8


∗ 1 : Australia, New Zealand
∗ 2 : Except Australia, New Zealand

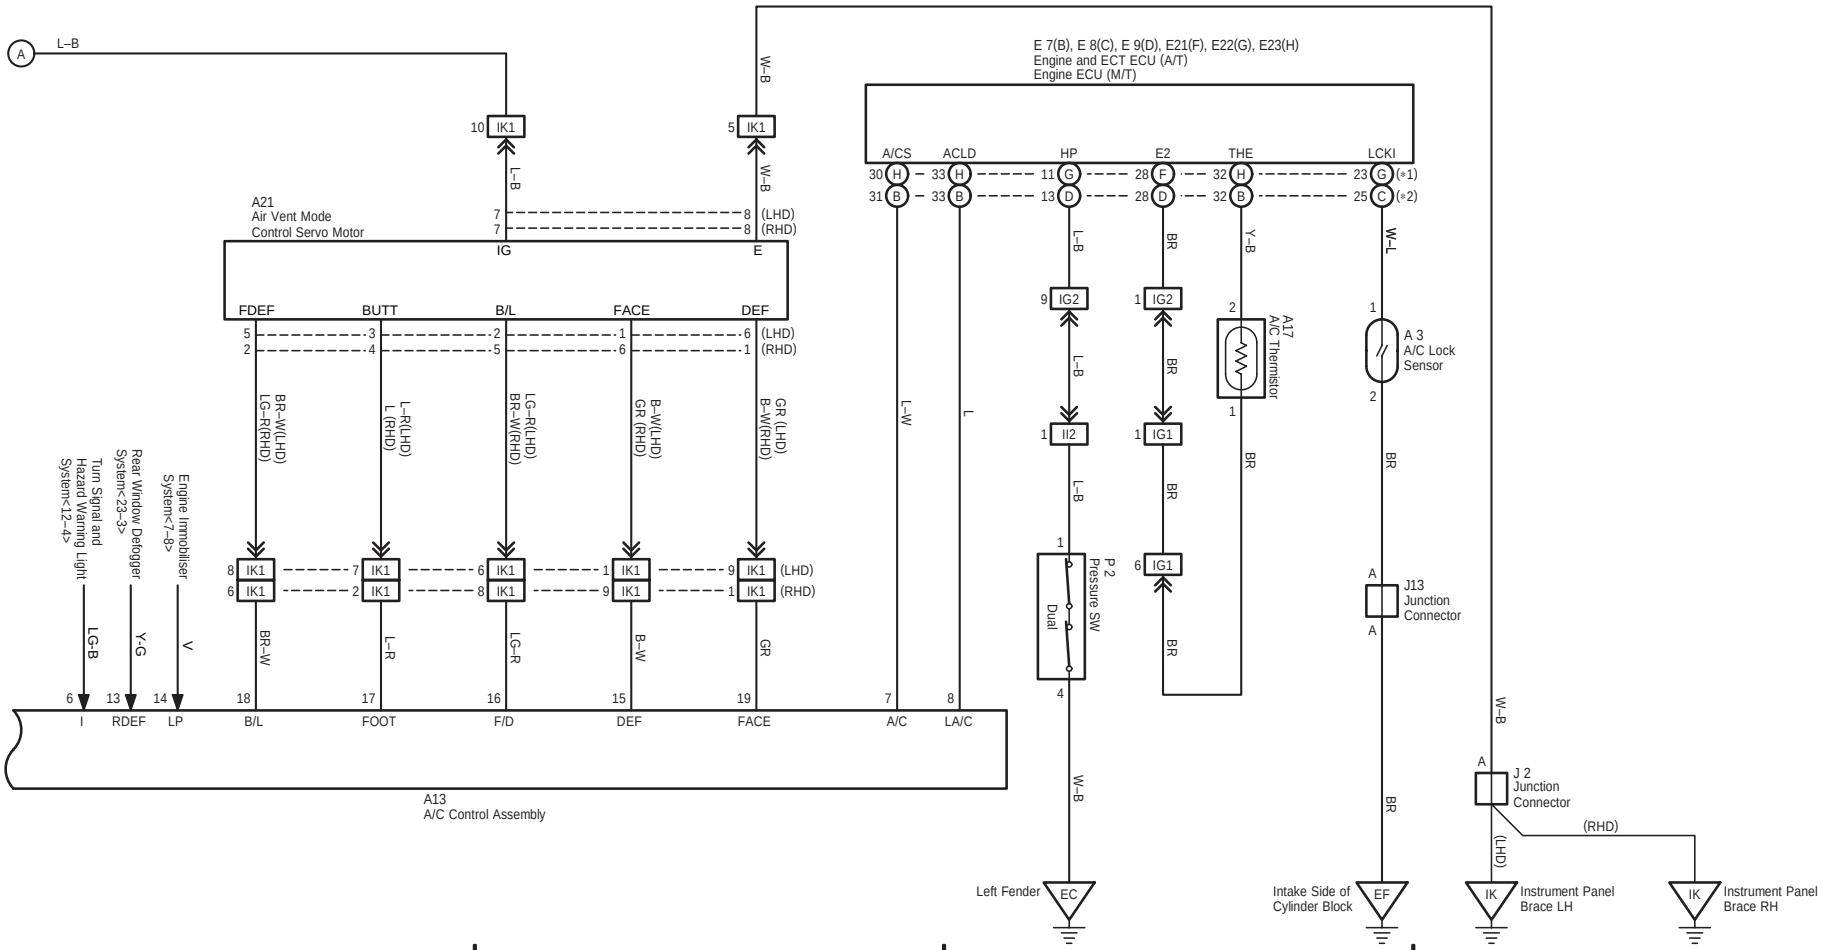

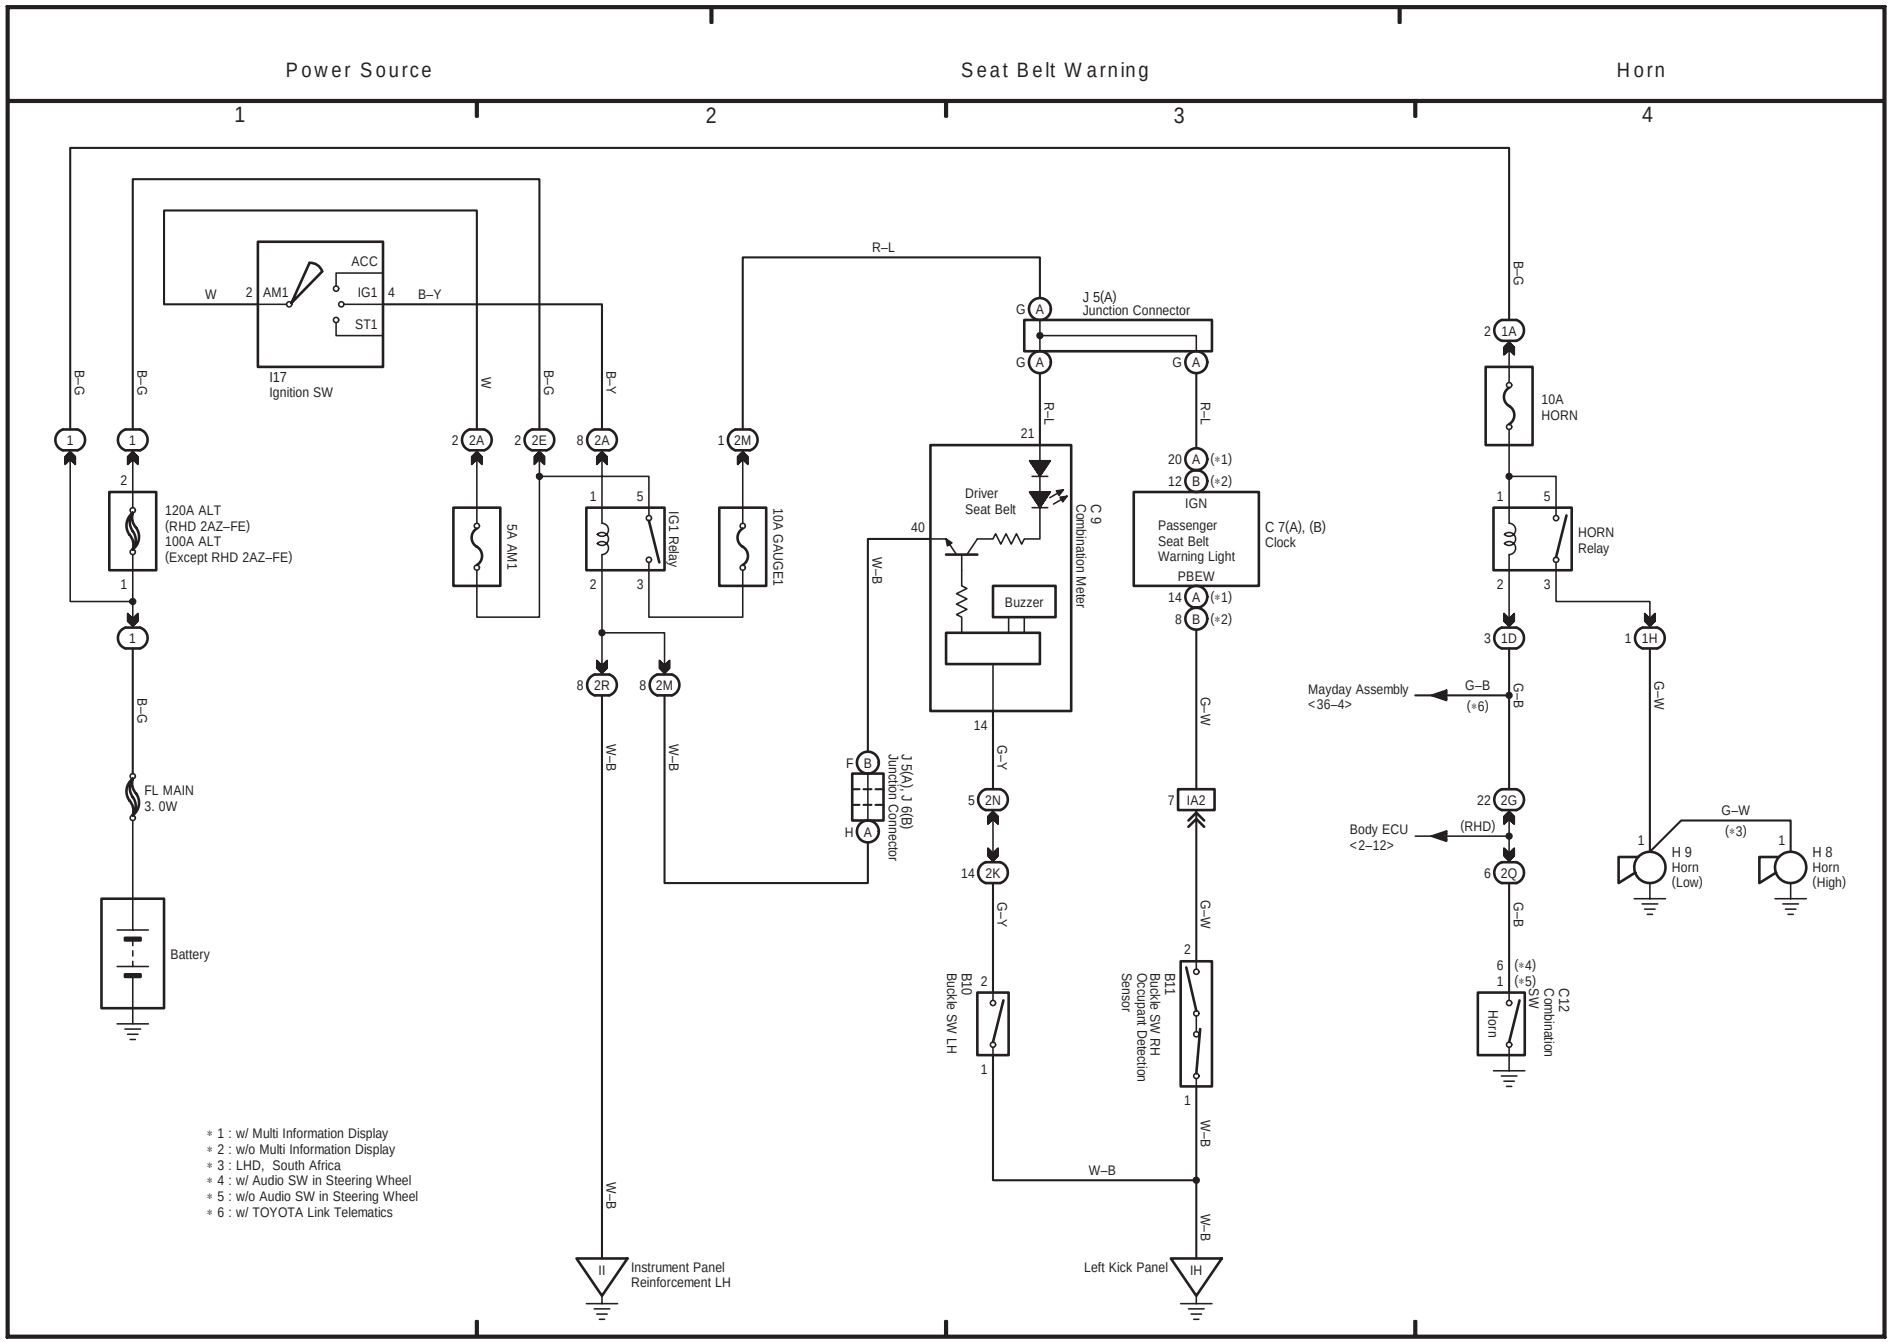

Power Source
Seat Belt Warning
Horn
1
2
3
4
ACC
IG1
ST1
AM1
I17
Ignition SW
120A ALT
(RHD 2AZ–FE)
100A ALT
(Except RHD 2AZ–FE)
5A AM1
IG1 Relay
10A GAUGE1
FL MAIN
3. 0W
Battery
J 5(A)
Junction Connector
J 5(A) J 6(B)
Junction Connector
Driver
Seat Belt
Buzzer
C 9
Combination Meter
Passenger
Seat Belt
Warning Light
PBEW
IGN
C 7(A), (B)
Clock
B10
Buckle SW LH
B11
Buckle SW RH
Occupant Detection
Sensor
10A
HORN
HORN
Relay
Mayday Assembly
<36–4>
Body ECU
<2–12>
(RHD)
H 9
Horn
(Low)
H 8
Horn
(High)
C12
Combination
SW
Horn
Instrument Panel
Reinforcement LH
Left Kick Panel
∗ 1 : w/ Multi Information Display
∗ 2 : w/o Multi Information Display
∗ 3 : LHD, South Africa
∗ 4 : w/ Audio SW in Steering Wheel
∗ 5 : w/o Audio SW in Steering Wheel
∗ 6 : w/ TOYOTA Link Telematics

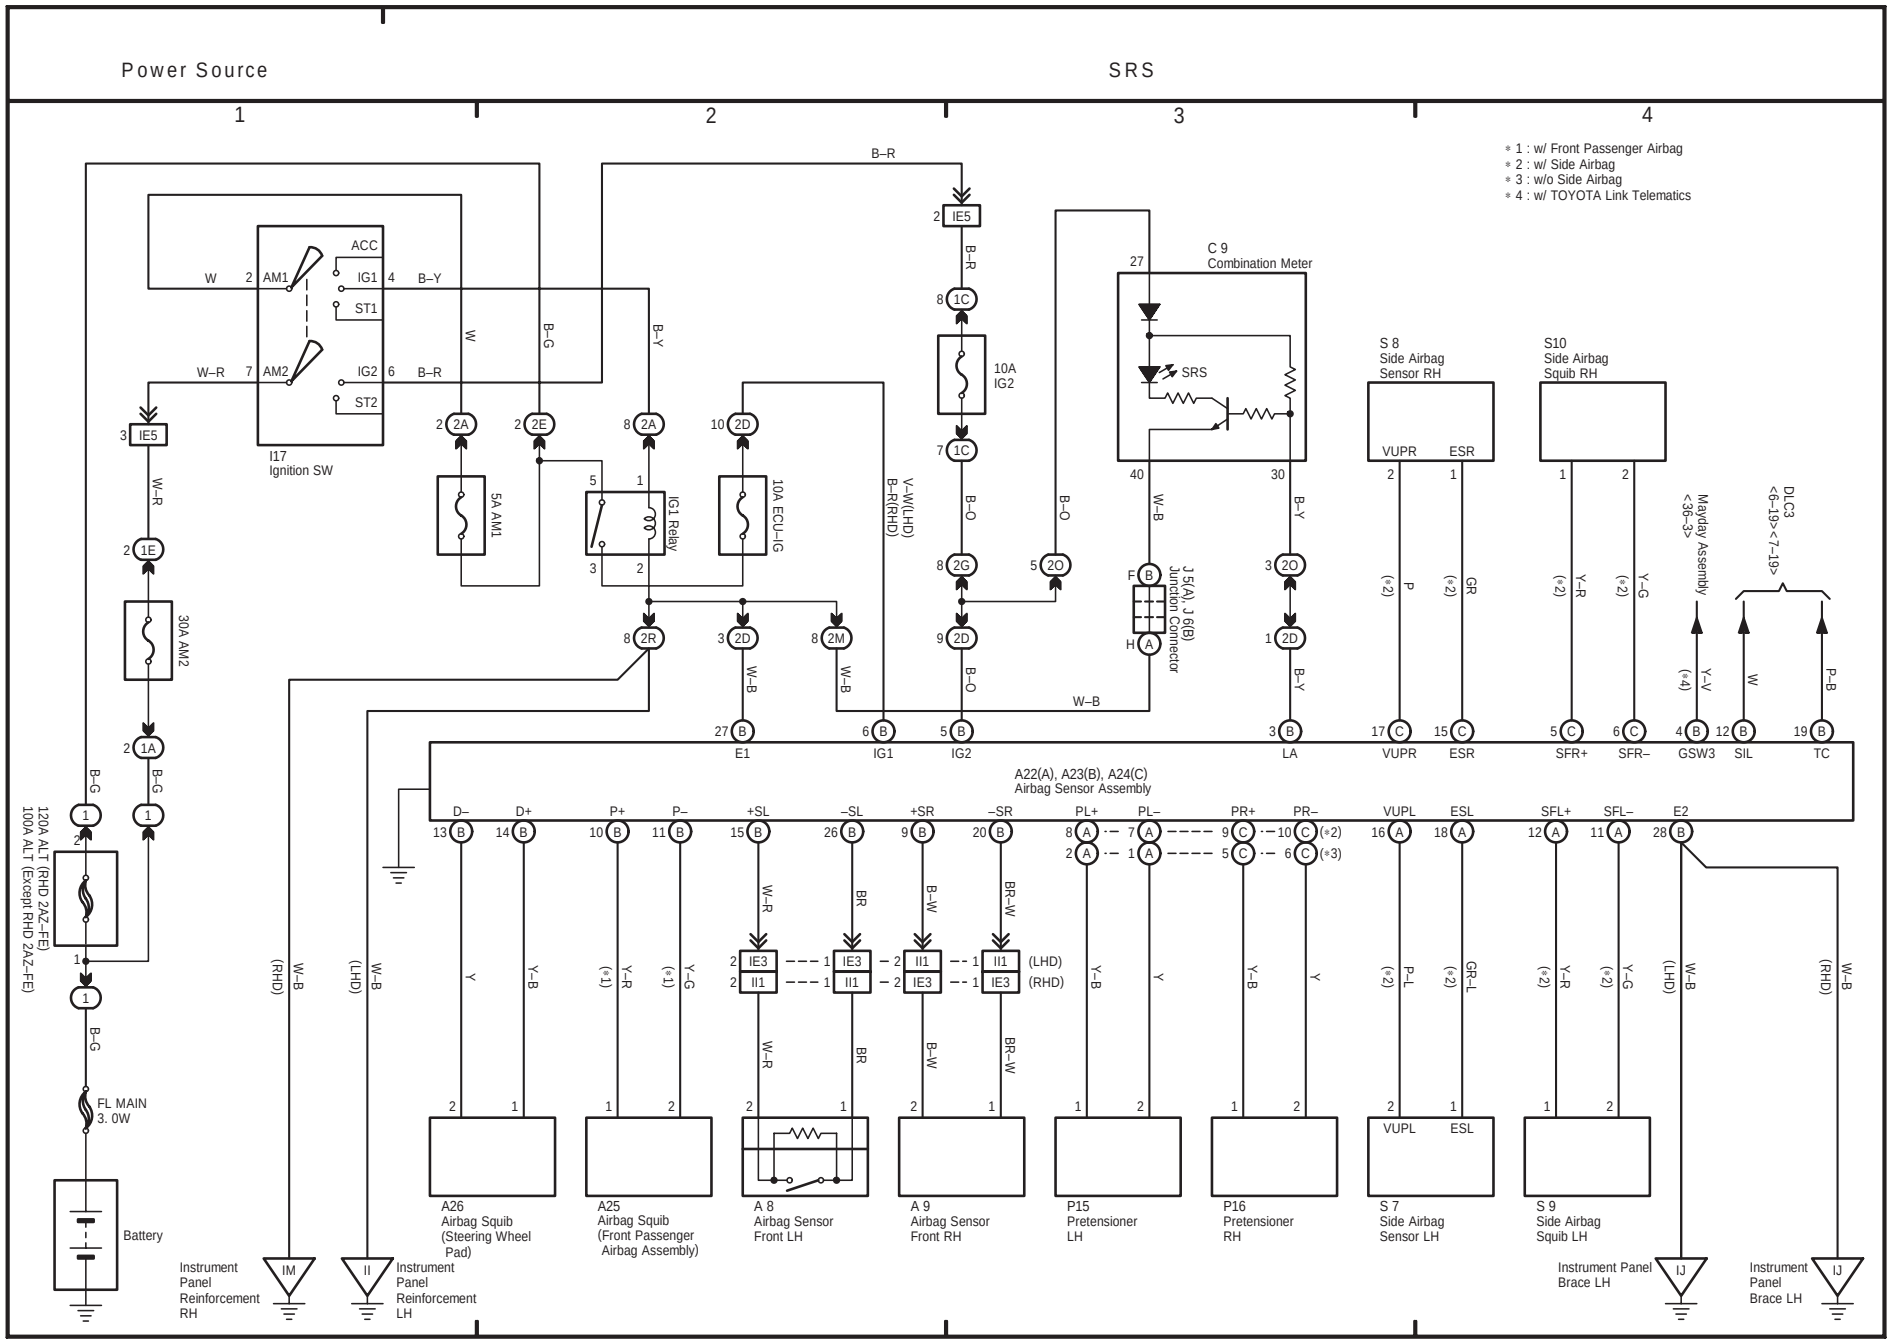
Power Source
SRS
1
2
3
4
* 1 : w/ Front Passenger Airbag
* 2 : w/ Side Airbag
* 3 : w/o Side Airbag
* 4 : w/ TOYOTA Link Telematics
I17
Ignition SW
ACC
IG1
ST1
IG2
ST2
AM1
AM2
5A AM1
IG1 Relay
10A ECU-IG
10A IG2
30A AM2
V–W(LHD)
B–R(RHD)
C 9
Combination Meter
SRS
J 5(A), J 6(B)
Junction Connector
S 8
Side Airbag
Sensor RH
S10
Side Airbag
Squib RH
Mayday Assembly
<36–3>
DLC3
<6–19><7–19>
E1
IG1
IG2
LA
VUPR
ESR
SFR+
SFR–
GSW3
SIL
TC
A22(A), A23(B), A24(C)
Airbag Sensor Assembly
D–
D+
P+
P–
+SL
–SL
+SR
–SR
PL+
PL–
PR+
PR–
VUPL
ESL
SFL+
SFL–
E2
120A ALT (RHD 2AZ–FE)
100A ALT (Except RHD 2AZ–FE)
FL MAIN
3. 0W
Battery
A26
Airbag Squib
(Steering Wheel
Pad)
A25
Airbag Squib
(Front Passenger
Airbag Assembly)
A 8
Airbag Sensor
Front LH
A 9
Airbag Sensor
Front RH
P15
Pretensioner
LH
P16
Pretensioner
RH
S 7
Side Airbag
Sensor LH
S 9
Side Airbag
Squib LH
Instrument
Panel
Reinforcement
RH
Instrument
Panel
Reinforcement
LH
Instrument Panel
Brace LH
Instrument
Panel
Brace LH

(Cont. next page)

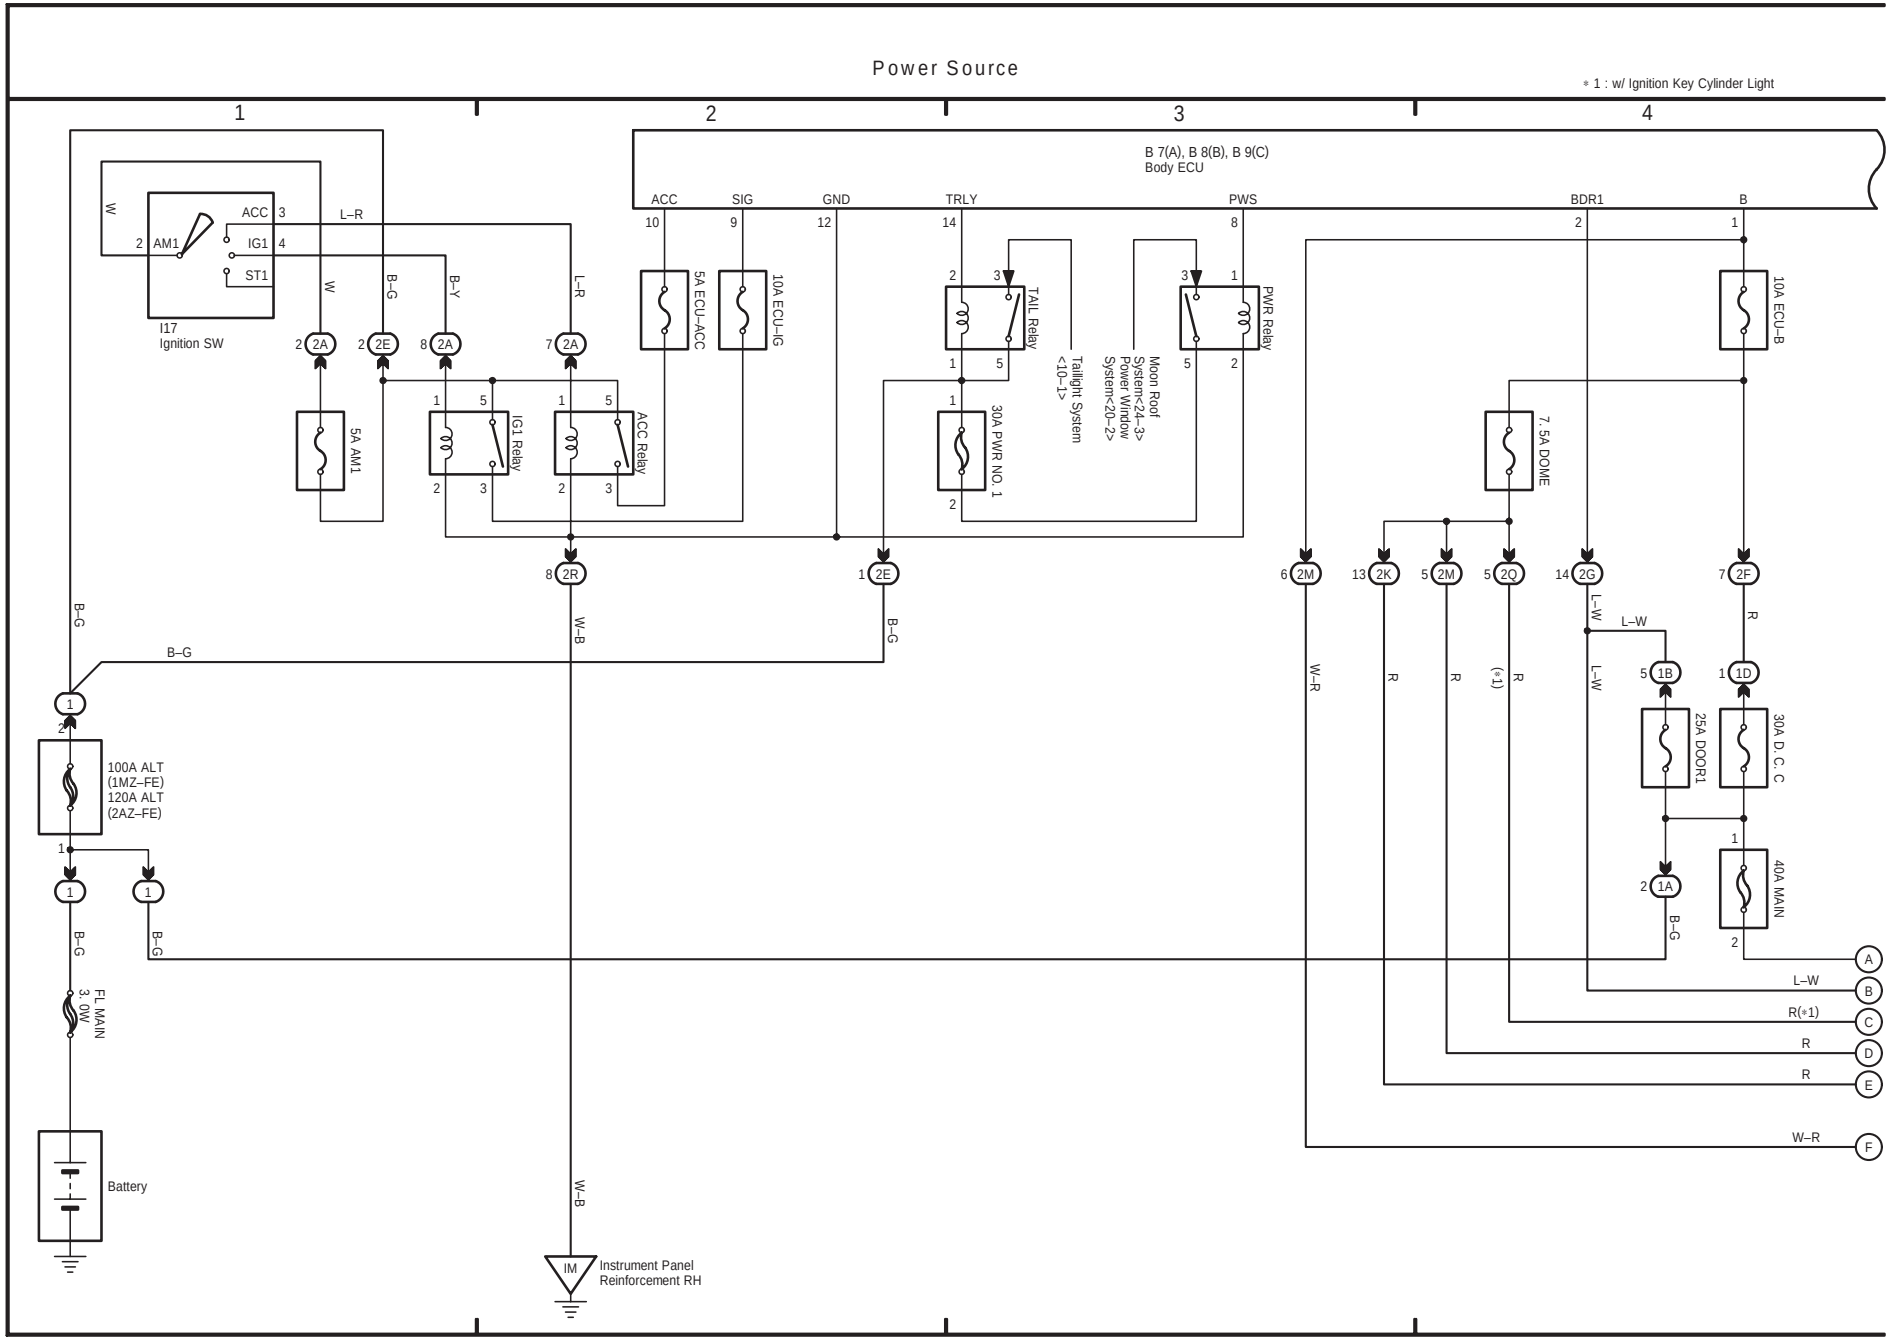

(Cont. next page)

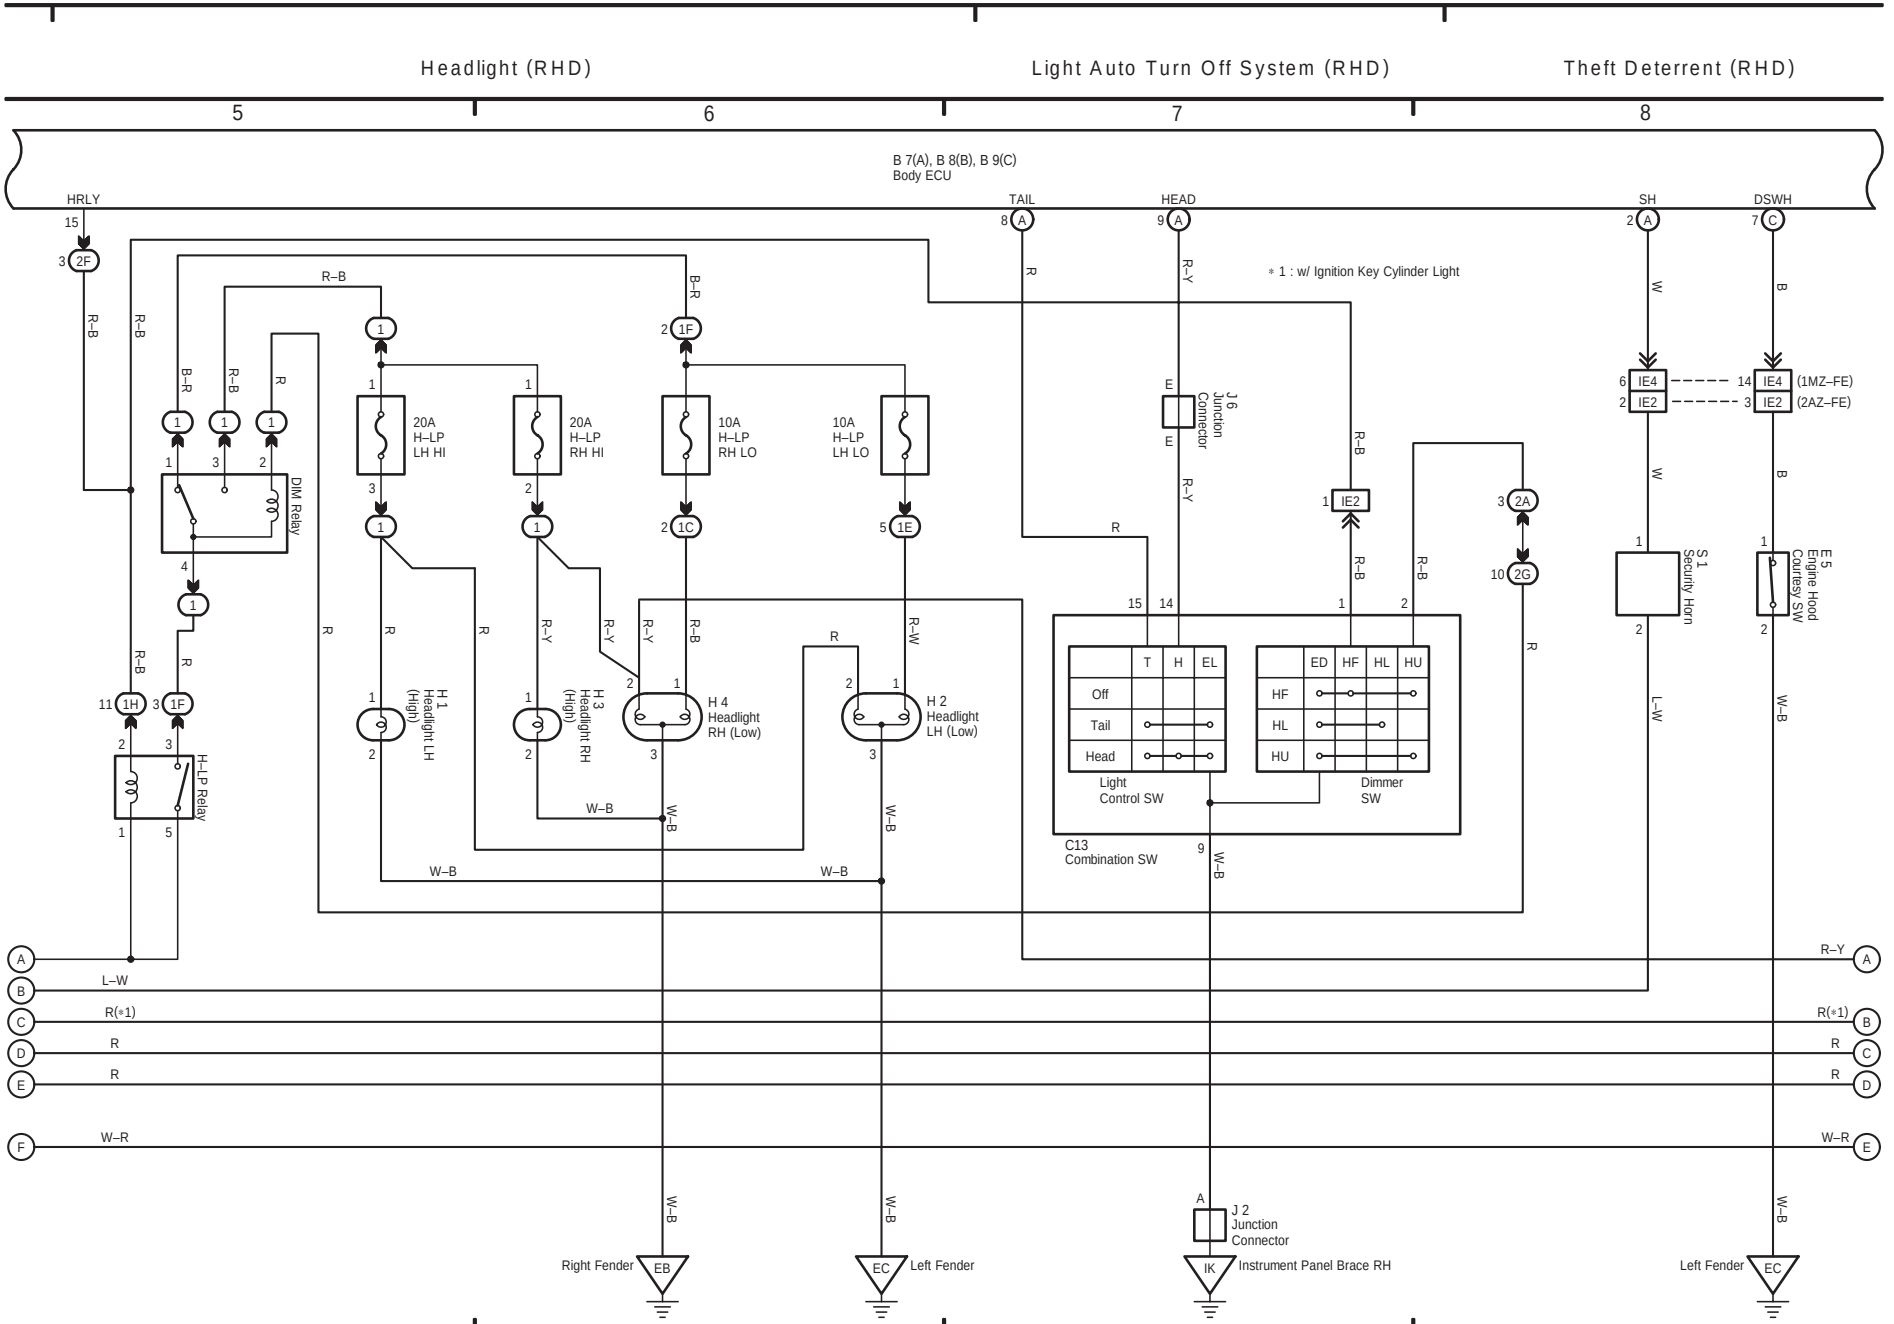


2 CAMRY (Cont' d)

(Cont. next page)


Interior Light (RHD)

* 1 : w/ Ignition Key Cylinder Light
* 2 : w/ Vanity Light
* 3 : w/ Personal Light
* 4 : Except South Africa
* 5 : 1MZ–FE
* 6 : 2AZ–FE Australia, New Zealand
* 7 : 2AZ–FE Except Australia, New Zealand
* 8 : w/ TOYOTA Link Telematics

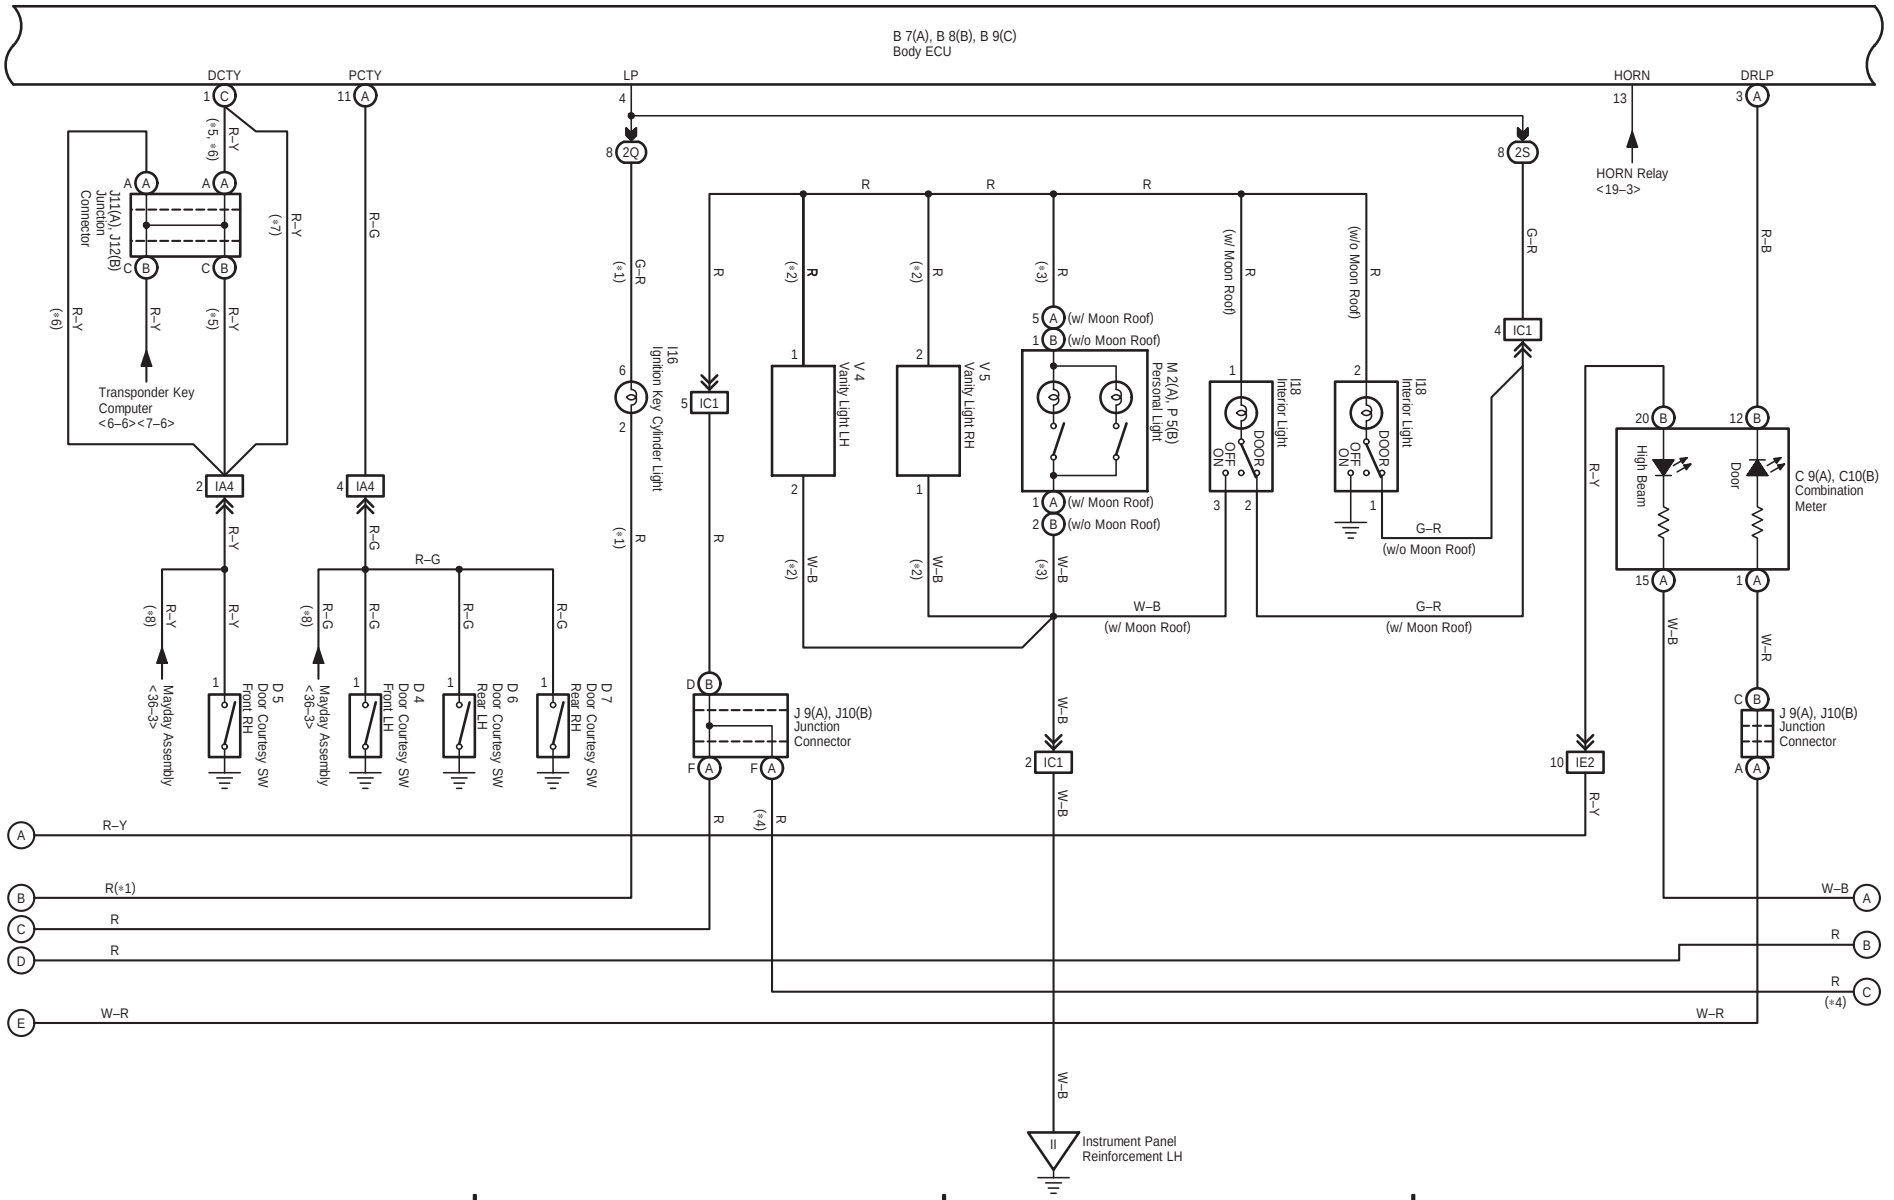



2 CAMRY (Cont' d)

(Cont. next page)

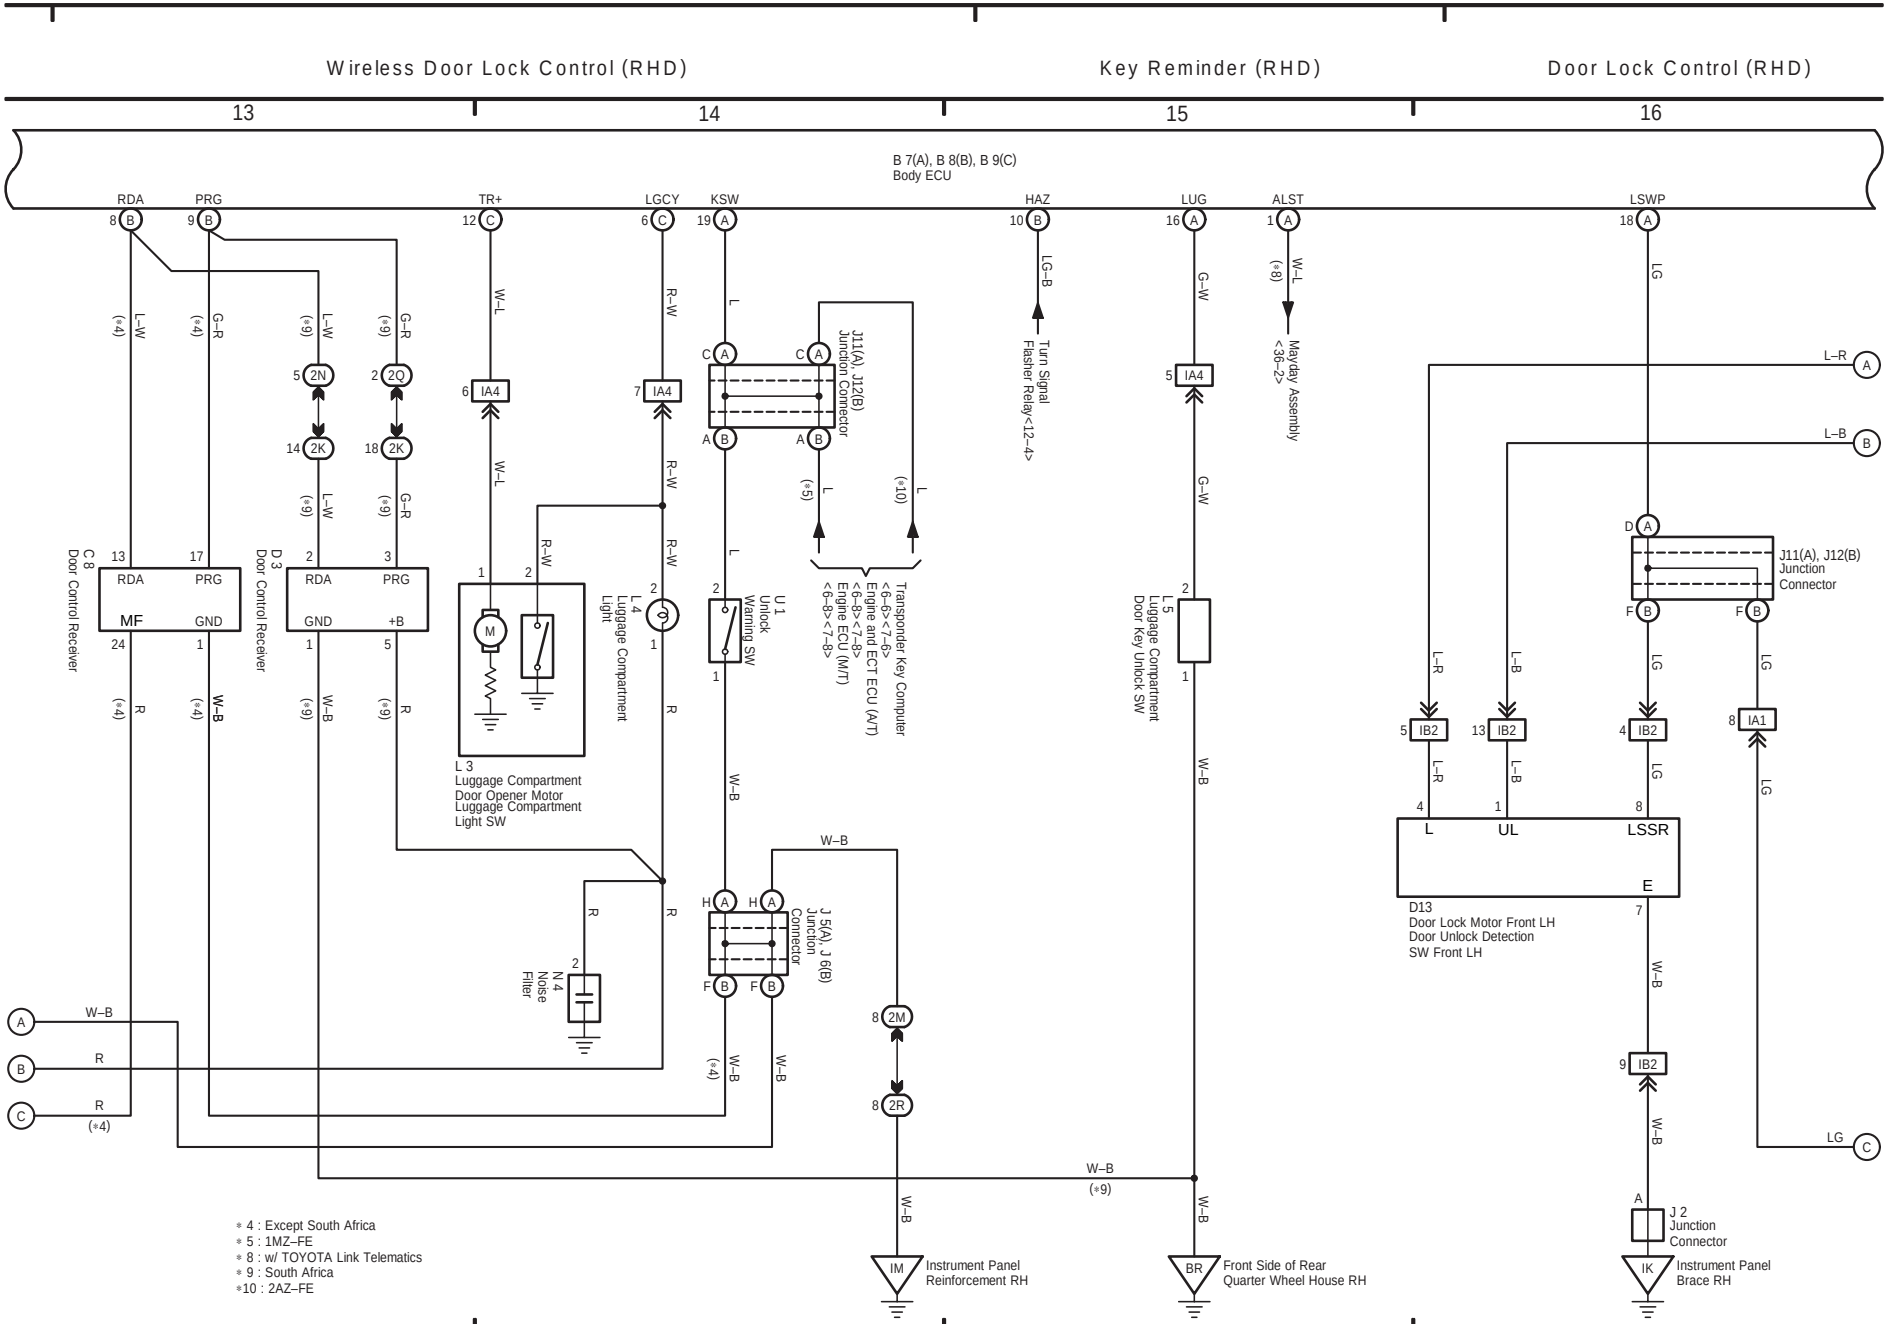


2 CAMRY (Cont' d)

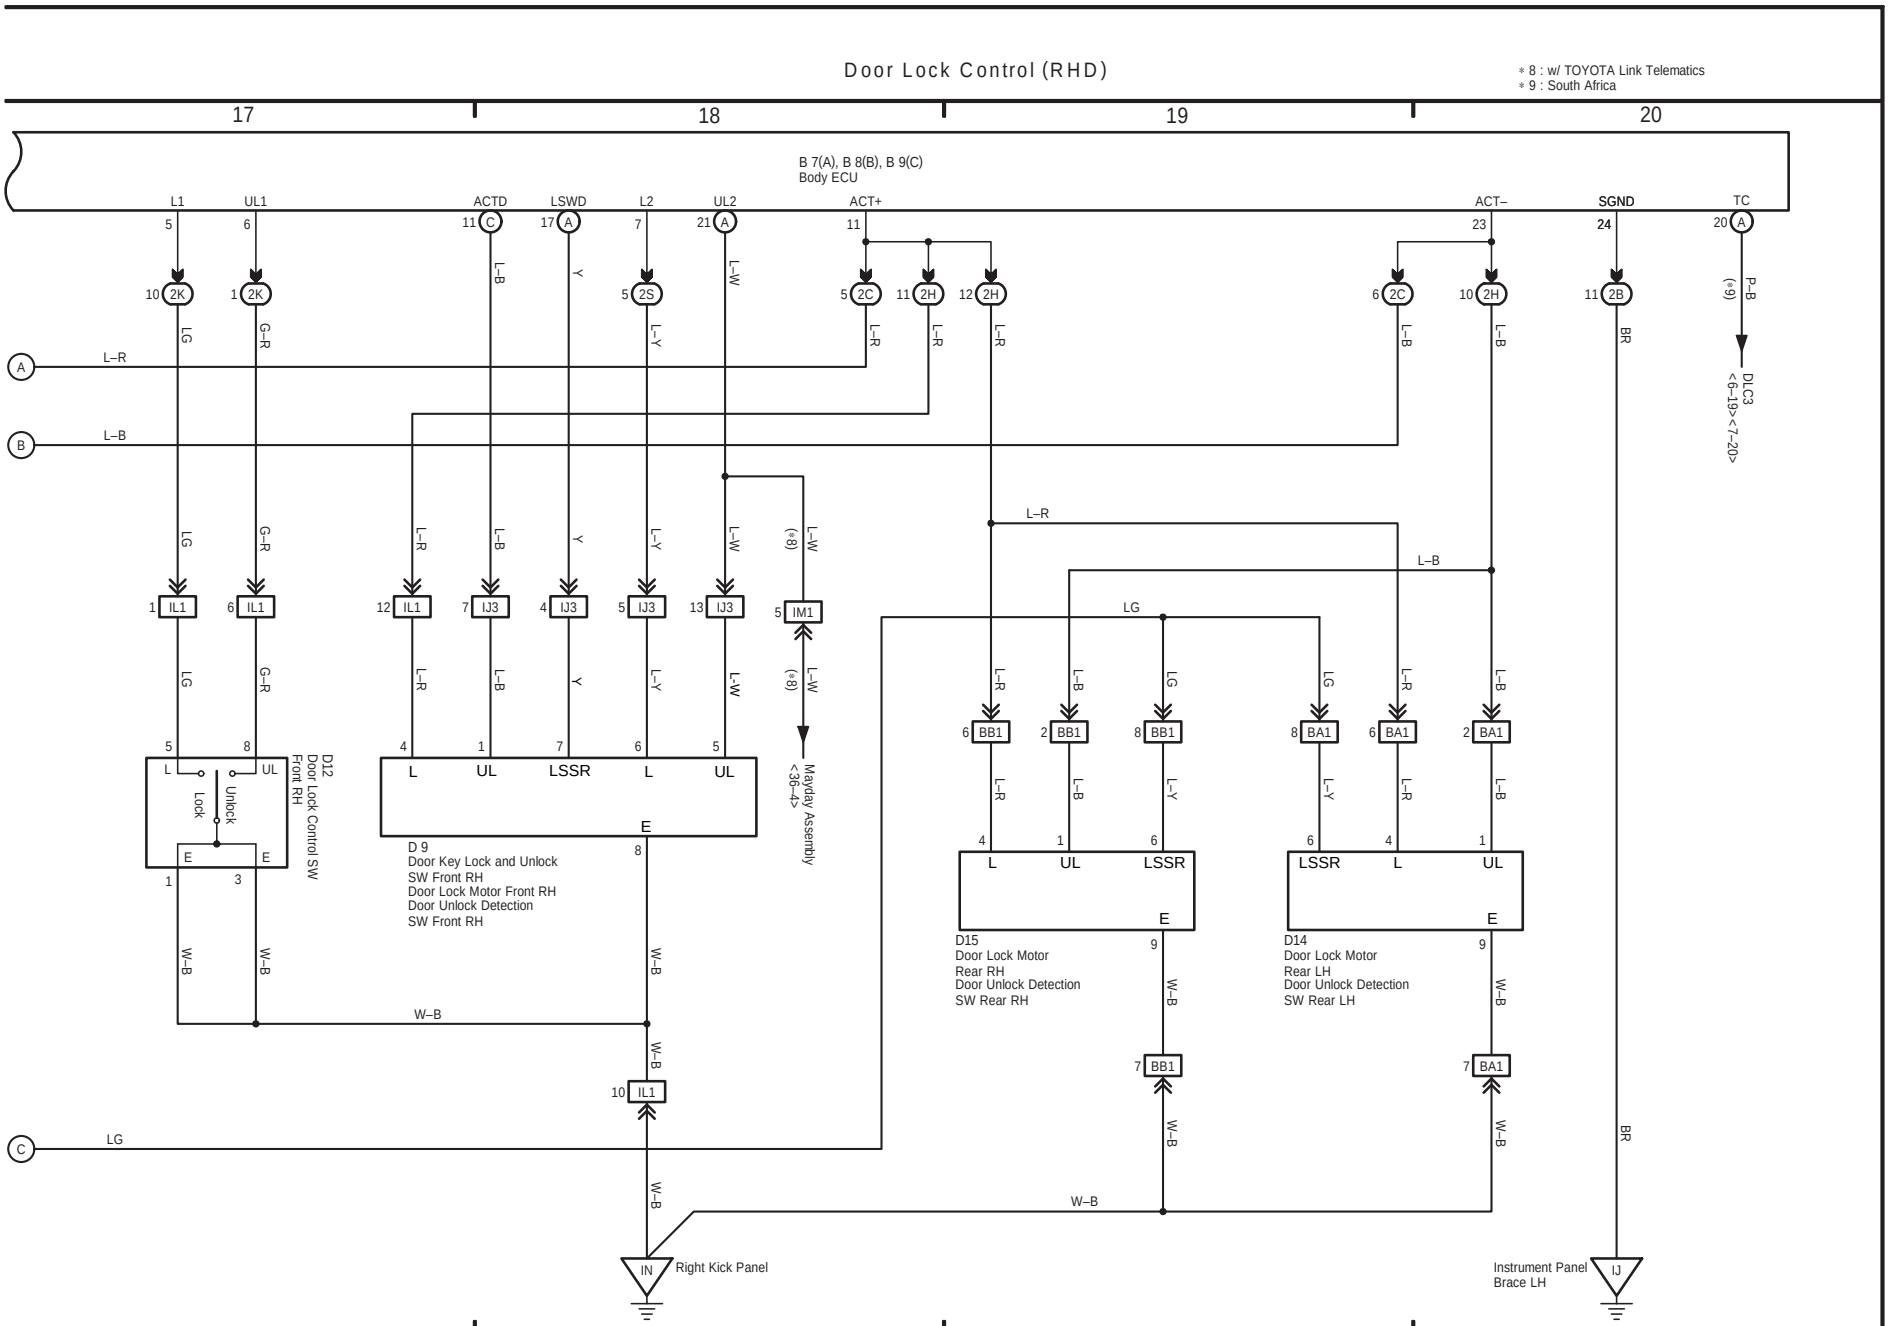

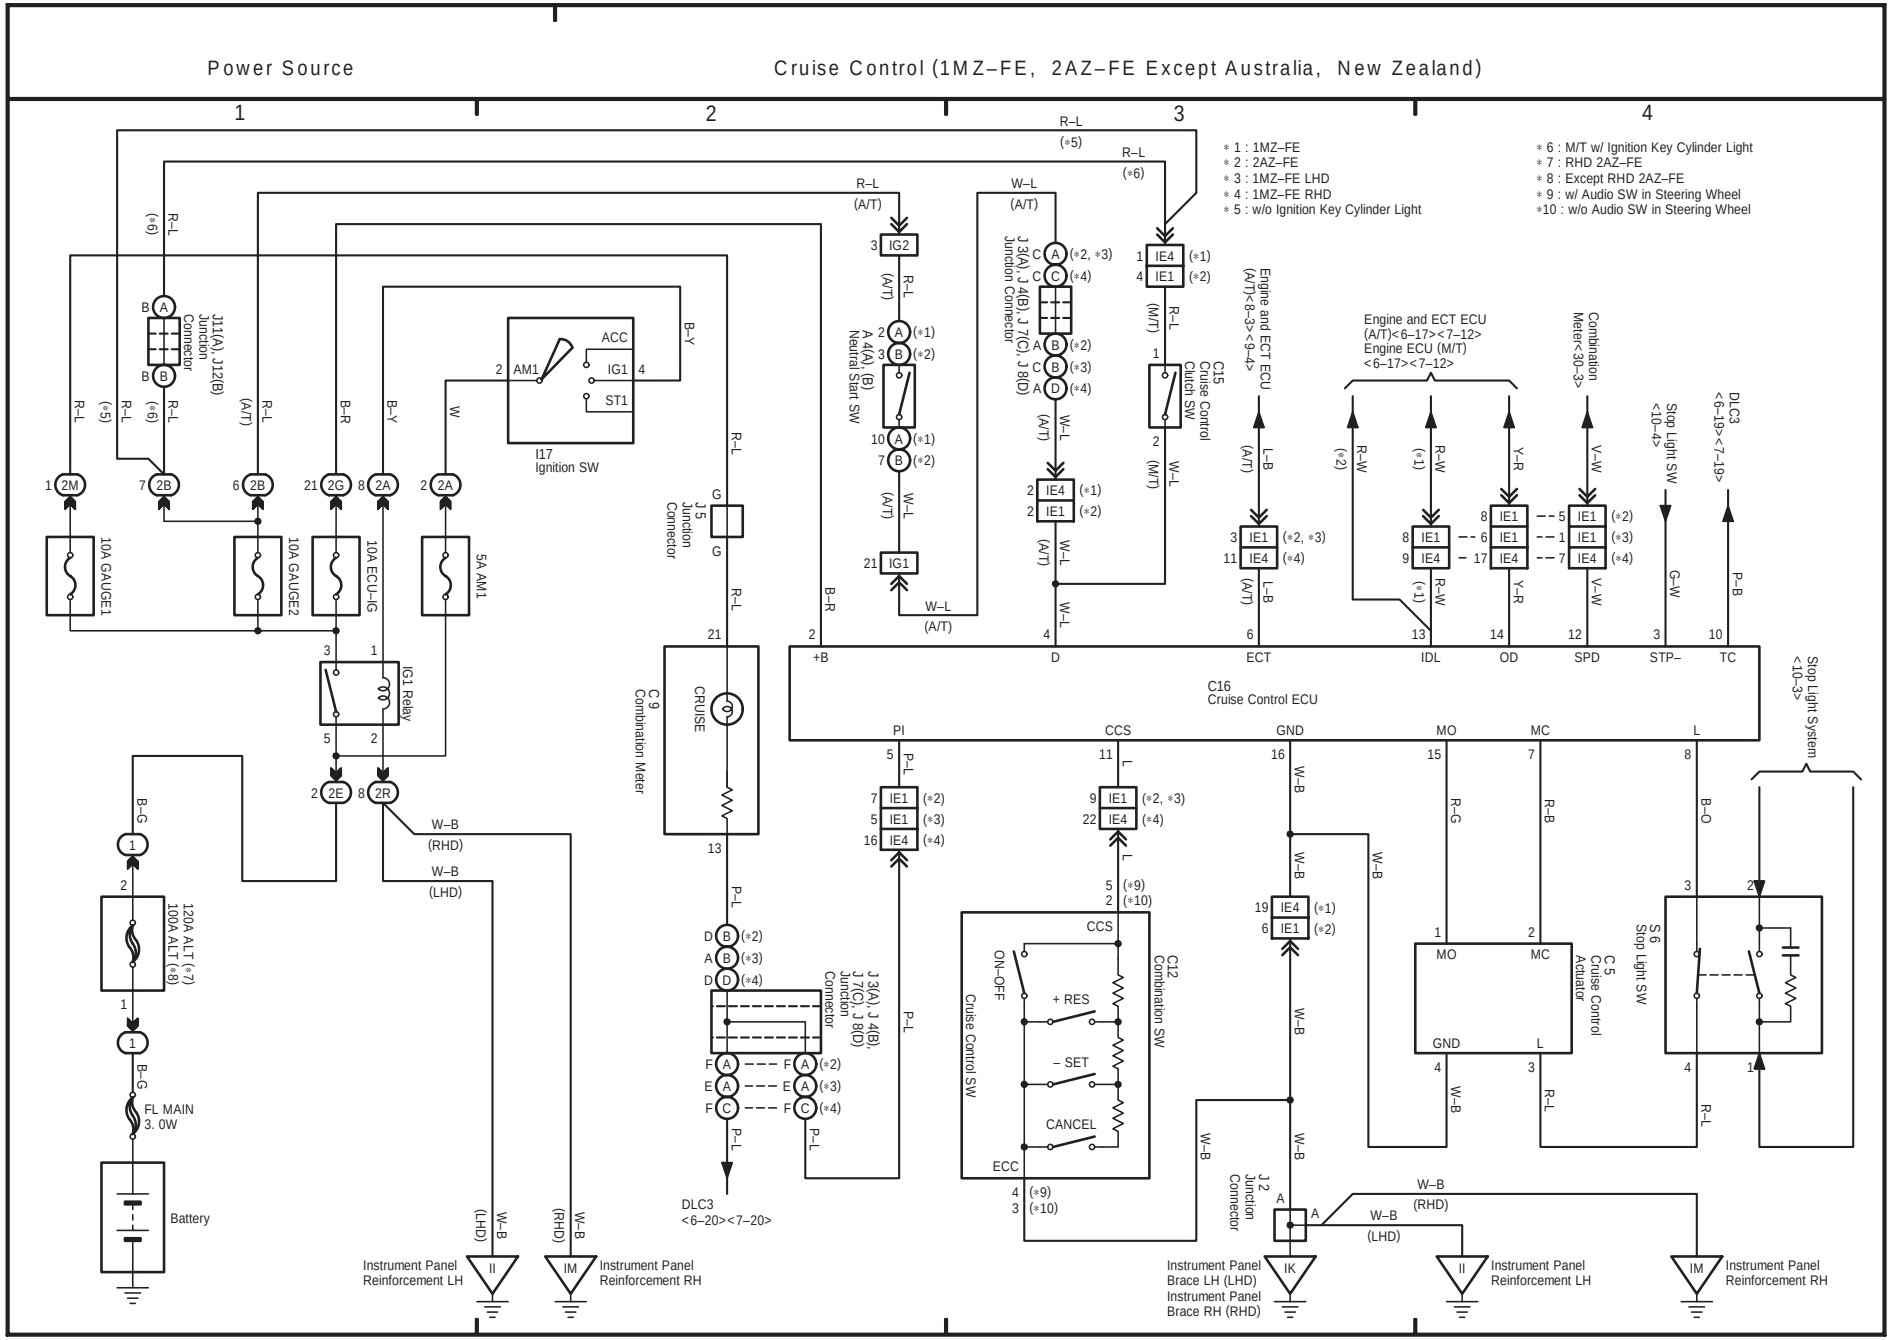

Power Source
Cruise Control (1MZ–FE, 2AZ–FE Except Australia, New Zealand)
1
2
3
4
* 1 : 1MZ–FE
* 2 : 2AZ–FE
* 3 : 1MZ–FE LHD
* 4 : 1MZ–FE RHD
* 5 : w/o Ignition Key Cylinder Light
* 6 : M/T w/ Ignition Key Cylinder Light
* 7 : RHD 2AZ–FE
* 8 : Except RHD 2AZ–FE
* 9 : w/ Audio SW in Steering Wheel
*10 : w/o Audio SW in Steering Wheel
Battery
FL MAIN 3. 0W
120A ALT (*7) 100A ALT (*8)
IG1 Relay
10A GAUGE1
10A GAUGE2
10A ECU-IG
5A AM1
I17 Ignition SW
J11(A), J12(B) Junction Connector
J5 Junction Connector
A 4(A), (B) Neutral Start SW
J 3(A), J 4(B), J 7(C), J 8(D) Junction Connector
C15 Cruise Control Clutch SW
Engine and ECT ECU (A/T)<6–8><3><9–4>
Engine and ECT ECU (A/T)<6–17><7–12> Engine ECU (M/T) <6–17><7–12>
Combination Meter<30–3>
Stop Light SW <10–4>
DLC3 <6–19><7–19>
C16 Cruise Control ECU
+B
D
ECT
IDL
OD
SPD
STP–
TC
C 9 Combination Meter
CRUISE
DLC3 <6–20><7–20>
PI
CCS
GND
MO
MC
L
Cruise Control SW
ON–OFF
+ RES
– SET
CANCEL
C12 Combination SW
C 5 Cruise Control Actuator
S 6 Stop Light SW
Stop Light System <10–3>
J 2 Junction Connector
Instrument Panel Reinforcement LH
Instrument Panel Reinforcement RH
Instrument Panel Brace LH (LHD)
Instrument Panel Brace RH (RHD)
(RHD)
(LHD)

(Cont. next page)

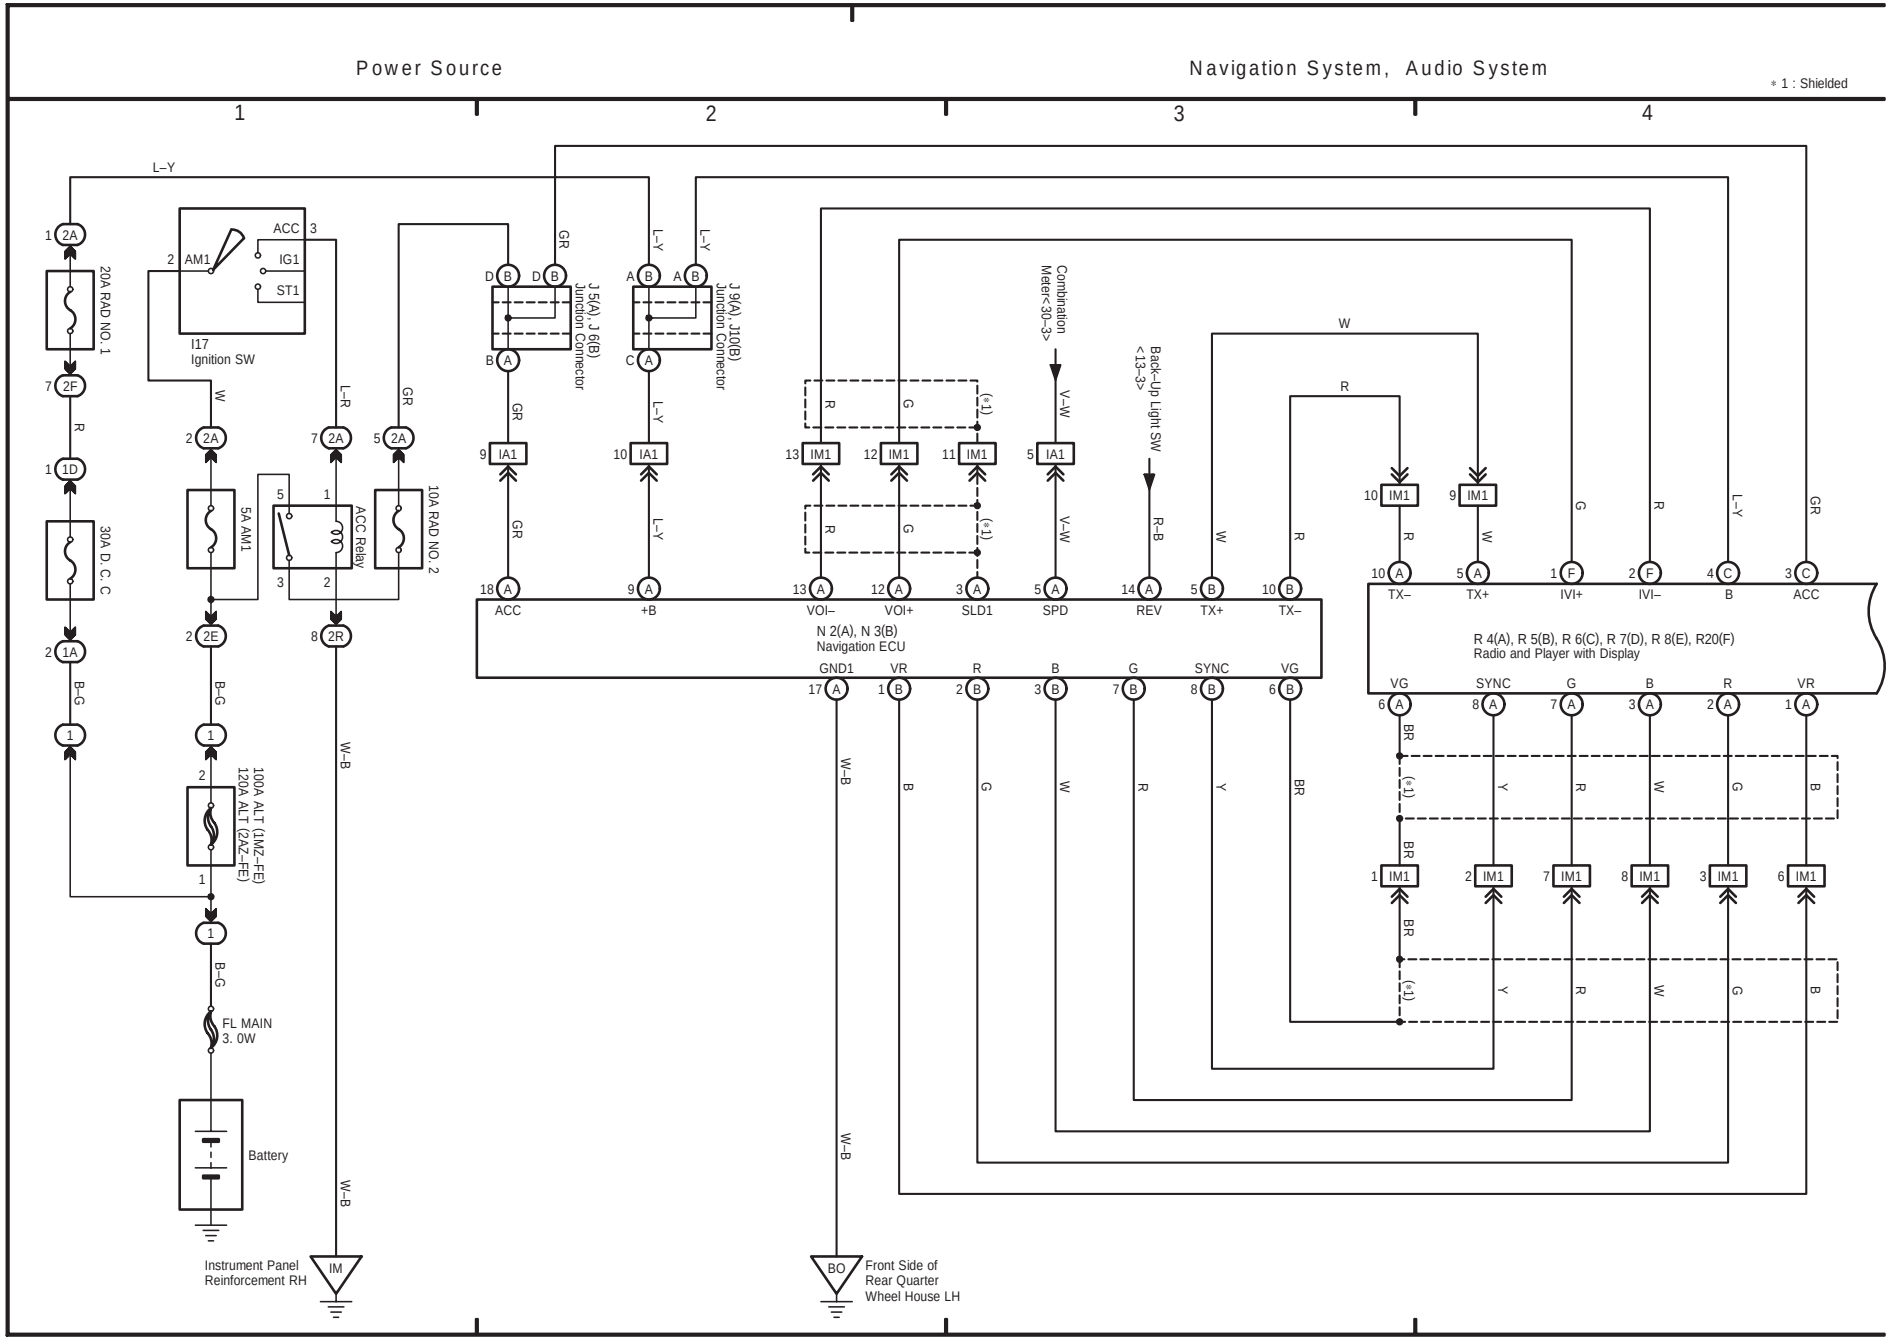


Navigation System, Audio System

* 1 : Shielded
* 2 : w/ CD Automatic Changer
* 3 : w/ TOYOTA Link Telamatics

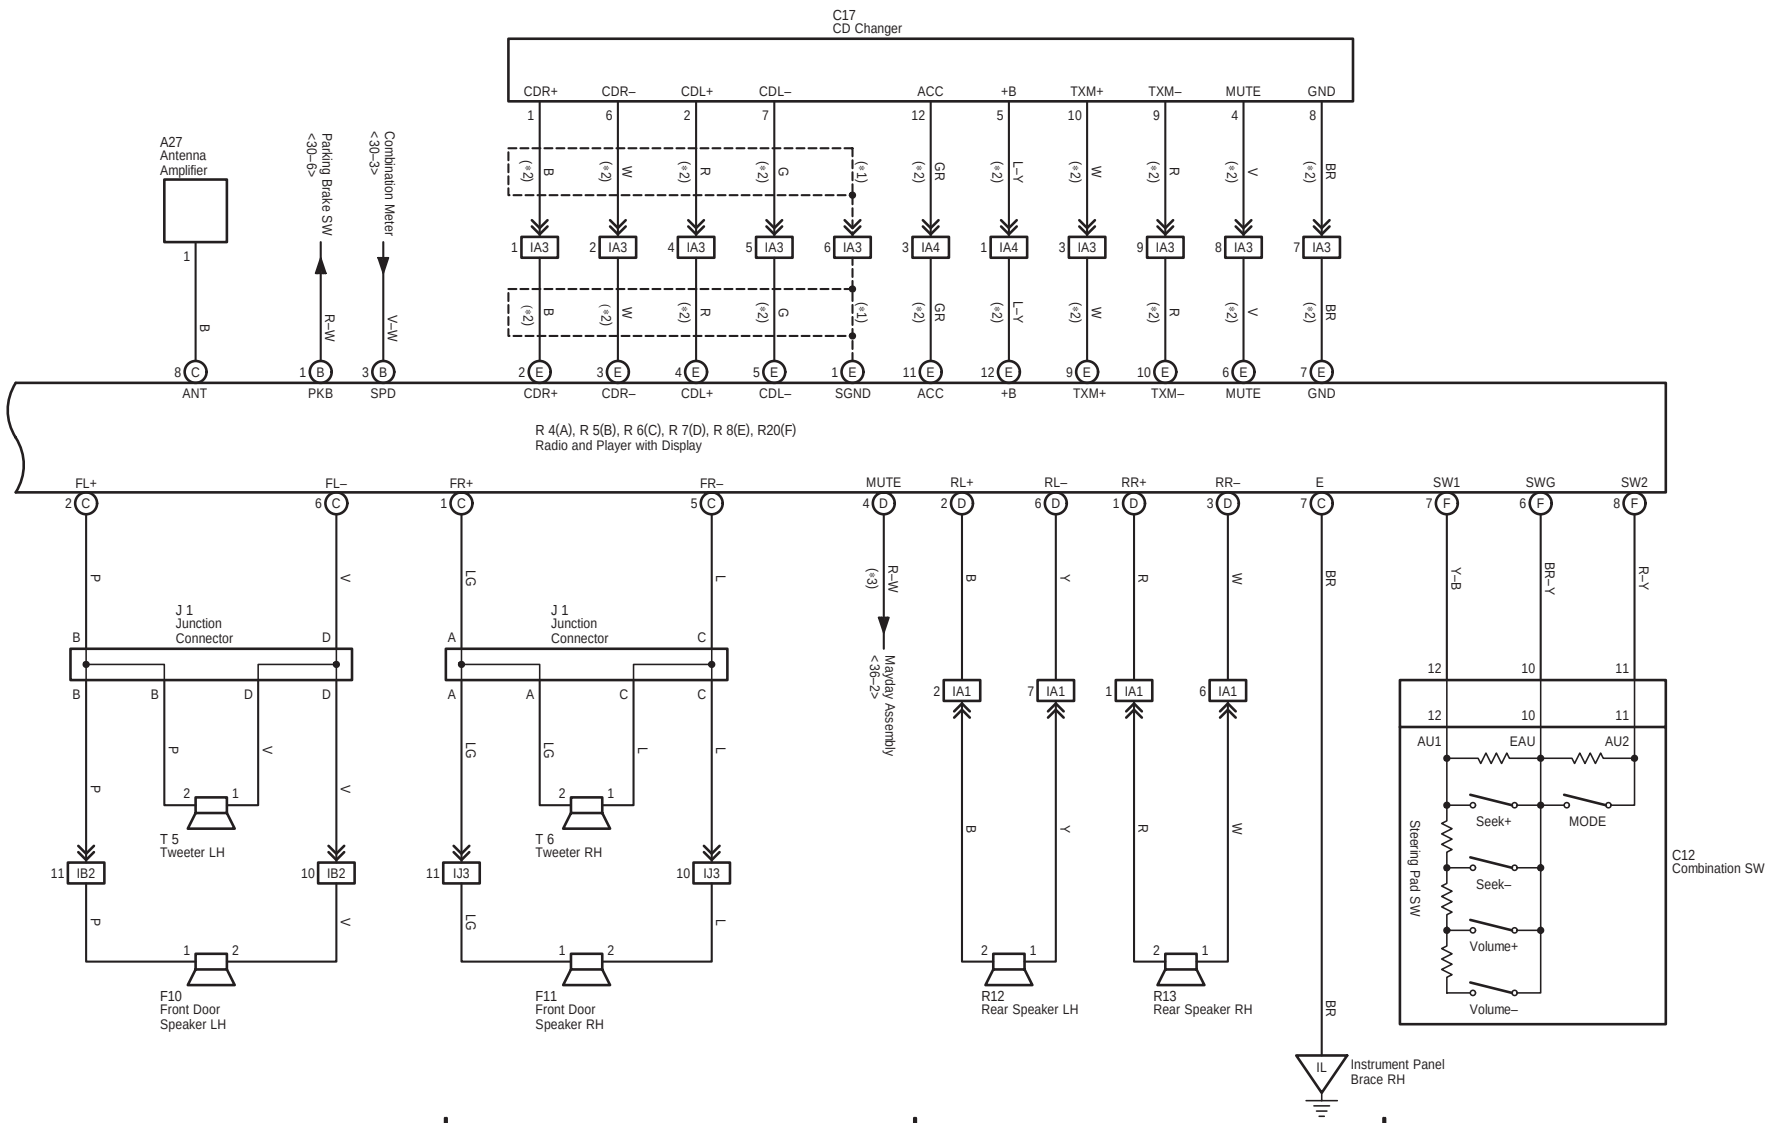


(Cont. next page)

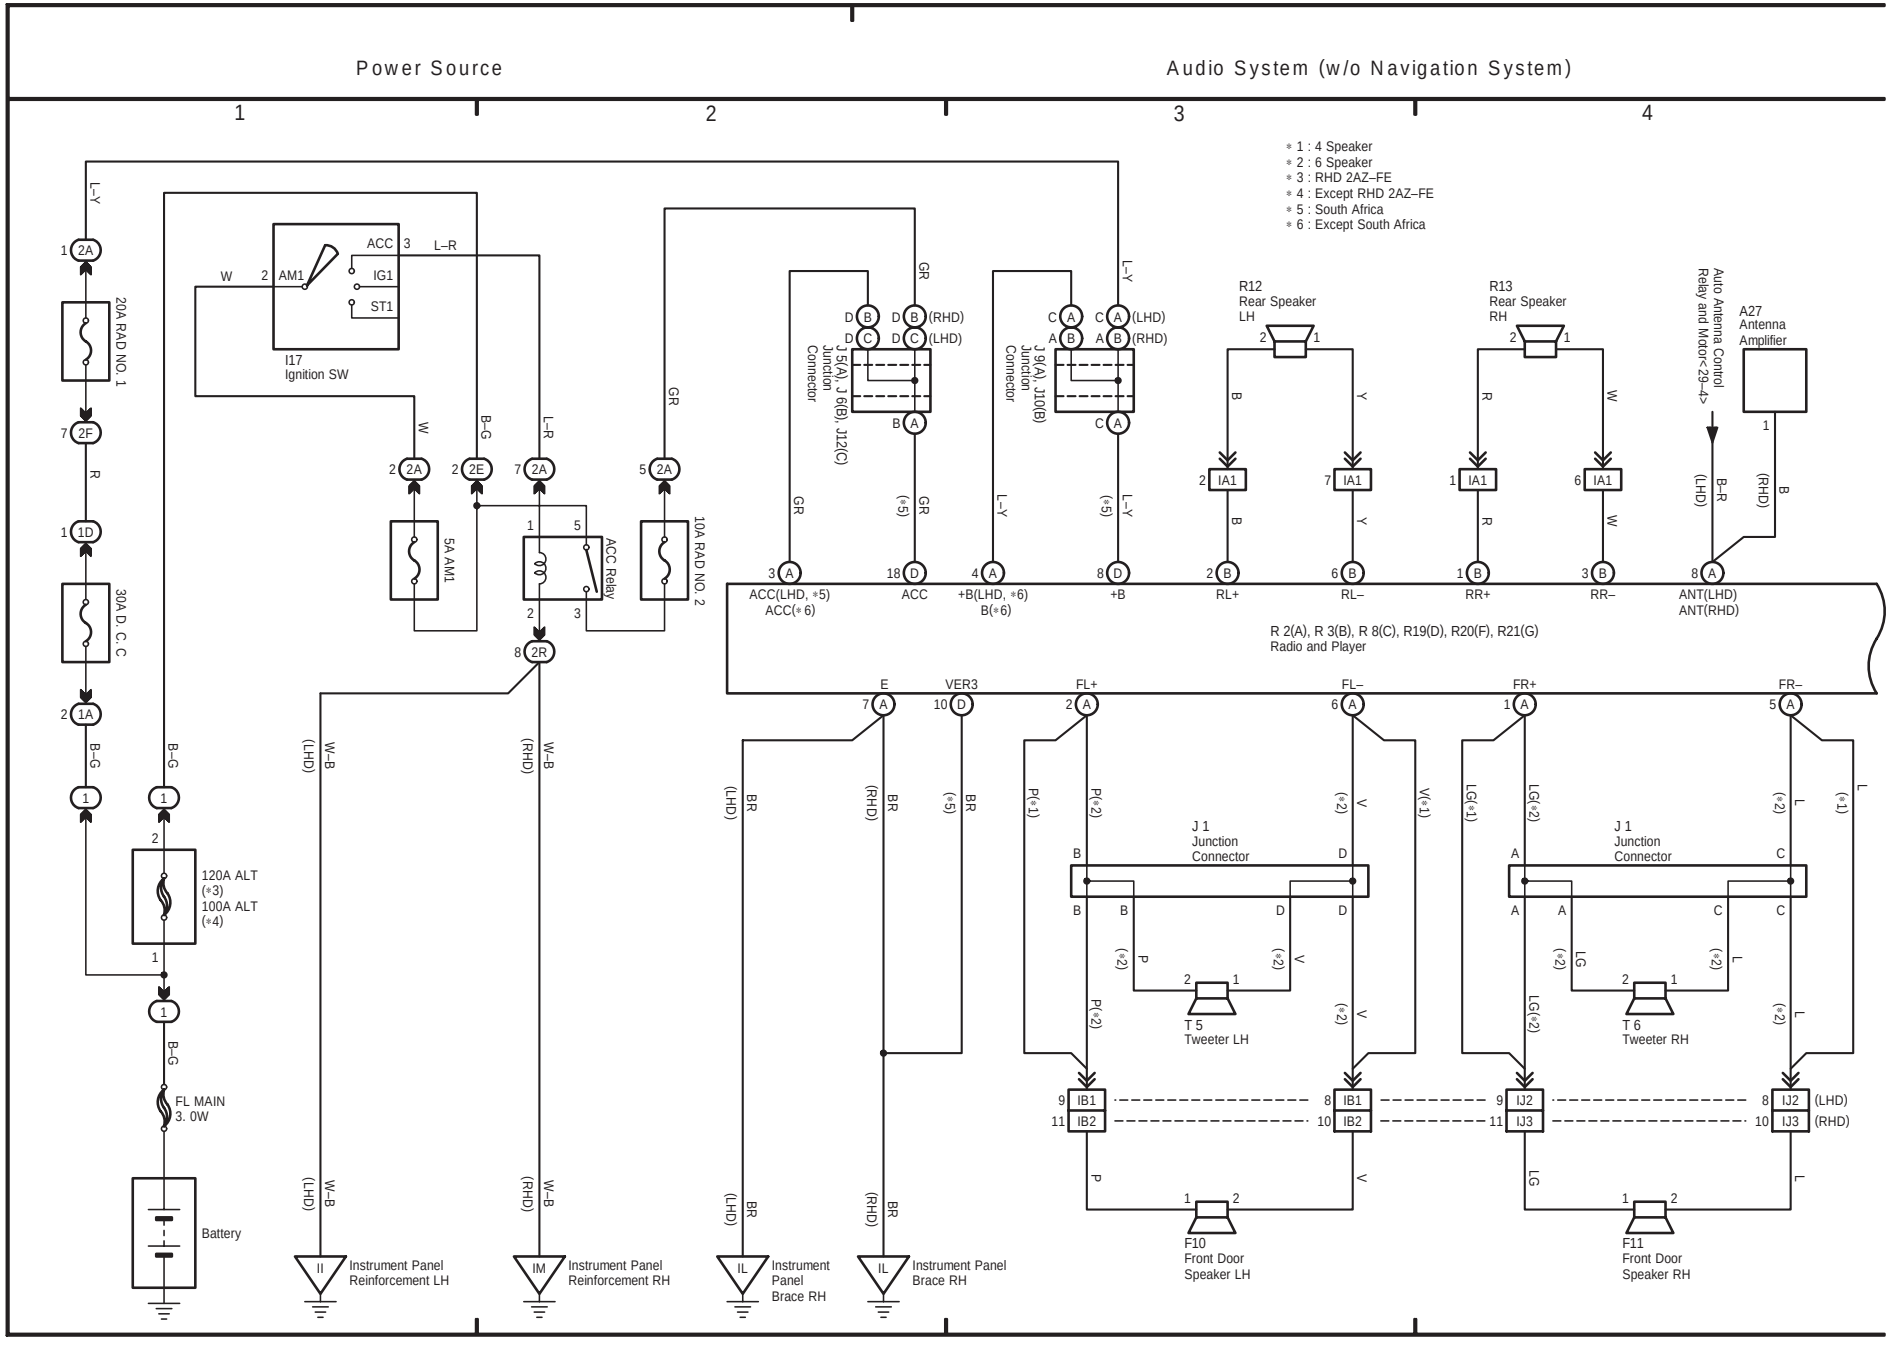



Audio System (w/o Navigation System)


∗ 5 : South Africa
∗ 6 : Except South Africa
∗ 7 : w/ Audio SW in Steering Wheel South Africa
∗ 8 : w/ Audio SW in Steering Wheel Except South Africa


5 6 7 8

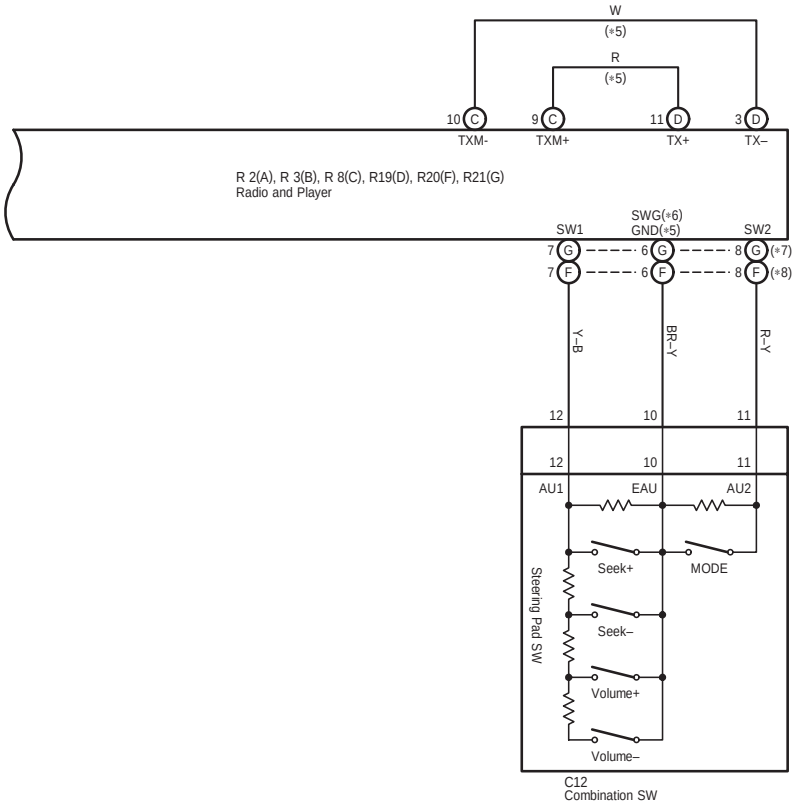

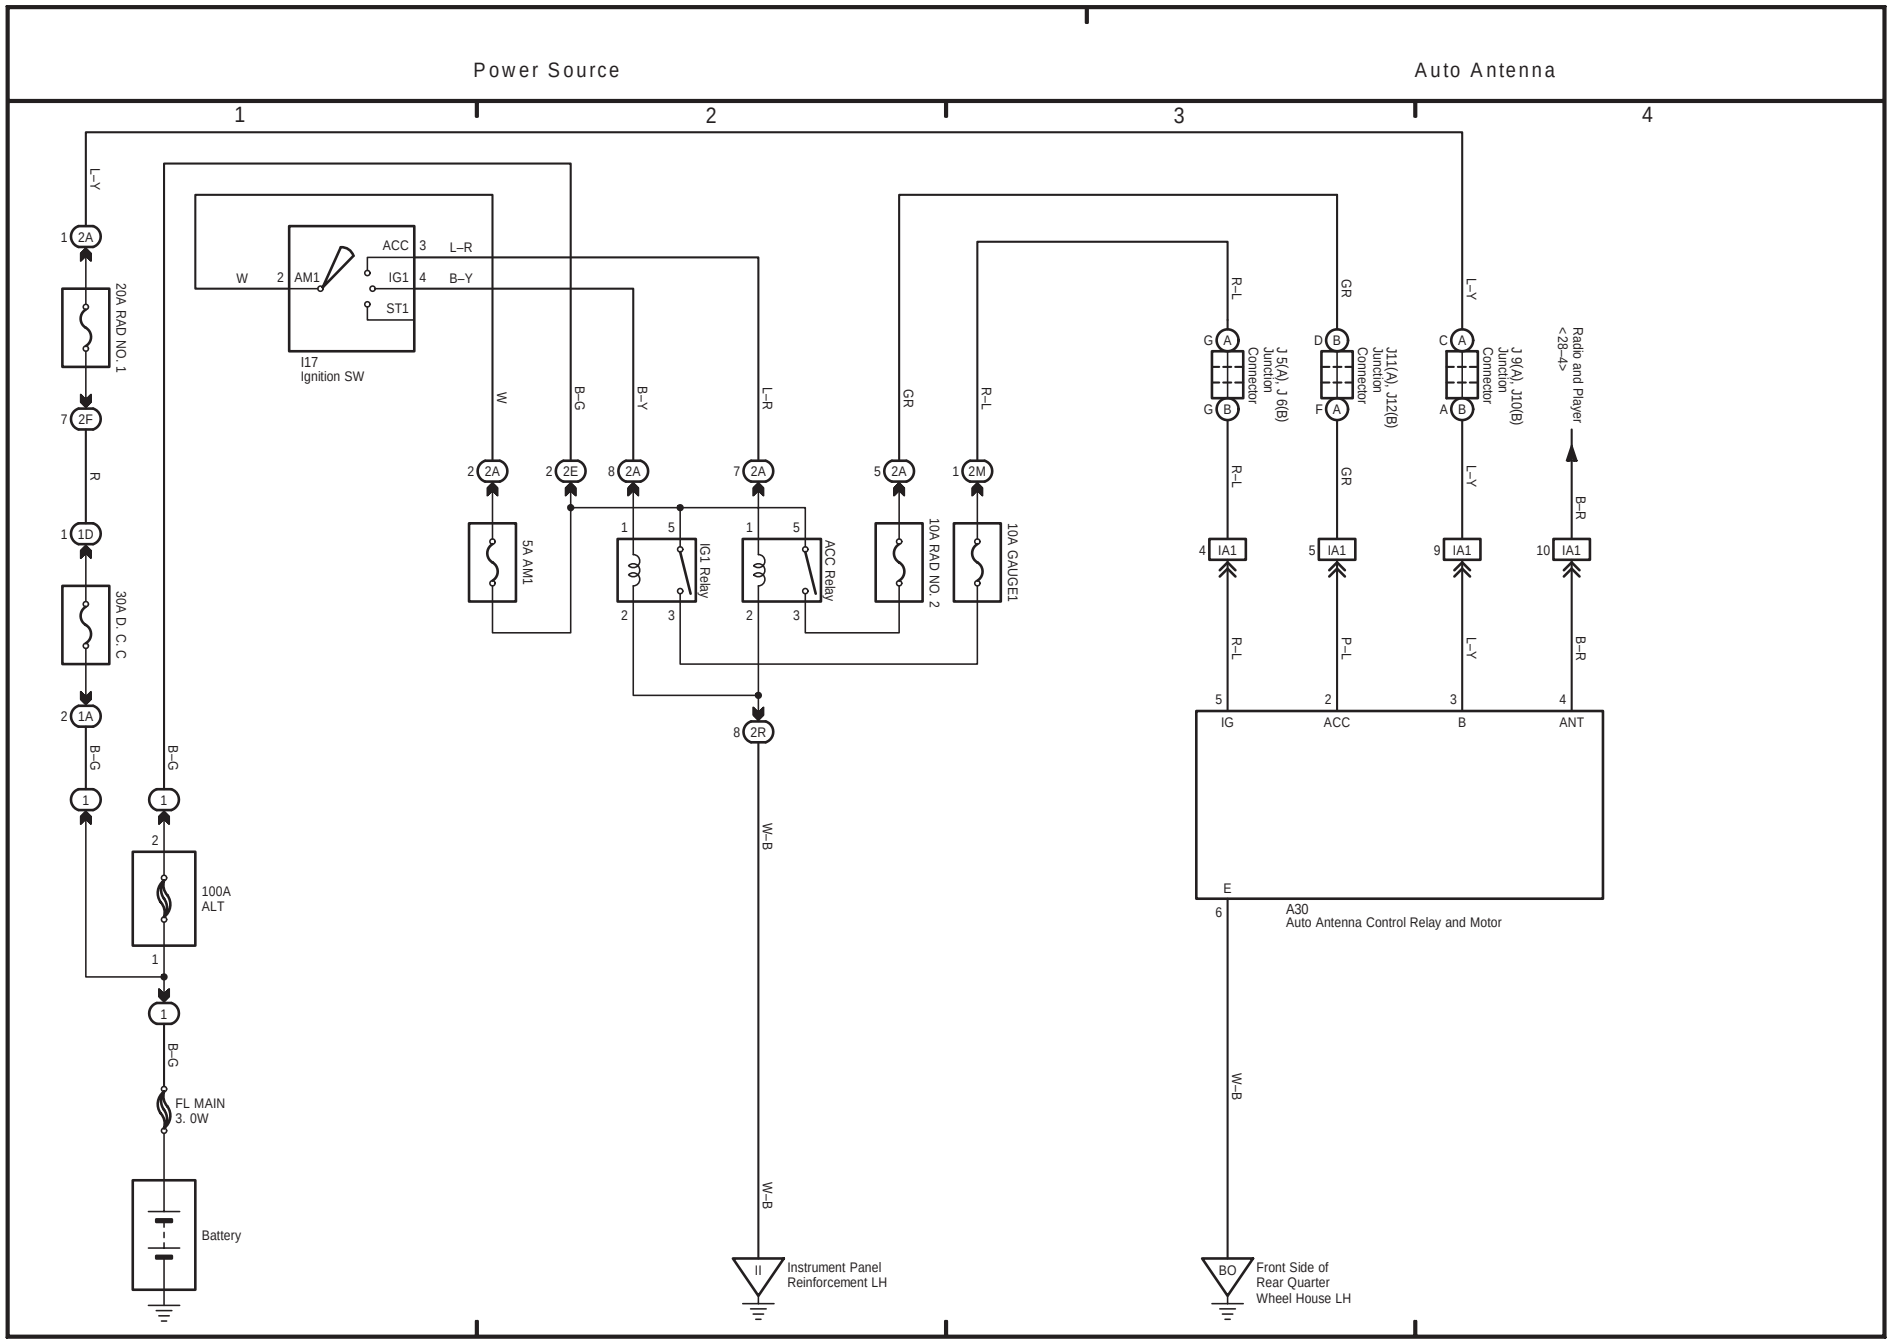

Power Source
Auto Antenna
1
2
3
4
L–Y
1 2A
20A RAD NO. 1
7 2F
R
1 1D
30A D. C. C
2 1A
B–G
1
2
100A ALT
1
1
B–G
FL MAIN 3. 0W
Battery
W
2 AM1
ACC 3
IG1 4
ST1
L–R
B–Y
I17 Ignition SW
W
2 2A
5A AM1
B–G
2 2E
B–Y
8 2A
IG1 Relay
L–R
7 2A
ACC Relay
GR
5 2A
10A RAD NO. 2
R–L
1 2M
10A GAUGE1
8 2R
W–B
W–B
II
Instrument Panel Reinforcement LH
R–L
G A
G B
J 5(A), J 6(B) Junction Connector
GR
D B
F A
J11(A), J12(B) Junction Connector
L–Y
C A
A B
J 9(A), J10(B) Junction Connector
Radio and Player <2B–4>
B–R
4 IA1
5 IA1
9 IA1
10 IA1
R–L
P–L
L–Y
B–R
5 IG
2 ACC
3 B
4 ANT
E
6
A30
Auto Antenna Control Relay and Motor
W–B
BO
Front Side of Rear Quarter Wheel House LH

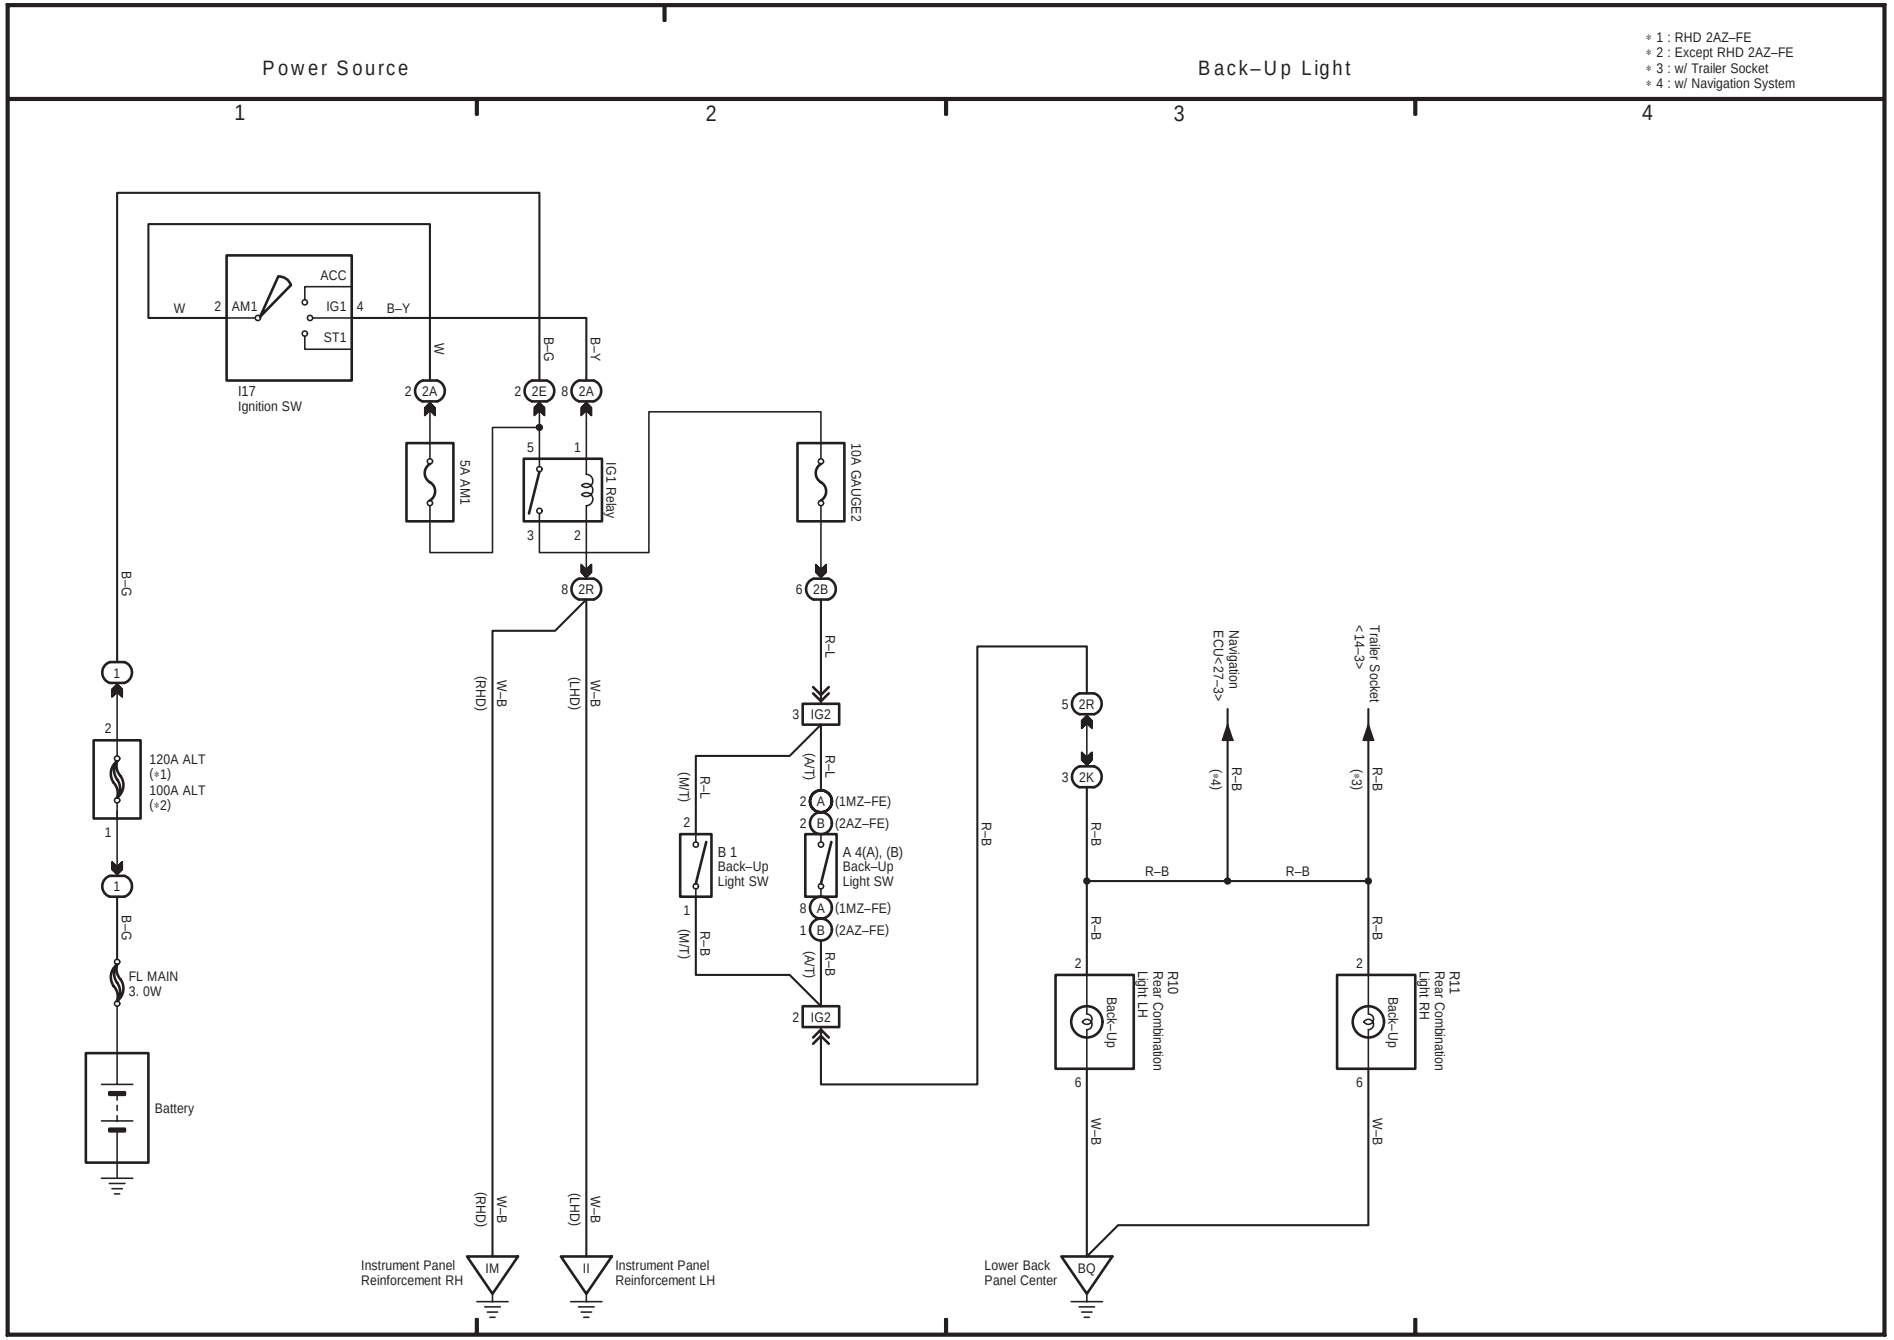
Power Source
Back–Up Light
1
2
3
4
* 1 : RHD 2AZ–FE
* 2 : Except RHD 2AZ–FE
* 3 : w/ Trailer Socket
* 4 : w/ Navigation System
ACC
IG1
ST1
AM1
W
B–Y
I17
Ignition SW
2A
2E
5A AM1
IG1 Relay
10A GAUGE2
2R
2B
B–G
R–L
120A ALT
(*1)
100A ALT
(*2)
FL MAIN
3. 0W
Battery
W–B
(RHD)
(LHD)
IG2
(A/T)
(M/T)
B 1
Back–Up
Light SW
A 4(A), (B)
Back–Up
Light SW
(1MZ–FE)
(2AZ–FE)
R–B
2K
Navigation
ECU<27–3>
Trailer Socket
<14–3>
(*3)
(*4)
R10
Rear Combination
Light LH
R11
Rear Combination
Light RH
Back–Up
Instrument Panel
Reinforcement RH
IM
Instrument Panel
Reinforcement LH
II
Lower Back
Panel Center
BQ

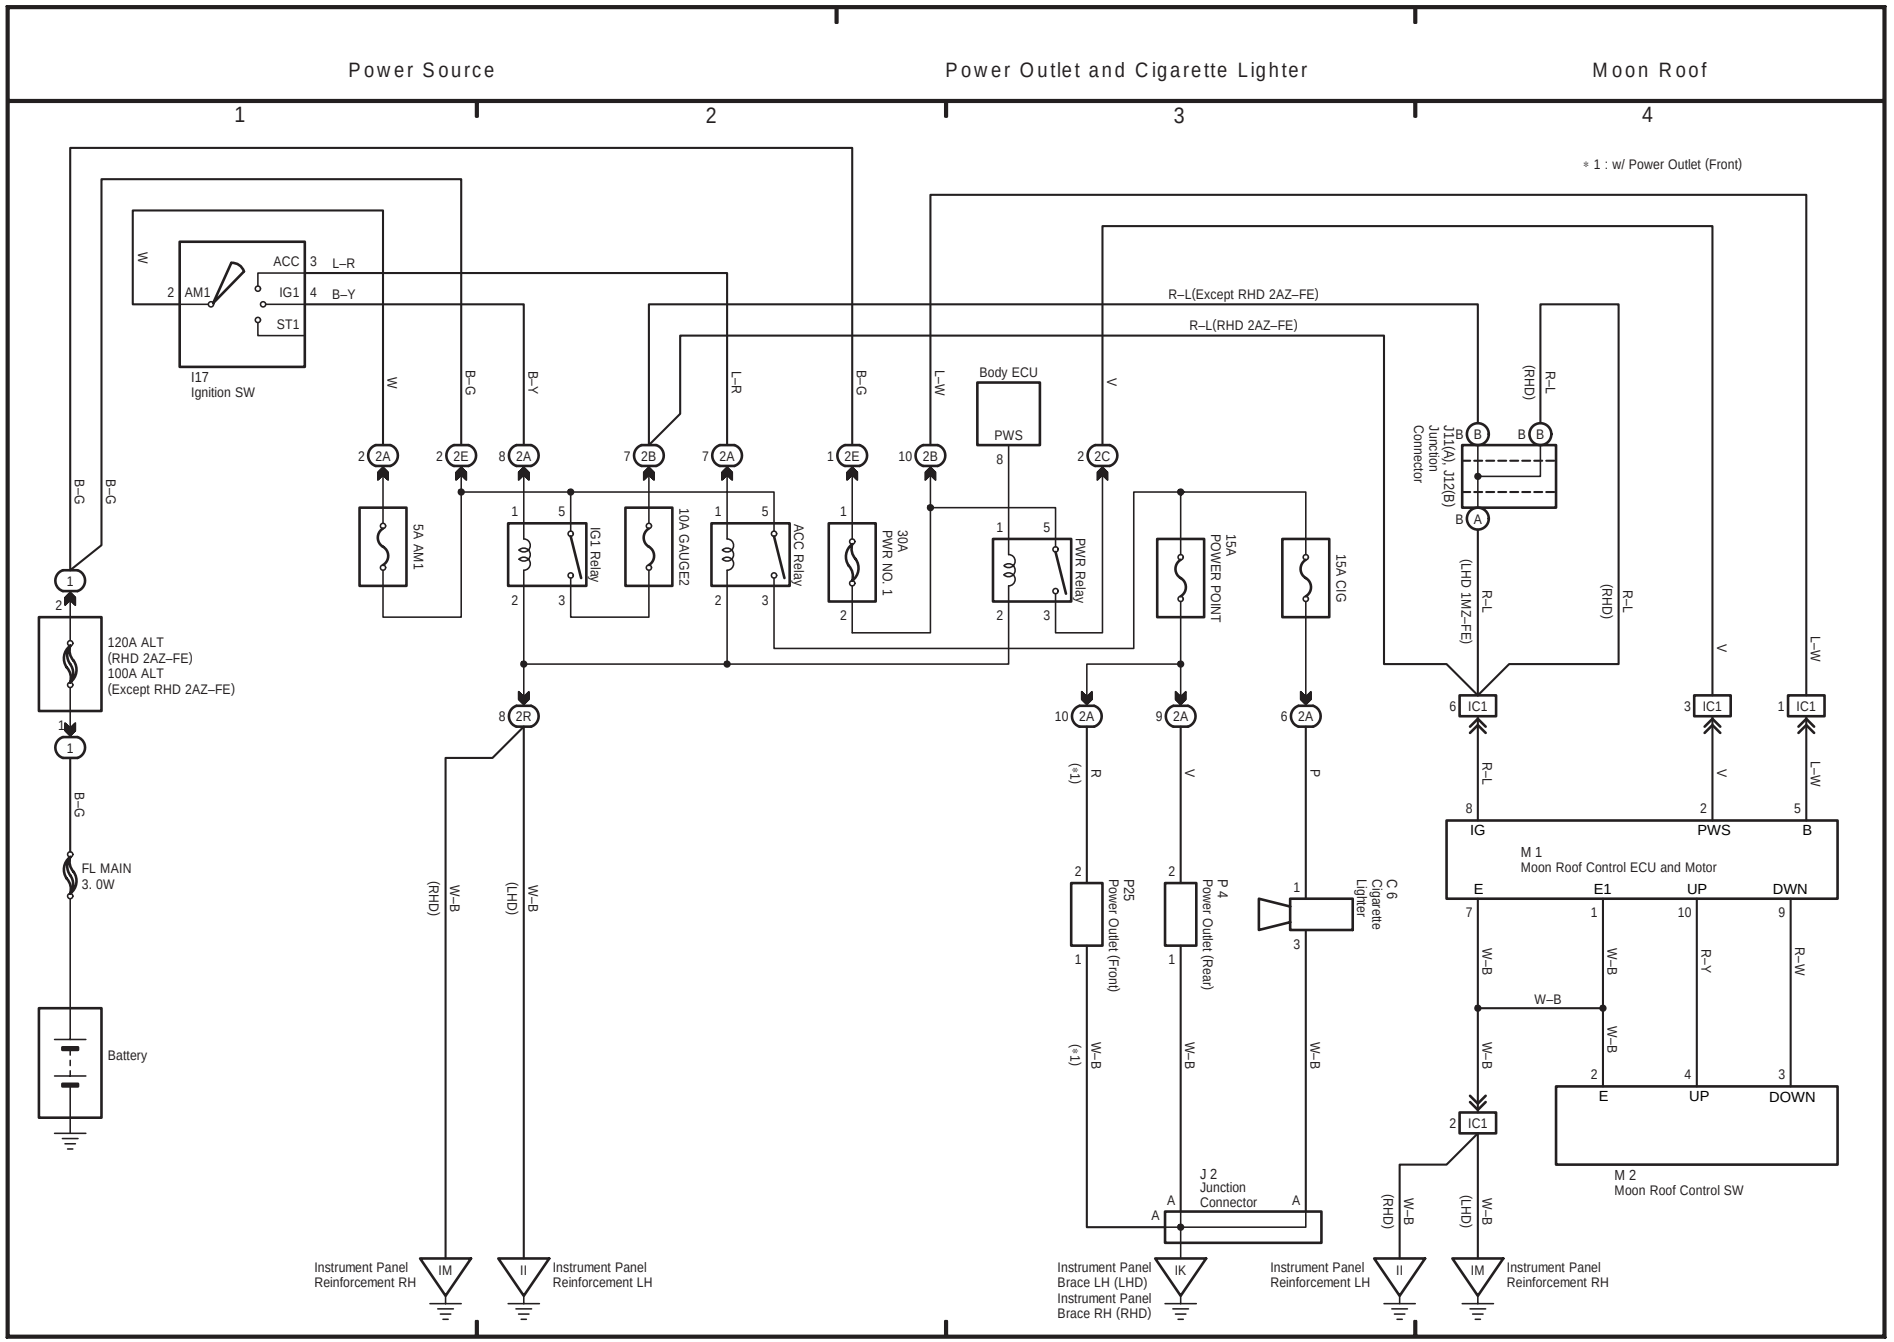

Power Source
Power Outlet and Cigarette Lighter
Moon Roof
1
2
3
4
* 1 : w/ Power Outlet (Front)
I17
Ignition SW
ACC
IG1
ST1
AM1
Body ECU
PWS
R–L(Except RHD 2AZ–FE)
R–L(RHD 2AZ–FE)
J11(A), J12(B)
Junction
Connector
5A AM1
IG1 Relay
10A GAUGE2
ACC Relay
30A
PWR NO. 1
PWR Relay
15A
POWER POINT
15A CIG
120A ALT
(RHD 2AZ–FE)
100A ALT
(Except RHD 2AZ–FE)
FL MAIN
3. 0W
Battery
P25
Power Outlet (Front)
P 4
Power Outlet (Rear)
C 6
Cigarette
Lighter
J 2
Junction
Connector
M 1
Moon Roof Control ECU and Motor
IG
PWS
B
E
E1
UP
DWN
M 2
Moon Roof Control SW
Instrument Panel
Reinforcement RH
Instrument Panel
Reinforcement LH
Instrument Panel
Brace LH (LHD)
Instrument Panel
Brace RH (RHD)

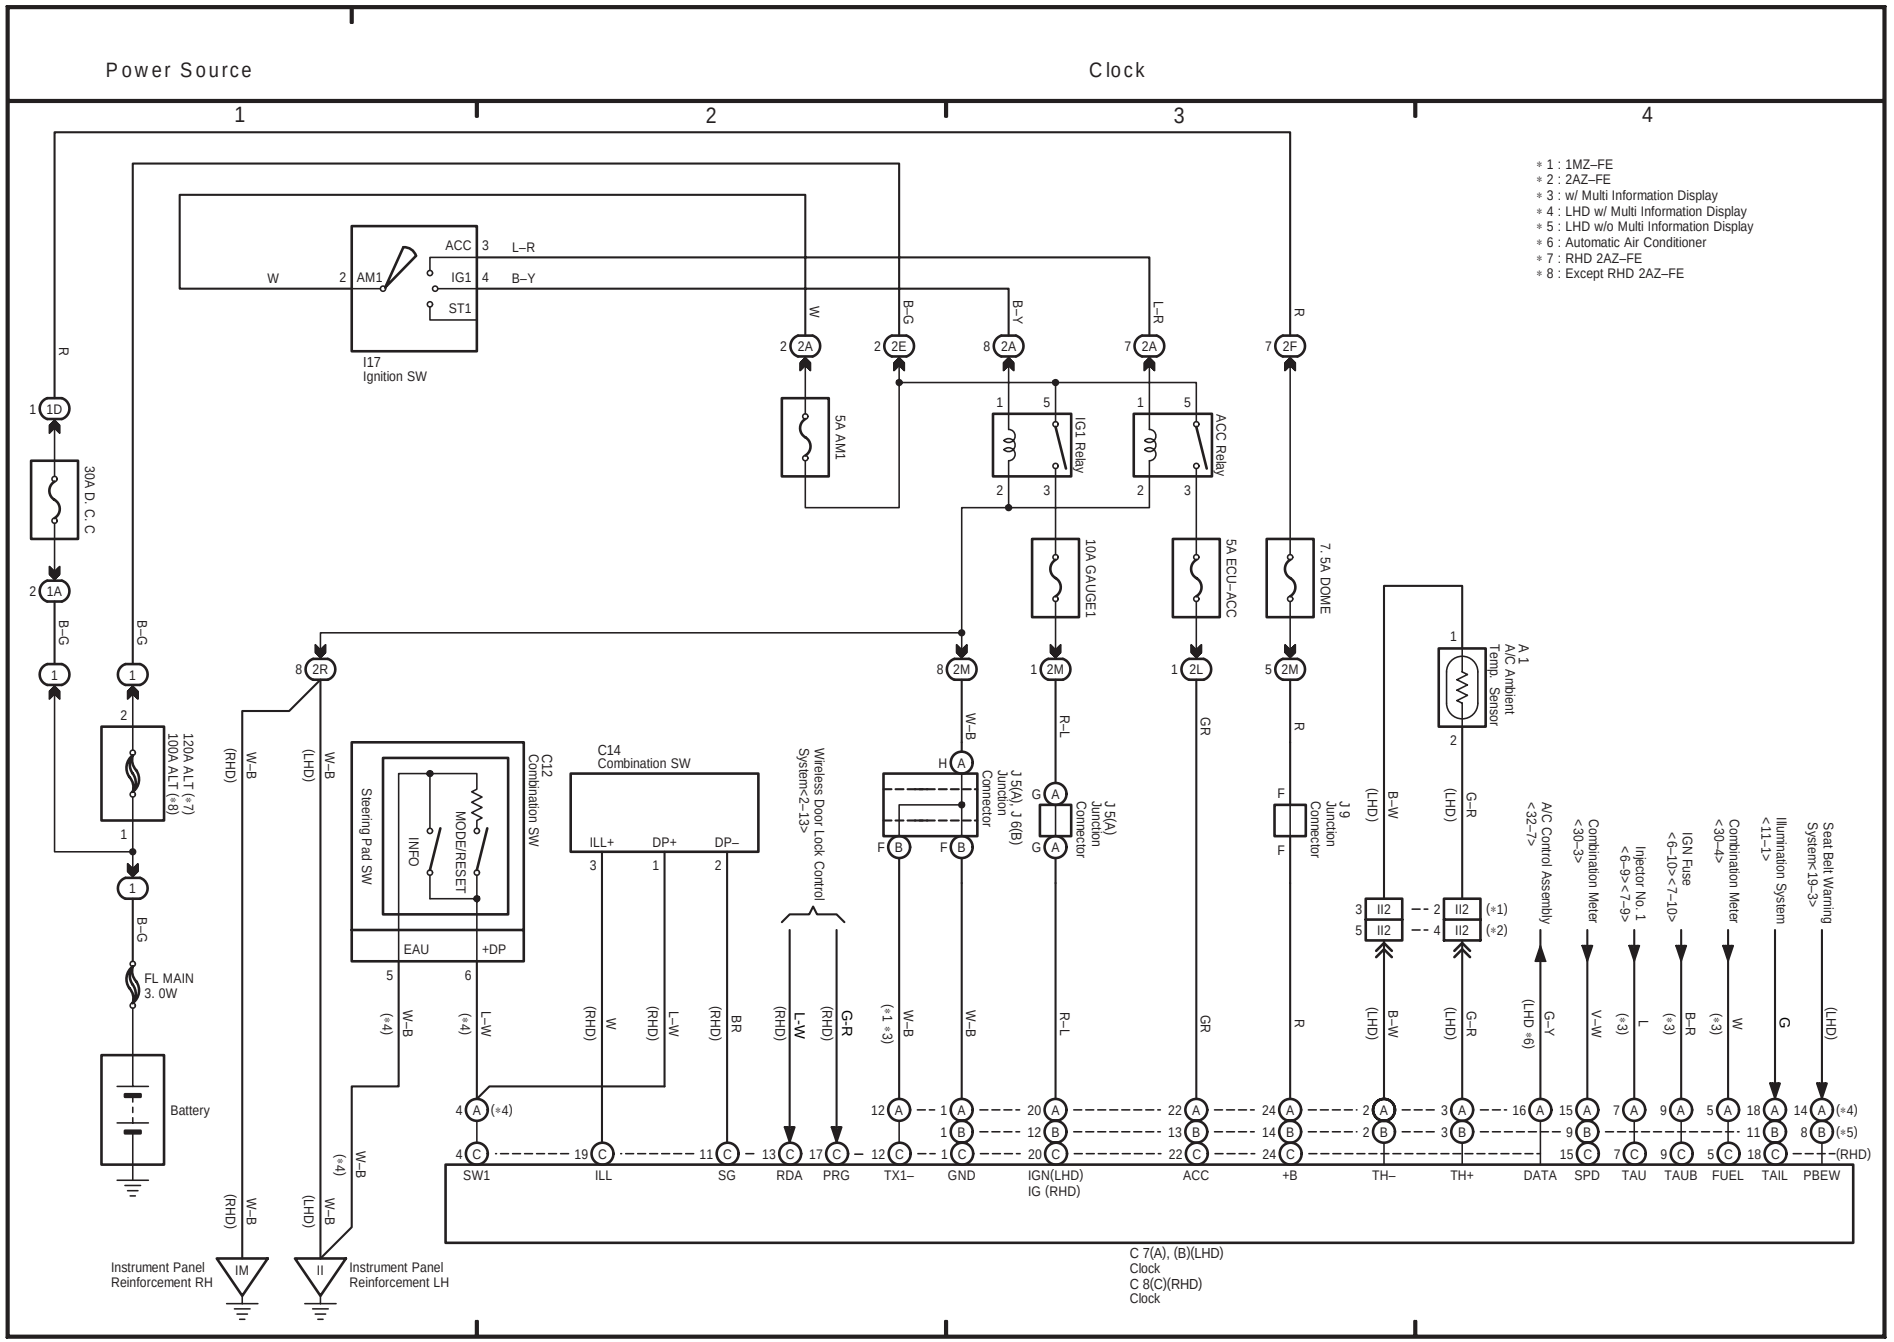
Power Source
Clock
1
2
3
4
* 1 : 1MZ–FE
* 2 : 2AZ–FE
* 3 : w/ Multi Information Display
* 4 : LHD w/ Multi Information Display
* 5 : LHD w/o Multi Information Display
* 6 : Automatic Air Conditioner
* 7 : RHD 2AZ–FE
* 8 : Except RHD 2AZ–FE
I17 Ignition SW
ACC
IG1
ST1
AM1
5A AM1
IG1 Relay
ACC Relay
30A D. C. C
10A GAUGE1
5A ECU–ACC
7. 5A DOME
120A ALT (*7)
100A ALT (*8)
FL MAIN 3. 0W
Battery
C12 Combination SW
Steering Pad SW
INFO
MODE/RESET
EAU
+DP
C14 Combination SW
ILL+
DP+
DP–
Wireless Door Lock Control System<2–13>
J 5(A), J 6(B) Junction Connector
J 5(A) Junction Connector
J 9 Junction Connector
A 1 A/C Ambient Temp. Sensor
A/C Control Assembly <32–7>
Combination Meter <30–3>
Injector No. 1 <6–9><7–9>
IGN Fuse <6–10><7–10>
Combination Meter <30–4>
Illumination System <11–1>
Seat Belt Warning System<19–3>
SW1
ILL
SG
RDA
PRG
TX1–
GND
IGN(LHD) IG (RHD)
ACC
+B
TH–
TH+
DATA
SPD
TAU
TAUB
FUEL
TAIL
PBEW
Instrument Panel Reinforcement RH
Instrument Panel Reinforcement LH
IM
II
C 7(A), (B)(LHD) Clock
C 8(C)(RHD) Clock

(Cont. next page)

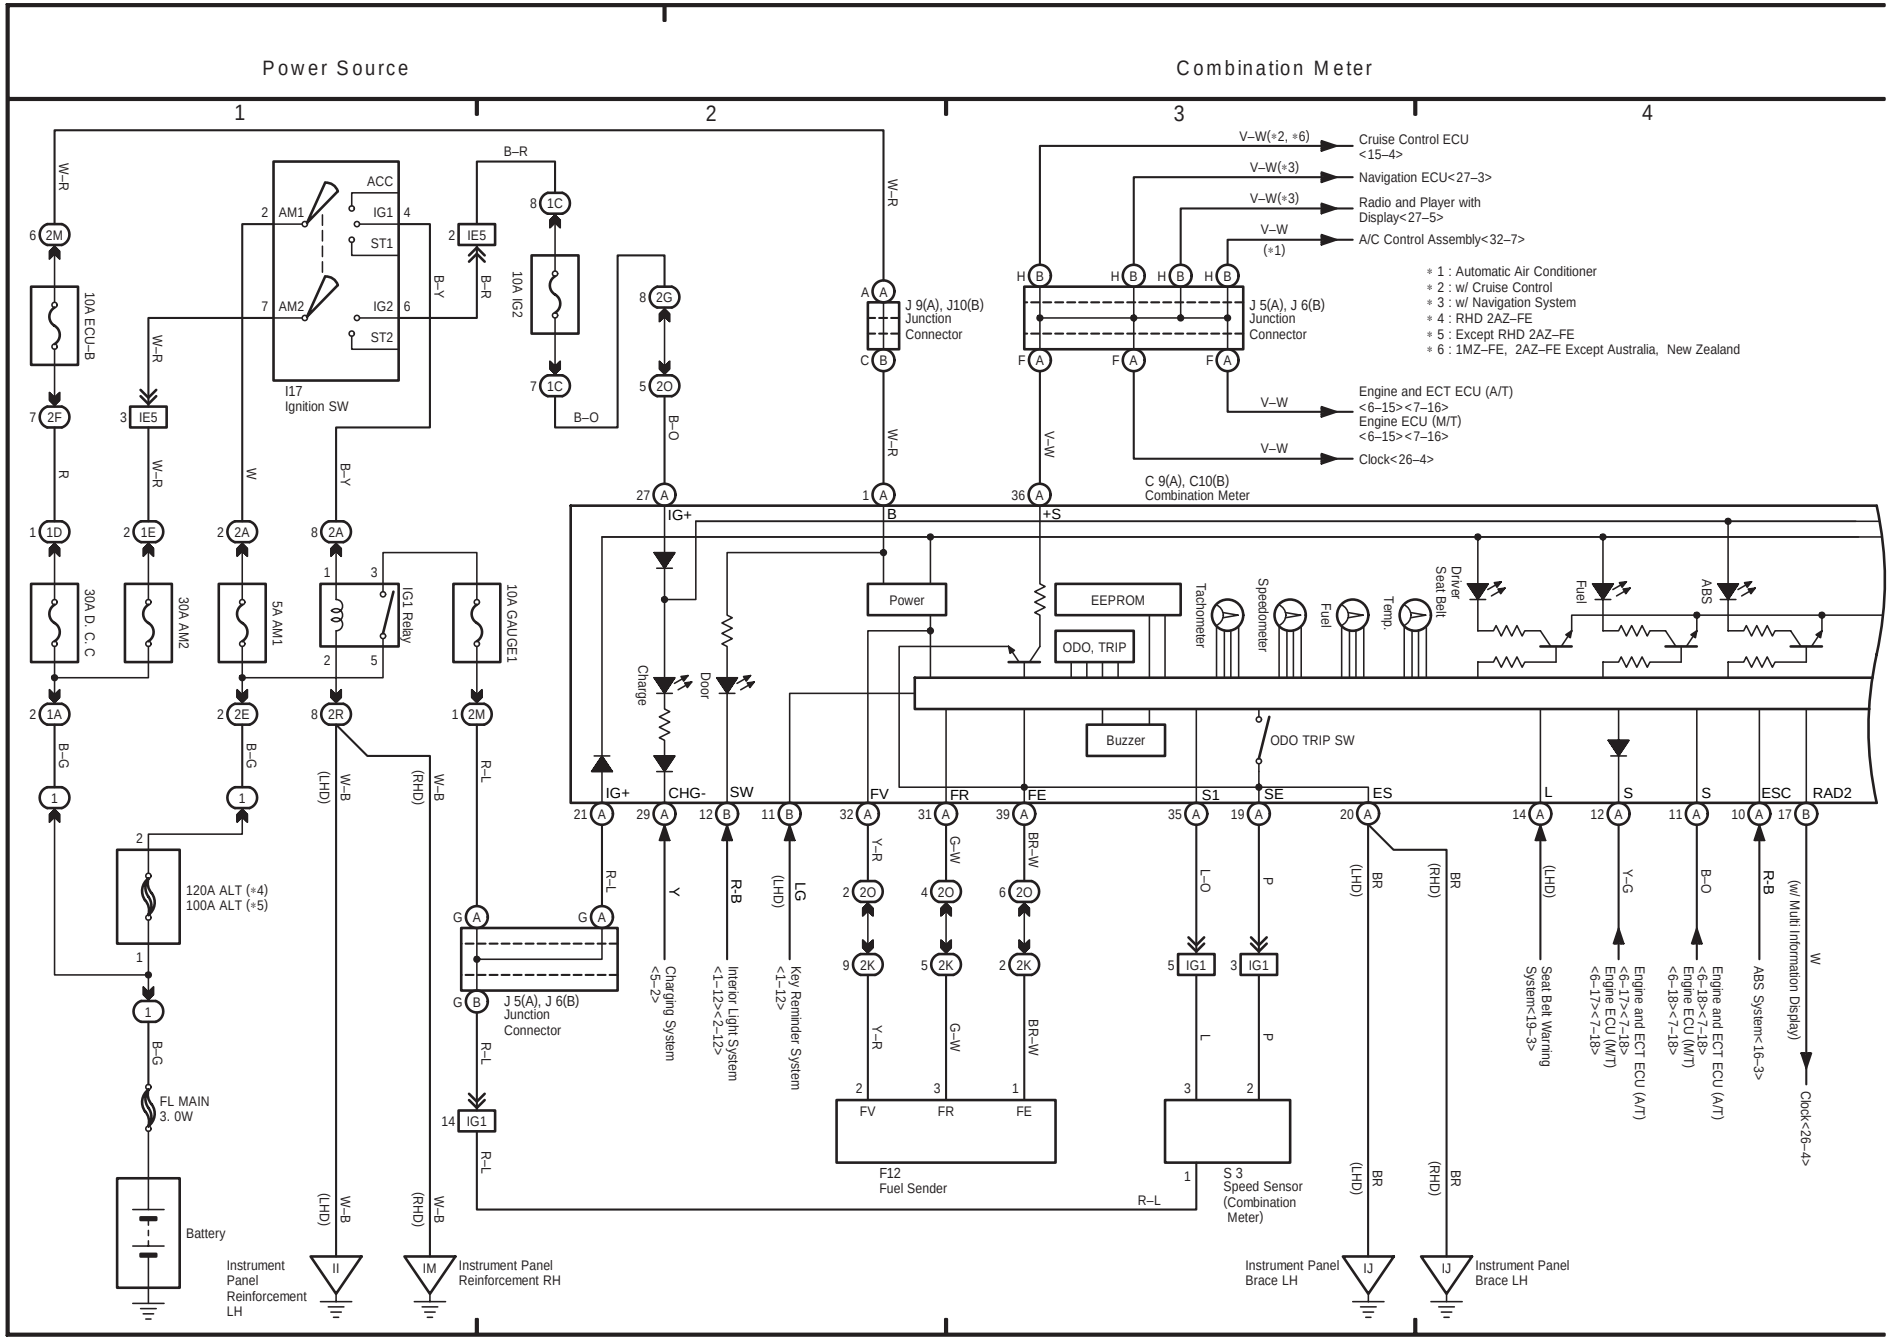


OVERALL ELECTRICAL WIRING DIAGRAM

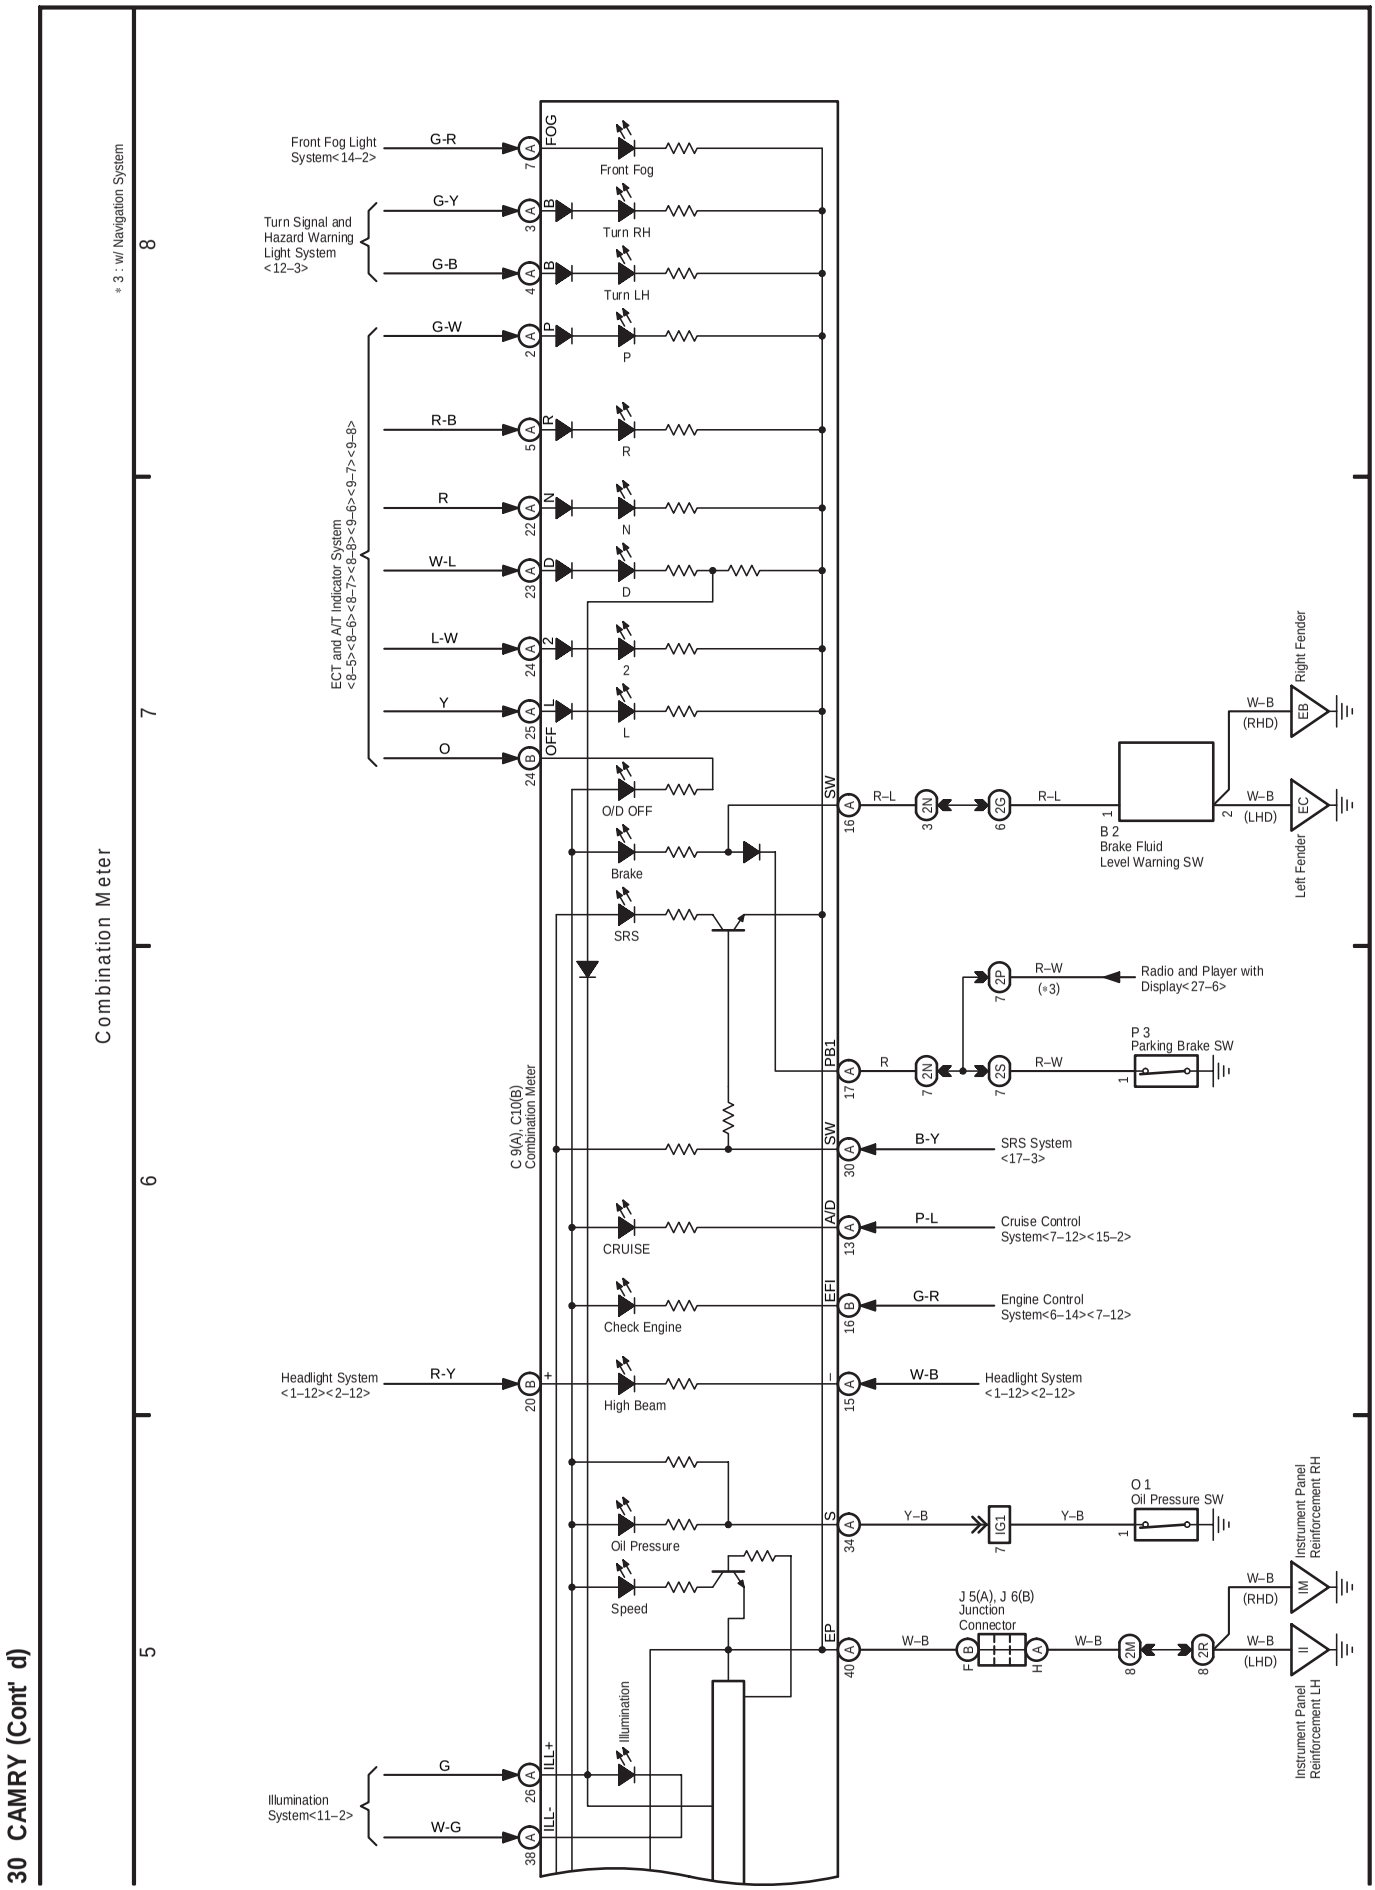


1 CAMRY

(Cont. next page)

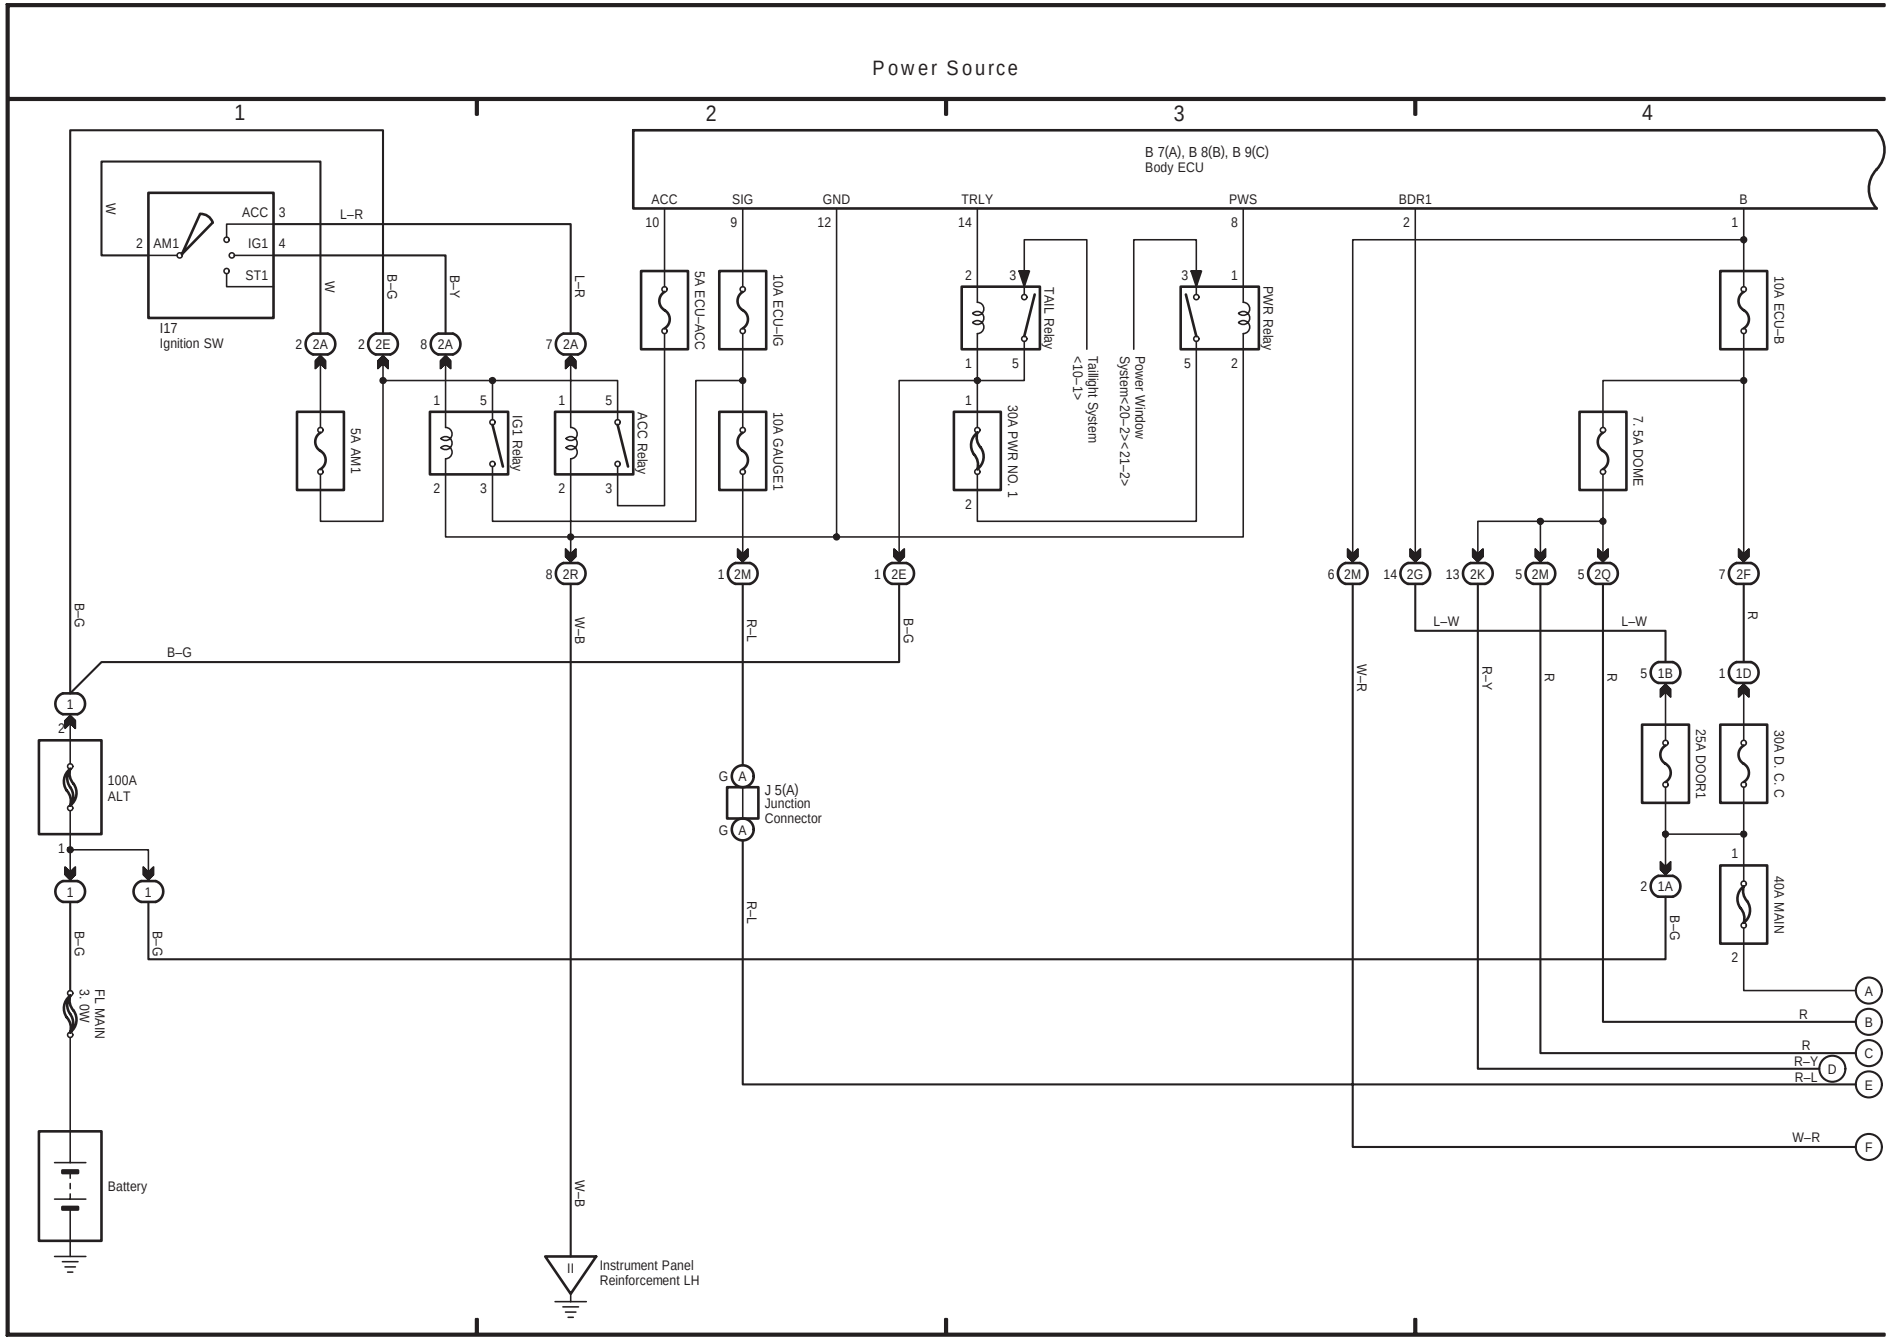

(Cont. next page)

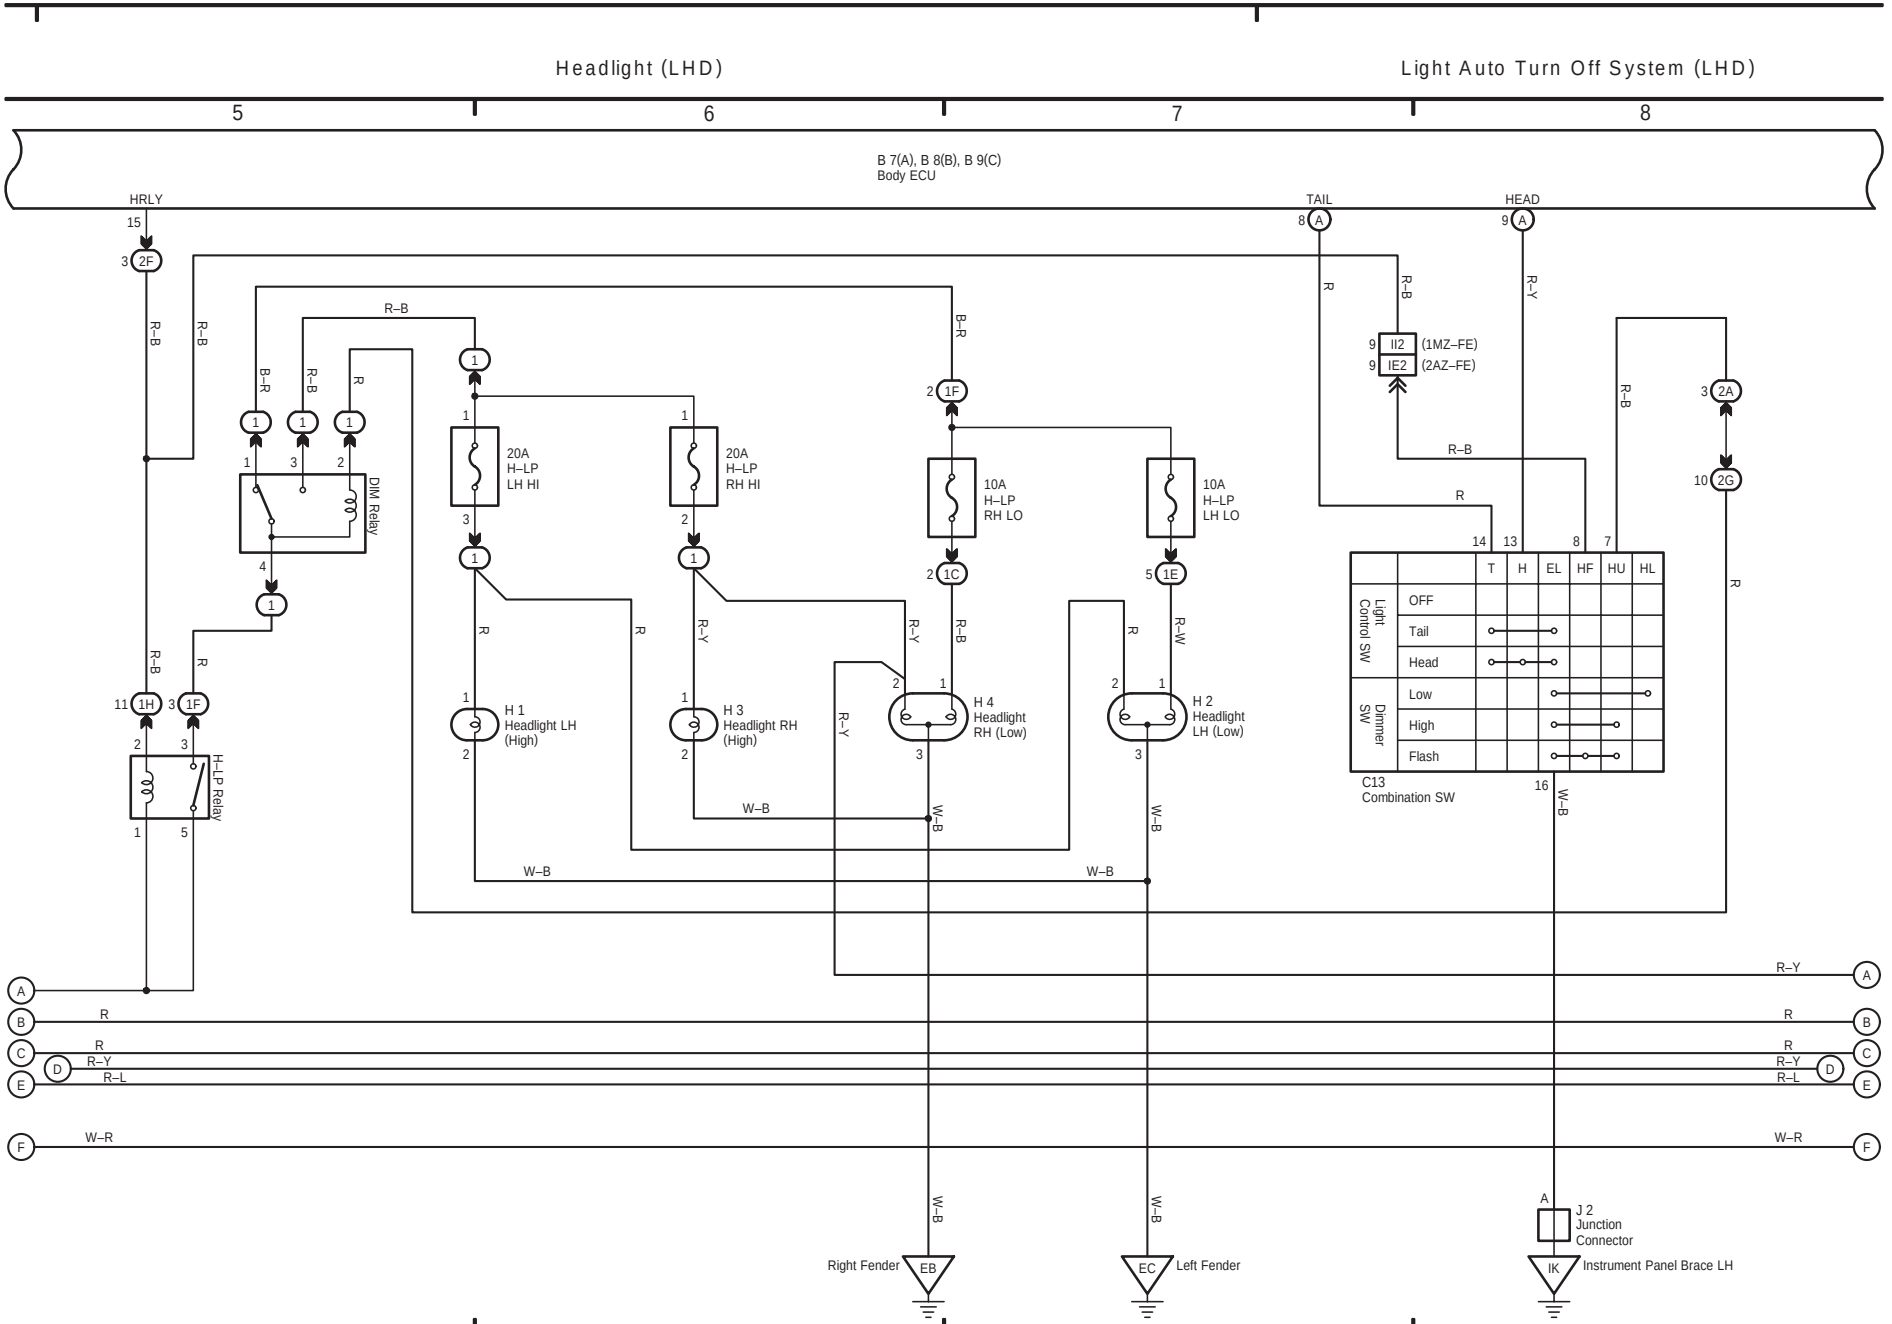


1 CAMRY (Cont' d)

(Cont. next page)


Interior Light (LHD)

Key Reminder (LHD)


9 10 11 12

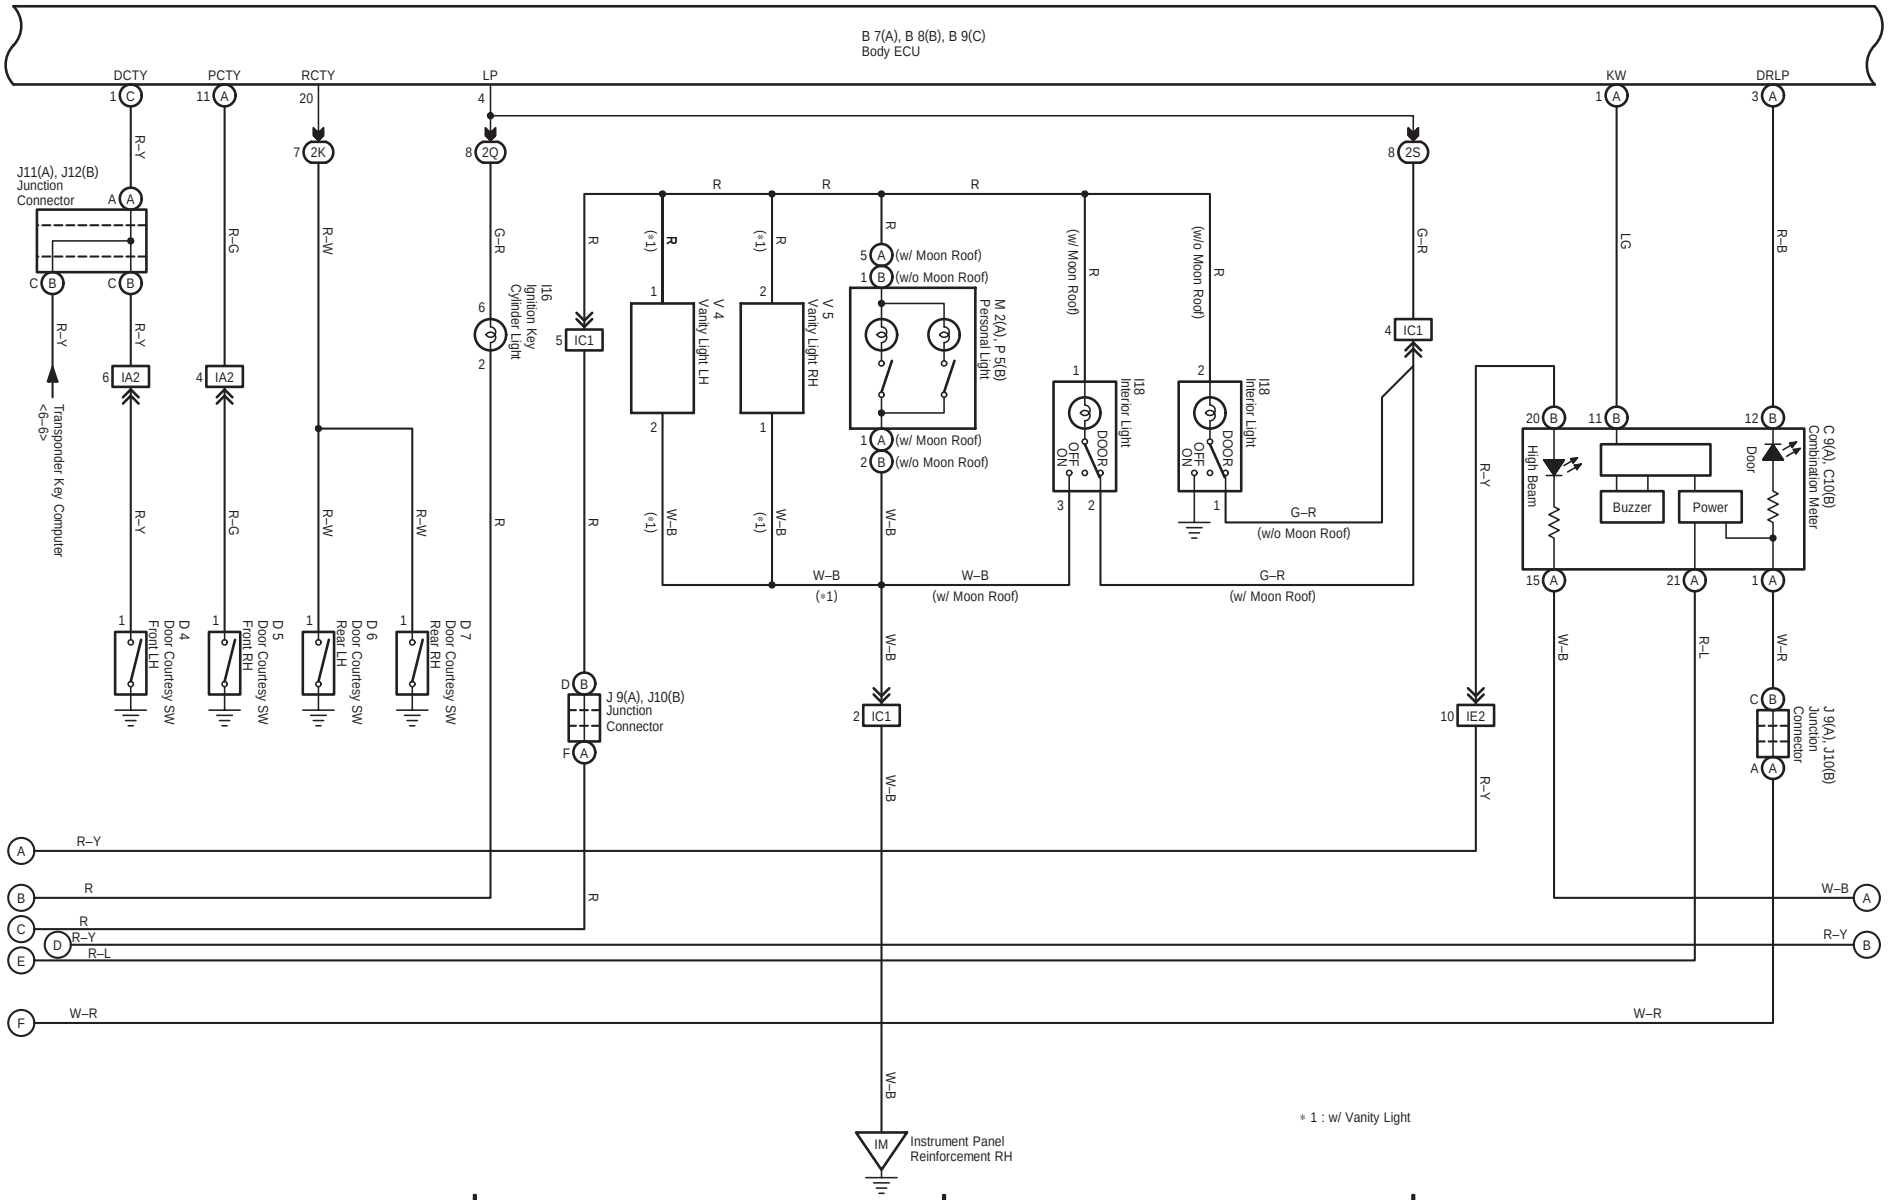



(Cont. next page)

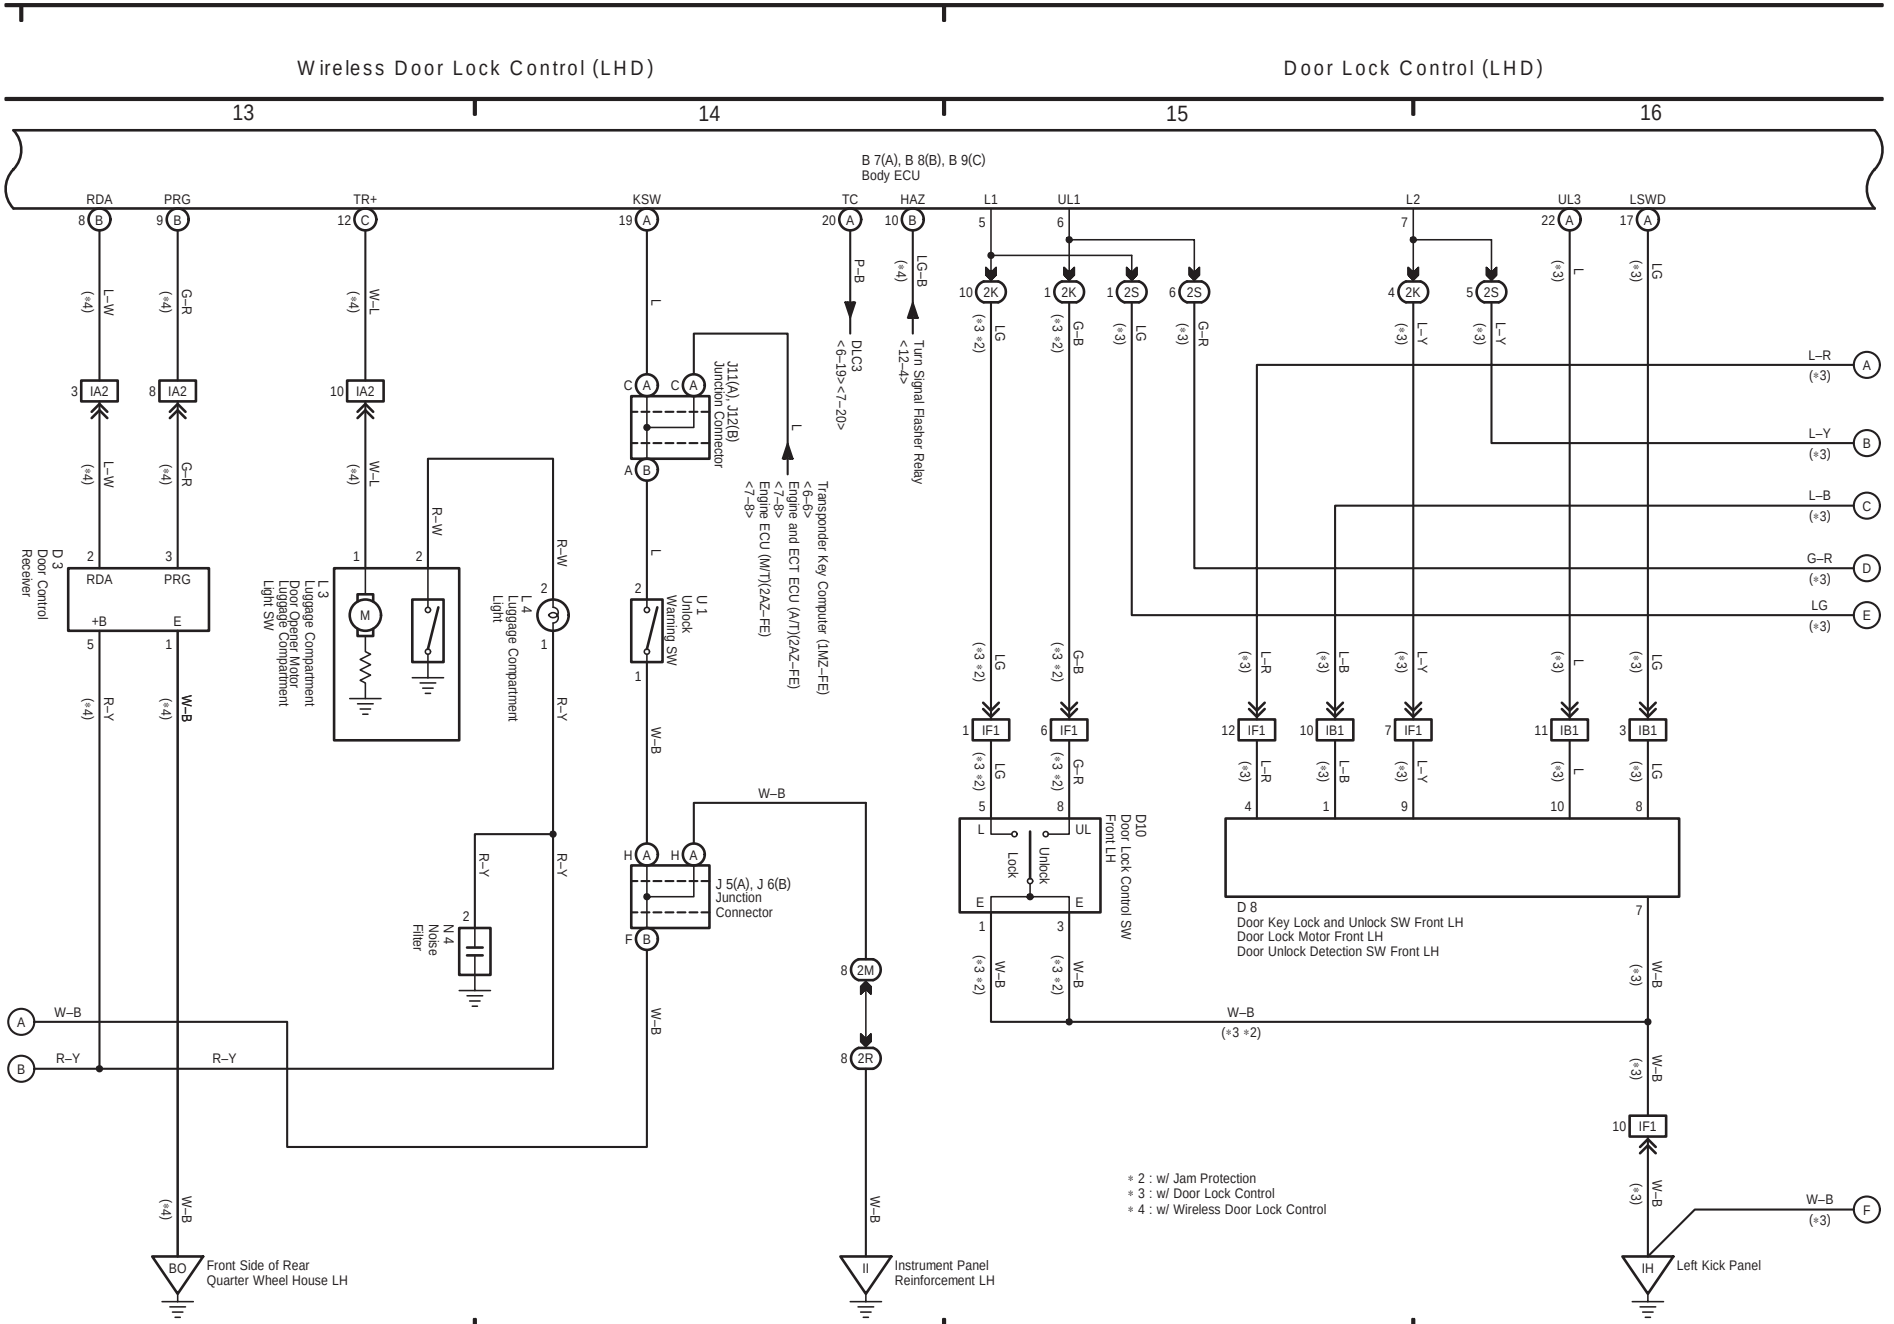



1 CAMRY (Cont' d)

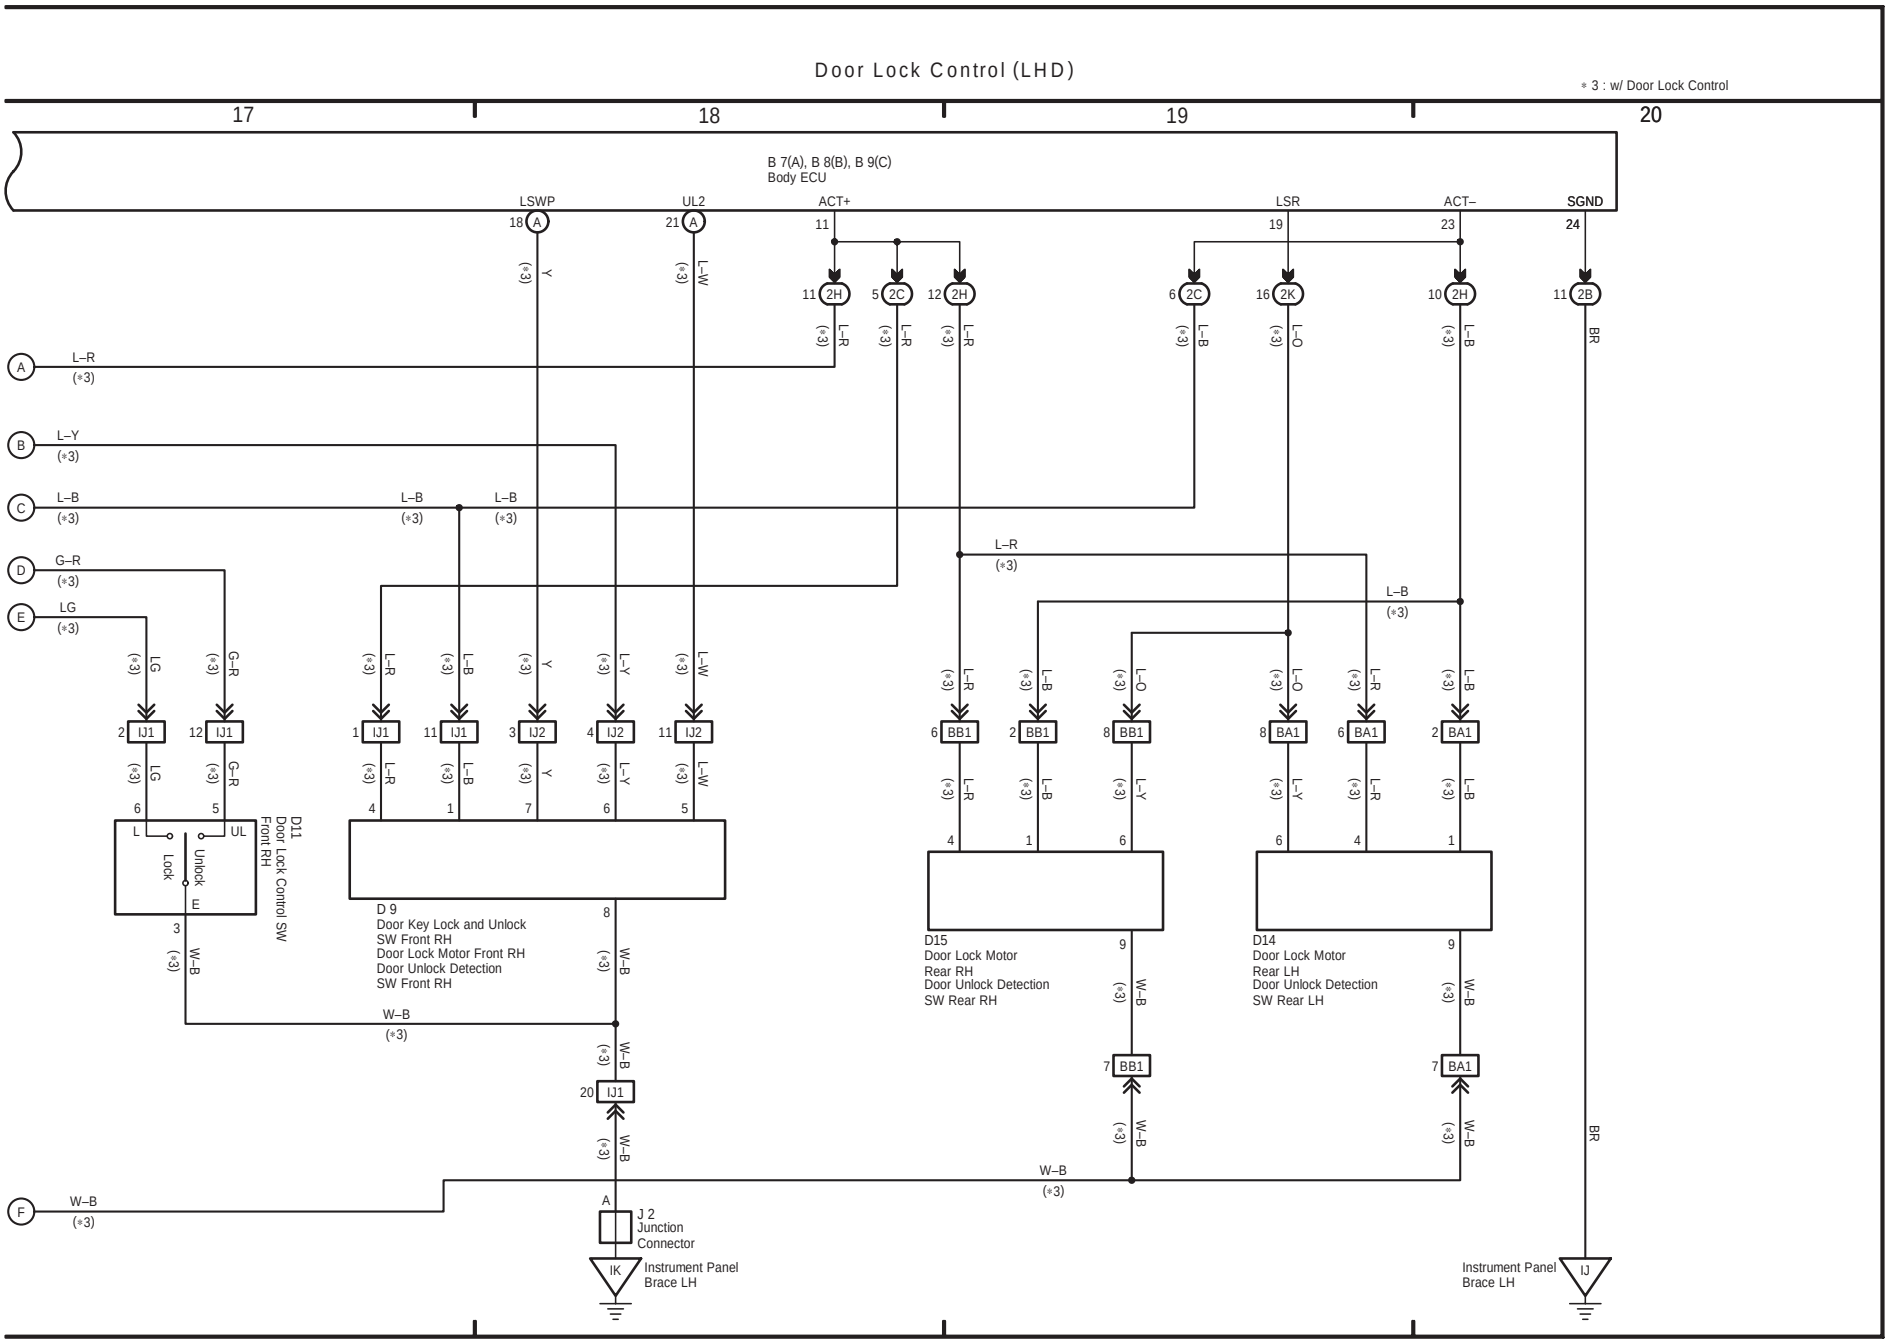


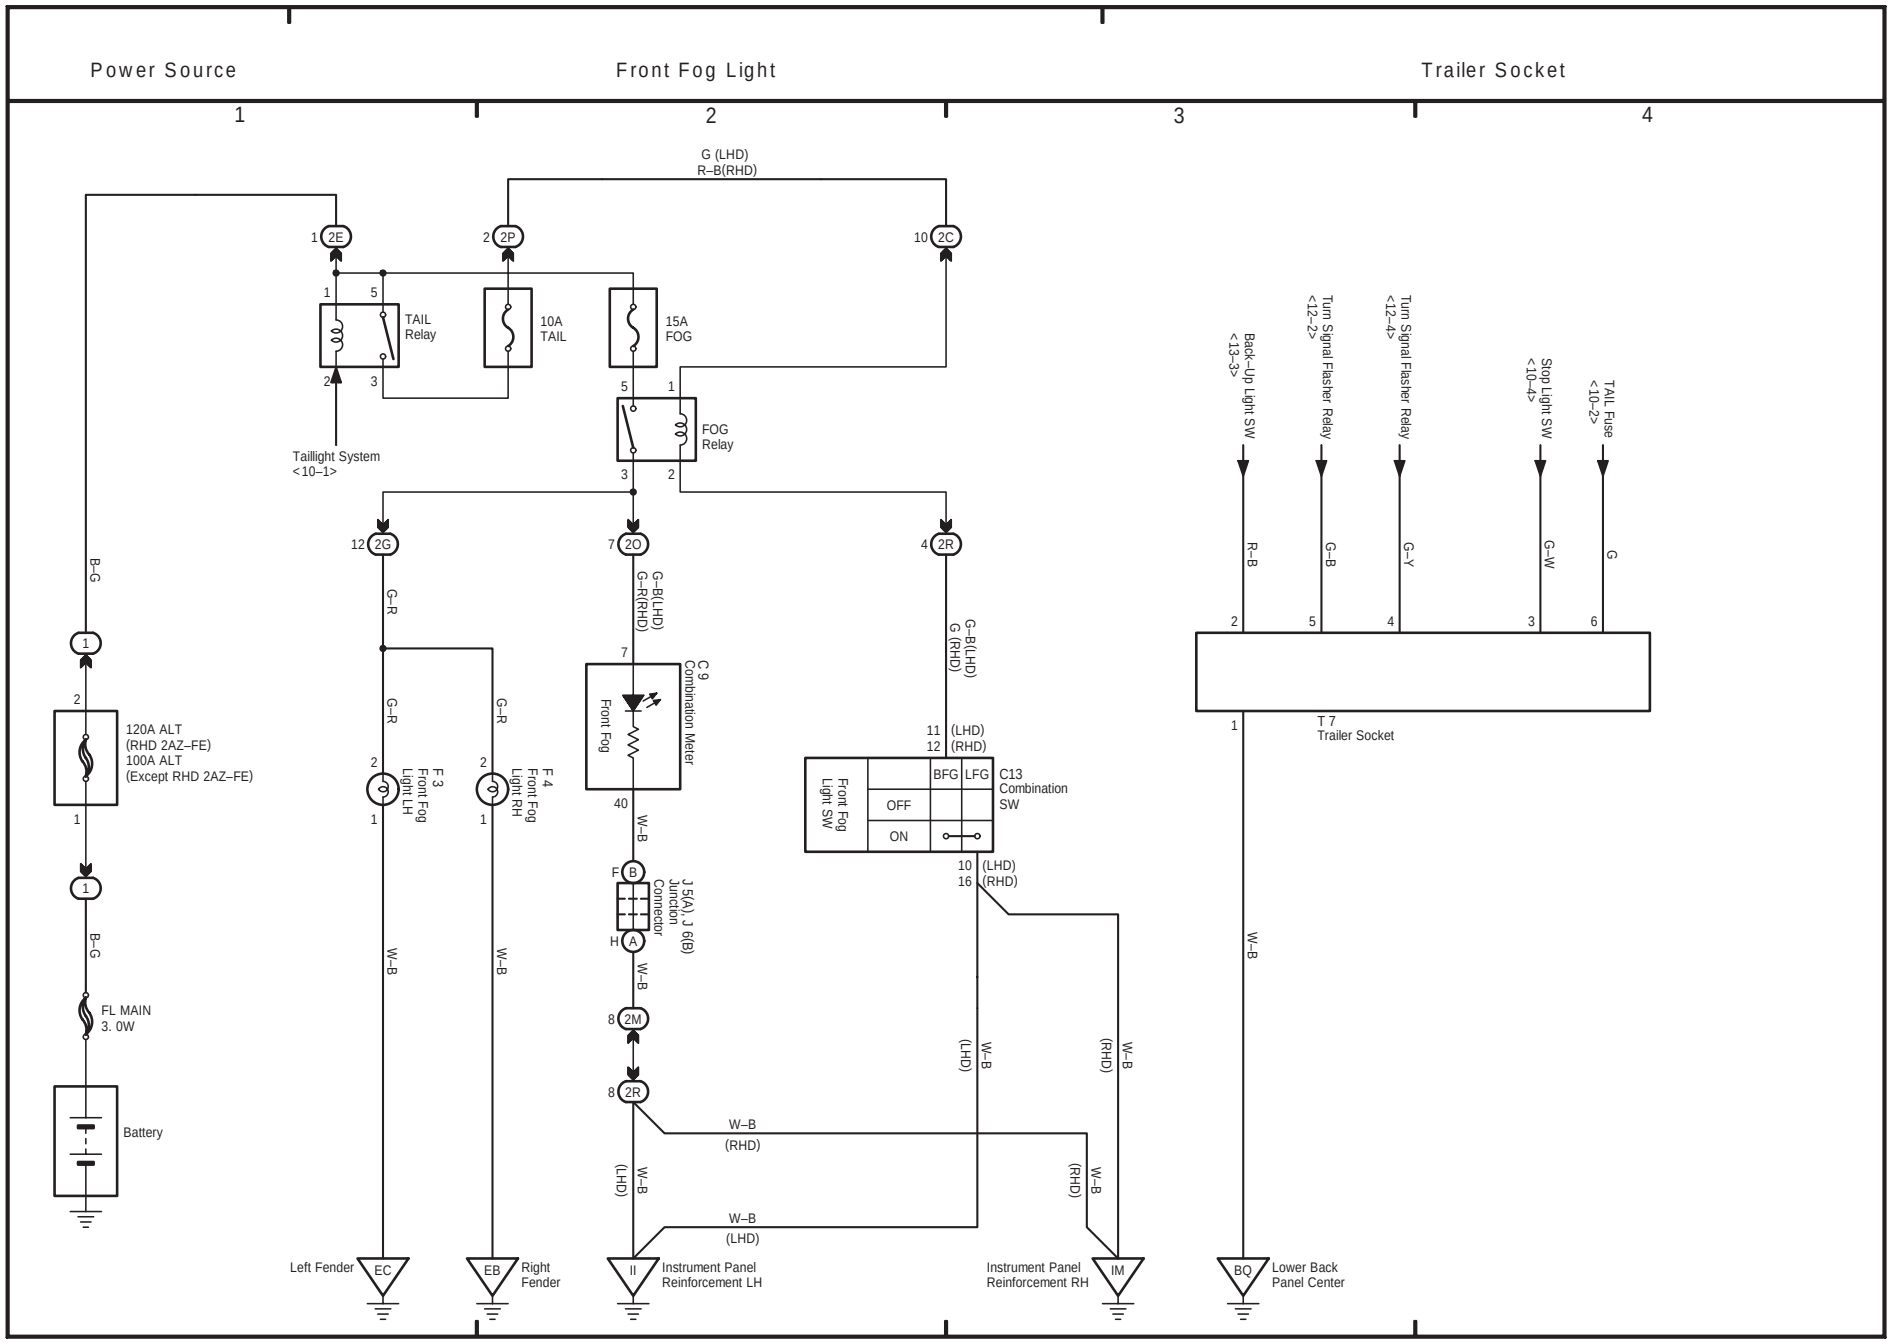

Power Source
Front Fog Light
Trailer Socket
1
2
3
4
G (LHD)
R–B(RHD)
2E
2P
2C
TAIL Relay
10A TAIL
15A FOG
FOG Relay
Taillight System <10–1>
2G
2O
2R
B–G
G–R
G–B(LHD)
G–R(RHD)
G–B(LHD)
G (RHD)
120A ALT
(RHD 2AZ–FE)
100A ALT
(Except RHD 2AZ–FE)
FL MAIN
3. 0W
Battery
F 3
Front Fog Light LH
F 4
Front Fog Light RH
C 9
Combination Meter
Front Fog
W–B
J 5(A), J 6(B)
Junction Connector
2M
2R
(LHD)
(RHD)
Front Fog Light SW
BFG
LFG
C13
Combination SW
OFF
ON
Left Fender
EC
EB
Right Fender
II
Instrument Panel Reinforcement LH
Instrument Panel Reinforcement RH
IM
BQ
Lower Back Panel Center
Back–Up Light SW <13–3>
Turn Signal Flasher Relay <12–2>
Turn Signal Flasher Relay <12–4>
Stop Light SW <10–4>
TAIL Fuse <10–2>
R–B
G–B
G–Y
G–W
G
T 7
Trailer Socket

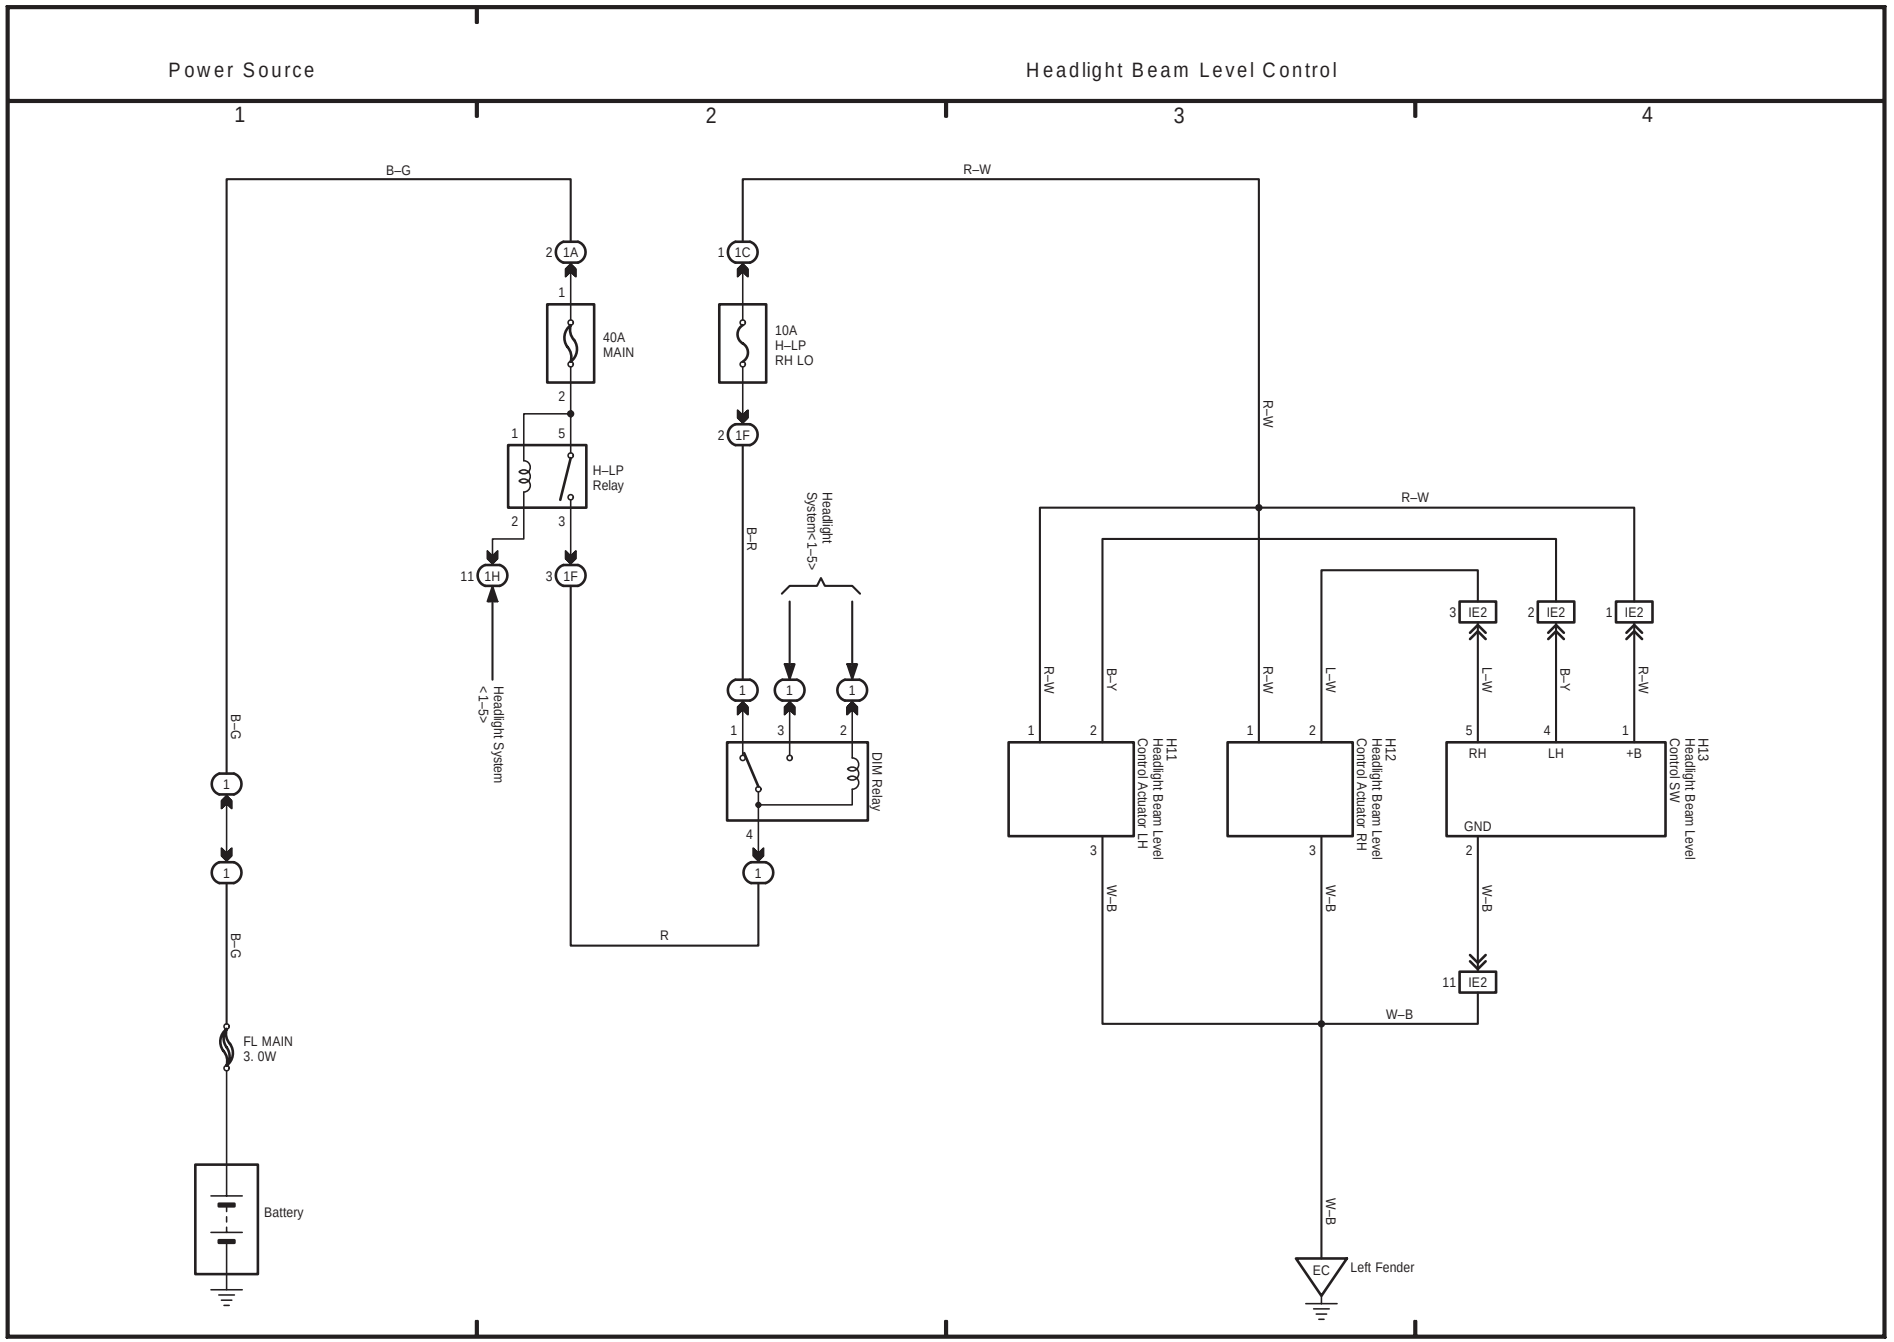

Power Source
Headlight Beam Level Control
1
2
3
4
B–G
R–W
2 1A
1 1C
40A MAIN
10A H–LP RH LO
2 1F
H–LP Relay
1 5
2 3
11 1H
3 1F
Headlight System <1–5>
B–R
Headlight System<1–5>
DIM Relay
R
B–G
FL MAIN 3. 0W
Battery
R–W
B–Y
L–W
H11 Headlight Beam Level Control Actuator LH
H12 Headlight Beam Level Control Actuator RH
H13 Headlight Beam Level Control SW
3 IE2
2 IE2
1 IE2
RH
LH
+B
GND
11 IE2
W–B
EC
Left Fender

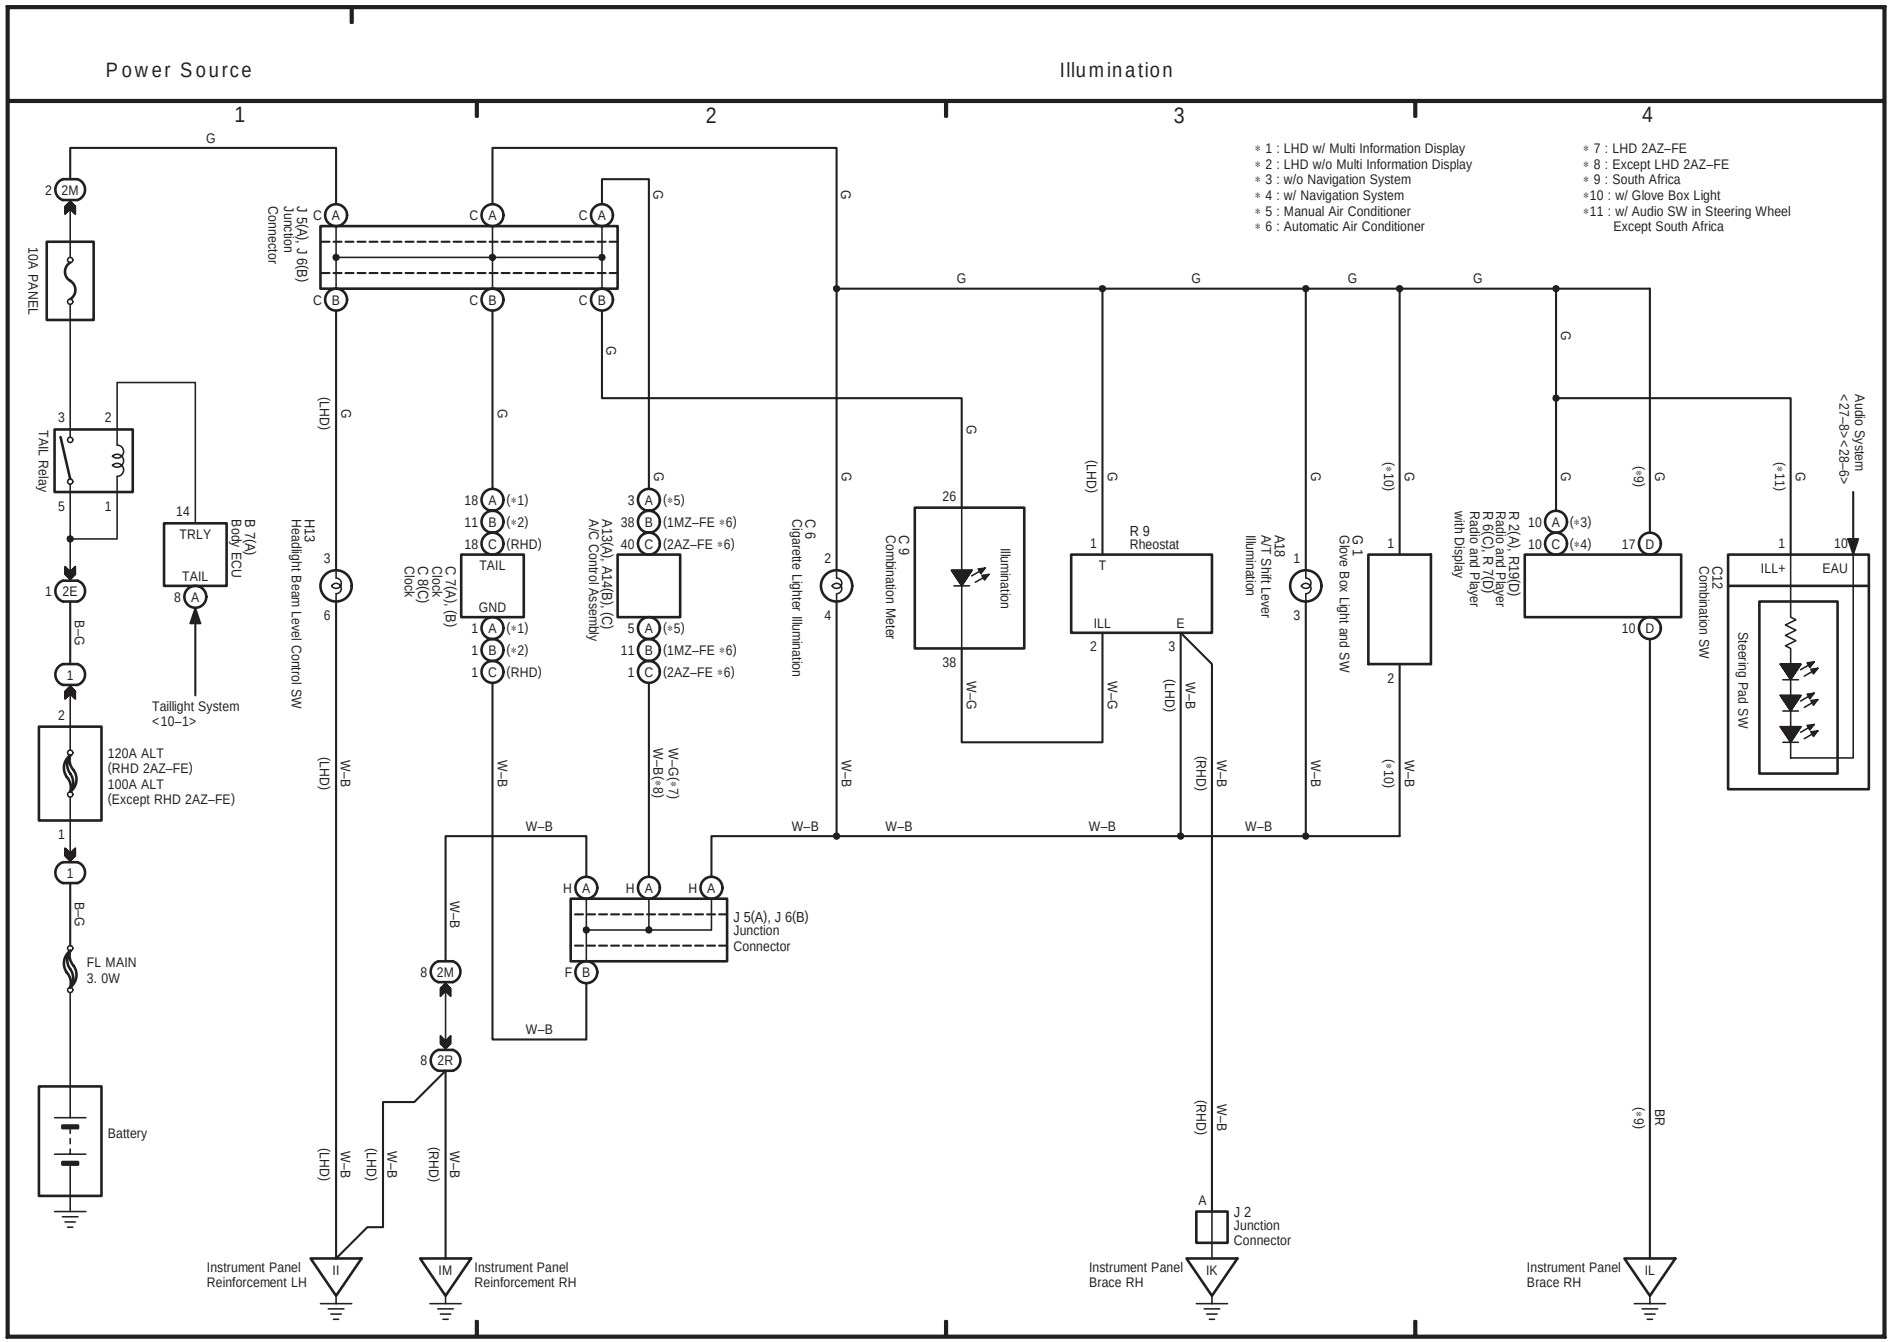

Power Source
Illumination
1
2
3
4
* 1 : LHD w/ Multi Information Display
* 2 : LHD w/o Multi Information Display
* 3 : w/o Navigation System
* 4 : w/ Navigation System
* 5 : Manual Air Conditioner
* 6 : Automatic Air Conditioner
* 7 : LHD 2AZ–FE
* 8 : Except LHD 2AZ–FE
* 9 : South Africa
*10 : w/ Glove Box Light
*11 : w/ Audio SW in Steering Wheel Except South Africa
10A PANEL
TAIL Relay
B 7(A) Body ECU
Taillight System <10–1>
120A ALT (RHD 2AZ–FE) 100A ALT (Except RHD 2AZ–FE)
FL MAIN 3. 0W
Battery
J 5(A), J 6(B) Junction Connector
H13 Headlight Beam Level Control SW
C 7(A), (B) Clock
C 8(C) Clock
A13(A), A14(B), (C) A/C Control Assembly
C 6 Cigarette Lighter Illumination
C 9 Combination Meter
Illumination
R 9 Rheostat
A18 A/T Shift Lever Illumination
G 1 Glove Box Light and SW
R 2(A), R19(D) Radio and Player
R 6(C), R 7(D) Radio and Player with Display
C12 Combination SW
Steering Pad SW
Audio System <27–8><28–6>
J 2 Junction Connector
Instrument Panel Reinforcement LH
Instrument Panel Reinforcement RH
Instrument Panel Brace RH
Instrument Panel Brace RH

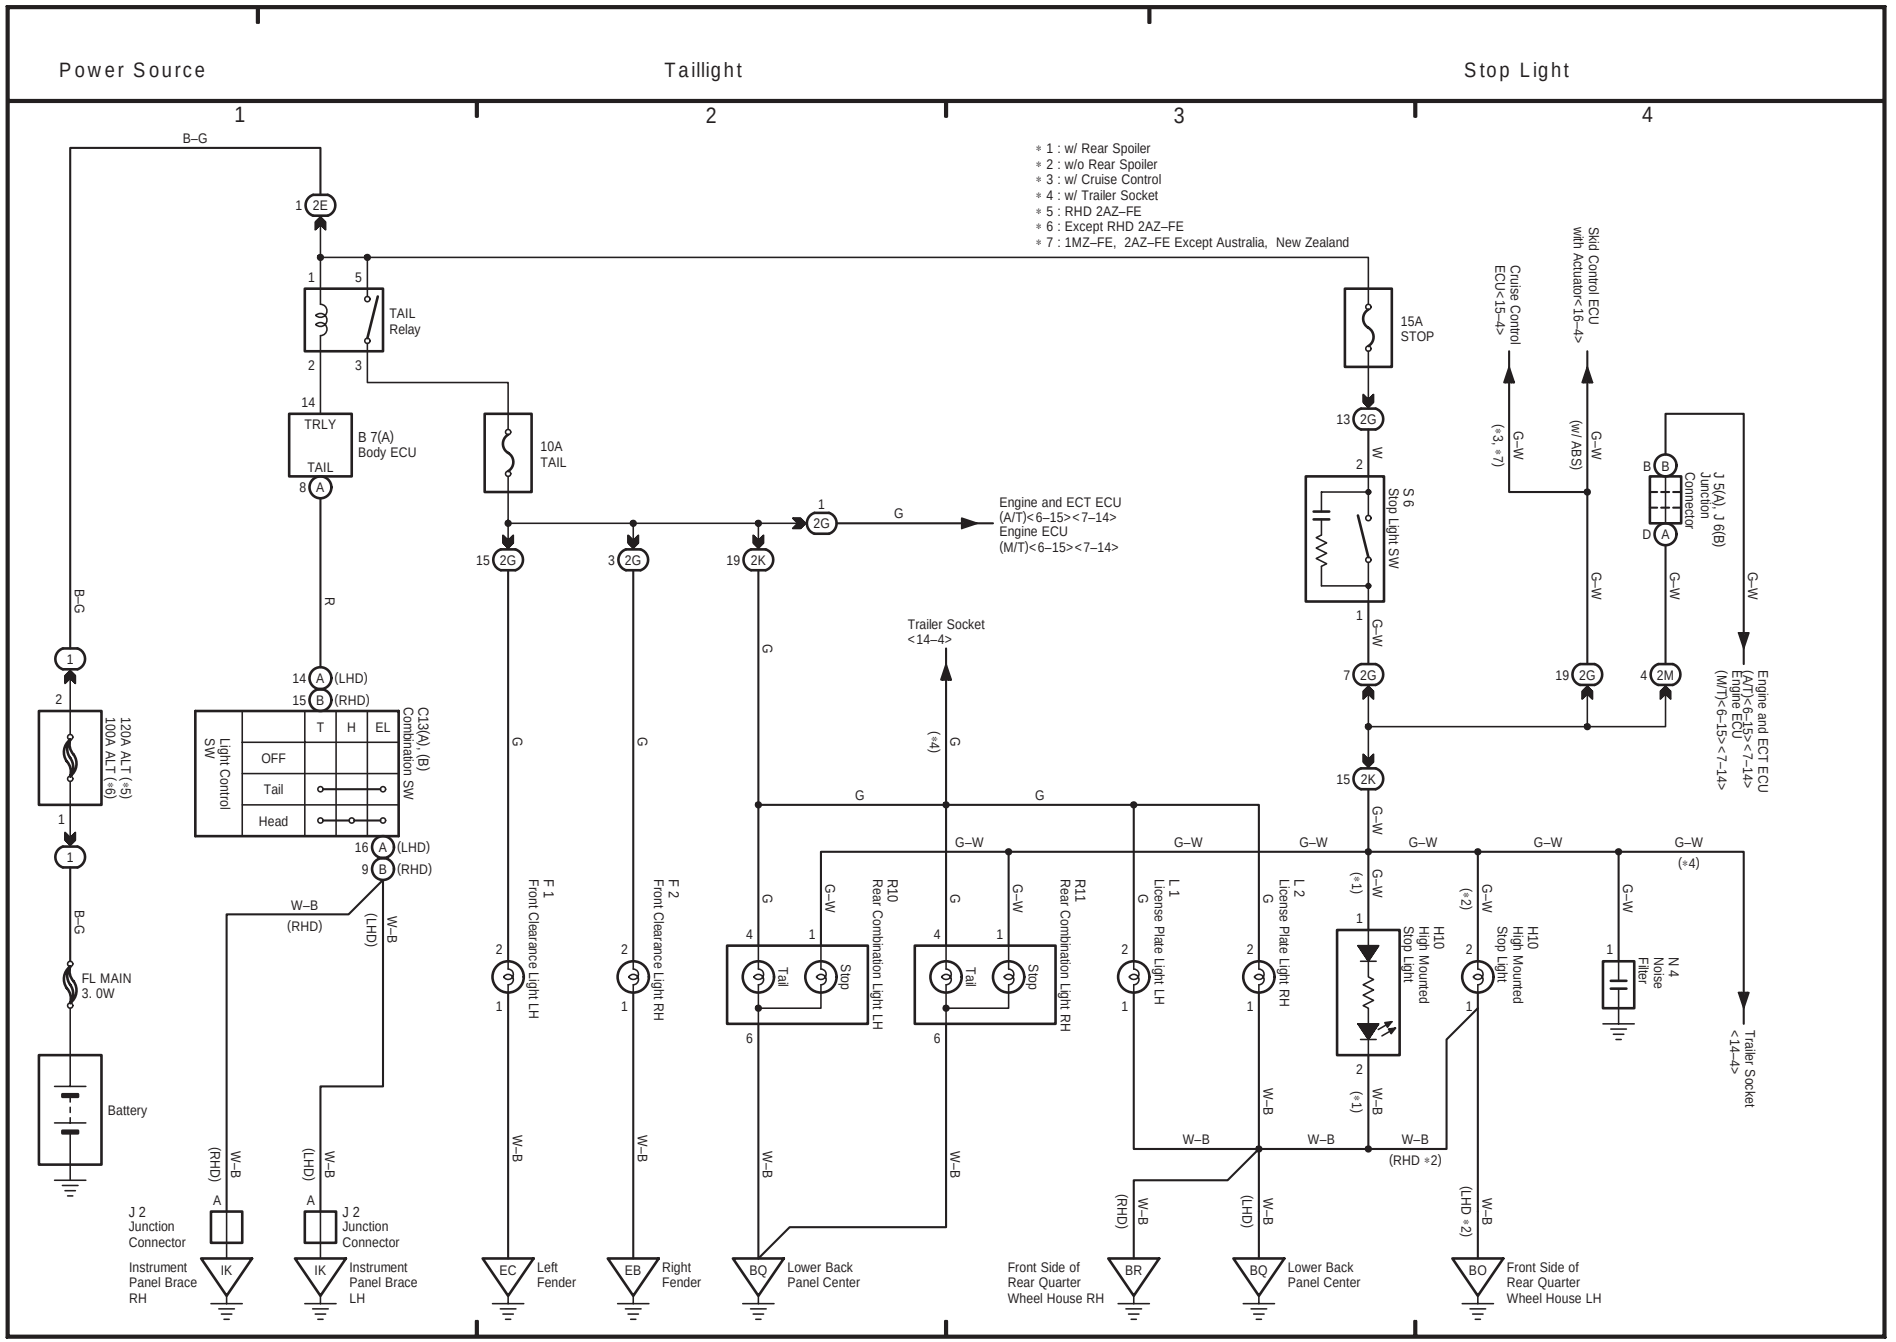
Power Source
Taillight
Stop Light
1
2
3
4
* 1 : w/ Rear Spoiler
* 2 : w/o Rear Spoiler
* 3 : w/ Cruise Control
* 4 : w/ Trailer Socket
* 5 : RHD 2AZ–FE
* 6 : Except RHD 2AZ–FE
* 7 : 1MZ–FE, 2AZ–FE Except Australia, New Zealand
B–G
1 2E
TAIL Relay
TRLY
TAIL
B 7(A) Body ECU
8 A
R
10A TAIL
15A STOP
13 2G
W
2
S 6 Stop Light SW
1
G–W
7 2G
15 2K
Cruise Control ECU<15–4>
Skid Control ECU with Actuator<16–4>
(*3, *7)
(w/ ABS)
B B
D A
J 5(A), J 6(B) Junction Connector
19 2G
4 2M
Engine and ECT ECU (A/T)<6–15><7–14> Engine ECU (M/T)<6–15><7–14>
15 2G
3 2G
19 2K
1 2G
G
Engine and ECT ECU (A/T)<6–15><7–14> Engine ECU (M/T)<6–15><7–14>
Trailer Socket <14–4>
(*4)
14 A (LHD)
15 B (RHD)
C13(A), (B) Combination SW
Light Control SW
T H EL
OFF
Tail
Head
16 A (LHD)
9 B (RHD)
120A ALT (*5) 100A ALT (*6)
FL MAIN 3. 0W
Battery
W–B
(RHD)
(LHD)
J 2 Junction Connector
Instrument Panel Brace RH
Instrument Panel Brace LH
IK
F 1 Front Clearance Light LH
F 2 Front Clearance Light RH
Left Fender
Right Fender
EC
EB
R10 Rear Combination Light LH
R11 Rear Combination Light RH
Tail
Stop
BQ
Lower Back Panel Center
L 1 License Plate Light LH
L 2 License Plate Light RH
Front Side of Rear Quarter Wheel House RH
Lower Back Panel Center
BR
H10 High Mounted Stop Light
(*1)
(*2)
(RHD *2)
(LHD *2)
Front Side of Rear Quarter Wheel House LH
BO
N 4 Noise Filter
Trailer Socket <14–4>

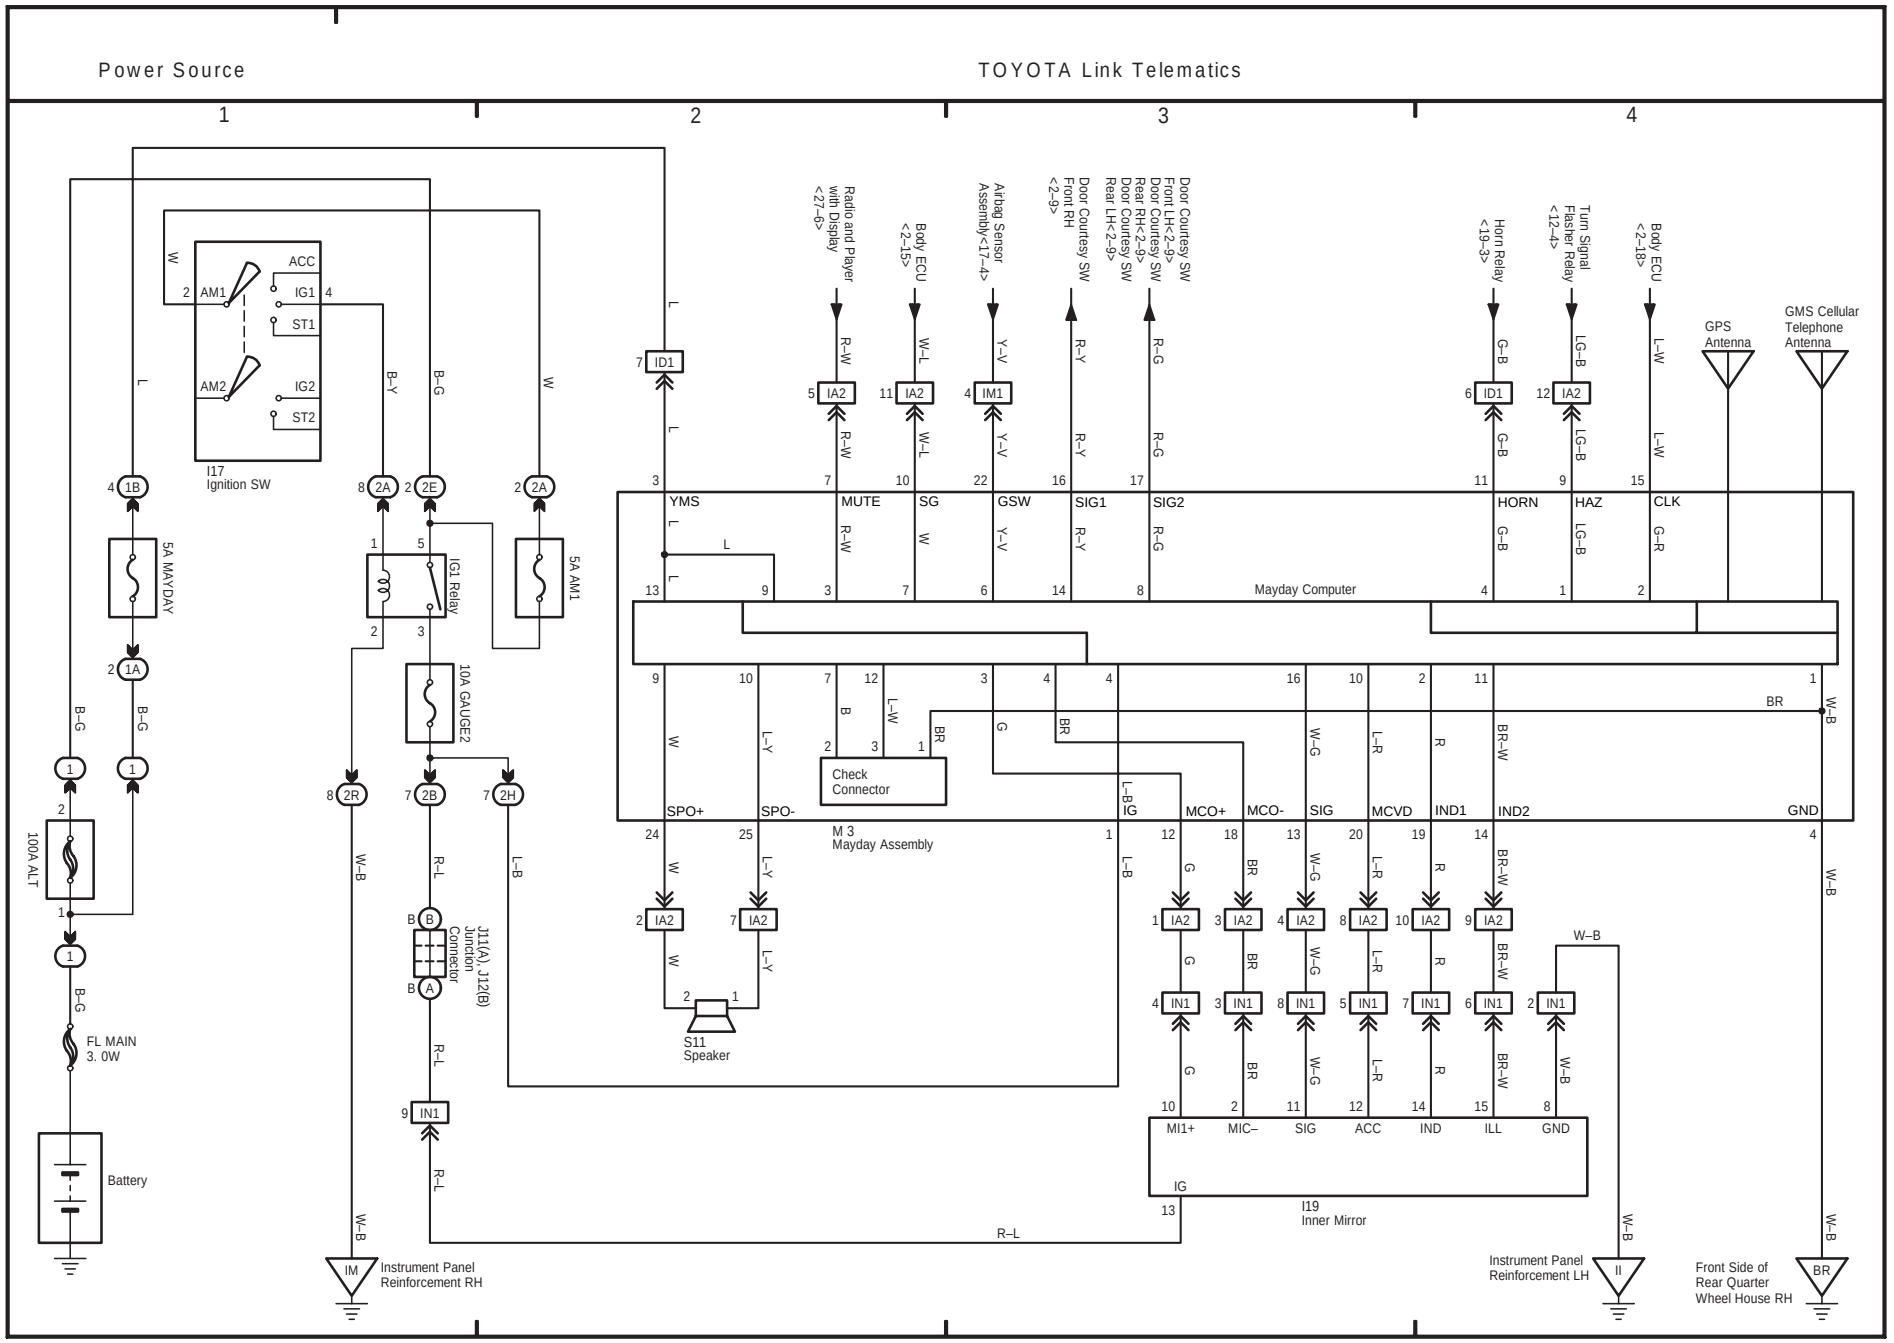

Power Source
TOYOTA Link Telematics
1
2
3
4
ACC
IG1
ST1
IG2
ST2
AM1
AM2
I17
Ignition SW
5A MAYDAY
5A AM1
IG1 Relay
10A GAUGE2
100A ALT
FL MAIN
3. 0W
Battery
J11(A), J12(B)
Junction
Connector
Radio and Player
with Display
<21–6>
Body ECU
<2–15>
Airbag Sensor
Assembly<17–4>
Door Courtesy SW
Front RH
<2–9>
Door Courtesy SW
Front LH<2–9>
Door Courtesy SW
Rear RH<2–9>
Door Courtesy SW
Rear LH<2–9>
Horn Relay
<19–3>
Turn Signal
Flasher Relay
<12–4>
Body ECU
<2–18>
GPS
Antenna
GMS Cellular
Telephone
Antenna
YMS
MUTE
SG
GSW
SIG1
SIG2
HORN
HAZ
CLK
Mayday Computer
SPO+
SPO-
Check
Connector
M 3
Mayday Assembly
S11
Speaker
IG
MCO+
MCO-
SIG
MCVD
IND1
IND2
GND
MI1+
MIC–
SIG
ACC
IND
ILL
GND
I19
Inner Mirror
IM
Instrument Panel
Reinforcement RH
II
Instrument Panel
Reinforcement LH
BR
Front Side of
Rear Quarter
Wheel House RH

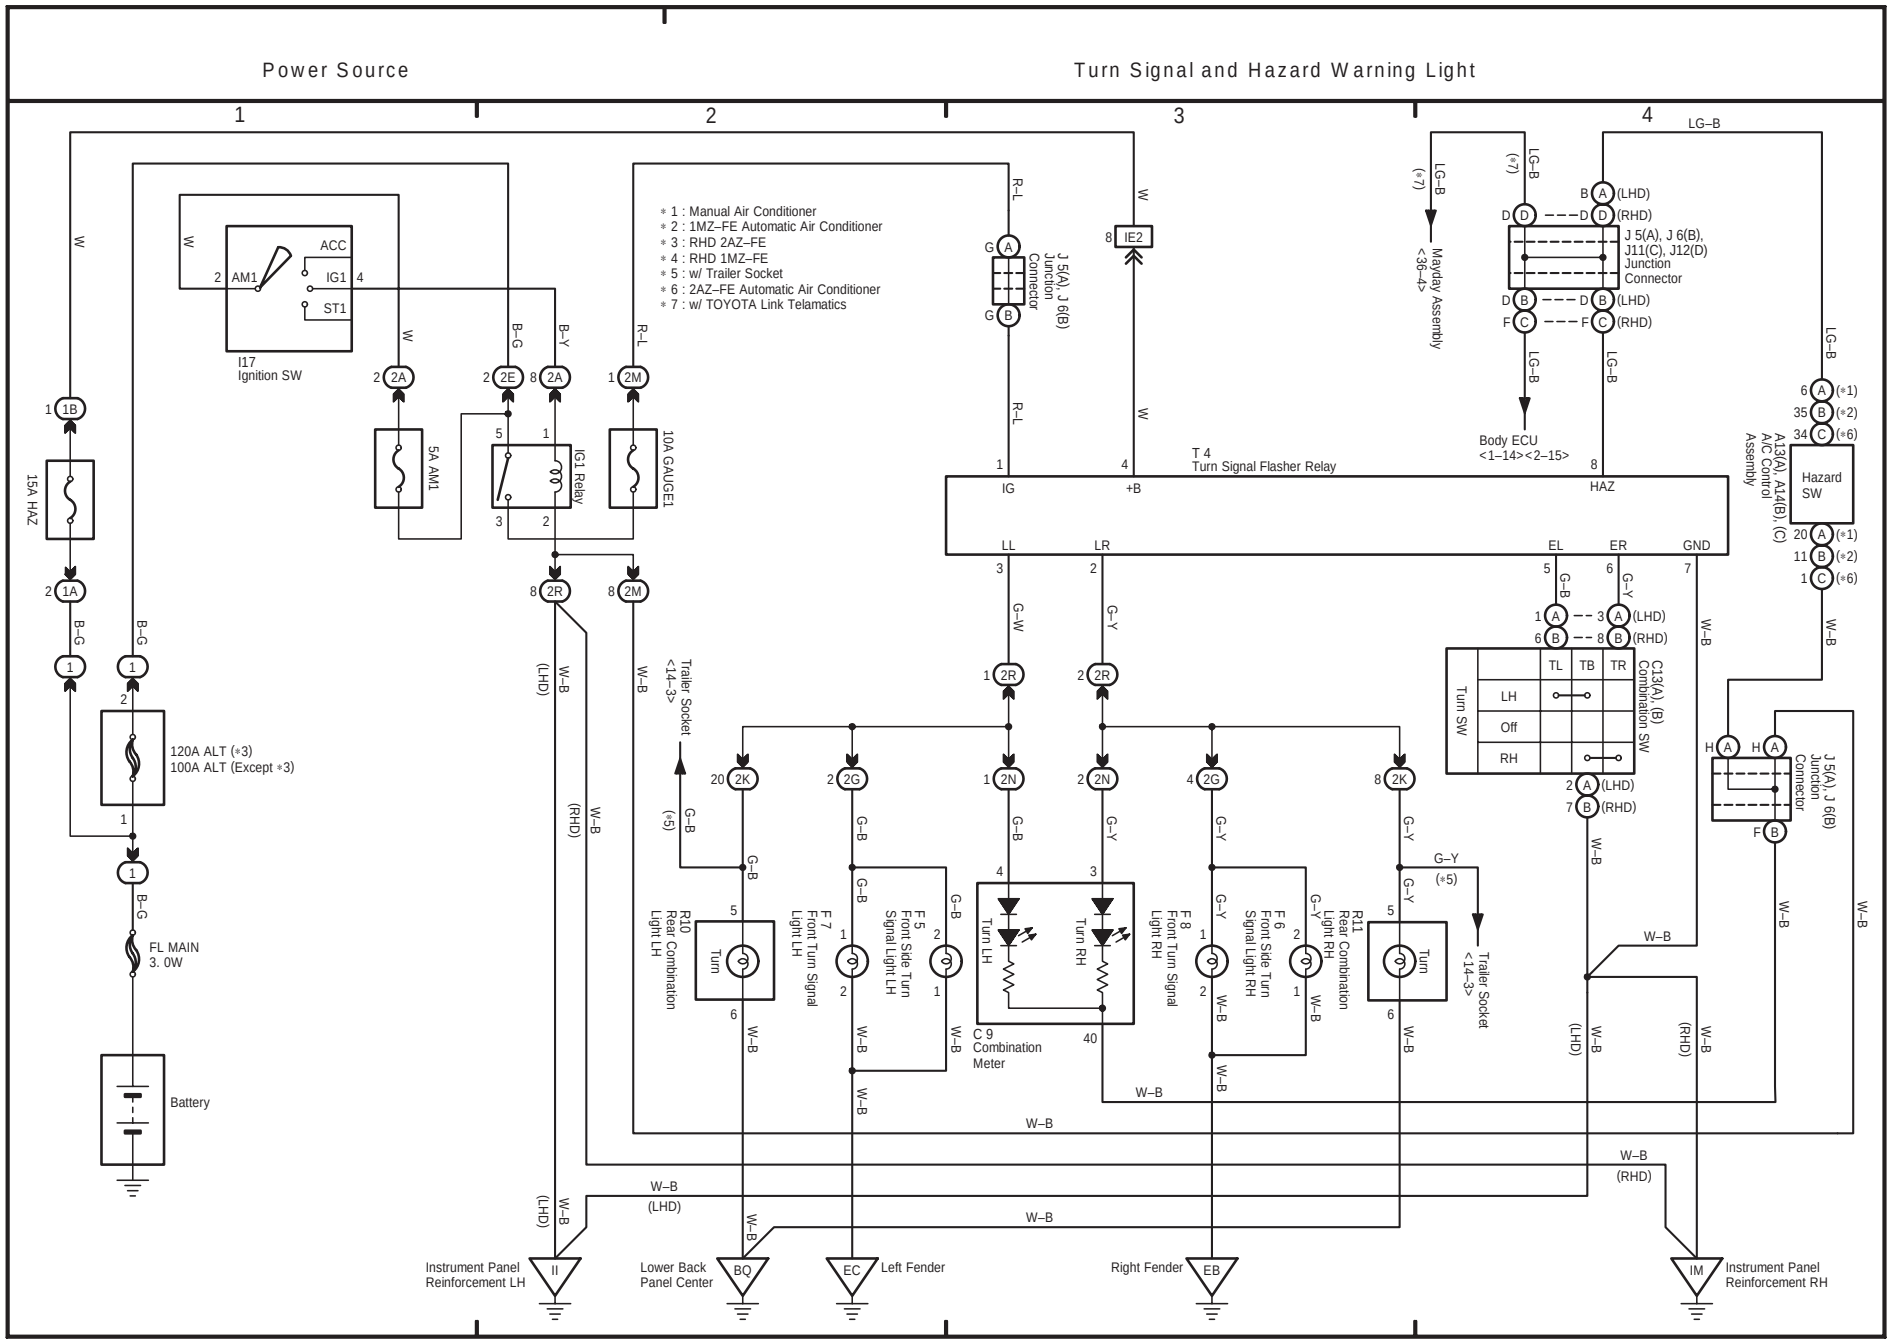
Power Source
Turn Signal and Hazard Warning Light
1
2
3
4
＊1 : Manual Air Conditioner
＊2 : 1MZ–FE Automatic Air Conditioner
＊3 : RHD 2AZ–FE
＊4 : RHD 1MZ–FE
＊5 : w/ Trailer Socket
＊6 : 2AZ–FE Automatic Air Conditioner
＊7 : w/ TOYOTA Link Telamatics
I17 Ignition SW
ACC
IG1
ST1
AM1
15A HAZ
5A AM1
IG1 Relay
10A GAUGE1
120A ALT (＊3)
100A ALT (Except ＊3)
FL MAIN 3. 0W
Battery
J 5(A), J 6(B) Junction Connector
IE2
T 4 Turn Signal Flasher Relay
IG
+B
HAZ
LL
LR
EL
ER
GND
Body ECU <1–14><2–15>
Mayday Assembly <36–4>
J 5(A), J 6(B), J11(C), J12(D) Junction Connector
Hazard SW
A13(A), A14(B), (C) A/C Control Assembly
Turn SW
TL
TB
TR
LH
Off
RH
C13(A), (B) Combination SW
Trailer Socket <14–3>
R10 Rear Combination Light LH
F 7 Front Turn Signal Light LH
F 5 Front Side Turn Signal Light LH
C 9 Combination Meter
Turn LH
Turn RH
F 8 Front Turn Signal Light RH
F 6 Front Side Turn Signal Light RH
R11 Rear Combination Light RH
Turn
Instrument Panel Reinforcement LH
Lower Back Panel Center
Left Fender
Right Fender
Instrument Panel Reinforcement RH
(LHD)
(RHD)

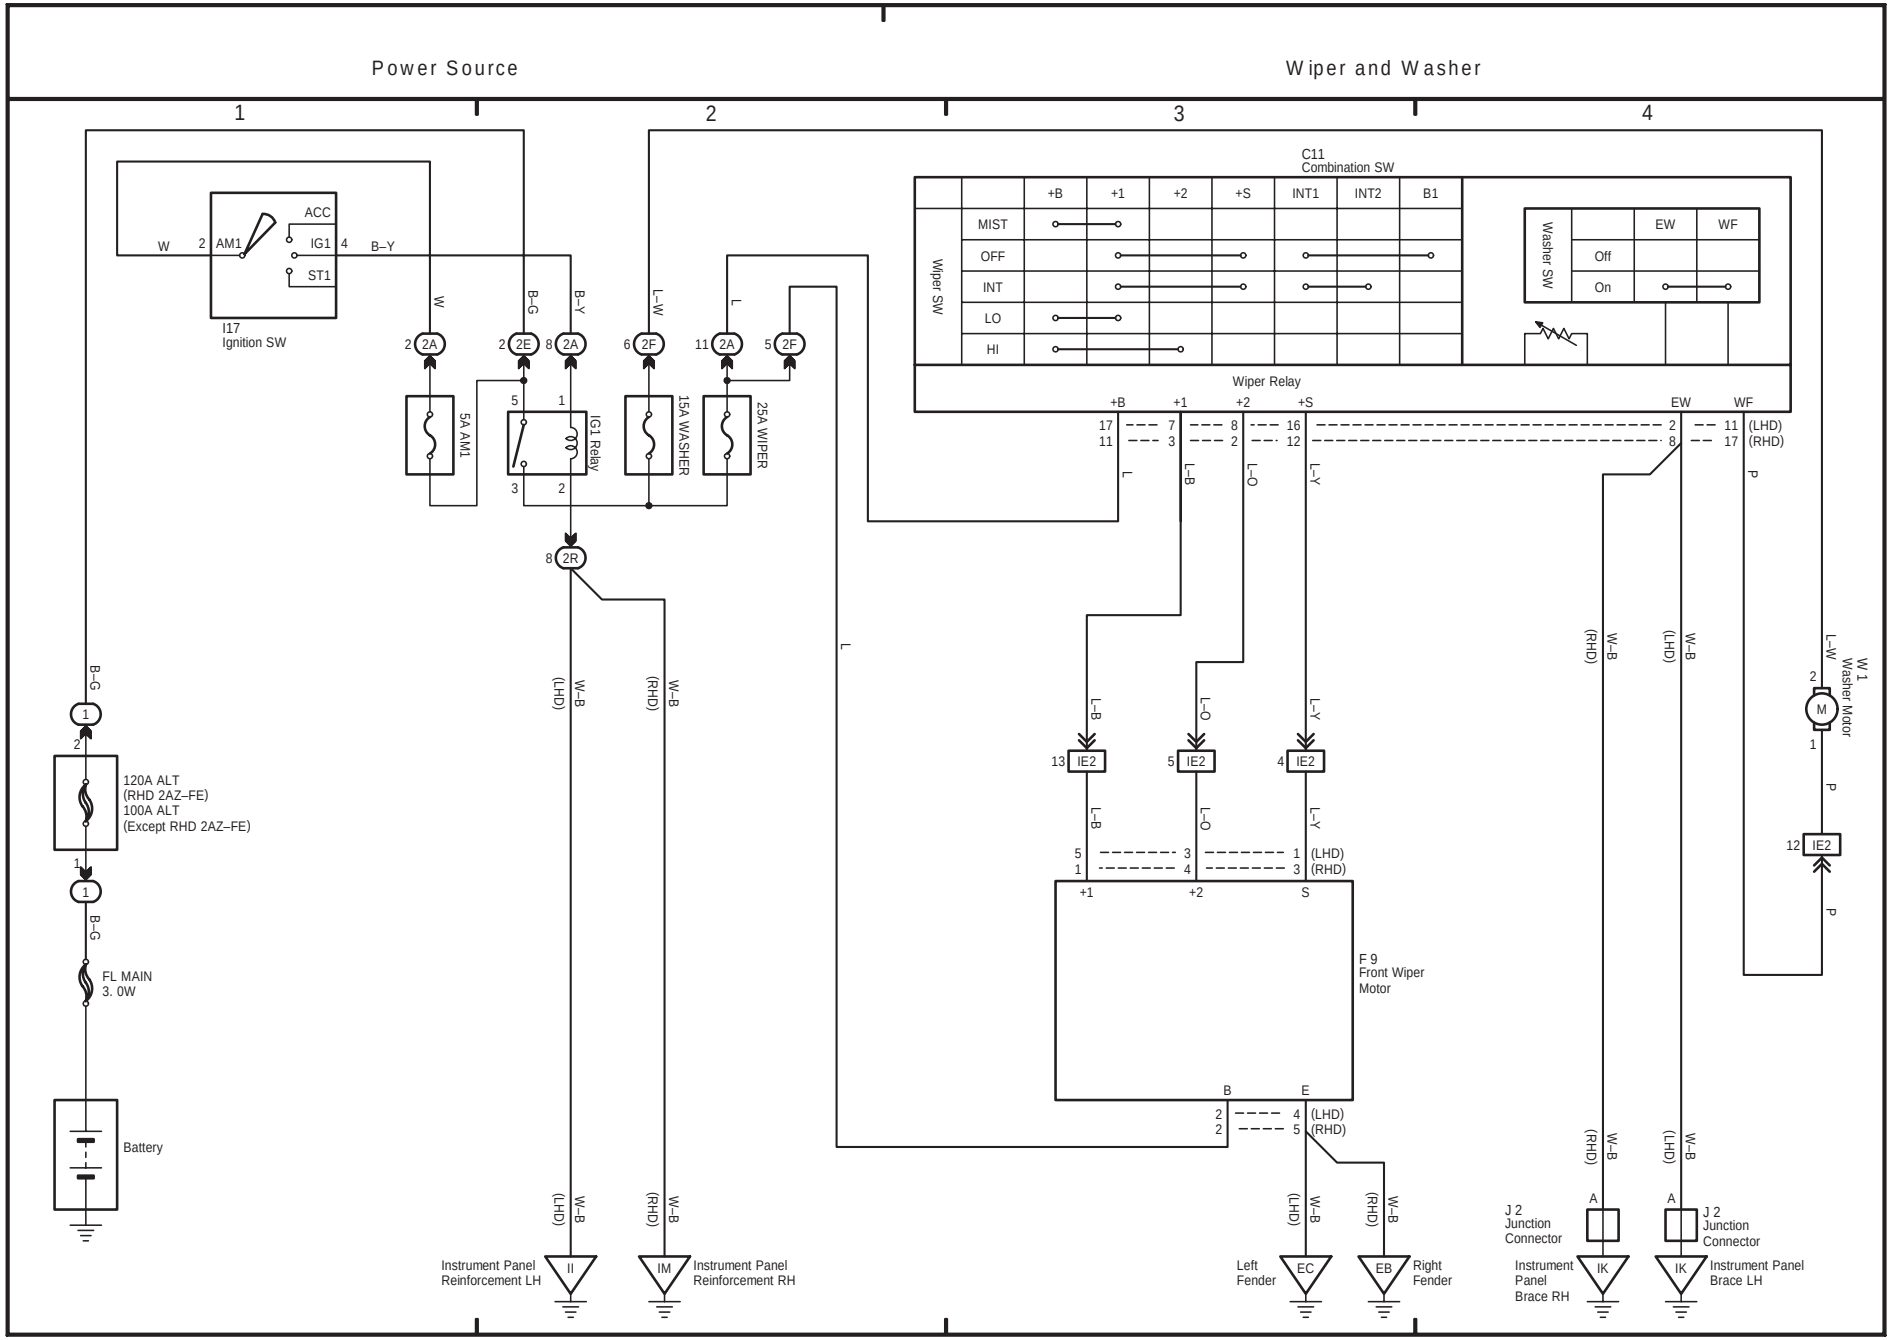
Power Source
Wiper and Washer
1
2
3
4
C11
Combination SW
+B
+1
+2
+S
INT1
INT2
B1
MIST
OFF
INT
LO
HI
Wiper SW
Washer SW
EW
WF
Off
On
Wiper Relay
I17
Ignition SW
ACC
IG1
ST1
AM1
5A AM1
IG1 Relay
15A WASHER
25A WIPER
120A ALT
(RHD 2AZ–FE)
100A ALT
(Except RHD 2AZ–FE)
FL MAIN
3. 0W
Battery
F 9
Front Wiper
Motor
W 1
Washer Motor
J 2
Junction
Connector
Instrument Panel
Reinforcement LH
Instrument Panel
Reinforcement RH
Left
Fender
Right
Fender
Instrument
Panel
Brace RH
Instrument Panel
Brace LH
(LHD)
(RHD)

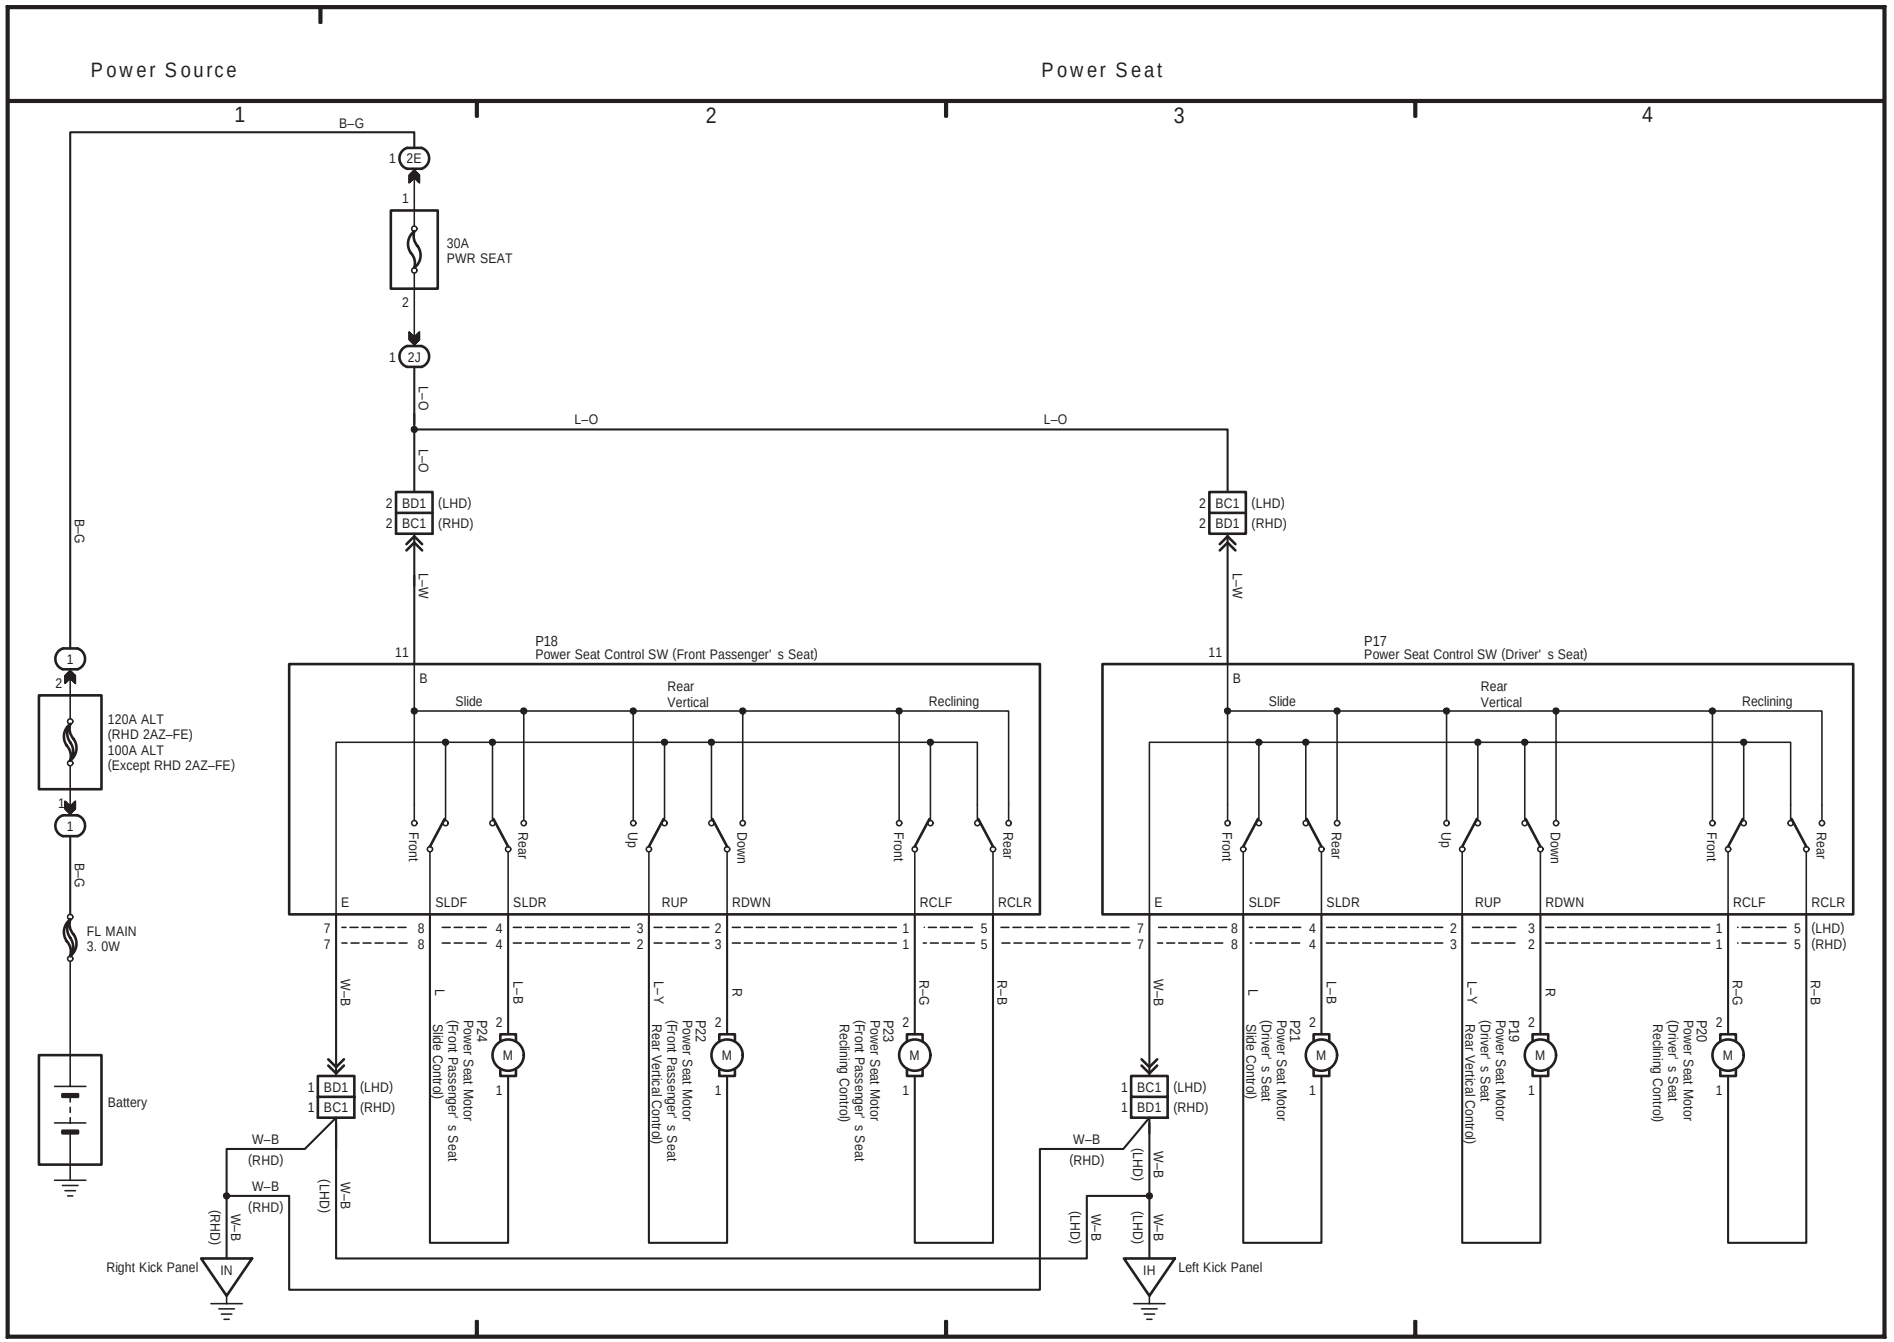

Power Source
Power Seat
1
2
3
4
B–G
2E
30A
PWR SEAT
2J
L–O
L–O
L–O
BD1 (LHD)
BC1 (RHD)
BC1 (LHD)
BD1 (RHD)
L–W
P18
Power Seat Control SW (Front Passenger' s Seat)
P17
Power Seat Control SW (Driver' s Seat)
Slide
Rear Vertical
Reclining
Front
Rear
Up
Down
E
SLDF
SLDR
RUP
RDWN
RCLF
RCLR
(LHD)
(RHD)
W–B
L
L–B
L–Y
R
R–G
R–B
P24
Power Seat Motor
(Front Passenger' s Seat
Slide Control)
P22
Power Seat Motor
(Front Passenger' s Seat
Rear Vertical Control)
P23
Power Seat Motor
(Front Passenger' s Seat
Reclining Control)
P21
Power Seat Motor
(Driver' s Seat
Slide Control)
P19
Power Seat Motor
(Driver' s Seat
Rear Vertical Control)
P20
Power Seat Motor
(Driver' s Seat
Reclining Control)
120A ALT
(RHD 2AZ–FE)
100A ALT
(Except RHD 2AZ–FE)
FL MAIN
3. 0W
Battery
Right Kick Panel
IN
Left Kick Panel
IH


(Cont. next page)

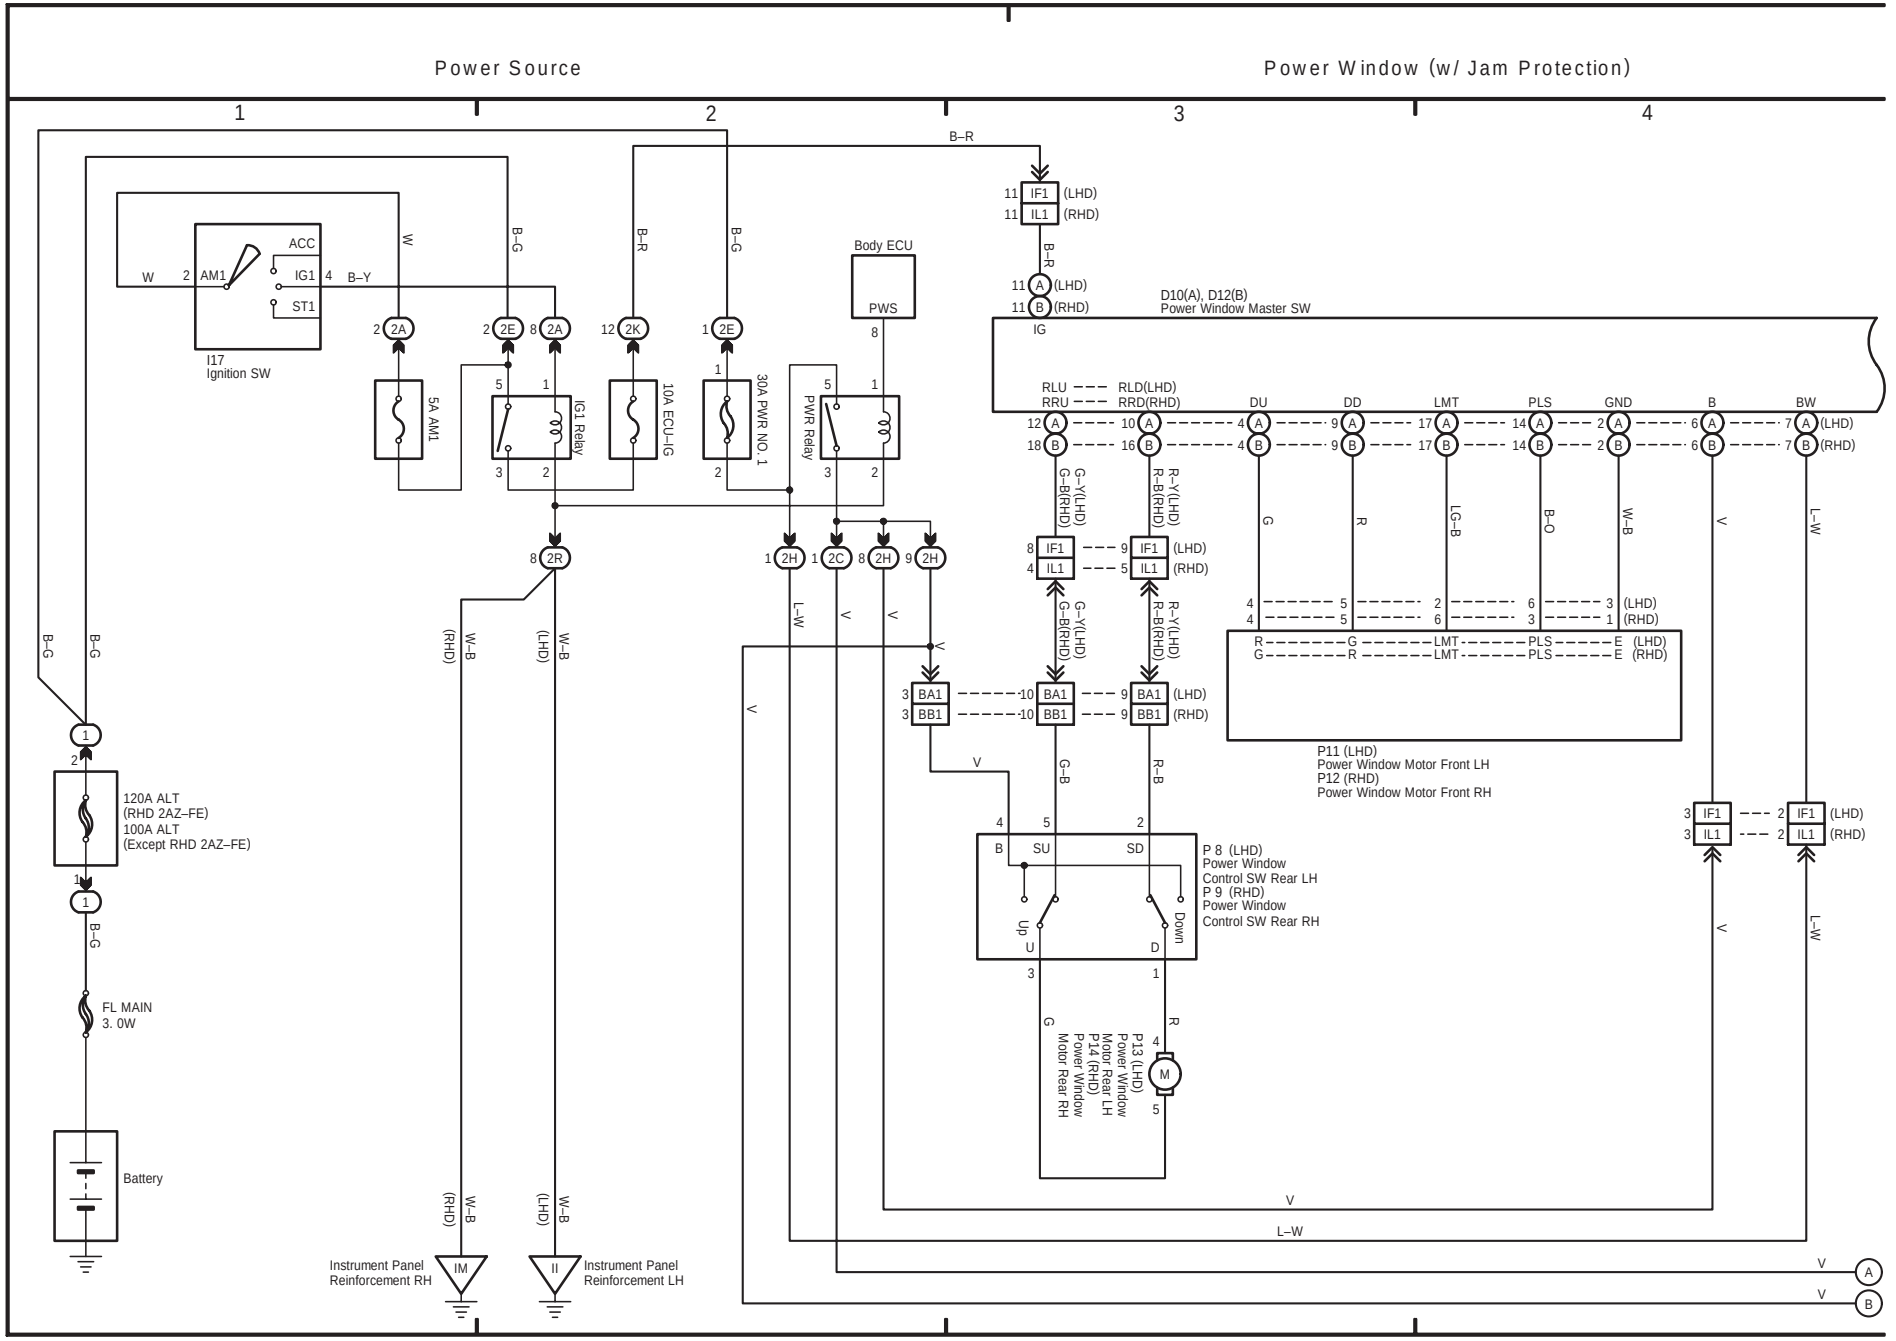



20 CAMRY (Cont' d)


Power Window (w/ Jam Protection)

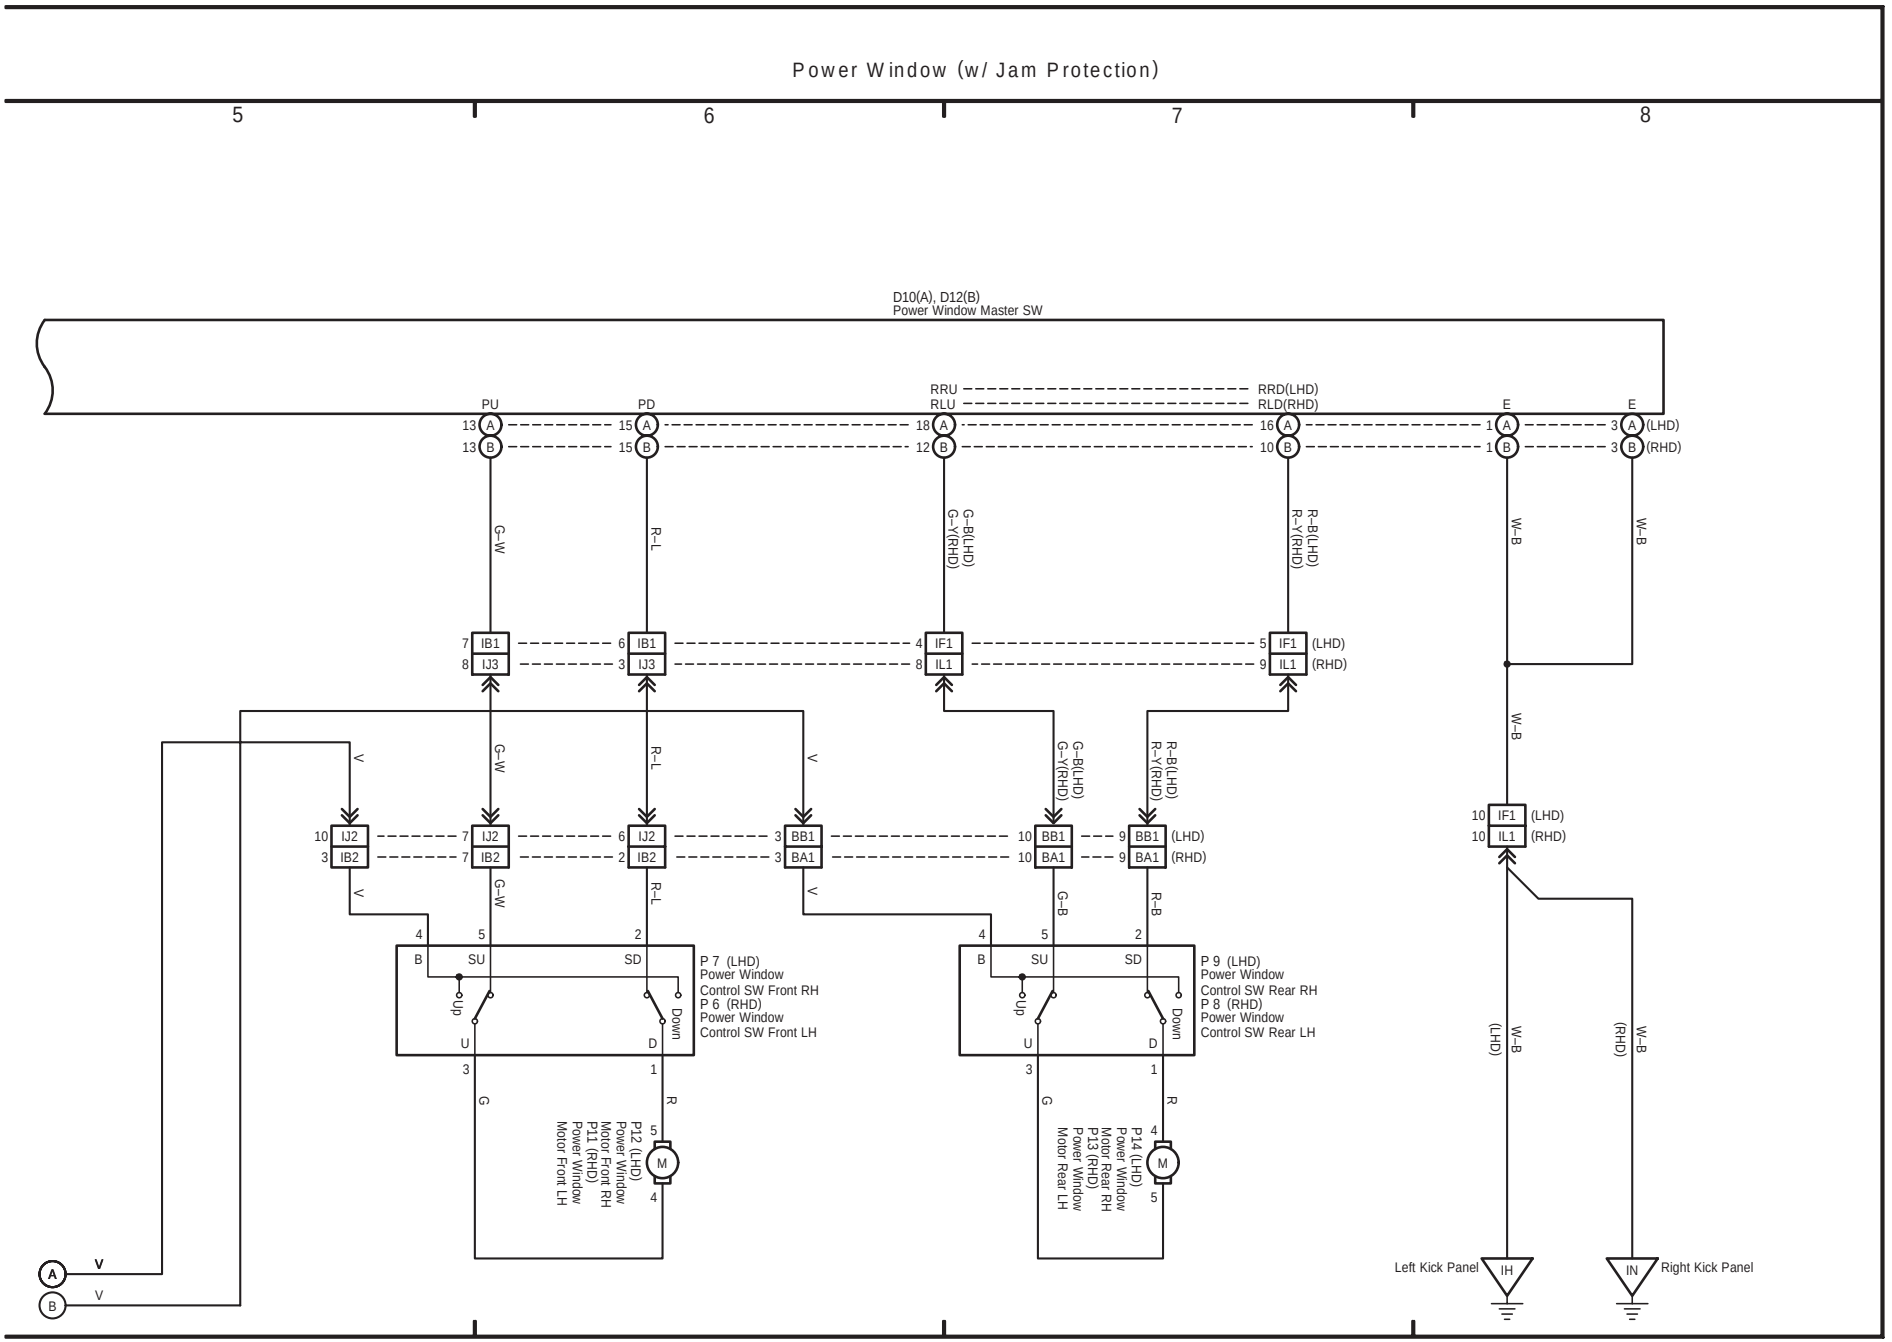

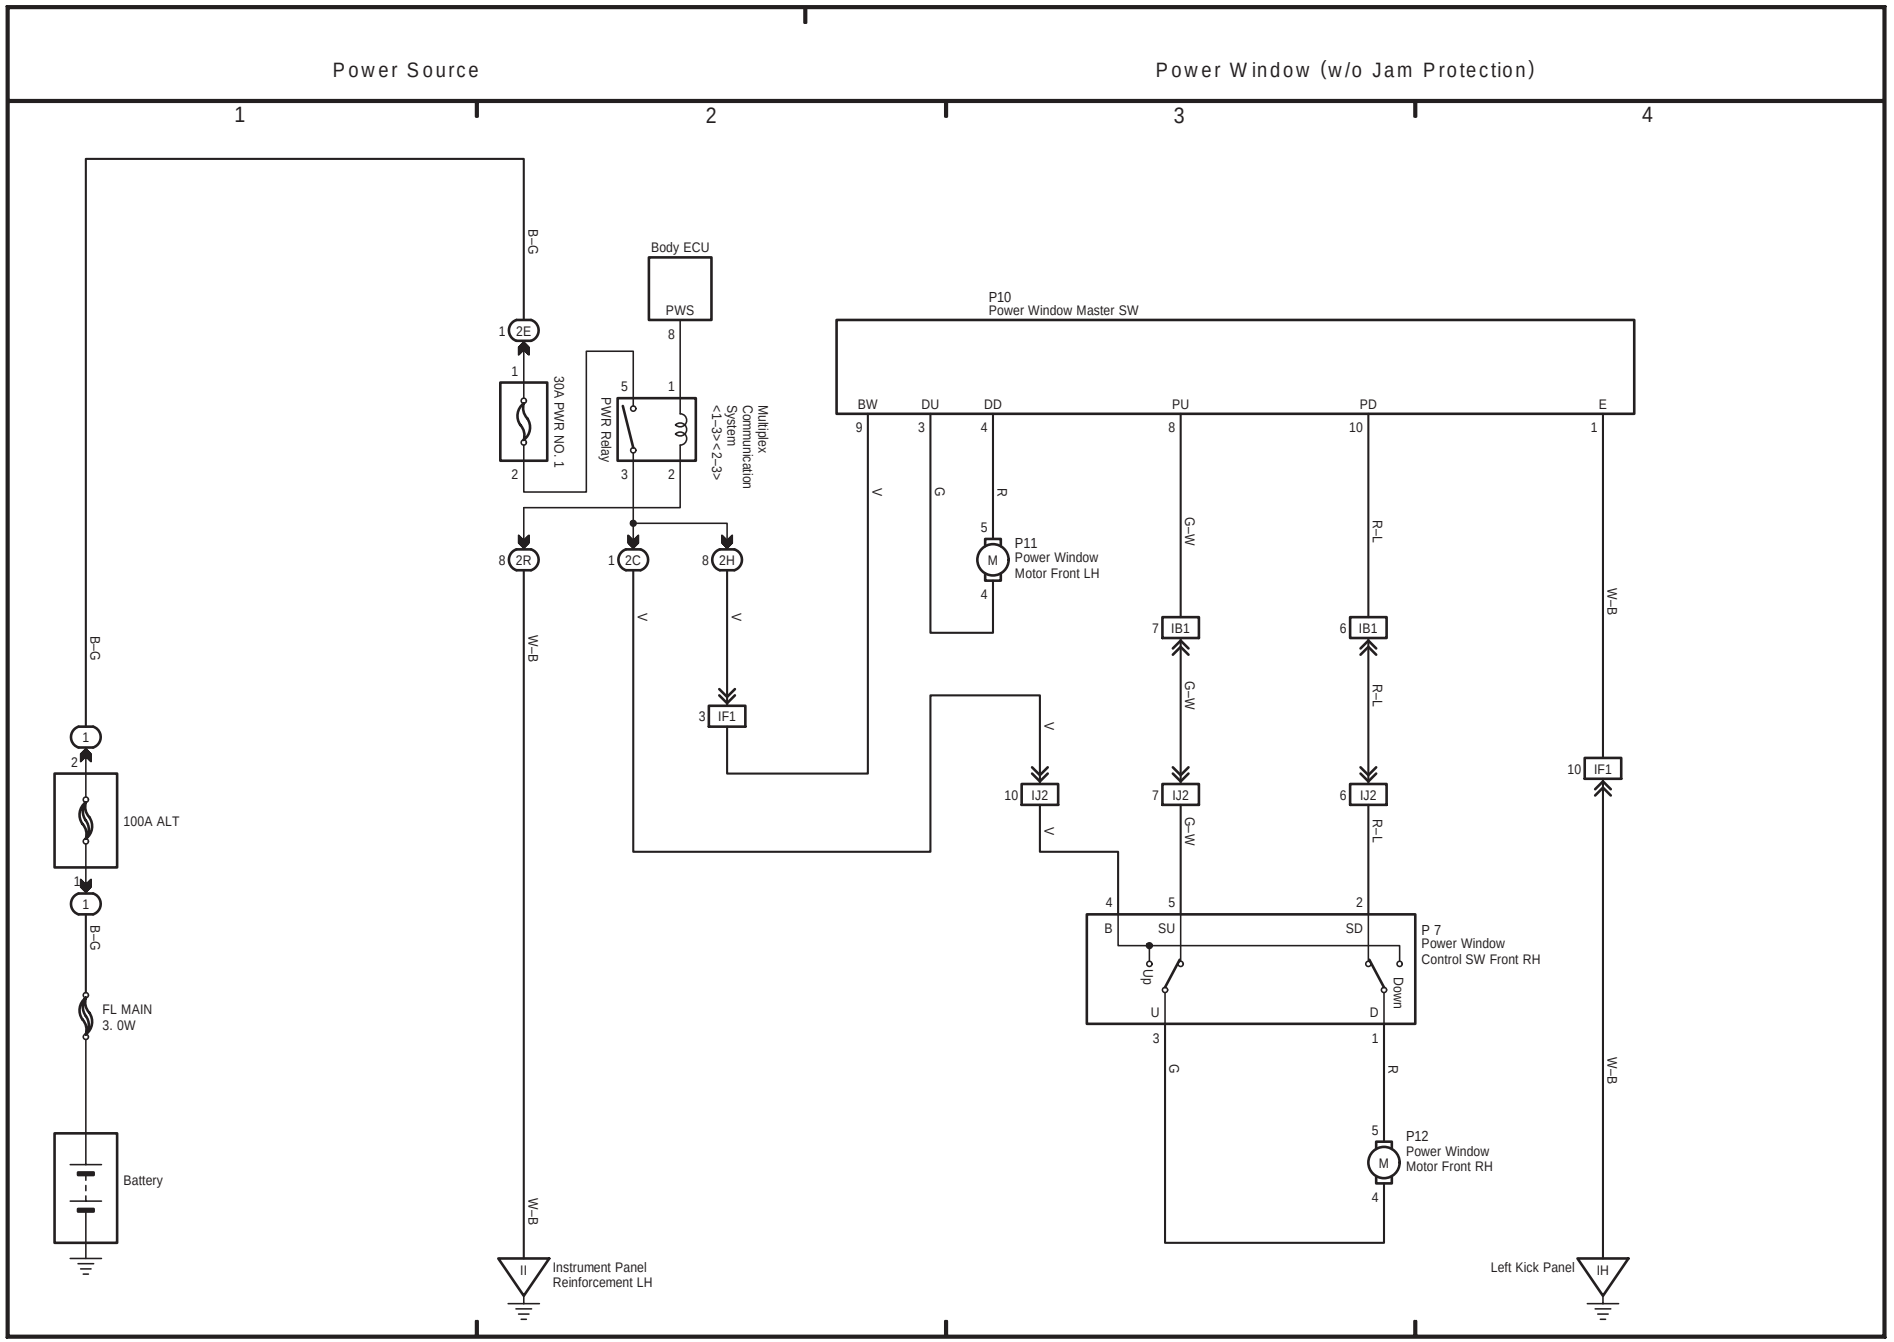
Power Source
Power Window (w/o Jam Protection)
1
2
3
4
Body ECU
PWS
P10
Power Window Master SW
BW
DU
DD
PU
PD
E
30A PWR NO. 1
PWR Relay
Multiplex Communication System <1–3> <2–3>
P11
Power Window Motor Front LH
P12
Power Window Motor Front RH
P 7
Power Window Control SW Front RH
Up
Down
SU
SD
100A ALT
FL MAIN 3. 0W
Battery
Instrument Panel Reinforcement LH
Left Kick Panel
B–G
W–B
V
G
R
G–W
R–L

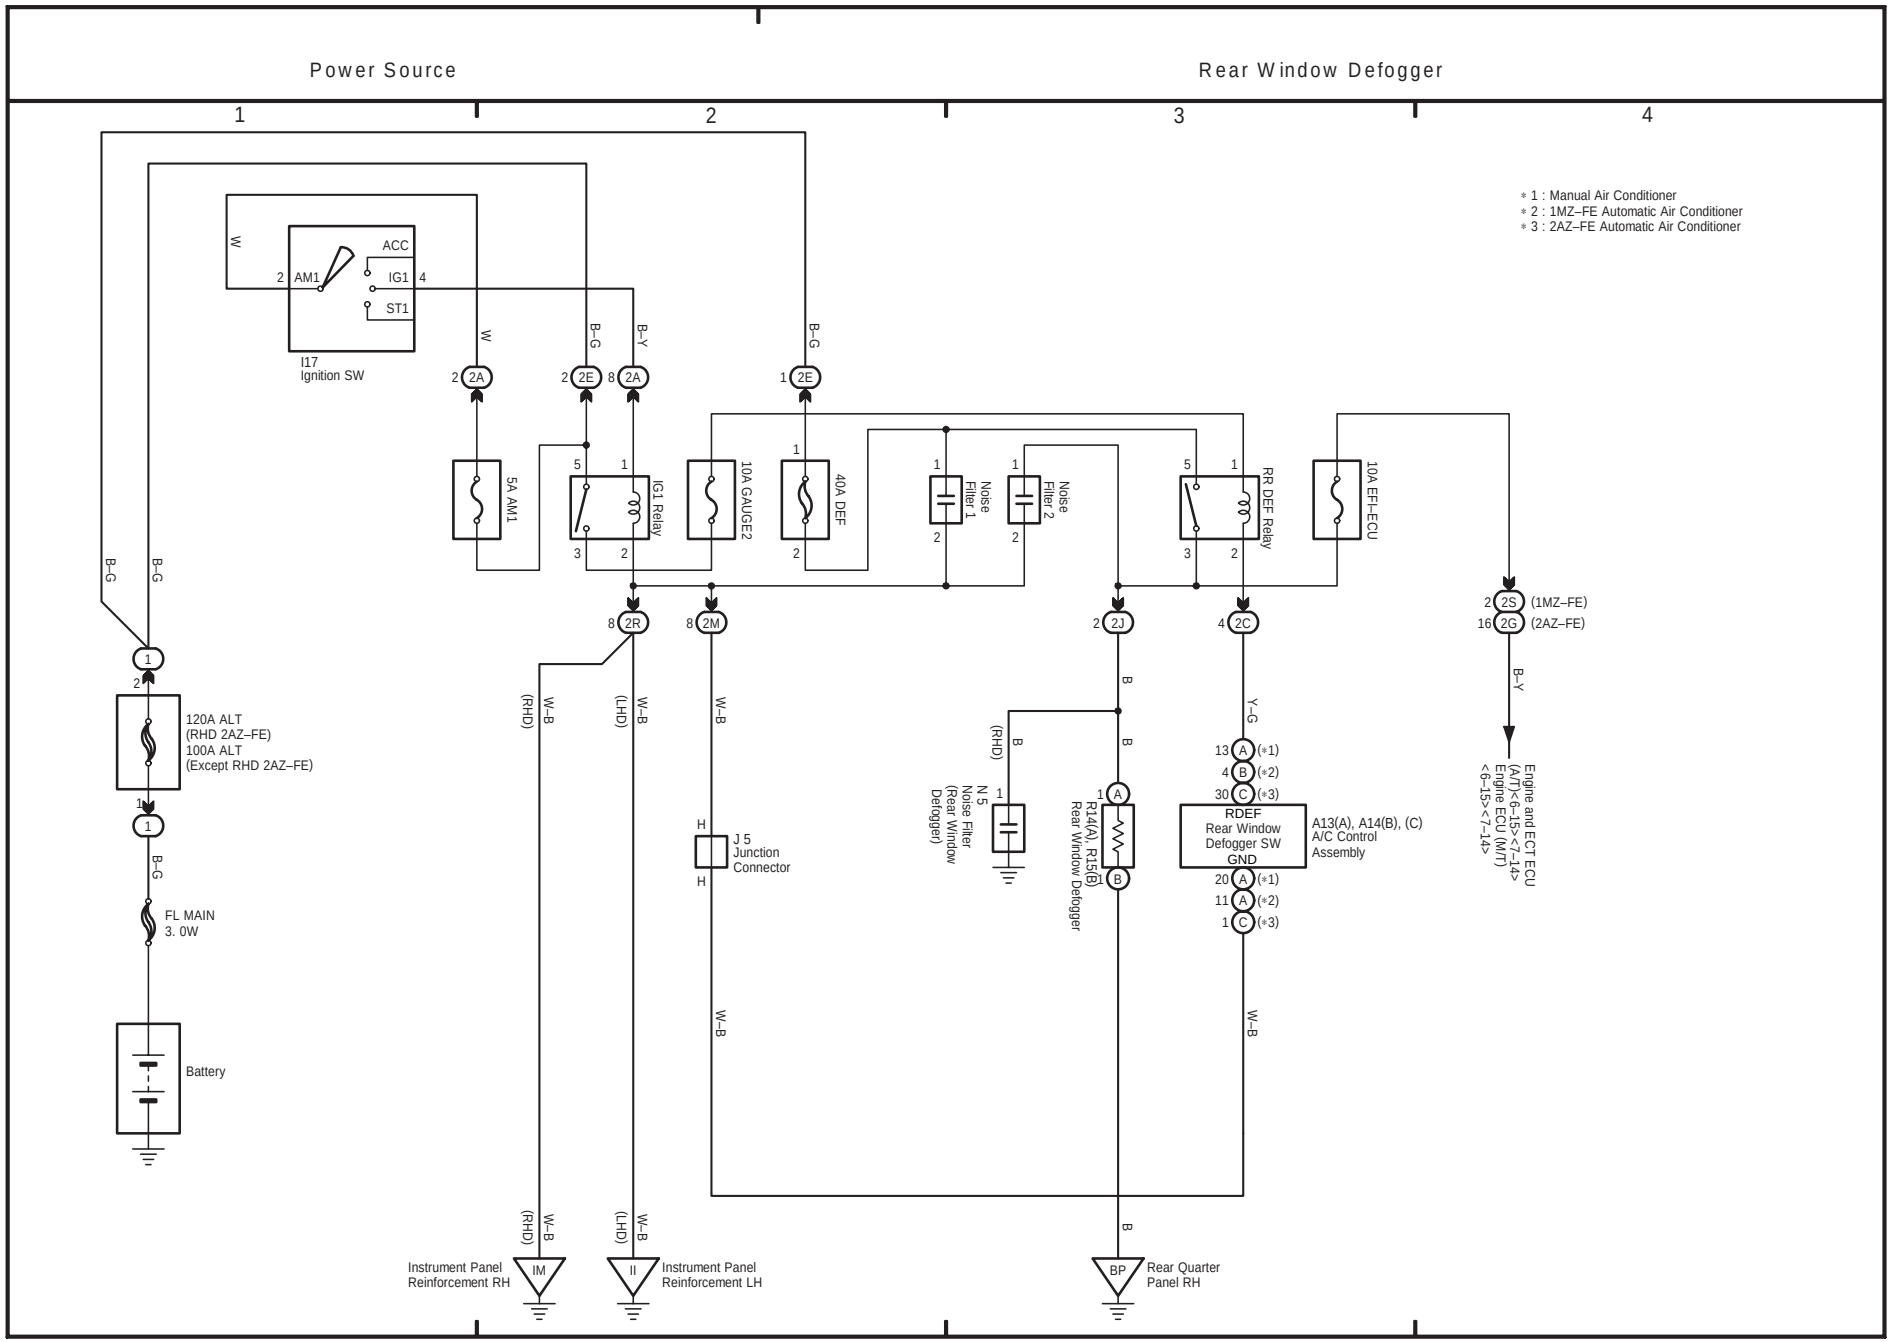
Power Source
Rear Window Defogger
1
2
3
4
* 1 : Manual Air Conditioner
* 2 : 1MZ–FE Automatic Air Conditioner
* 3 : 2AZ–FE Automatic Air Conditioner
ACC
AM1
IG1
ST1
I17
Ignition SW
5A AM1
IG1 Relay
10A GAUGE2
40A DEF
Noise Filter 1
Noise Filter 2
RR DEF Relay
10A EFI–ECU
120A ALT
(RHD 2AZ–FE)
100A ALT
(Except RHD 2AZ–FE)
FL MAIN
3. 0W
Battery
J 5
Junction Connector
N 5
Noise Filter
(Rear Window Defogger)
R14(A), R15(B)
Rear Window Defogger
RDEF
Rear Window Defogger SW
GND
A13(A), A14(B), (C)
A/C Control Assembly
(1MZ–FE)
(2AZ–FE)
Engine and ECT ECU (A/T)<6–15><7–14>
Engine ECU (M/T)<6–15><7–14>
Instrument Panel Reinforcement RH
Instrument Panel Reinforcement LH
Rear Quarter Panel RH
IM
II
BP
(RHD)
(LHD)
W–B
B–G
B–Y
B
Y–G

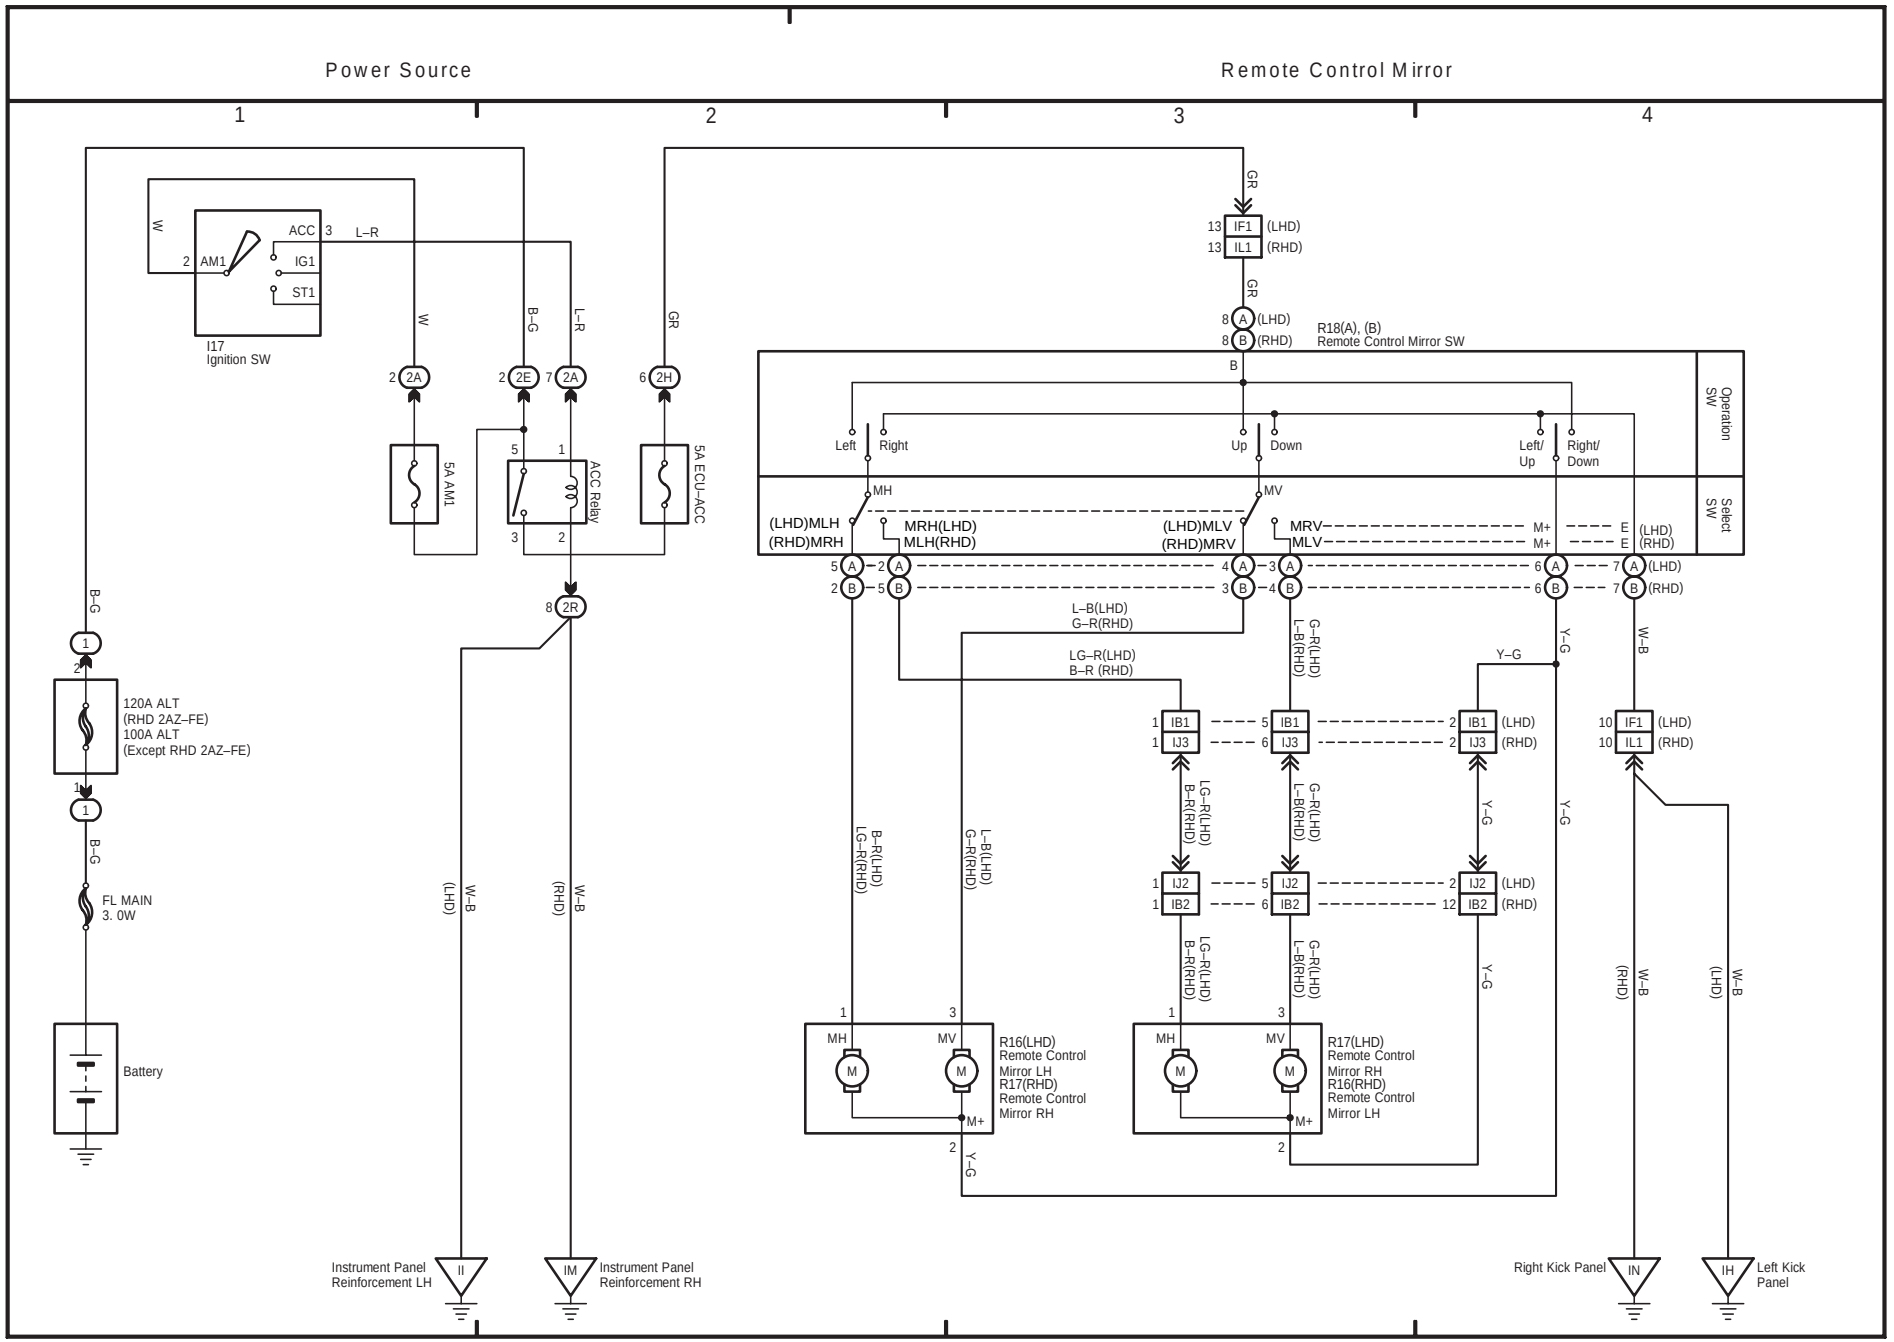
Power Source
Remote Control Mirror
1
2
3
4
I17
Ignition SW
ACC
IG1
ST1
AM1
5A AM1
ACC Relay
5A ECU–ACC
120A ALT
(RHD 2AZ–FE)
100A ALT
(Except RHD 2AZ–FE)
FL MAIN
3. 0W
Battery
R18(A), (B)
Remote Control Mirror SW
Operation SW
Select SW
Left
Right
Up
Down
Left/
Up
Right/
Down
MH
MV
(LHD)MLH
(RHD)MRH
MRH(LHD)
MLH(RHD)
(LHD)MLV
(RHD)MRV
MRV
MLV
R16(LHD)
Remote Control
Mirror LH
R17(RHD)
Remote Control
Mirror RH
R17(LHD)
Remote Control
Mirror RH
R16(RHD)
Remote Control
Mirror LH
Instrument Panel
Reinforcement LH
Instrument Panel
Reinforcement RH
Right Kick Panel
Left Kick
Panel

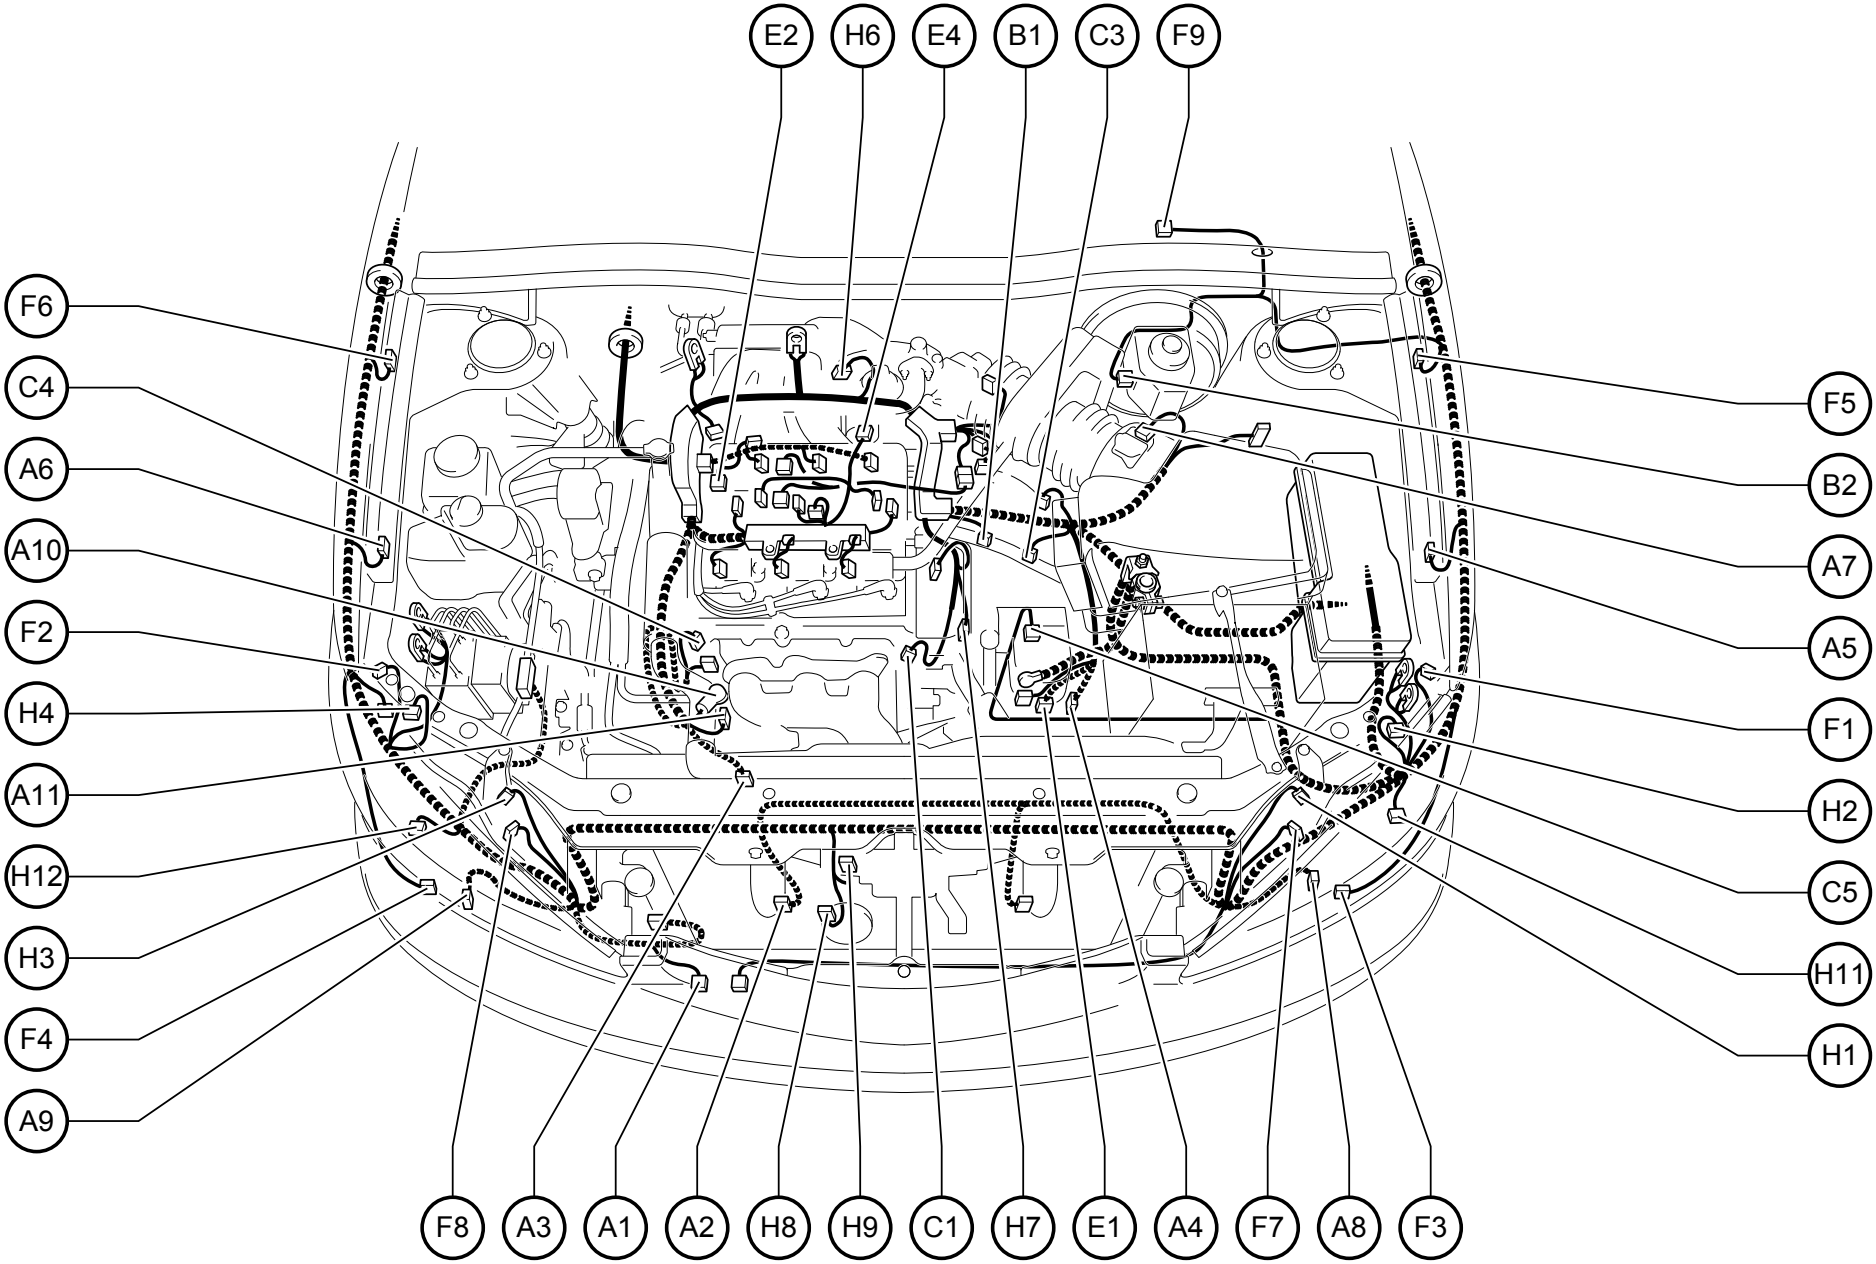
E2
H6
E4
B1
C3
F9
F6
C4
A6
A10
F2
H4
A11
H12
H3
F4
A9
F5
B2
A7
A5
F1
H2
C5
H11
H1
F8
A3
A1
A2
H8
H9
C1
H7
E1
A4
F7
A8
F3

A 1 A/C Ambient Temp. Sensor
A 2 A/C Condenser Fan Motor
A 3 A/C Lock Sensor , A/C Magnetic Clutch
A 4 A/T Indicator Light SW , Back-Up Light SW , Neutral Start SW
A 5 ABS Speed Sensor Front LH
A 6 ABS Speed Sensor Front RH
A 7 Air Flow Meter
A 8 Airbag Sensor Front LH
A 9 Airbag Sensor Front RH
A 10 Alternator
A 11 Alternator

B 1 Back-Up Light SW
B 2 Brake Fluid Level Warning SW

C 1 Camshaft Position Sensor
C 3 Counter Gear Speed Sensor
C 4 Crankshaft Position Sensor
C 5 Cruise Control Actuator

E 1 ECT Solenoid
E 2 EFI Water Temp. Sensor
E 4 EGR Valve Position Sensor


F 1 Front Clearance Light LH
F 2 Front Clearance Light RH
F 3 Front Fog Light LH
F 4 Front Fog Light RH
F 5 Front Side Turn Signal Light LH
F 6 Front Side Turn Signal Light RH
F 7 Front Turn Signal Light LH
F 8 Front Turn Signal Light RH
F 9 Front Wiper Motor

H 1 Headlight LH (High)
H 2 Headlight LH (Low)
H 3 Headlight RH (High)
H 4 Headlight RH (Low)
H 6 Heated Oxygen Sensor (Bank 1 Sensor 1)
H 7 Heated Oxygen Sensor (Bank 2 Sensor 1)
H 8 Horn (High)
H 9 Horn (Low)
H 11 Headlight Beam Level Control Actuator LH
H 12 Headlight Beam Level Control Actuator RH

A 1
Black




A 2
Gray

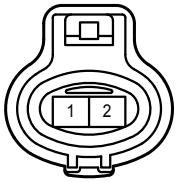

A 3
Gray




A 4
Gray

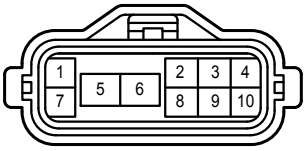

(1MZ-FE)

A 4
Gray

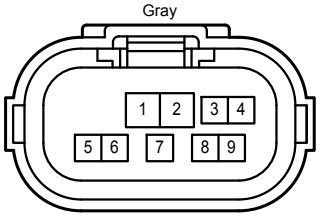

(2AZ-FE)


A 5
Gray




A 6
Gray




A 7
Black

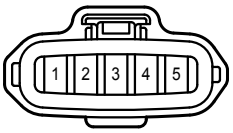


A 8
Yellow

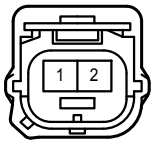


A 9
Yellow

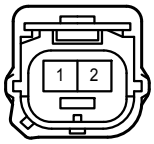

A 10




A 11
Gray

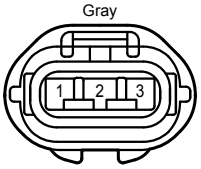


(LHD 1MZ-FE)

A 11
Black

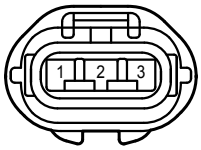


(LHD 2AZ-FE)

A 11
Black

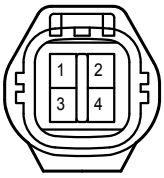

(RHD)

B 1
Gray

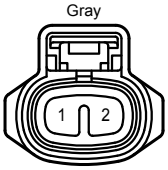


B 2
Gray



C 1
Black



C 3
Black

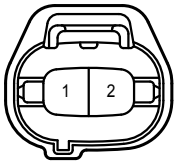

C 4
Black



(1MZ-FE)

C 4
Dark Gray



(2AZ-FE)

C 5
Black




E 1
Gray



(1MZ-FE)

E 1
Gray

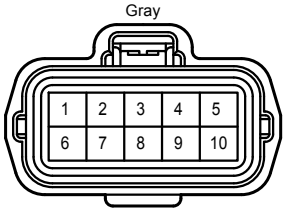

(2AZ-FE)

E 2
Dark Gray



(1MZ-FE)

E 2
Dark Gray



(2AZ-FE)

E 4
Black



F 1
Gray

F 2
Gray

F 3
Brown



F 4
Brown



F 5
White



F 6
White



F 7
Gray



F 8
Gray
(Except LHD 1MZ-FE)



F 8
Black
(LHD 1MZ-FE)




F 9
Gray



H 1
Black




H 2
Black



H 3
Black



H 4
Black



H 6
Dark Gray



H 7
Dark Gray



H 8
Black




H 9
Black



H 11
Black

H 12
Black

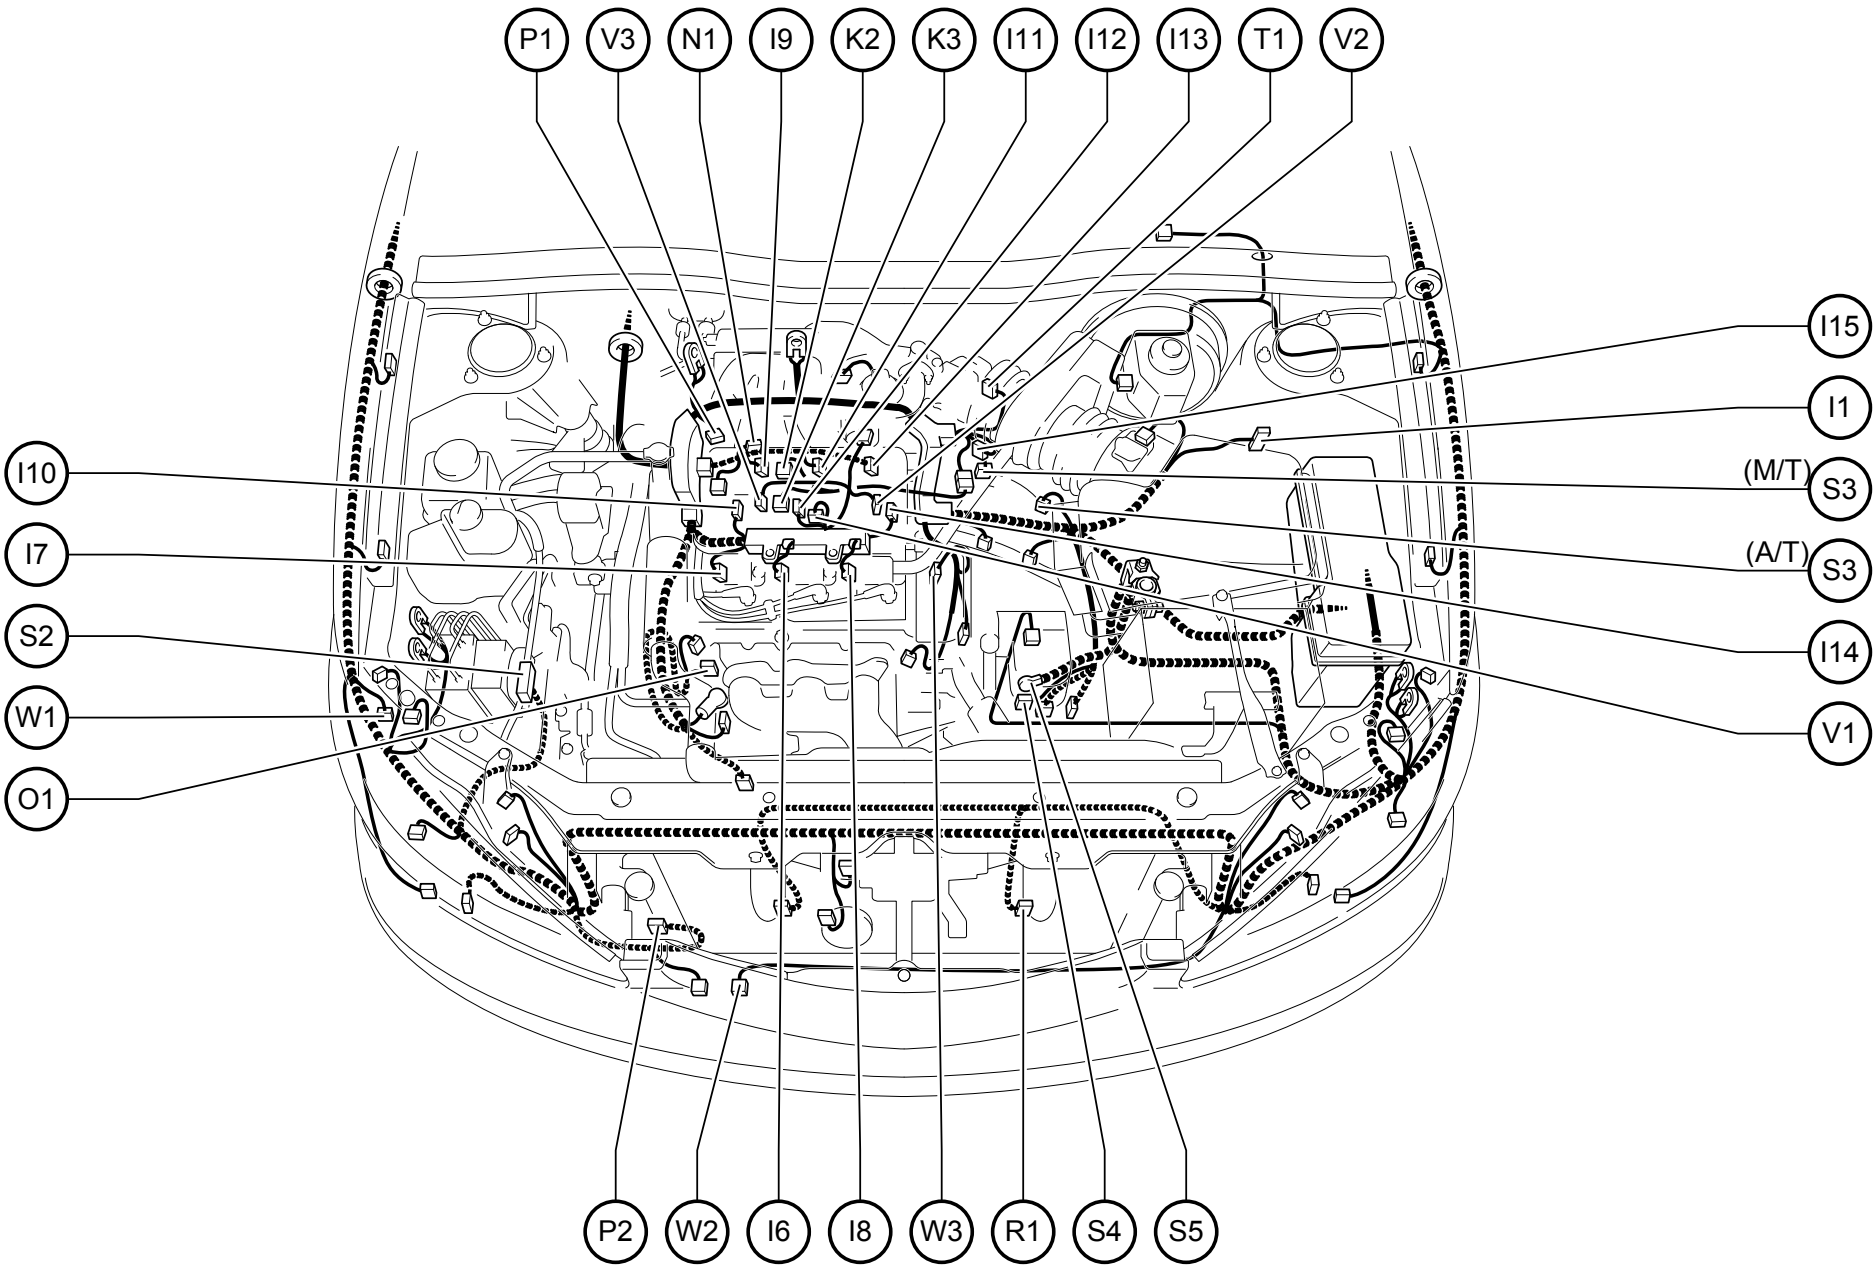
P1
V3
N1
I9
K2
K3
I11
I12
I13
T1
V2
I15
I1
(M/T)
S3
(A/T)
S3
I14
V1
I10
I7
S2
W1
O1
P2
W2
I6
I8
W3
R1
S4
S5

I 1 Igniter
I 6 Ignition Coil No.1
I 7 Ignition Coil No.2
I 8 Ignition Coil No.3
I 9 Injector No.1
I 10 Injector No.2
I 11 Injector No.3
I 12 Injector No.4
I 13 Injector No.5
I 14 Injector No.6
I 15 ISC Valve

K 2 Knock Sensor (Bank 1)
K 3 Knock Sensor (Bank 2)

N 1 Noise Filter (Ignition)

O 1 Oil Pressure SW

P 1 Power Steering Oil Pressure SW
P 2 Pressure SW

R 1 Radiator Fan Motor


S 2 Skid Control ECU with Actuator
S 3 Speed Sensor (Combination Meter)
S 4 Starter
S 5 Starter

T 1 Throttle Position Sensor


V 1 VSV (ACIS)
V 2 VSV (EGR)
V 3 VSV (EVAP)

W 1 Washer Motor
W 2 Water Temp. SW No.1
W 3 Water Temp. SW No.2


I 1
Black

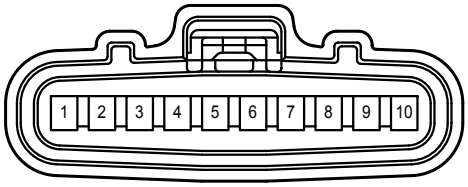


I 6
Black



I 7
Black



I 8
Black




I 9
Gray



(1MZ-FE)

I 9
Black




(2AZ-FE)

I 10
Gray



(1MZ-FE)

I 10
Black




(2AZ-FE)

I 11
Gray



(1MZ-FE)

I 11
Black




(2AZ-FE)

I 12
Gray



(1MZ-FE)

I 12
Black



(2AZ-FE)

I 13
Gray



I 14
Gray



I 15
Black



K 2
Dark Gray



K 3
Dark Gray



N 1
Gray




O 1
Gray




P 1
Black




P 2
Gray

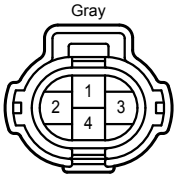

R 1
Gray

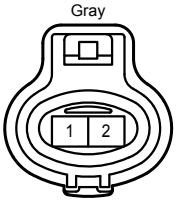

S 2
Red

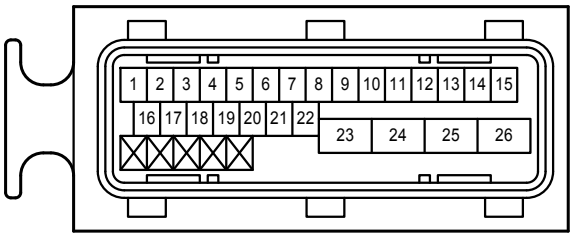


S 3
Black



S 4
Black




S 5




(1MZ-FE)

S 5



(2AZ-FE)

T 1
Black

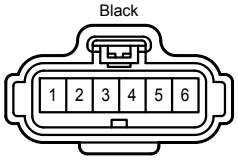


(2AZ-FE Australia, New Zealand)

T 1
Black




(Except 2AZ-FE Australia, New Zealand)


V 1
Brown

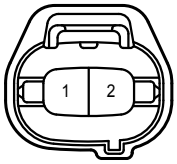

V 2
Brown

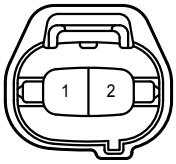


V 3
Blue

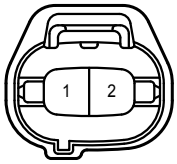


(1MZ-FE)

V 3
Black

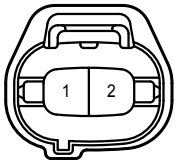


(2AZ-FE)

W 1
Black

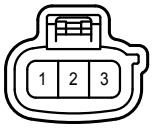


W 2
Gray

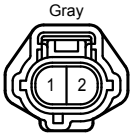

W 3
Gray

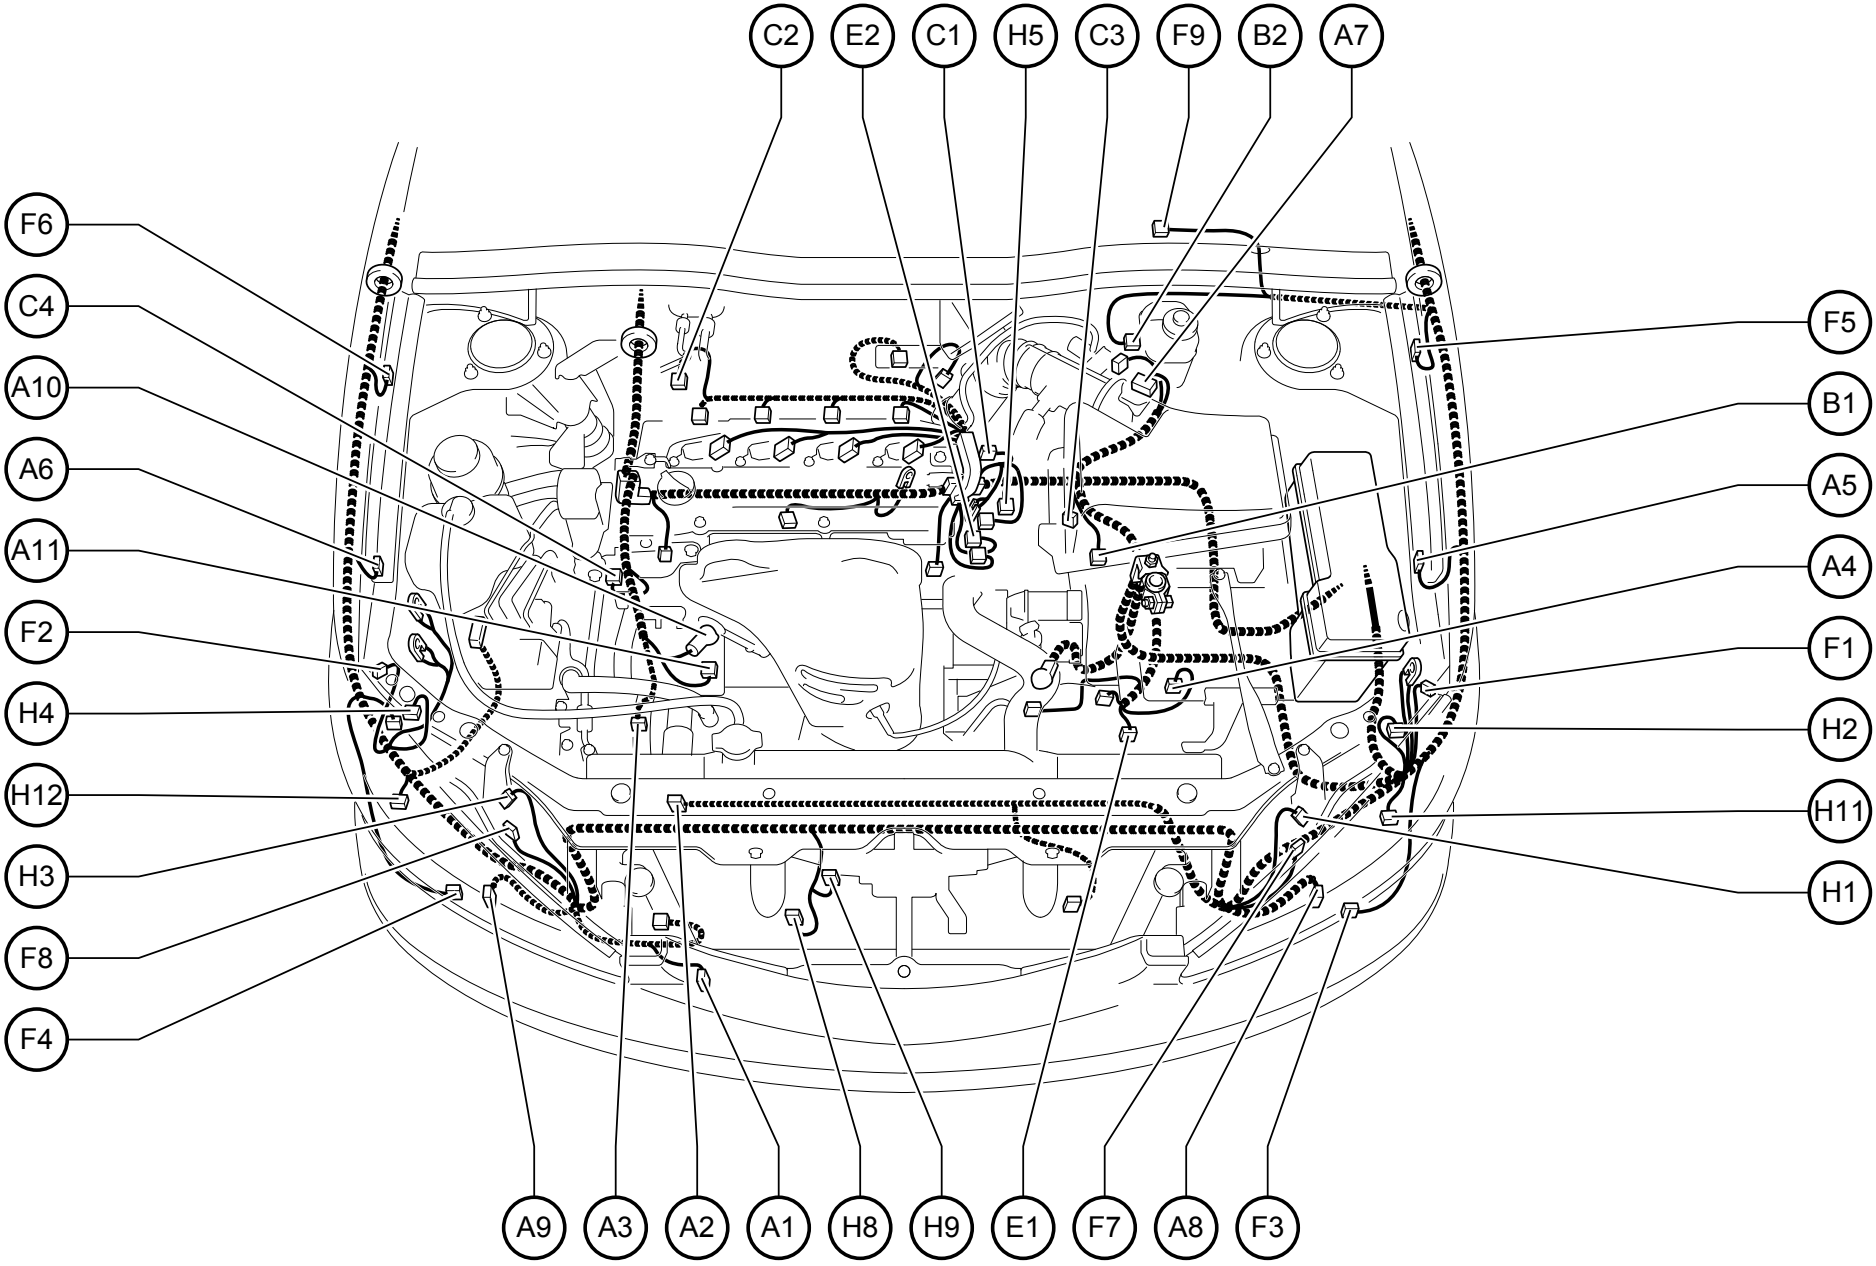


C2
E2
C1
H5
C3
F9
B2
A7
F6
C4
A10
A6
A11
F2
H4
H12
H3
F8
F4
F5
B1
A5
A4
F1
H2
H11
H1
A9
A3
A2
A1
H8
H9
E1
F7
A8
F3

A 1 A/C Ambient Temp. Sensor
A 2 A/C Condenser Fan Motor
A 3 A/C Lock Sensor , A/C Magnetic Clutch
A 4 A/T Indicator Light SW , Back-Up Light SW , Neutral Start SW
A 5 ABS Speed Sensor Front LH
A 6 ABS Speed Sensor Front RH
A 7 Air Flow Meter
A 8 Airbag Sensor Front LH
A 9 Airbag Sensor Front RH
A 10 Alternator
A 11 Alternator

B 1 Back-Up Light SW
B 2 Brake Fluid Level Warning SW

C 1 Camshaft Position Sensor
C 2 Camshaft Timing Oil Control Valve
C 3 Counter Gear Speed Sensor
C 4 Crankshaft Position Sensor

E 1 ECT Solenoid
E 2 EFI Water Temp. Sensor


F 1 Front Clearance Light LH
F 2 Front Clearance Light RH
F 3 Front Fog Light LH
F 4 Front Fog Light RH
F 5 Front Side Turn Signal Light LH
F 6 Front Side Turn Signal Light RH
F 7 Front Turn Signal Light LH
F 8 Front Turn Signal Light RH
F 9 Front Wiper Motor

H 1 Headlight LH (High)
H 2 Headlight LH (Low)
H 3 Headlight RH (High)
H 4 Headlight RH (Low)
H 5 Heated Oxygen Sensor (Bank 1 Sensor 1)
H 8 Horn (High)
H 9 Horn (Low)
H 11 Headlight Beam Level Control Actuator LH
H 12 Headlight Beam Level Control Actuator RH

A 1
Black




A 2
Gray

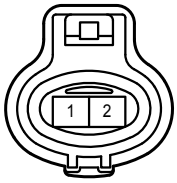

A 3
Gray




A 4
Gray

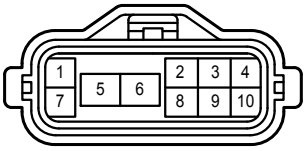

(1MZ-FE)

A 4
Gray

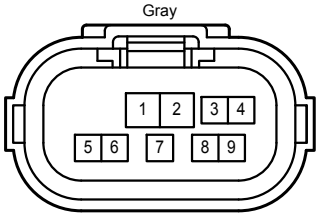

(2AZ-FE)


A 5
Gray




A 6
Gray




A 7
Black

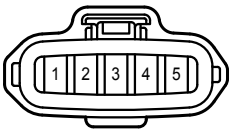


A 8
Yellow

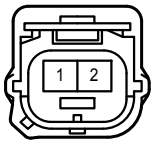


A 9
Yellow

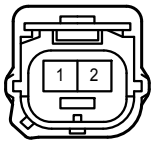

A 10




A 11
Gray

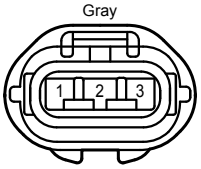


(LHD 1MZ-FE)

A 11
Black

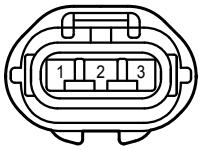


(LHD 2AZ-FE)

A 11
Black

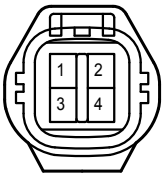

(RHD)

B 1
Gray

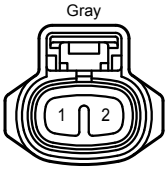

B 2
Gray




C 1
Black



C 2
Black



C 3
Black

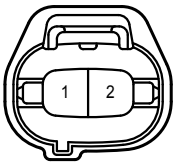

C 4
Black




(1MZ-FE)

C 4
Dark Gray




(2AZ-FE)

E 1
Gray

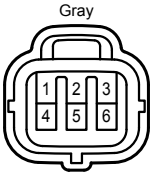

(1MZ-FE)

E 1
Gray

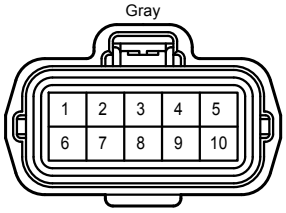

(2AZ-FE)

E 2
Dark Gray



(1MZ-FE)

E 2
Dark Gray



(2AZ-FE)

F 1
Gray

F 2
Gray

F 3
Brown



F 4
Brown



F 5
White



F 6
White



F 7
Gray



F 8
Gray



(Except LHD 1MZ-FE)

F 8
Black



(LHD 1MZ-FE)


F 9
Gray



H 1
Black




H 2
Black



H 3
Black




H 4
Black



H 5
Dark Gray



H 8
Black




H 9
Black



H 11
Black

H 12
Black

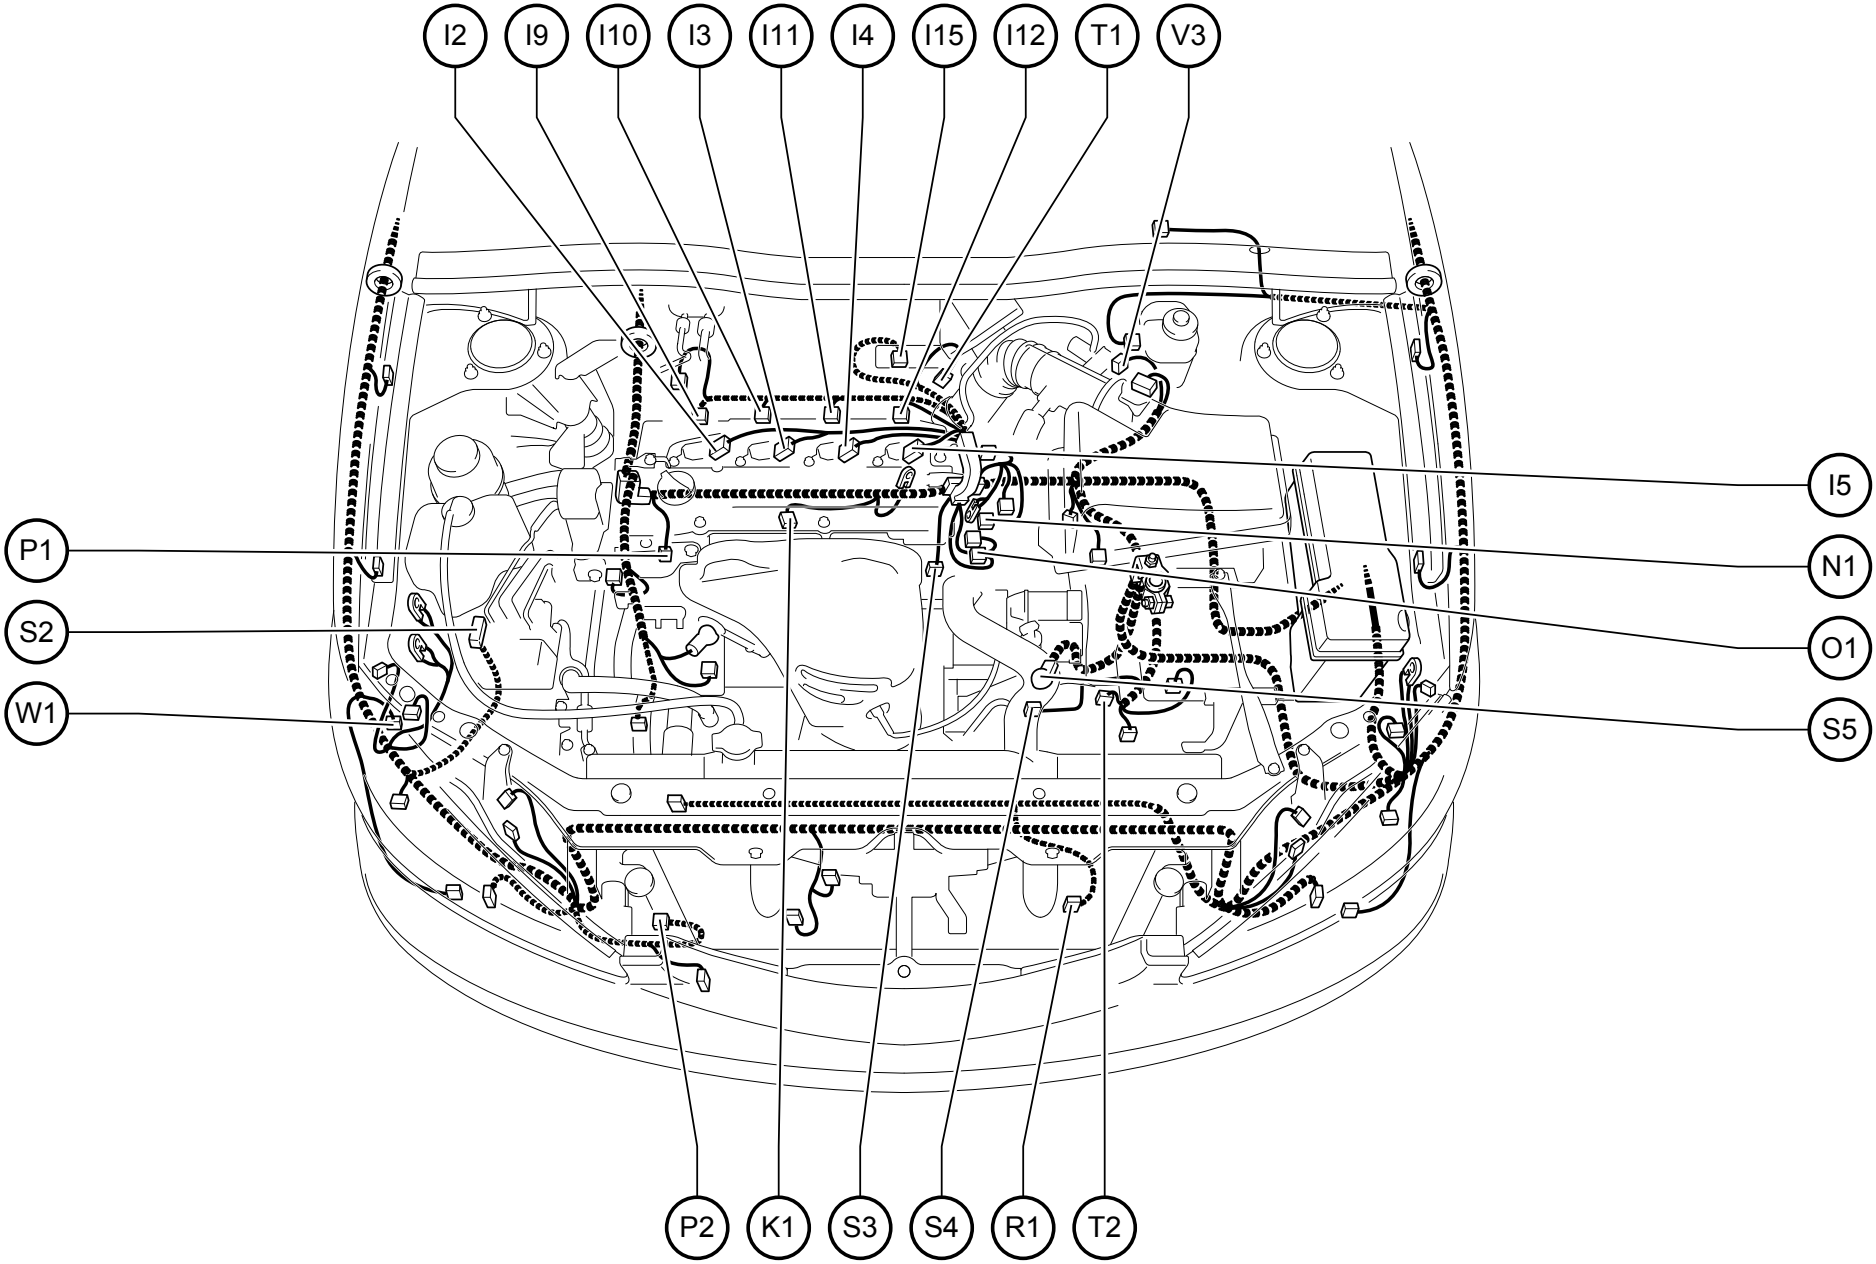
I2
I9
I10
I3
I11
I4
I15
I12
T1
V3
I5
N1
O1
S5
P1
S2
W1
P2
K1
S3
S4
R1
T2

I 2 Ignition Coil and Igniter No.1
I 3 Ignition Coil and Igniter No.2
I 4 Ignition Coil and Igniter No.3
I 5 Ignition Coil and Igniter No.4
I 9 Injector No.1
I 10 Injector No.2
I 11 Injector No.3
I 12 Injector No.4
I 15 ISC Valve

K 1 Knock Sensor (Bank 1)

N 1 Noise Filter (Ignition)

O 1 Oil Pressure SW

P 1 Power Steering Oil Pressure SW
P 2 Pressure SW

R 1 Radiator Fan Motor


S 2 Skid Control ECU with Actuator
S 3 Speed Sensor (Combination Meter)
S 4 Starter
S 5 Starter

T 1 Throttle Position Sensor
T 2 Turbine Speed Sensor

V 3 VSV (EVAP)


W 1 Washer Motor

I 2
Black




90980- 11885
0 9 0 II - 4

I 3
Black




90980- 11885
0 9 0 II - 4

I 4
Black



90980- 11885
0 9 0 II - 4

I 5
Black




90980- 11885
0 9 0 II - 4

I 9
Gray



(1MZ-FE)

I 9
Black




(2AZ-FE)

I 10
Gray



(1MZ-FE)

I 10
Black




(2AZ-FE)

I 11
Gray



(1MZ-FE)

I 11
Black




(2AZ-FE)

I 12
Gray



(1MZ-FE)

I 12
Black




(2AZ-FE)


I 15
Black



K 1
Black



N 1
Gray

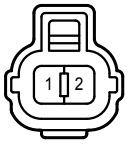


O 1
Gray




P 1
Black




P 2
Gray

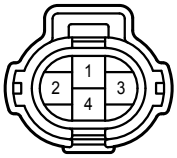

R 1
Gray

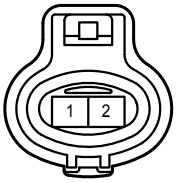

S 2
Red

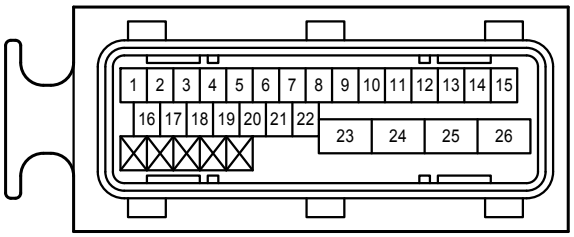


S 3
Black



S 4
Black




S 5




(1MZ-FE)

S 5



(2AZ-FE)

T 1
Black

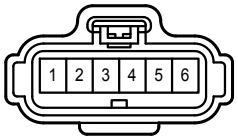


(2AZ-FE Australia, New Zealand)

T 1
Black




(Except 2AZ-FE Australia, New Zealand)

T 2
Black

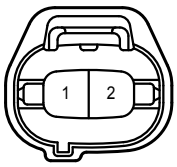


V 3
Blue

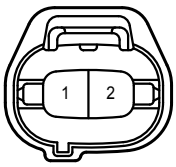


(1MZ-FE)


V 3
Black

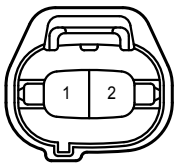

(2AZ-FE)

W 1
Black

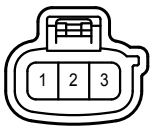

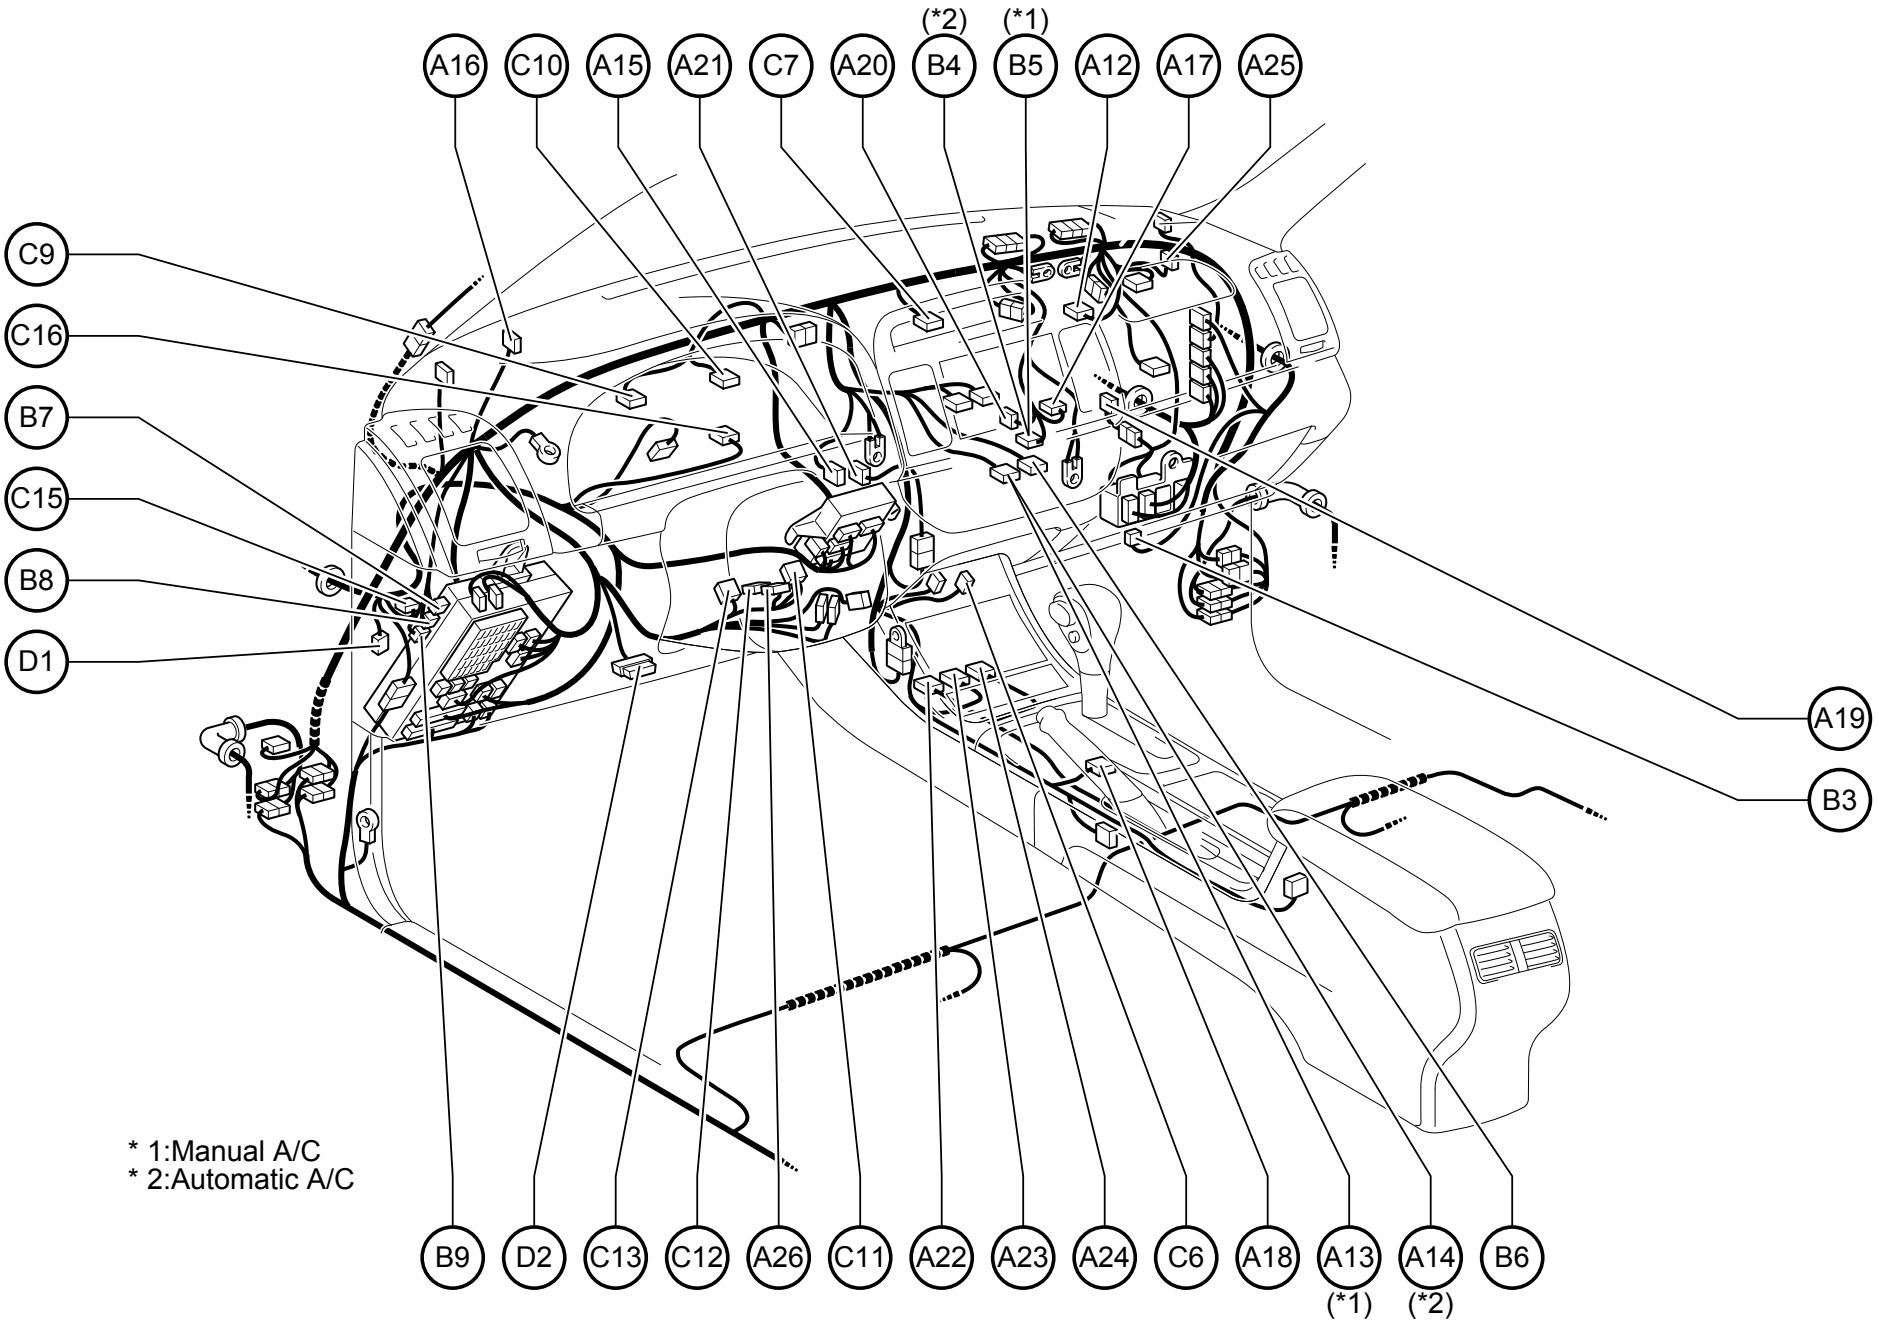

* 1:Manual A/C
* 2:Automatic A/C


A 12 A/C Amplifier
A 13 A/C Control Assembly
A 14 A/C Control Assembly
A 15 A/C Room Temp. Sensor
A 16 A/C Solar Sensor
A 17 A/C Thermistor
A 18 A/T Shift Lever Illumination , O/D Main SW
A 19 Air Inlet Control Servo Motor
A 20 Air Mix Control Servo Motor
A 21 Air Vent Mode Control Servo Motor
A 22 Airbag Sensor Assembly
A 23 Airbag Sensor Assembly
A 24 Airbag Sensor Assembly
A 25 Airbag Squib (Front Passenger Airbag Assembly)
A 26 Airbag Squib (Steering Wheel Pad)

B 3 Blower Motor
B 4 Blower Motor Controller
B 5 Blower Resister
B 6 Blower SW
B 7 Body ECU
B 8 Body ECU
B 9 Body ECU


C 6 Cigarette Lighter , Cigarette Light Illumination
C 7 Clock
C 9 Combination Meter
C 10 Combination Meter
C 11 Combination SW
C 12 Combination SW
C 13 Combination SW
C 15 Cruise Control Clutch SW
C 16 Cruise Control ECU

D 1 Diode (A/C)
D 2 DLC3


A 12
White




A 13
White

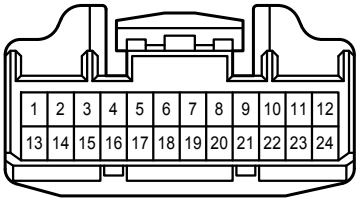


A 14
White

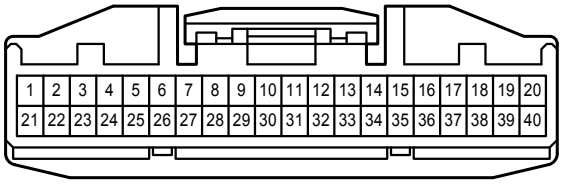


A 15
Black




A 16
Black




A 17
White




A 18
White




A 19
Black

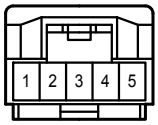

A 20
Black

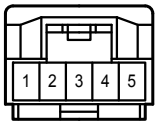


A 21
Black

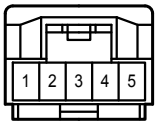


(Automatic A/C)

A 21
Black

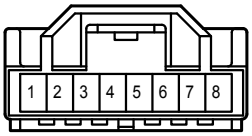


(Manual A/C)

A 22
Yellow

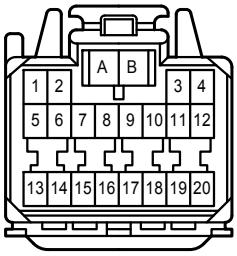


(w/ Side Airbag)

A 22
Yellow

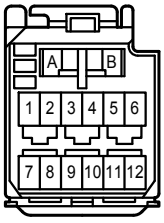


(w/o Side Airbag)

A 23
Yellow

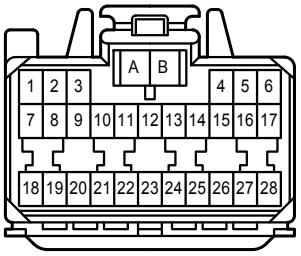


A 24
Yellow

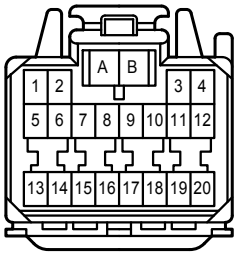


(w/ Side Airbag)

A 24
Yellow

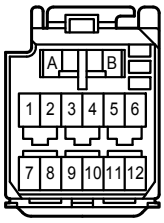


(w/o Side Airbag)

A 25
Black




A 26
Yellow

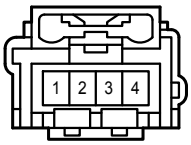


(RHD w/ Steering SW)

A 26
Yellow

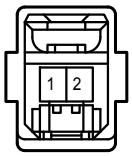


(RHD w/o Steering SW, LHD)

B 3
Black




(LHD)

B 3
Black




(RHD)


B 4
Black

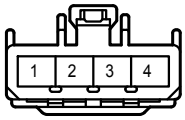


B 5
Black

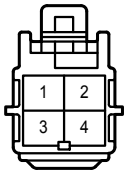


B 6
White

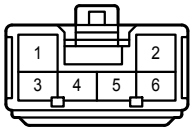


B 7
White

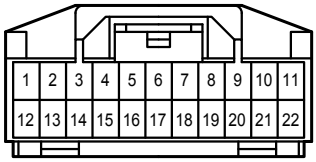

B 8
White

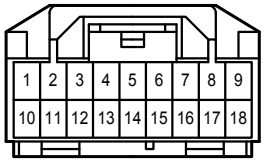


B 9
White



C 6
White




C 7
White

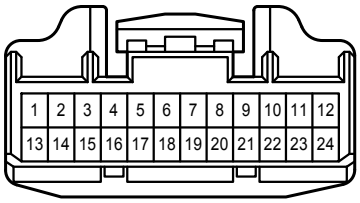


(w/ Multi Information Display)

C 7
White

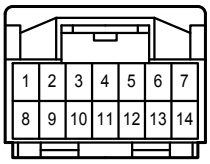


(w/o Multi Information Display)


C 9
White

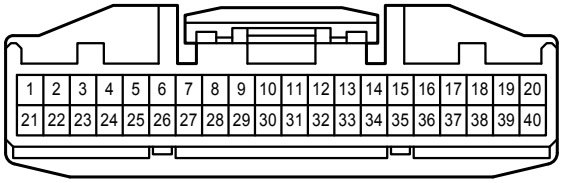


C 10
White

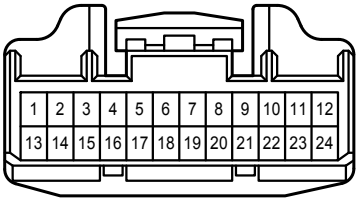

C 11
Black

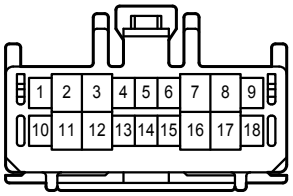

C 12
White

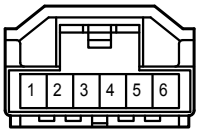


(LHD)

C 12
Black




(RHD w/ Steering SW)

C 12
Black

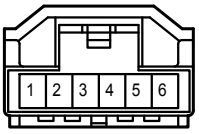


(RHD w/o Steering SW)

C 13
White

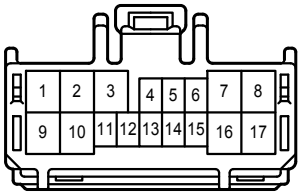


(LHD)

C 13
Black

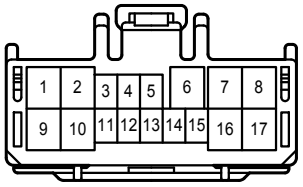


(RHD)


C 15
White




C 16
White

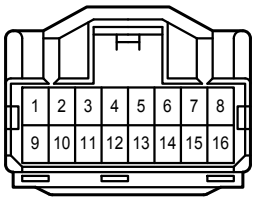


D 1
Gray



D 2
White

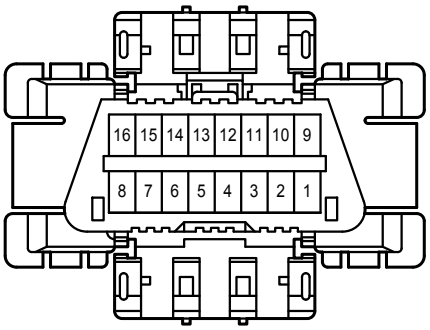

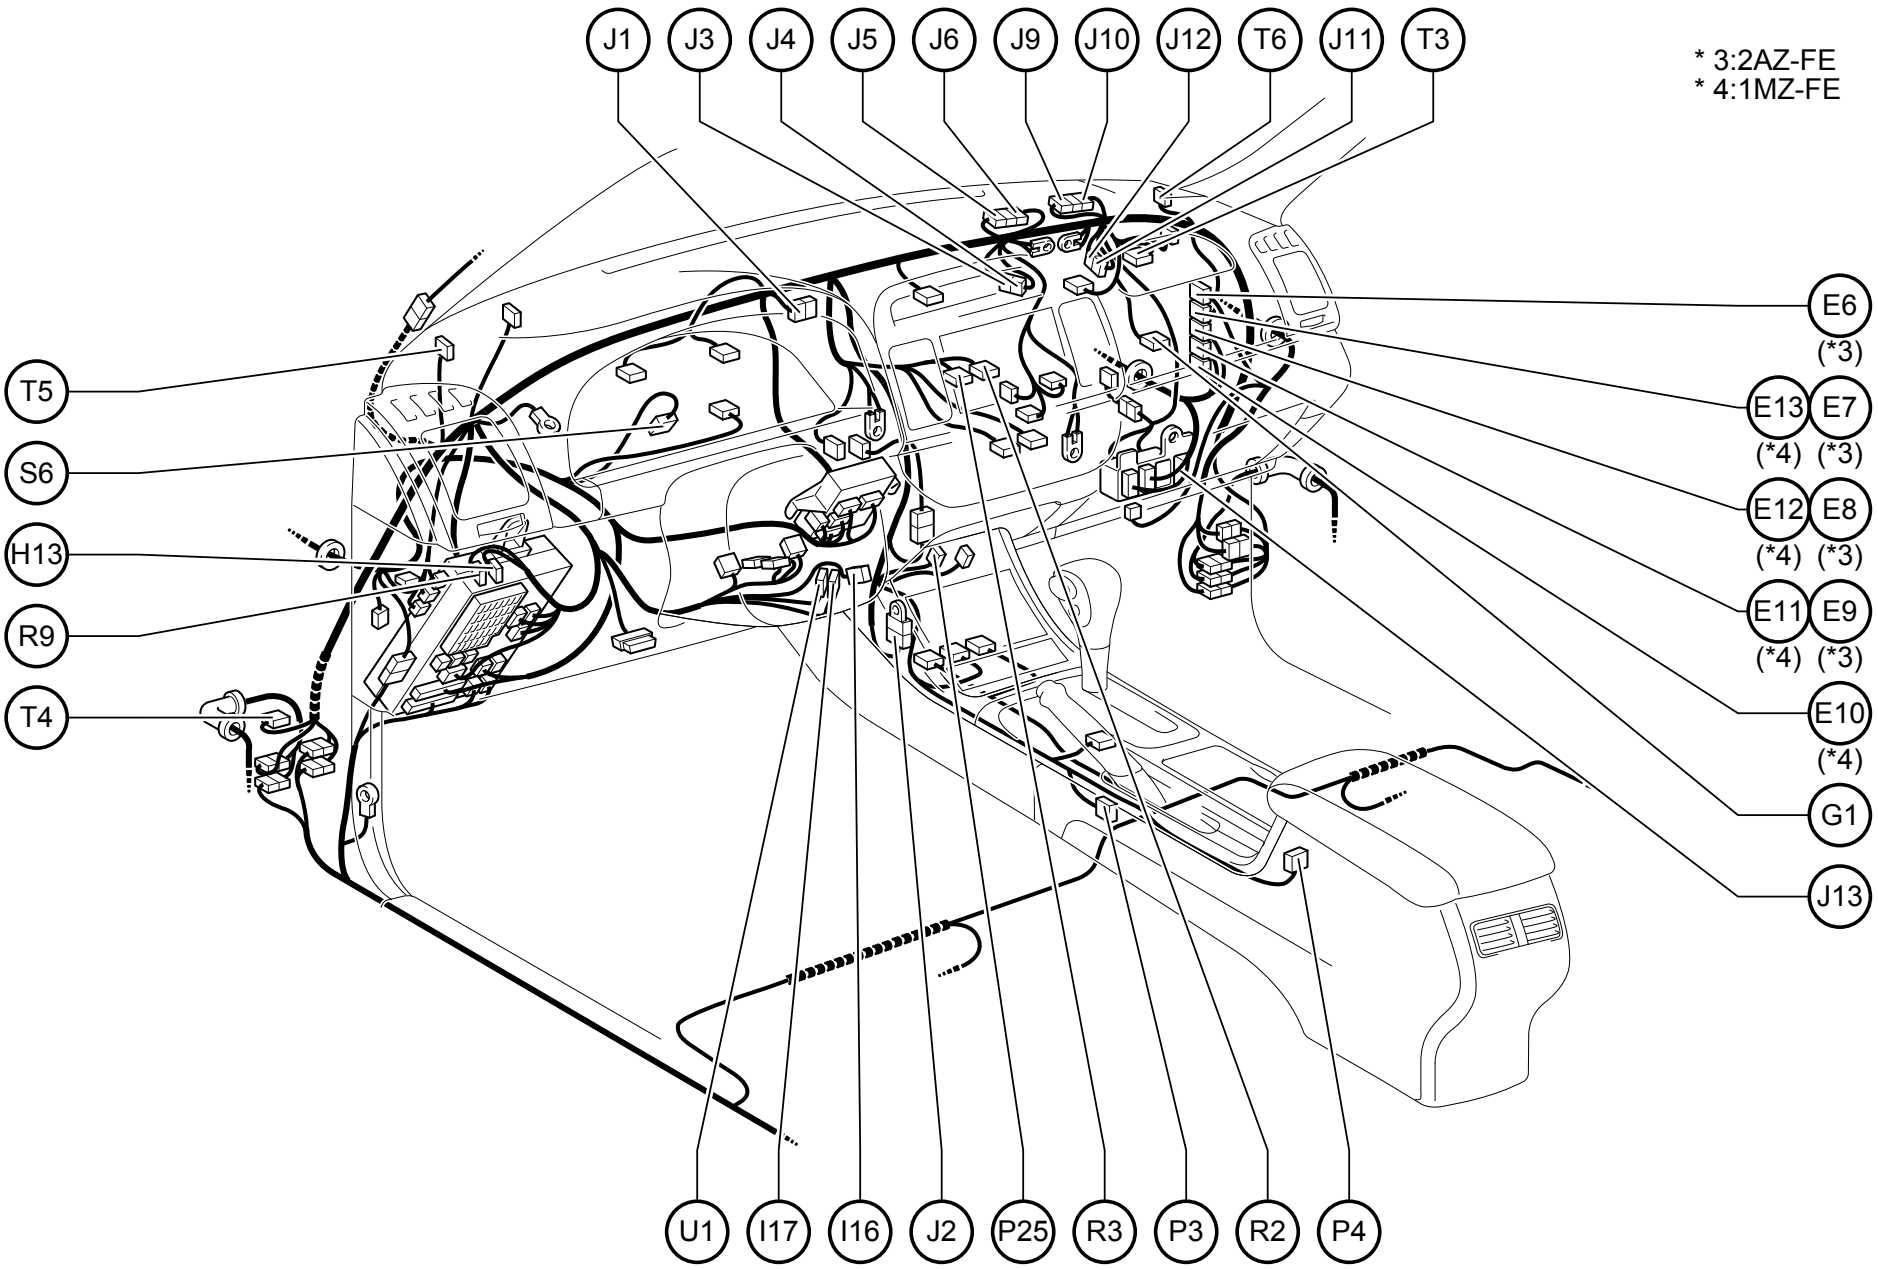
J1
J3
J4
J5
J6
J9
J10
J12
T6
J11
T3
* 3:2AZ-FE
* 4:1MZ-FE
E6
(*3)
E13
E7
(*4)
(*3)
E12
E8
(*4)
(*3)
E11
E9
(*4)
(*3)
E10
(*4)
G1
J13
T5
S6
H13
R9
T4
U1
I17
I16
J2
P25
R3
P3
R2
P4

E 6 Engine and ECT ECU (A/T) , Engine ECU (M/T)
E 7 Engine and ECT ECU (A/T) , Engine ECU (M/T)
E 8 Engine and ECT ECU (A/T) , Engine ECU (M/T)
E 9 Engine and ECT ECU (A/T) , Engine ECU (M/T)
E 10 Engine and ECT ECU (A/T) , Engine ECU (M/T)
E 11 Engine and ECT ECU (A/T) , Engine ECU (M/T)
E 12 Engine and ECT ECU (A/T) , Engine ECU (M/T)
E 13 Engine and ECT ECU (A/T) , Engine ECU (M/T)

G 1 Glove Box Light and SW

H 13 Headlight Beam Level Control SW

I 16 Ignition Key Cylinder Light , Transponder Key Amplifier
I 17 Ignition SW

J 1 Junction Connector
J 2 Junction Connector
J 3 Junction Connector
J 4 Junction Connector
J 5 Junction Connector
J 6 Junction Connector
J 9 Junction Connector
J 10 Junction Connector
J 11 Junction Connector
J 12 Junction Connector
J 13 Junction Connector

P 3 Parking Brake SW
P 4 Power Outlet (Rear)
P 25 Power Outlet (Front)


R 2 Radio and Player
R 3 Radio and Player
R 9 Rheostat

S 6 Stop Light SW


T 3 Transponder Key Computer
T 4 Turn Signal Flasher Relay
T 5 Tweeter LH
T 6 Tweeter RH

U 1 Unlock Warning SW


E 6
White

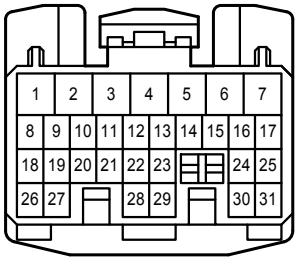


E 7
White

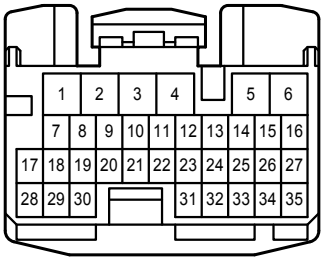


E 8
White

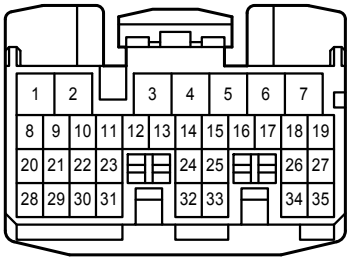


E 9
White

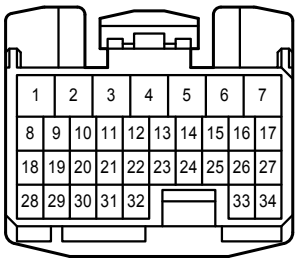


E 10
White

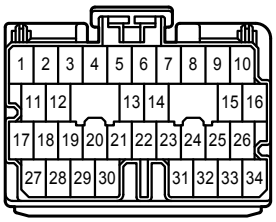


E 11
White

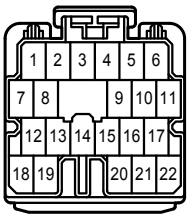

E 12
White

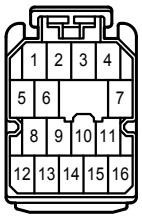

E 13
White

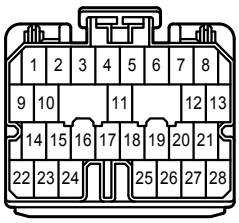


G 1
Black




H 13
White




I 16
Black

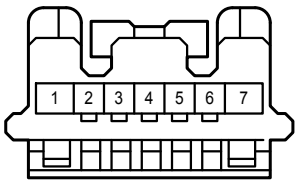


I 17
White

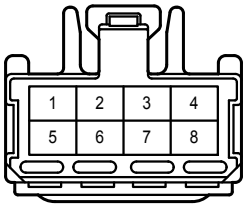


J 1
White



J 2
White

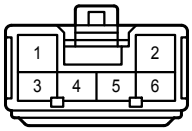


J 3
White

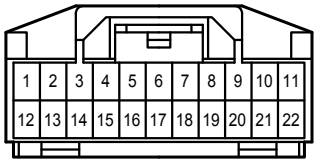


(LHD)

J 3
White

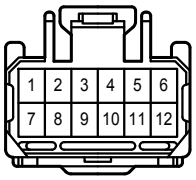


(RHD)

J 4
White

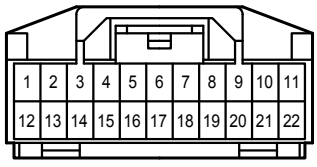


(LHD)

J 4
White

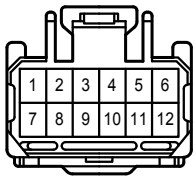


(RHD)


J 5
White

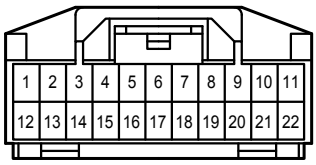


J 6
White

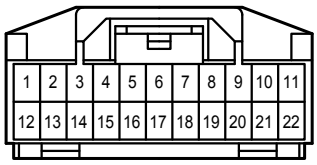


J 9
White

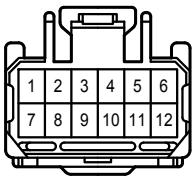

J 10
White

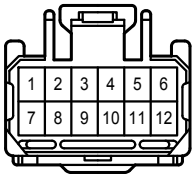


J 11
White

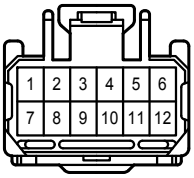


(LHD)

J 11
Black

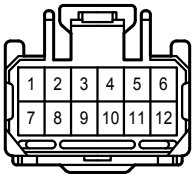


(RHD)

J 12
White

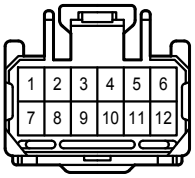


(LHD)

J 12
Black

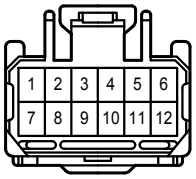


(RHD)

J 13
White

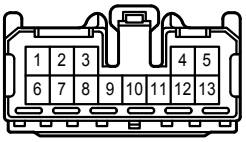

(1MZ-FE)

J 13
Black

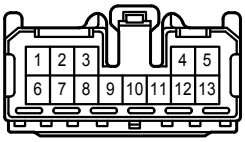

(2AZ-FE)

P 3
White




P 4
White



P 25
White




R 2
White

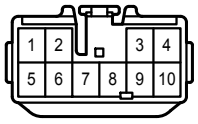

R 3
White




R 9
White

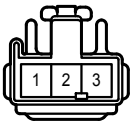


(LHD)

R 9
White

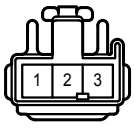


(RHD)

S 6
Blue

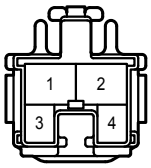


T 3
White

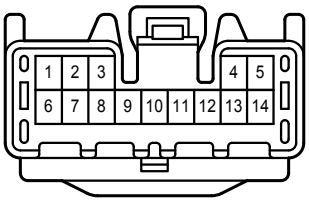


T 4
Black




T 5
White




T 6
White



U 1
White



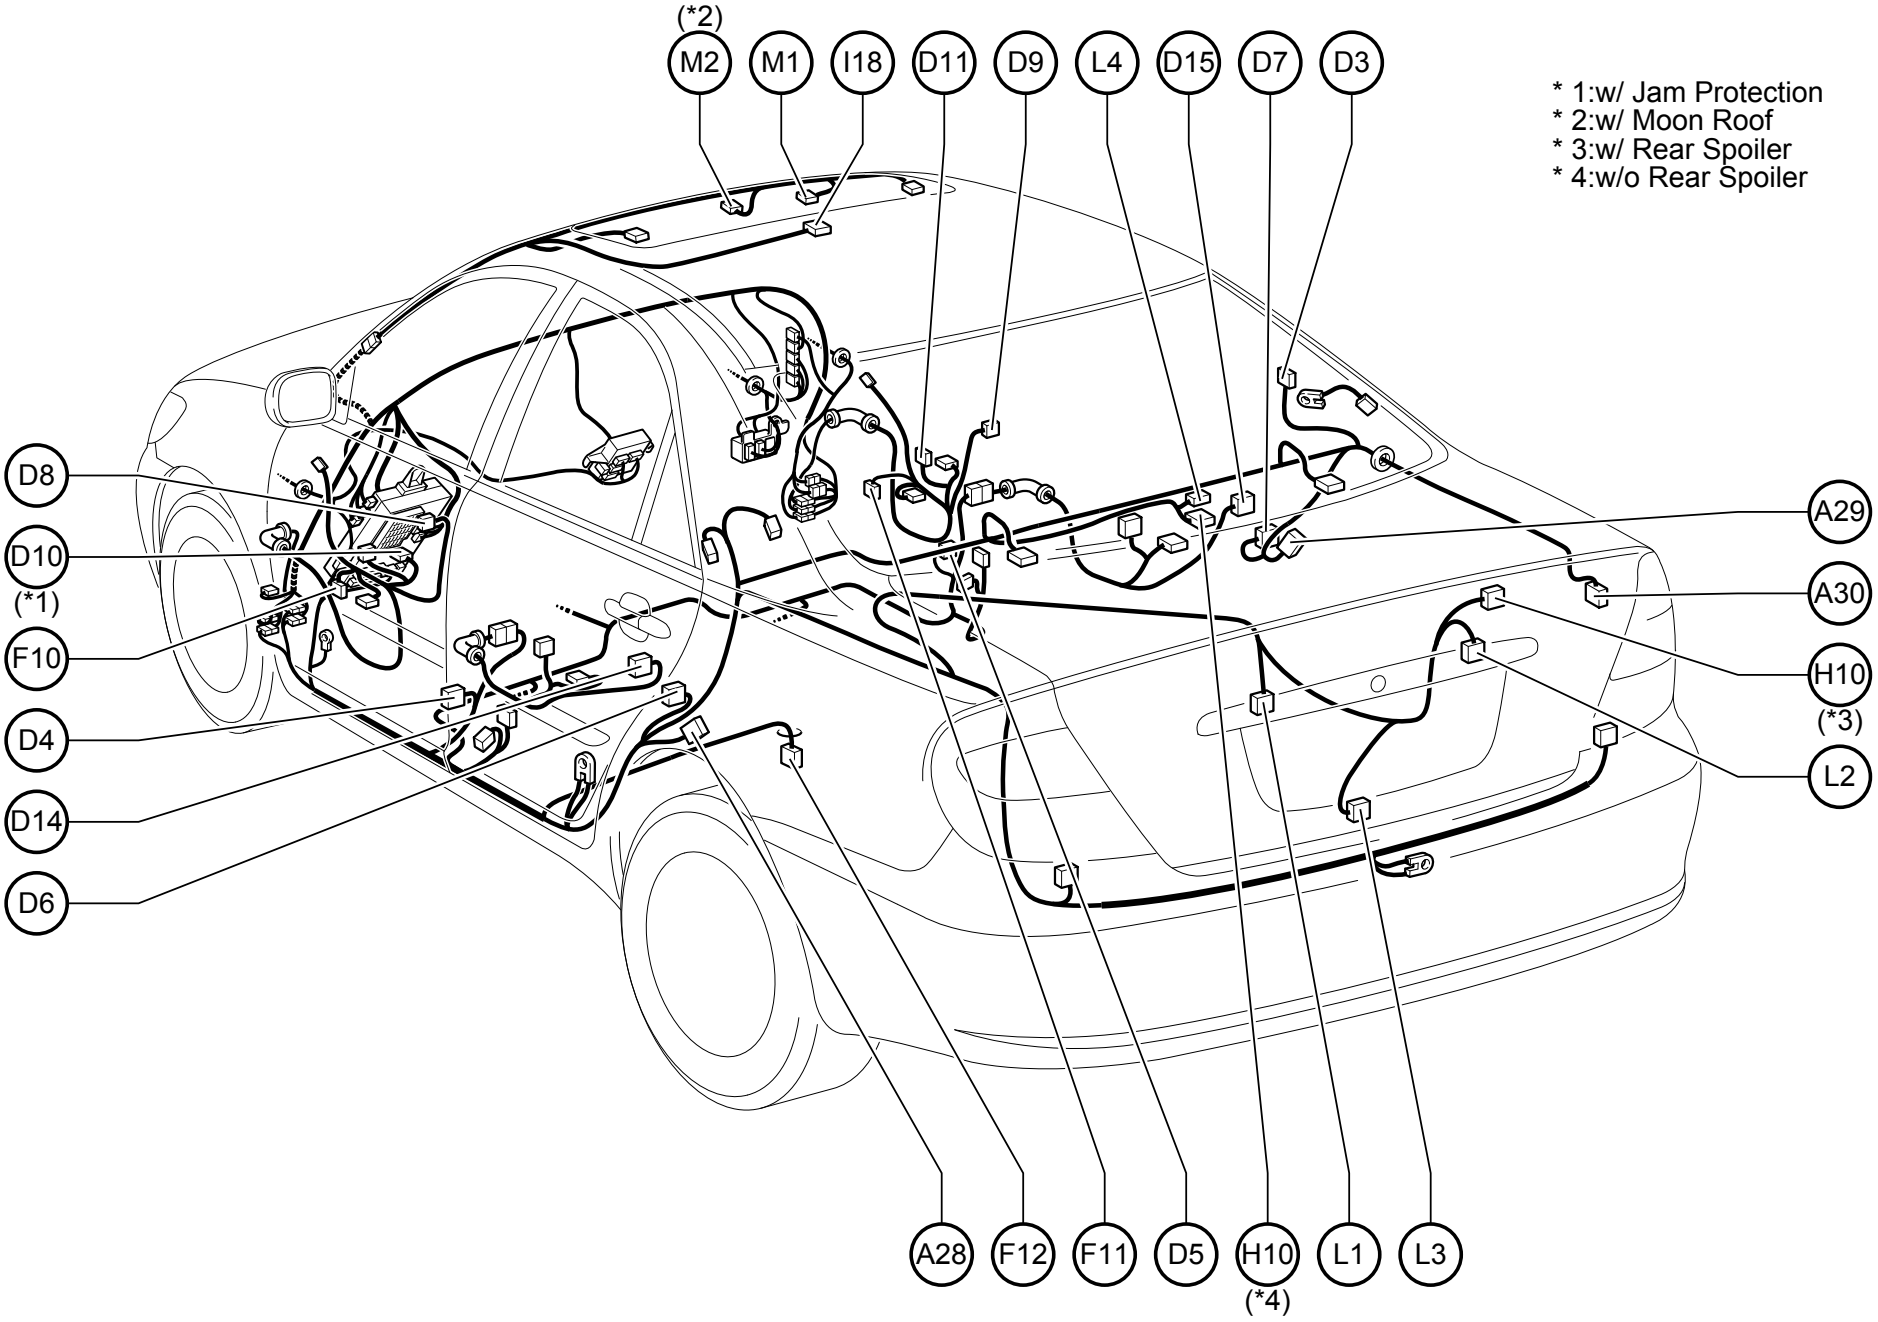
(*2)
M2
M1
I18
D11
D9
L4
D15
D7
D3
* 1:w/ Jam Protection
* 2:w/ Moon Roof
* 3:w/ Rear Spoiler
* 4:w/o Rear Spoiler
D8
D10
(*1)
F10
D4
D14
D6
A29
A30
H10
(*3)
L2
A28
F12
F11
D5
H10
(*4)
L1
L3

A 28 ABS Speed Sensor Rear LH
A 29 ABS Speed Sensor Rear RH
A 30 Auto Antenna Control Relay and Motor

D 3 Door Control Receiver
D 4 Door Courtesy SW Front LH
D 5 Door Courtesy SW Front RH
D 6 Door Courtesy SW Rear LH
D 7 Door Courtesy SW Rear RH
D 8 Door Key Lock and Unlock SW Front LH , Door Lock Motor Front LH , Door Unlock Detection SW Front LH
D 9 Door Key Lock and Unlock SW Front RH , Door Lock Motor Front RH , Door Unlock Detection SW Front RH
D 10 Door Lock Control SW Front LH , Power Window Master SW
D 11 Door Lock Control SW Front RH
D 14 Door Lock Motor Rear LH , Door Unlock Detection SW Rear LH
D 15 Door Lock Motor Rear RH , Door Unlock Detection SW Rear RH

F 10 Front Door Speaker LH
F 11 Front Door Speaker RH
F 12 Fuel Pump , Fuel Sender

H 10 High Mounted Stop Light

I 18 Interior Light

L 1 License Plate Light LH
L 2 License Plate Light RH
L 3 Luggage Compartment Door Opener Motor , Luggage Compartment Light SW
L 4 Luggage Compartment Light

M 1 Moon Roof Control ECU and Motor
M 2 Moon Roof Control SW , Personal Light

A 28
Gray



(LHD)

A 28
White




(RHD)


A 29
White



A 30
White

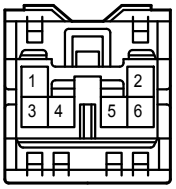

D 3
White

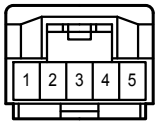

D 4
White



D 5
White




D 6
White




D 7
White




D 8
White

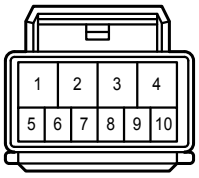

D 9
White

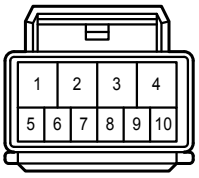


D 10
White

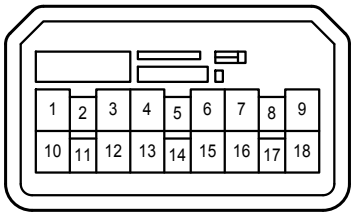


D 11
White



D 14
White

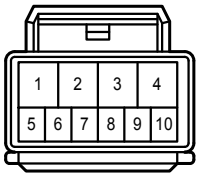

D 15
White

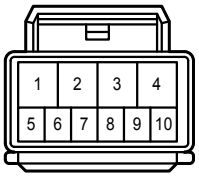

F 10
White



F 11
White



F 12
White




H 10
Black



(Except South Africa w/o Rear Spoiler)

H 10
Gray




(South Africa w/o Rear Spoiler)

H 10
White




(w/ Rear Spoiler)

I 18
White

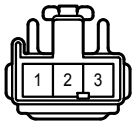

(w/ Moon Roof)

I 18
White



(w/o Moon Roof)


L 1
White



L 2
White



L 3
Black



L 4
White




(LHD)

L 4
Gray





(RHD)

M 1
White

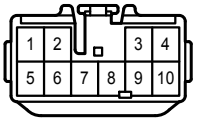

M 2
White

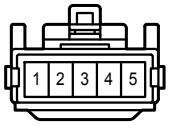

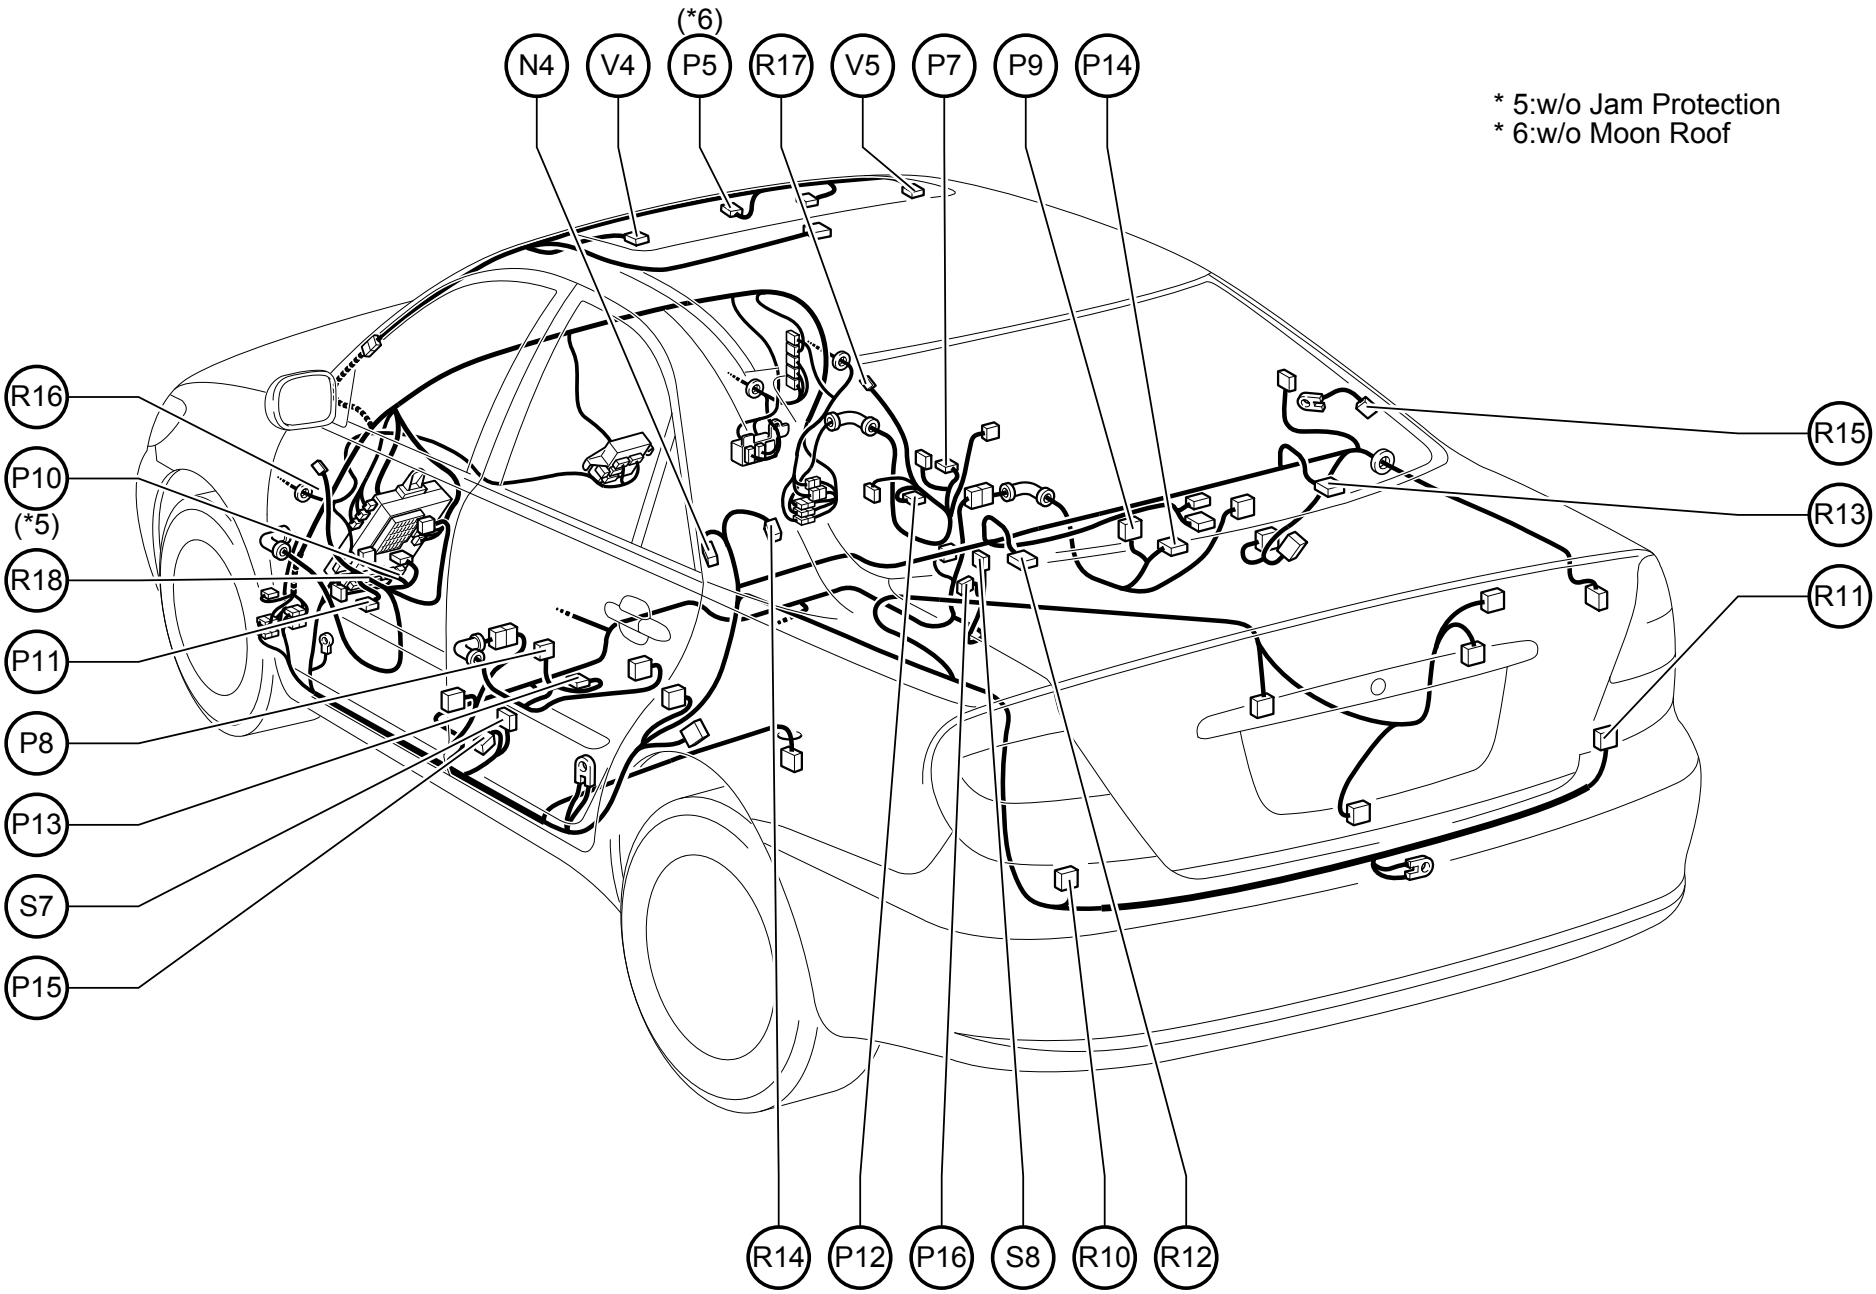
(*6)
N4
V4
P5
R17
V5
P7
P9
P14
* 5:w/o Jam Protection
* 6:w/o Moon Roof
R16
P10
(*5)
R18
P11
P8
P13
S7
P15
R15
R13
R11
R14
P12
P16
S8
R10
R12

N 4 Noise Filter


P 5 Personal Light
P 7 Power Window Control SW Front RH
P 8 Power Window Control SW Rear LH
P 9 Power Window Control SW Rear RH
P 10 Power Window Master SW
P 11 Power Window Motor Front LH
P 12 Power Window Motor Front RH
P 13 Power Window Motor Rear LH
P 14 Power Window Motor Rear RH
P 15 Pretensioner LH
P 16 Pretensioner RH

R 10 Rear Combination Light LH
R 11 Rear Combination Light RH
R 12 Rear Speaker LH
R 13 Rear Speaker RH
R 14 Rear Window Defogger
R 15 Rear Window Defogger
R 16 Remote Control Mirror LH
R 17 Remote Control Mirror RH
R 18 Remote Control Mirror SW


S 7 Side Airbag Sensor LH
S 8 Side Airbag Sensor RH

V 4 Vanity Light LH
V 5 Vanity Light RH


N 4
White




P 5
White




P 7
Black

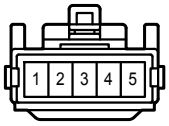


P 8
White

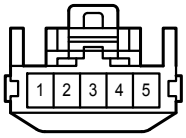

P 9
White

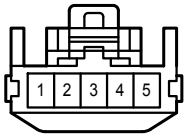

P 10
White

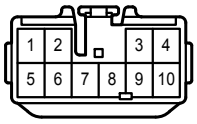

P 11
Black



P 12
Black




P 13
Black




P 14
Black




P 15
Yellow




P 16
Yellow



R 10
White

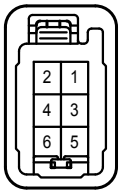

R 11
White

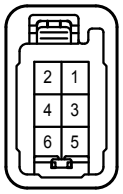

R 12
White



R 13
White



R 14
Black



R 15
Black




R 16
White




R 17
White




R 18
White

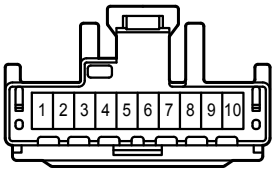

S 7
Yellow

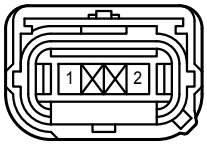

S 8
Yellow

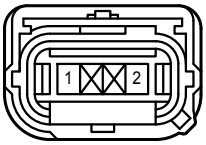


V 4
Blue



V 5
Blue

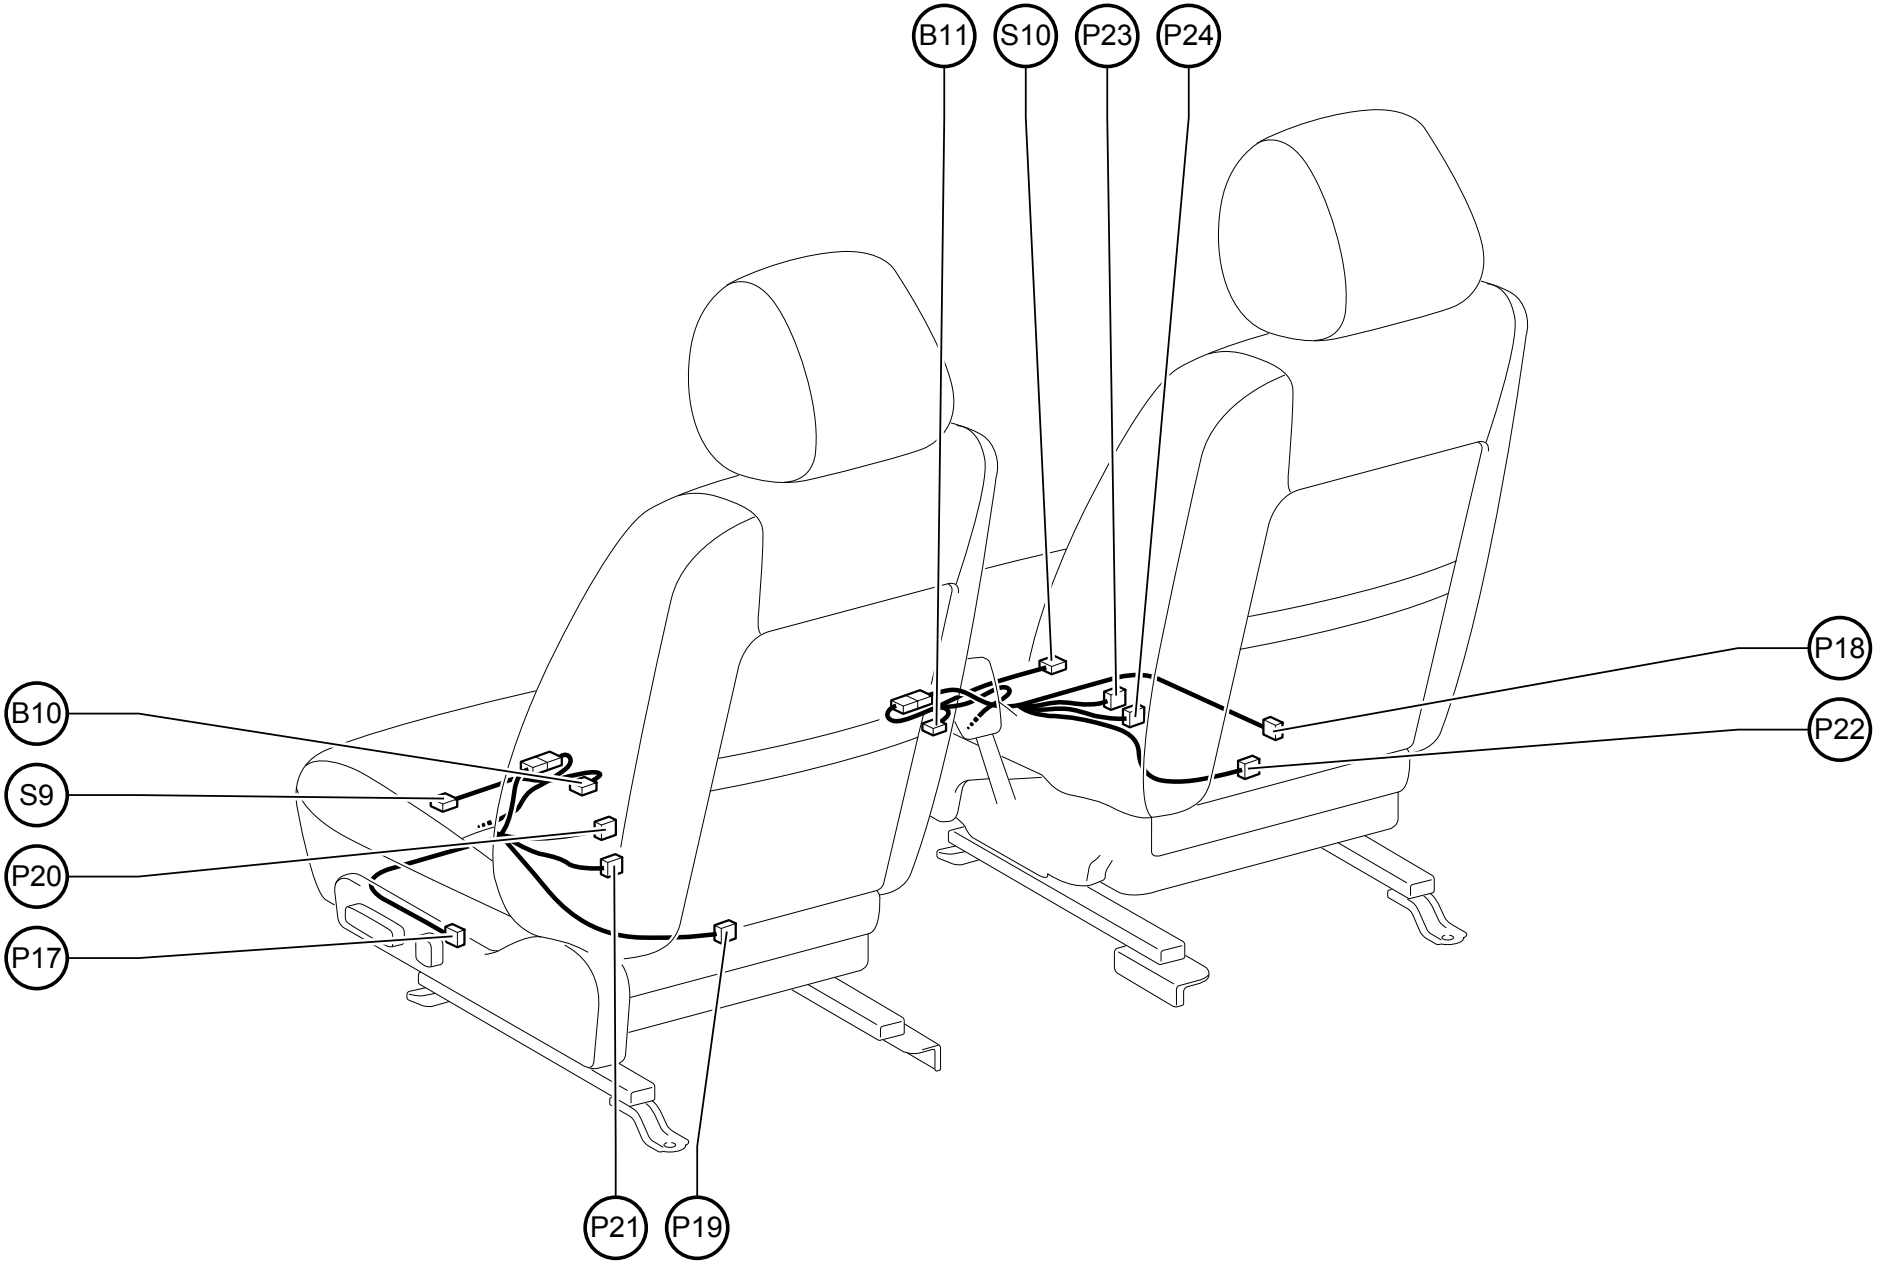



B11
S10
P23
P24
P18
P22
B10
S9
P20
P17
P21
P19

B 10 Buckle SW LH
B 11 Buckle SW RH , Occupant Detection Sensor


P 17 Power Seat Control SW (Driver's Seat)
P 18 Power Seat Control SW (Front Passenger's Seat)
P 19 Power Seat Motor (Driver's Seat Rear Vertical Control)
P 20 Power Seat Motor (Driver's Seat Reclining Control)
P 21 Power Seat Motor (Driver's Seat Slide Control)
P 22 Power Seat Motor (Front Passenger's Seat Rear Vertical Control)
P 23 Power Seat Motor (Front Passenger's Seat Reclining Control)
P 24 Power Seat Motor (Front Passenger's Seat Slide Control)

S 9 Side Airbag Squib LH
S 10 Side Airbag Squib RH


B 10
White




B 11
White




P 17
Black




P 18
Black




P 19
White




P 20
White




P 21
White




P 22
White



P 23
White



P 24
White




S 9
Yellow



S 10
Yellow

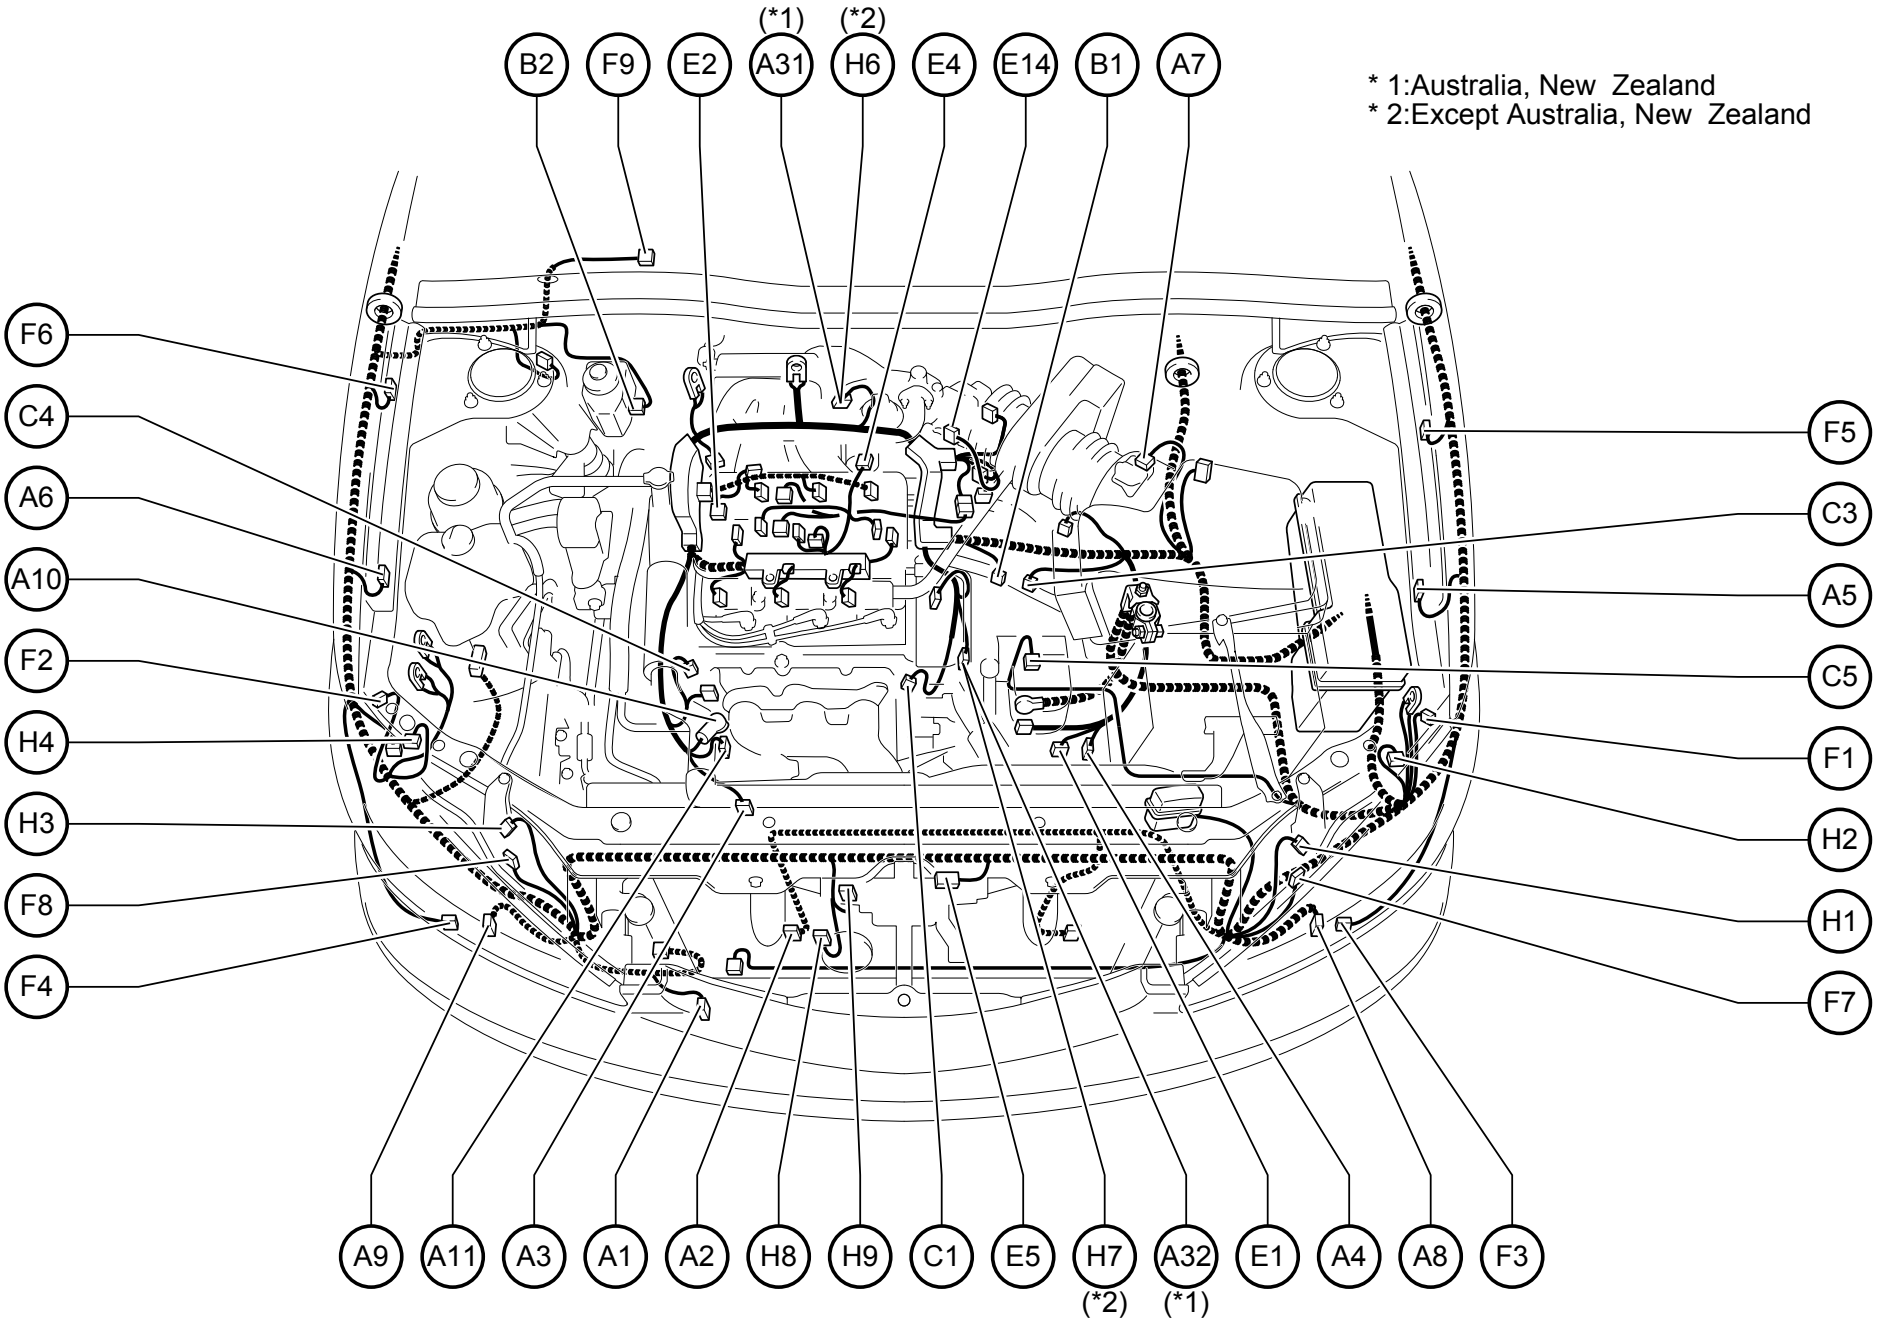


(*1)
(*2)
B2
F9
E2
A31
H6
E4
E14
B1
A7
* 1:Australia, New Zealand
* 2:Except Australia, New Zealand
F6
C4
A6
A10
F2
H4
H3
F8
F4
F5
C3
A5
C5
F1
H2
H1
F7
A9
A11
A3
A1
A2
H8
H9
C1
E5
H7
(*2)
A32
(*1)
E1
A4
A8
F3

A 1 A/C Ambient Temp. Sensor
A 2 A/C Condenser Fan Motor
A 3 A/C Lock Sensor , A/C Magnetic Clutch
A 4 A/T Indicator Light SW , Back-Up Light SW , Neutral Start SW
A 5 ABS Speed Sensor Front LH
A 6 ABS Speed Sensor Front RH
A 7 Air Flow Meter
A 8 Airbag Sensor Front LH
A 9 Airbag Sensor Front RH
A 10 Alternator
A 11 Alternator
A 31 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
A 32 Air Fuel Ratio Sensor (Bank 2 Sensor 1)

B 1 Back-Up Light SW
B 2 Brake Fluid Level Warning SW

C 1 Camshaft Position Sensor
C 3 Counter Gear Speed Sensor
C 4 Crankshaft Position Sensor
C 5 Cruise Control Actuator

E 1 ECT Solenoid
E 2 EFI Water Temp. Sensor
E 4 EGR Valve Position Sensor
E 5 Engine Hood Courtesy SW
E 14 EGR Gas Temp. Sensor


F 1 Front Clearance Light LH
F 2 Front Clearance Light RH
F 3 Front Fog Light LH
F 4 Front Fog Light RH
F 5 Front Side Turn Signal Light LH
F 6 Front Side Turn Signal Light RH
F 7 Front Turn Signal Light LH
F 8 Front Turn Signal Light RH
F 9 Front Wiper Motor

H 1 Headlight LH (High)
H 2 Headlight LH (Low)
H 3 Headlight RH (High)
H 4 Headlight RH (Low)
H 6 Heated Oxygen Sensor (Bank 1 Sensor 1)
H 7 Heated Oxygen Sensor (Bank 2 Sensor 1)
H 8 Horn (High)
H 9 Horn (Low)

A 1
Black




A 2
Gray

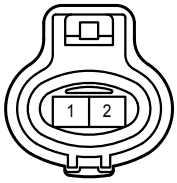

A 3
Gray



A 4
Gray

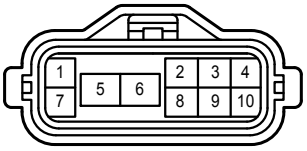


A 5
Gray




A 6
Gray




A 7
Black

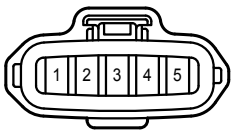


A 8
Yellow

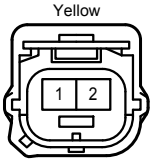

A 9
Yellow

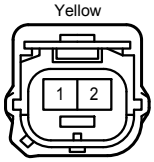

A 10



A 11
Black




A 31
Dark Gray



A 32
Dark Gray



B 1
Gray

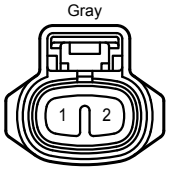


B 2
Gray



C 1
Black



C 3
Black

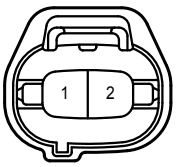


C 4
Black



C 5
Black



E 1
Gray

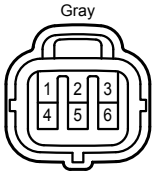

E 2
Dark Gray



E 4
Black




E 5
Black




E 14
Dark Gray



F 1
Gray

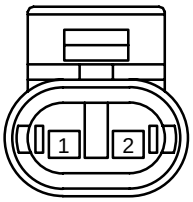

F 2
Gray

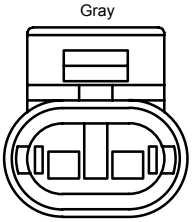

F 3
Brown



F 4
Brown



F 5
White



F 6
White



F 7
Gray



F 8
Gray




F 9
Gray



H 1
Black




H 2
Black



H 3
Black



H 4
Black




H 6
Dark Gray



H 7
Dark Gray




H 8
Black



H 9
Black

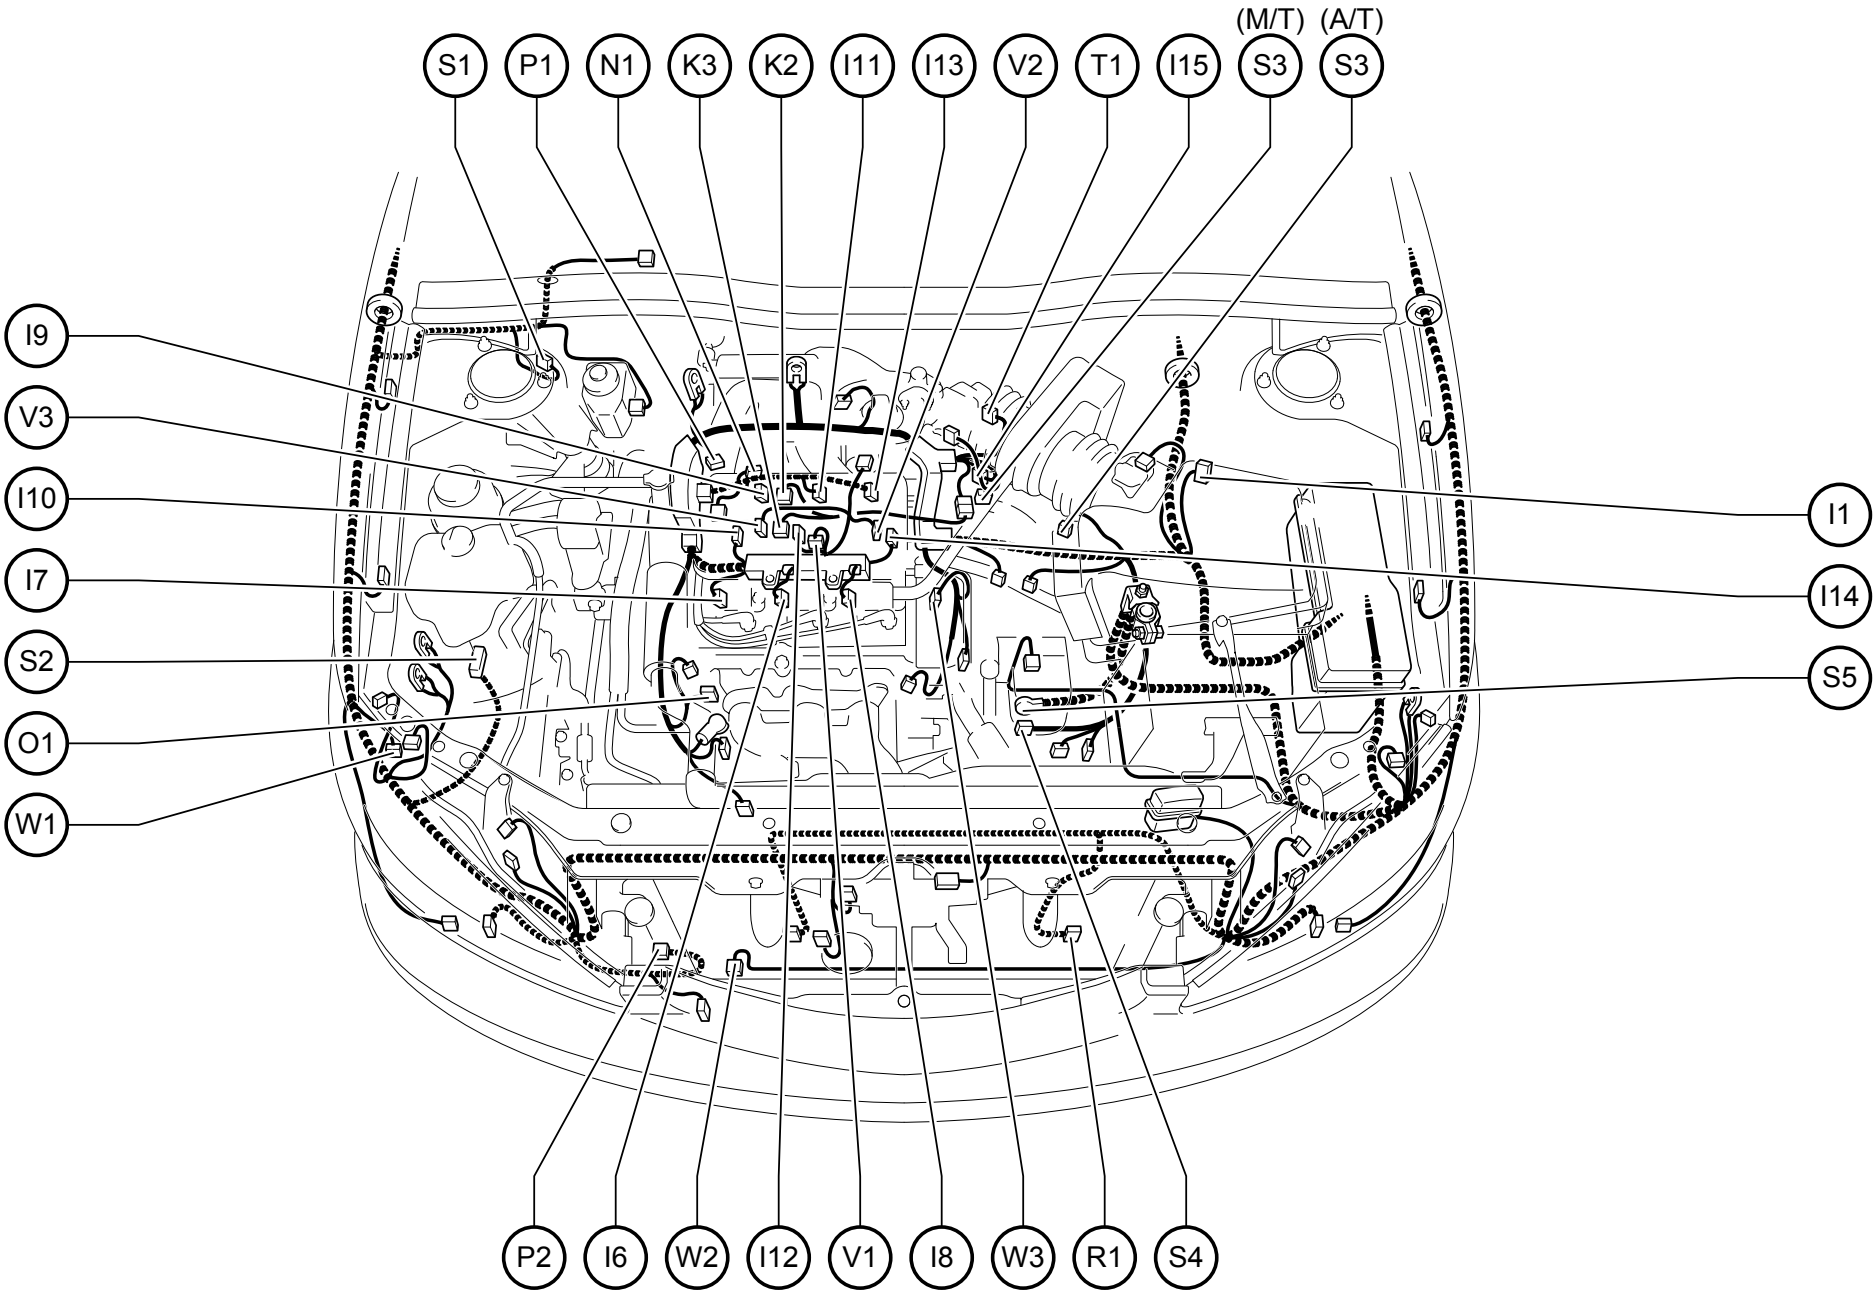


(M/T)
(A/T)
S1
P1
N1
K3
K2
I11
I13
V2
T1
I15
S3
S3
I9
V3
I10
I7
S2
O1
W1
I1
I14
S5
P2
I6
W2
I12
V1
I8
W3
R1
S4

I 1 Igniter
I 6 Ignition Coil No.1
I 7 Ignition Coil No.2
I 8 Ignition Coil No.3
I 9 Injector No.1
I 10 Injector No.2
I 11 Injector No.3
I 12 Injector No.4
I 13 Injector No.5
I 14 Injector No.6
I 15 ISC Valve

K 2 Knock Sensor (Bank 1)
K 3 Knock Sensor (Bank 2)

N 1 Noise Filter (Ignition)

O 1 Oil Pressure SW

P 1 Power Steering Oil Pressure SW
P 2 Pressure SW

R 1 Radiator Fan Motor


S 1 Security Horn
S 2 Skid Control ECU with Actuator
S 3 Speed Sensor (Combination Meter)
S 4 Starter
S 5 Starter

T 1 Throttle Position Sensor


V 1 VSV (ACIS)
V 2 VSV (EGR)
V 3 VSV (EVAP)

W 1 Washer Motor
W 2 Water Temp. SW No.1
W 3 Water Temp. SW No.2


I 1
Black

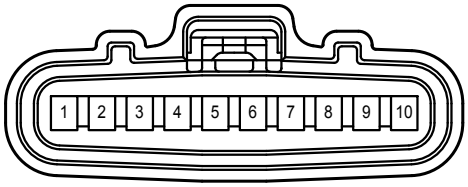


I 6
Black



I 7
Black



I 8
Black



I 9
Gray



I 10
Gray



I 11
Gray



I 12
Gray



I 13
Gray



I 14
Gray



I 15
Black



K 2
Dark Gray



K 3
Dark Gray



N 1
Gray




O 1
Gray




P 1
Black



P 2
Gray

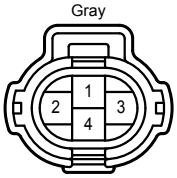


R 1
Gray

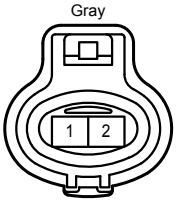

S 1
Black



S 2
Red

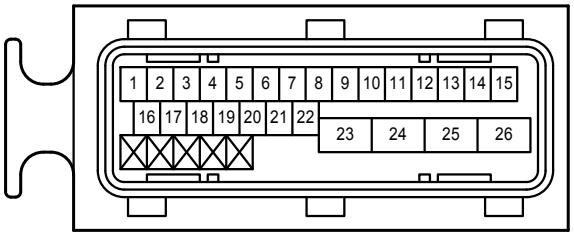


S 3
Black



S 4
Black




S 5




T 1
Black




V 1
Brown

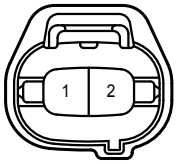


V 2
Brown

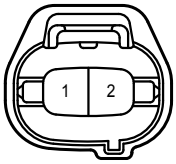


V 3
Blue

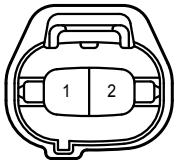

W 1
Black

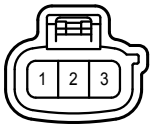


W 2
Gray

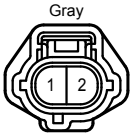

W 3
Gray

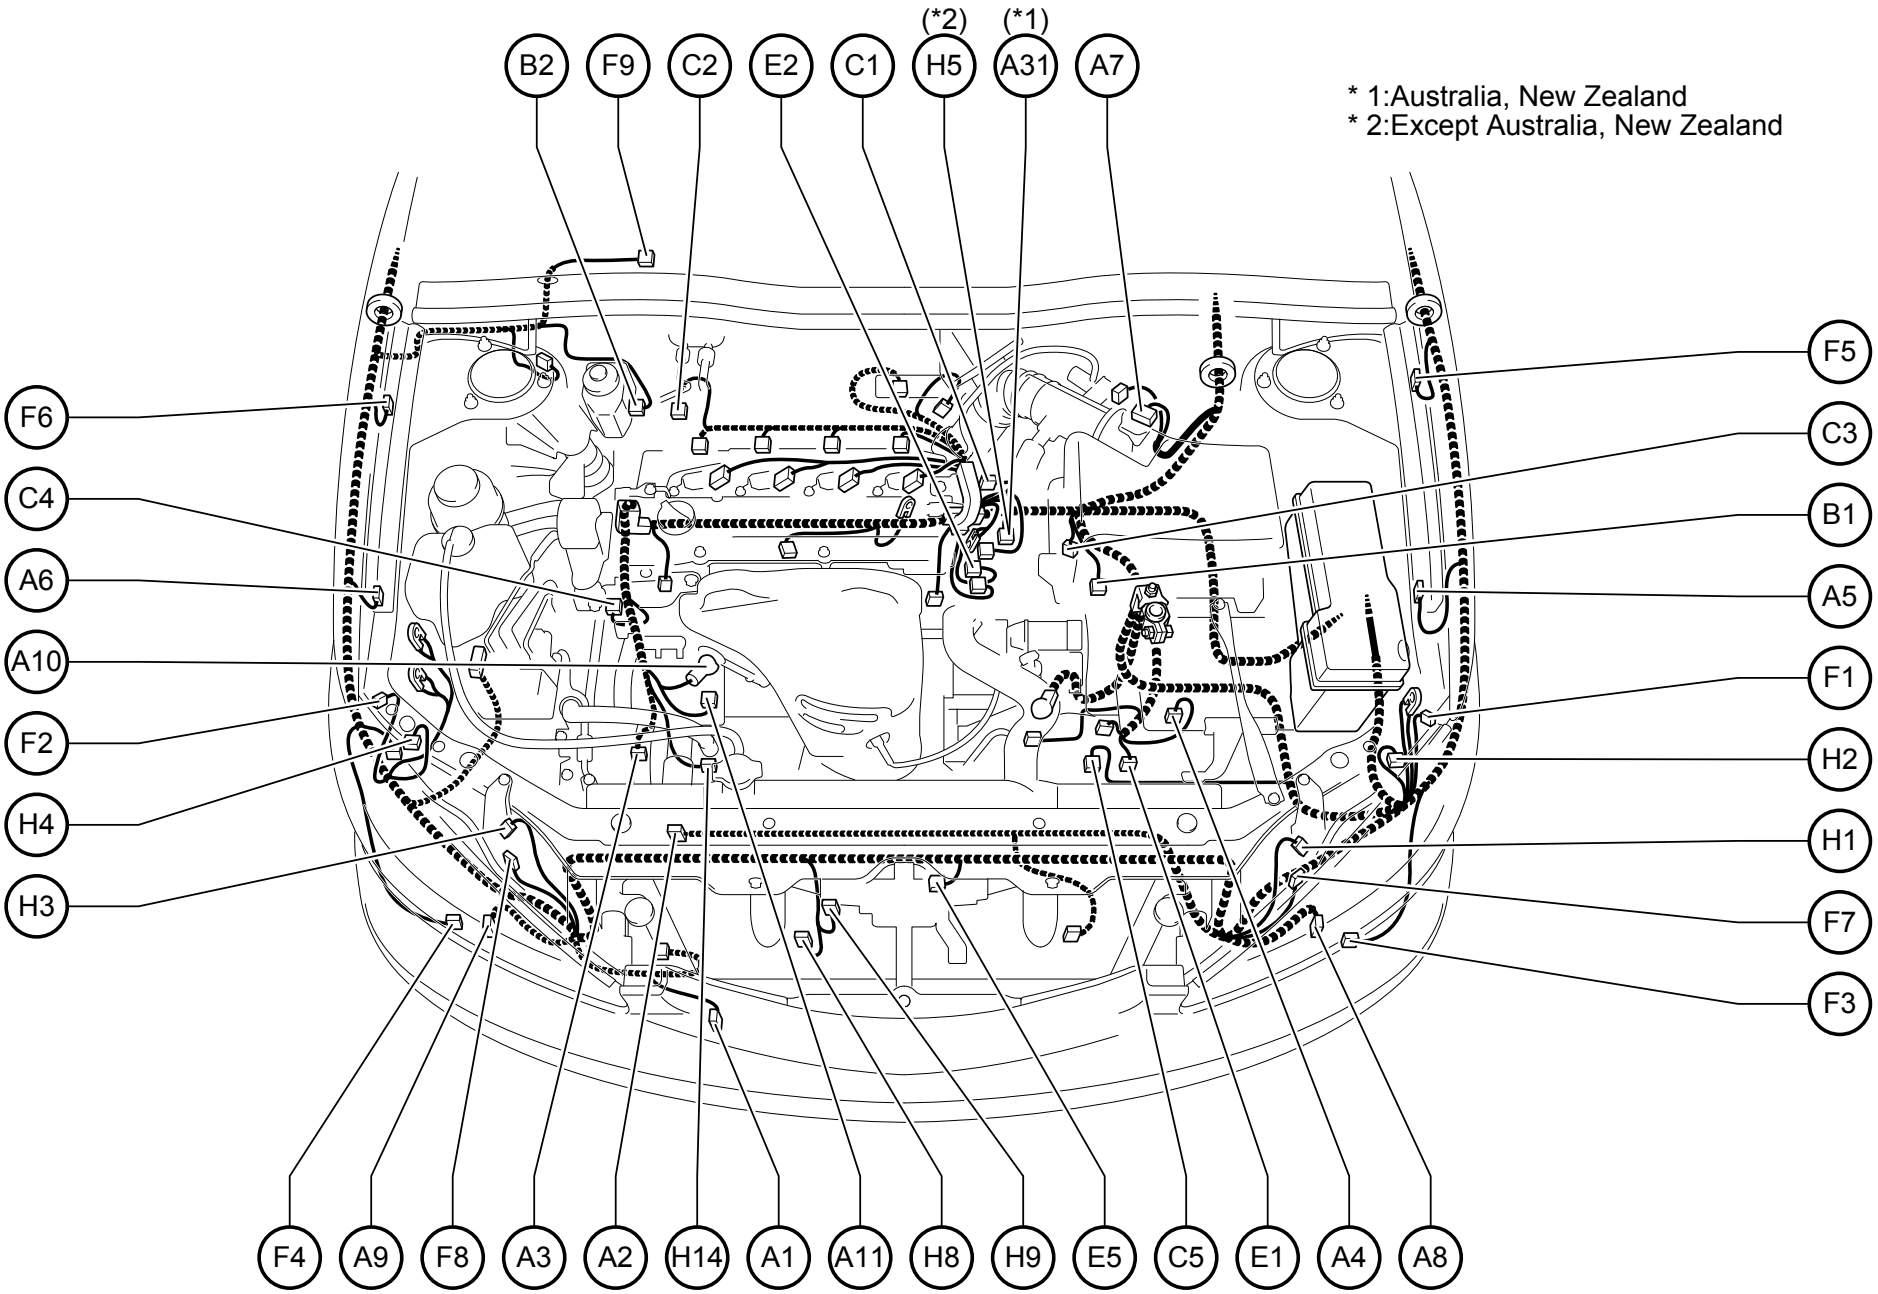


(*2)
(*1)
B2
F9
C2
E2
C1
H5
A31
A7
* 1:Australia, New Zealand
* 2:Except Australia, New Zealand
F5
C3
B1
A5
F1
H2
H1
F7
F3
F6
C4
A6
A10
F2
H4
H3
F4
A9
F8
A3
A2
H14
A1
A11
H8
H9
E5
C5
E1
A4
A8

A 1 A/C Ambient Temp. Sensor
A 2 A/C Condenser Fan Motor
A 3 A/C Lock Sensor , A/C Magnetic Clutch
A 4 A/T Indicator Light SW , Back-Up Light SW , Neutral Start SW
A 5 ABS Speed Sensor Front LH
A 6 ABS Speed Sensor Front RH
A 7 Air Flow Meter
A 8 Airbag Sensor Front LH
A 9 Airbag Sensor Front RH
A 10 Alternator
A 11 Alternator
A 31 Air Fuel Ratio Sensor (Bank 1 Sensor 1)

B 1 Back-Up Light SW
B 2 Brake Fluid Level Warning SW

C 1 Camshaft Position Sensor
C 2 Camshaft Timing Oil Control Valve
C 3 Counter Gear Speed Sensor
C 4 Crankshaft Position Sensor
C 5 Cruise Control Actuator

E 1 ECT Solenoid
E 2 EFI Water Temp. Sensor
E 5 Engine Hood Courtesy SW


F 1 Front Clearance Light LH
F 2 Front Clearance Light RH
F 3 Front Fog Light LH
F 4 Front Fog Light RH
F 5 Front Side Turn Signal Light LH
F 6 Front Side Turn Signal Light RH
F 7 Front Turn Signal Light LH
F 8 Front Turn Signal Light RH
F 9 Front Wiper Motor

H 1 Headlight LH (High)
H 2 Headlight LH (Low)
H 3 Headlight RH (High)
H 4 Headlight RH (Low)
H 5 Heated Oxygen Sensor (Bank 1 Sensor 1)
H 8 Horn (High)
H 9 Horn (Low)
H 14 Heated Oxygen Sensor (Bank 1 Sensor 2)

A 1
Black




A 2
Gray

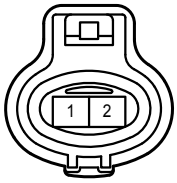

A 3
Gray



A 4
Gray

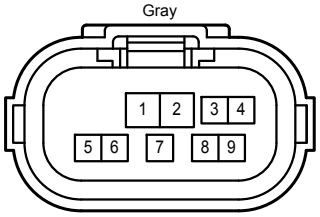


A 5
Gray




A 6
Gray




A 7
Black

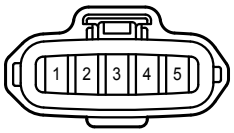


A 8
Yellow

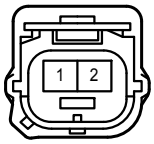

A 9
Yellow

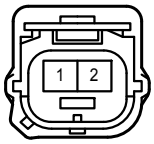

A 10




A 11
Black



A 31
Dark Gray



B 1
Gray

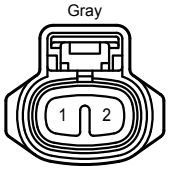

B 2
Gray




C 1
Black



C 2
Black



C 3
Black

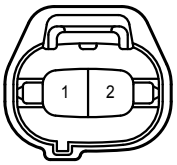


C 4
Dark Gray



C 5
Black



E 1
Gray

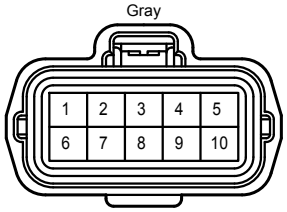

E 2
Dark Gray




E 5
Black



F 1
Gray



F 2
Gray

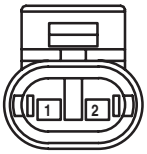

F 3
Brown



F 4
Brown



F 5
White



F 6
White



F 7
Gray



F 8
Gray




F 9
Gray



H 1
Black




H 2
Black



H 3
Black



H 4
Black



H 5
Dark Gray



H 8
Black




H 9
Black




H 14
Dark Gray

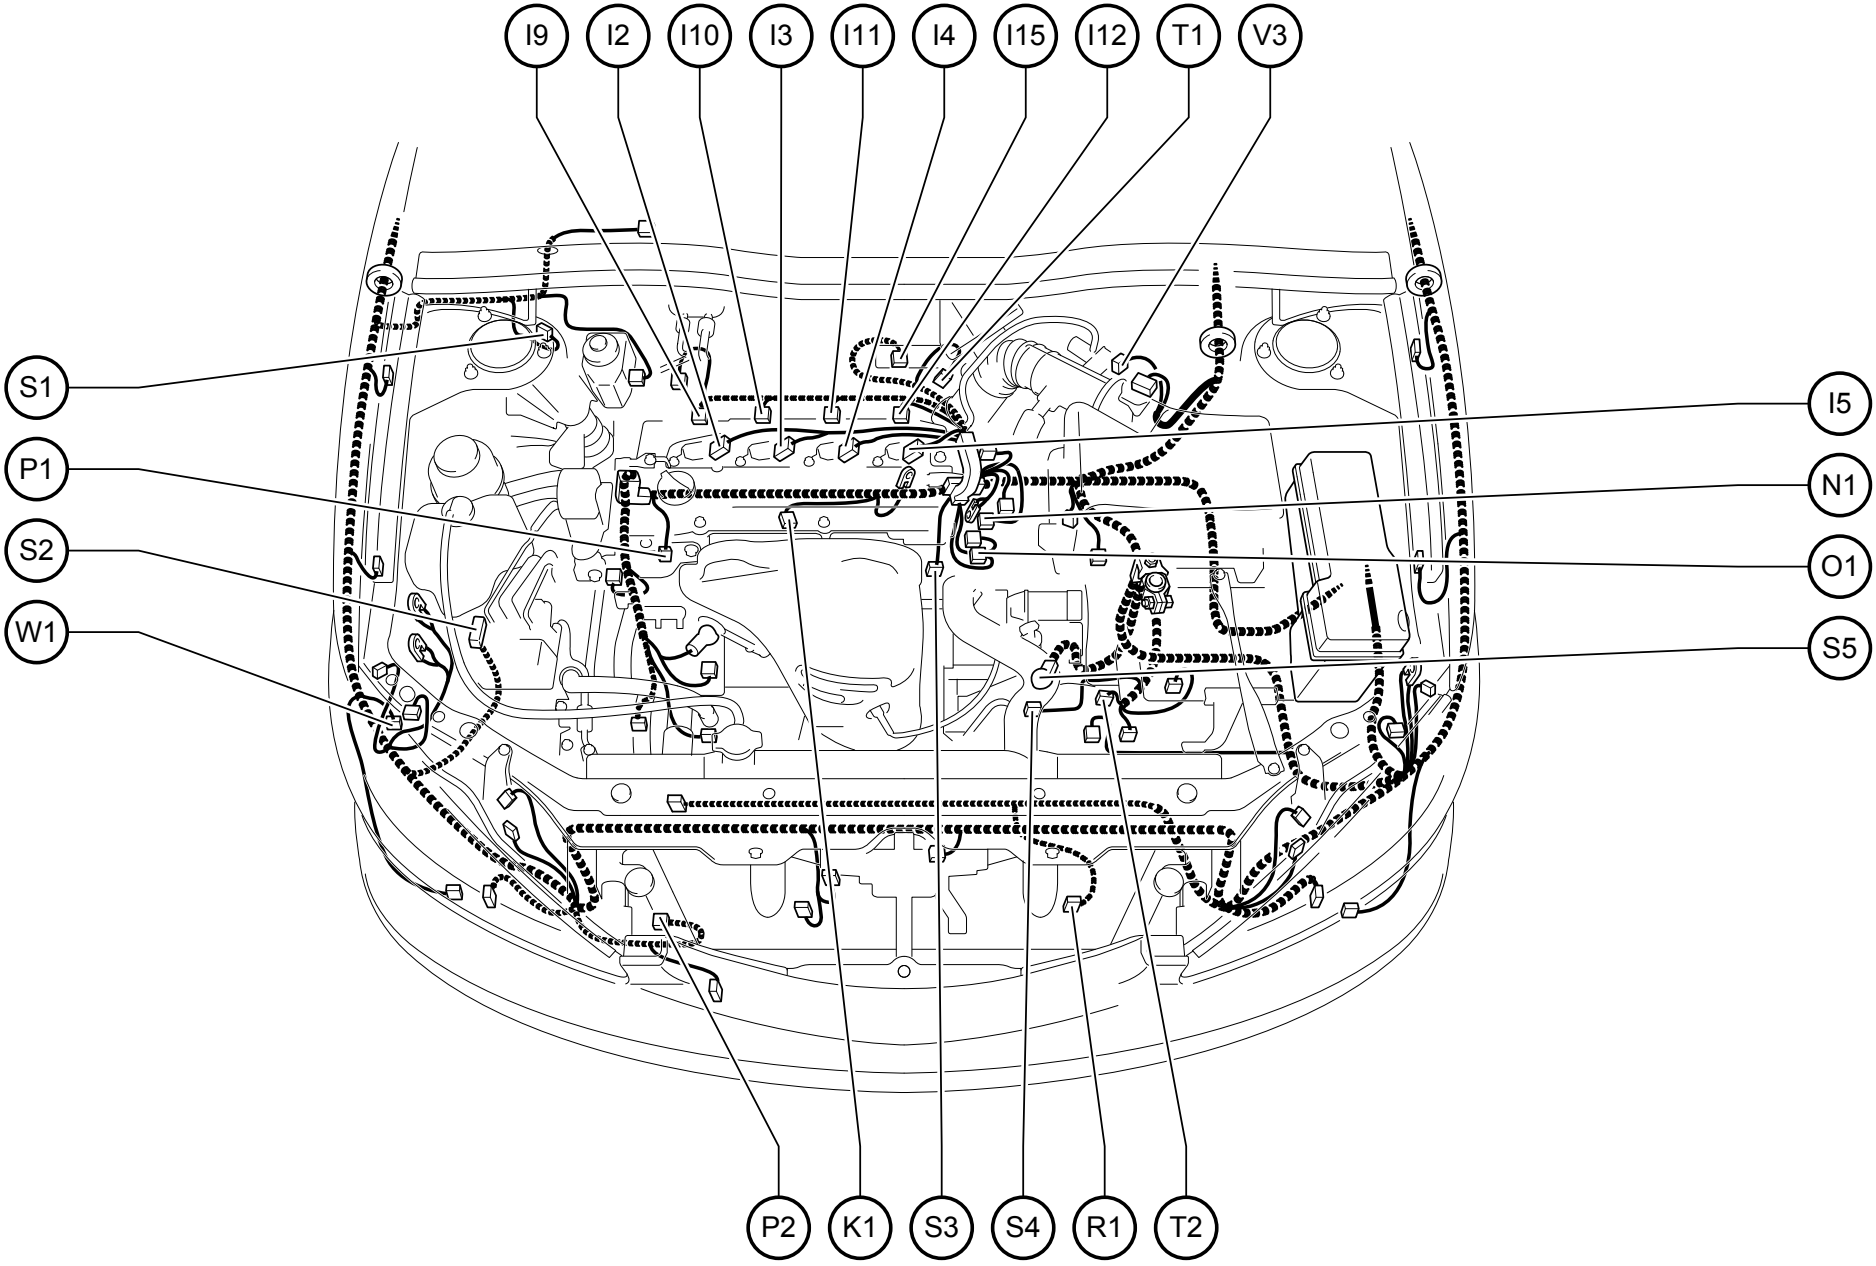



I9
I2
I10
I3
I11
I4
I15
I12
T1
V3
S1
P1
S2
W1
I5
N1
O1
S5
P2
K1
S3
S4
R1
T2

I	2	Ignition Coil and Igniter No.1
I	3	Ignition Coil and Igniter No.2
I	4	Ignition Coil and Igniter No.3
I	5	Ignition Coil and Igniter No.4
I	9	Injector No.1
I	10	Injector No.2
I	11	Injector No.3
I	12	Injector No.4
I	15	ISC Valve
K	1	Knock Sensor (Bank 1)
N	1	Noise Filter (Ignition)
O	1	Oil Pressure SW
P	1	Power Steering Oil Pressure SW
P	2	Pressure SW
R	1	Radiator Fan Motor
S	1	Security Horn
S	2	Skid Control ECU with Actuator
S	3	Speed Sensor (Combination Meter)
S	4	Starter
S	5	Starter
T	1	Throttle Position Sensor
T	2	Turbine Speed Sensor
V	3	VSV (EVAP)
W	1	Washer Motor


I 2
Black




I 3
Black




I 4
Black




I 5
Black




I 9
Black




I 10
Black



I 11
Black




I 12
Black




I 15
Black



K 1
Black



N 1
Gray

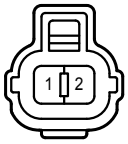


O 1
Gray




P 1
Black



P 2
Gray

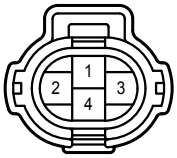


R 1
Gray

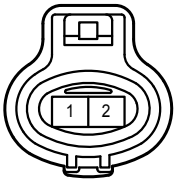

S 1
Black



S 2
Red

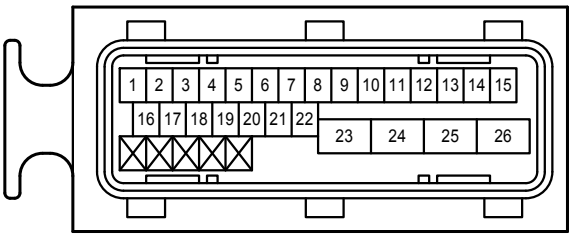


S 3
Black




S 4
Black




S 5




T 1
Black

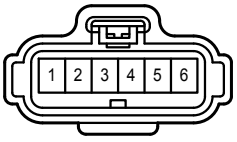

T 2
Black

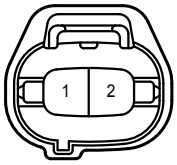


V 3
Black

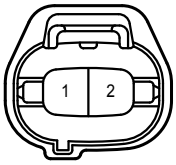

W 1
Black

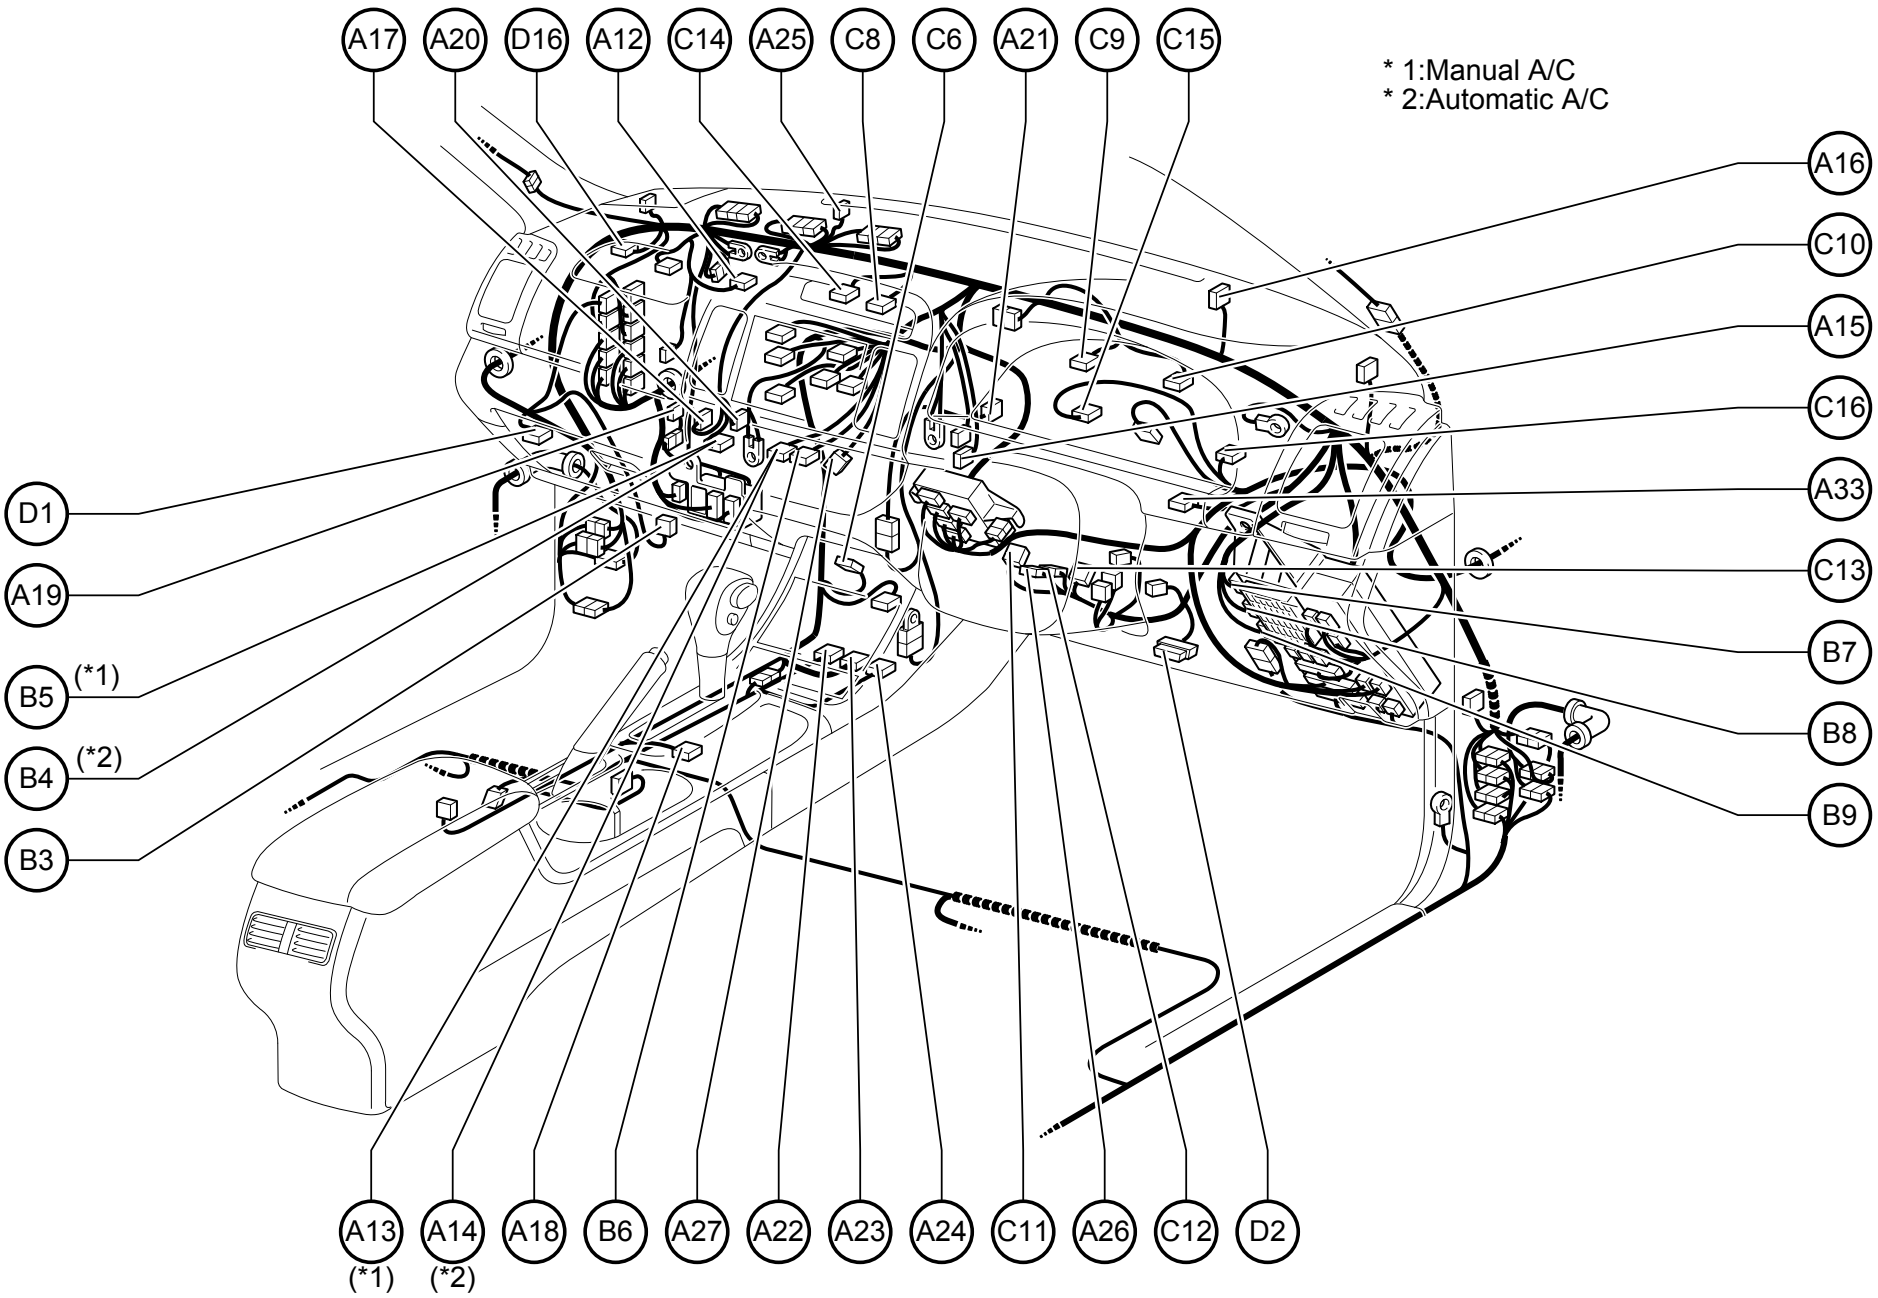


A17
A20
D16
A12
C14
A25
C8
C6
A21
C9
C15
* 1:Manual A/C
* 2:Automatic A/C
A16
C10
A15
C16
A33
C13
B7
B8
B9
D1
A19
B5 (*1)
B4 (*2)
B3
A13 (*1)
A14 (*2)
A18
B6
A27
A22
A23
A24
C11
A26
C12
D2


A 12 A/C Amplifier
A 13 A/C Control Assembly
A 14 A/C Control Assembly
A 15 A/C Room Temp. Sensor
A 16 A/C Solar Sensor
A 17 A/C Thermistor
A 18 A/T Shift Lever Illumination , O/D Main SW
A 19 Air Inlet Control Servo Motor
A 20 Air Mix Control Servo Motor
A 21 Air Vent Mode Control Servo Motor
A 22 Airbag Sensor Assembly
A 23 Airbag Sensor Assembly
A 24 Airbag Sensor Assembly
A 25 Airbag Squib (Front Passenger Airbag Assembly)
A 26 Airbag Squib (Steering Wheel Pad)
A 27 Antenna Amplifier
A 33 Accelerator Pedal Position Sensor

B 3 Blower Motor
B 4 Blower Motor Controller
B 5 Blower Resister
B 6 Blower SW
B 7 Body ECU
B 8 Body ECU
B 9 Body ECU


C 6 Cigarette Lighter , Cigarette Light Illumination
C 8 Clock , Door Control Receiver
C 9 Combination Meter
C 10 Combination Meter
C 11 Combination SW
C 12 Combination SW
C 13 Combination SW
C 14 Combination SW
C 15 Cruise Control Clutch SW
C 16 Cruise Control ECU

D 1 Diode (A/C)
D 2 DLC3
D 16 Diode (Fan)


A 12
White




A 13
White

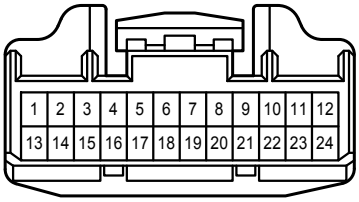


A 14
White

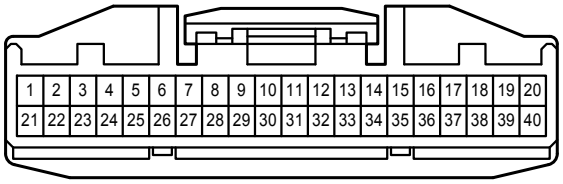


A 15
Black




A 16
Black




A 17
White




A 18
White




A 19
Black

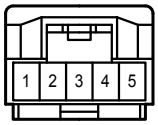

A 20
Black

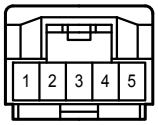


A 21
Black

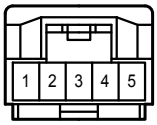


(Automatic A/C)

A 21
Black

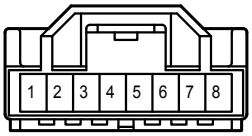


(Manual A/C)

A 22
Yellow

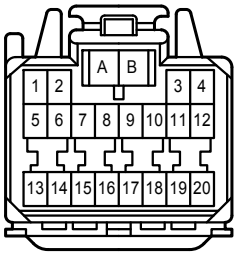


(w/ Side Airbag)

A 22
Yellow

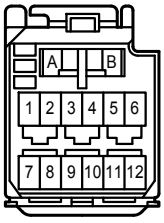


(w/o Side Airbag)

A 23
Yellow

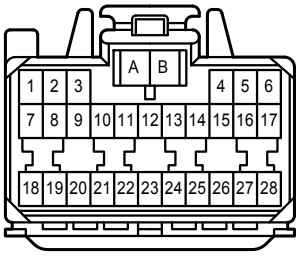


A 24
Yellow

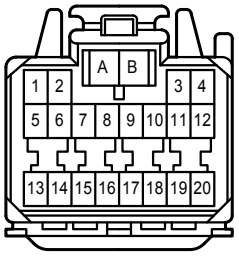


(w/ Side Airbag)

A 24
Yellow

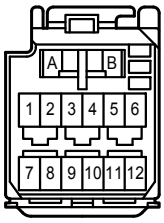


(w/o Side Airbag)

A 25
Black




A 26
Yellow

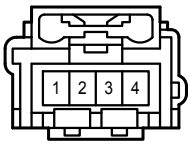

(w/ Steering SW)

A 26
Yellow

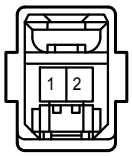


(w/o Steering SW)


A 27
White




A 33
Black

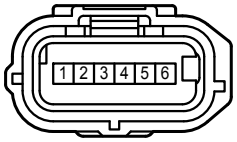


B 3
Black




B 4
Black

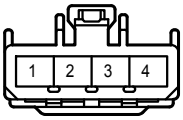


B 5
Black

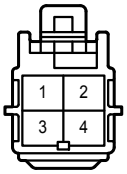


B 6
White

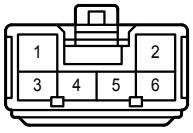


B 7
White

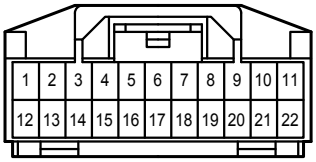

B 8
White

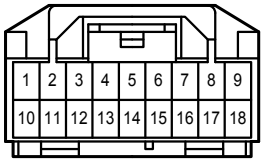


B 9
White




C 6
White




C 8
White

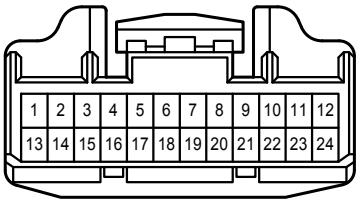


C 9
White

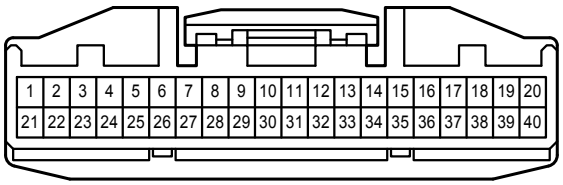

C 10
White

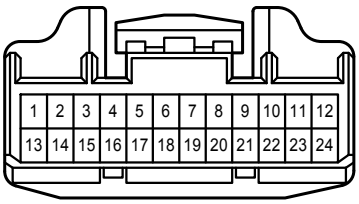

C 11
Black

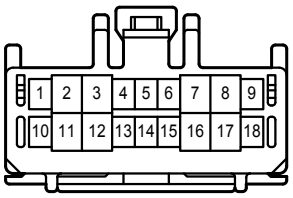


C 12
Black




(w/ Steering SW)

C 12
Black

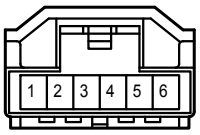


(w/o Steering SW)


C 13
Black

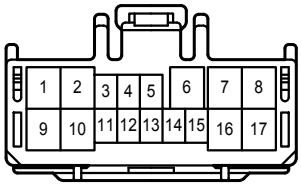


C 14
White




C 15
White




C 16
White

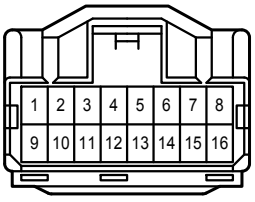

D 1
Gray




D 2
White

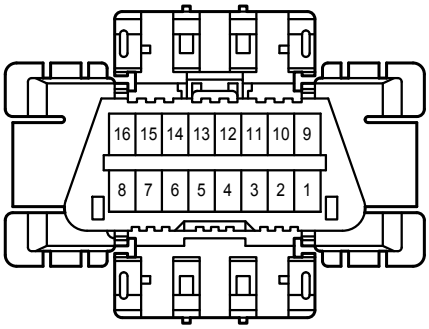

D 16
Black

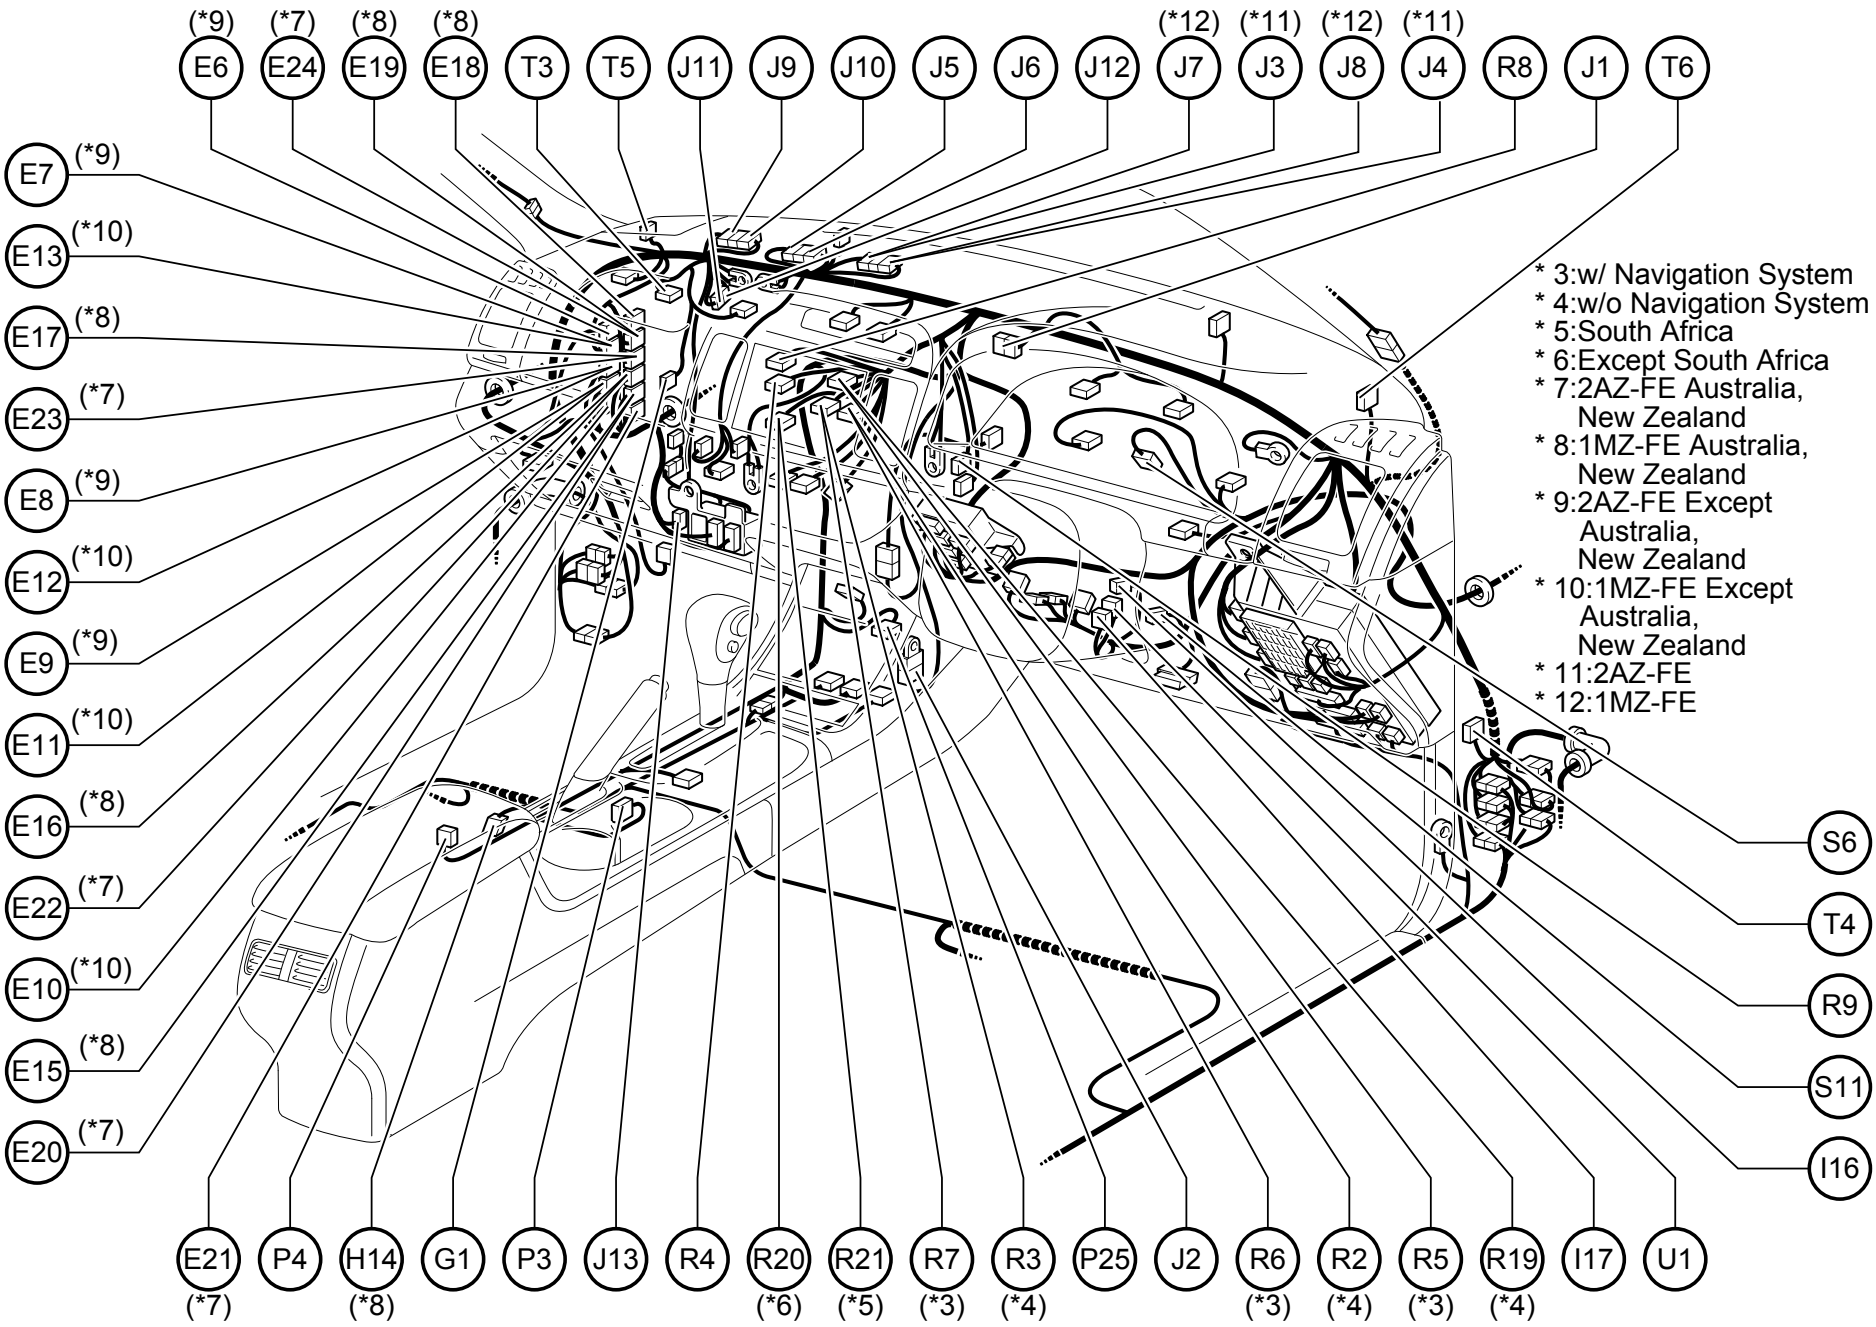


(*9) E6
(*7) E24
(*8) E19
(*8) E18
T3
T5
J11
J9
J10
J5
J6
J12
(*12) J7
(*11) J3
(*12) J8
(*11) J4
R8
J1
T6
E7 (*9)
E13 (*10)
E17 (*8)
E23 (*7)
E8 (*9)
E12 (*10)
E9 (*9)
E11 (*10)
E16 (*8)
E22 (*7)
E10 (*10)
E15 (*8)
E20 (*7)
* 3:w/ Navigation System
* 4:w/o Navigation System
* 5:South Africa
* 6:Except South Africa
* 7:2AZ-FE Australia, New Zealand
* 8:1MZ-FE Australia, New Zealand
* 9:2AZ-FE Except Australia, New Zealand
* 10:1MZ-FE Except Australia, New Zealand
* 11:2AZ-FE
* 12:1MZ-FE
S6
T4
R9
S11
I16
E21 (*7)
P4
H14 (*8)
G1
P3
J13
R4
R20 (*6)
R21 (*5)
R7 (*3)
R3 (*4)
P25
J2
R6 (*3)
R2 (*4)
R5 (*3)
R19 (*4)
I17
U1

E 6 Engine and ECT ECU (A/T) , Engine ECU (M/T)
E 7 Engine and ECT ECU (A/T) , Engine ECU (M/T)
E 8 Engine and ECT ECU (A/T) , Engine ECU (M/T)
E 9 Engine and ECT ECU (A/T) , Engine ECU (M/T)
E 10 Engine and ECT ECU (A/T) , Engine ECU (M/T)
E 11 Engine and ECT ECU (A/T) , Engine ECU (M/T)
E 12 Engine and ECT ECU (A/T) , Engine ECU (M/T)
E 13 Engine and ECT ECU (A/T) , Engine ECU (M/T)
E 15 Engine and ECT ECU (A/T) , Engine ECU (M/T)
E 16 Engine and ECT ECU (A/T) , Engine ECU (M/T)
E 17 Engine and ECT ECU (A/T) , Engine ECU (M/T)
E 18 Engine and ECT ECU (A/T) , Engine ECU (M/T)
E 19 Engine and ECT ECU (A/T) , Engine ECU (M/T)
E 20 Engine and ECT ECU (A/T) , Engine ECU (M/T)
E 21 Engine and ECT ECU (A/T) , Engine ECU (M/T)
E 22 Engine and ECT ECU (A/T) , Engine ECU (M/T)
E 23 Engine and ECT ECU (A/T) , Engine ECU (M/T)
E 24 Engine and ECT ECU (A/T) , Engine ECU (M/T)

G 1 Glove Box Light and SW

H 14 Heated Oxygen Sensor (Bank 1 Sensor 2)

I 16 Ignition Key Cylinder Light , Transponder Key Amplifier
I 17 Ignition SW

J 1 Junction Connector
J 2 Junction Connector
J 3 Junction Connector
J 4 Junction Connector
J 5 Junction Connector
J 6 Junction Connector
J 7 Junction Connector
J 8 Junction Connector
J 9 Junction Connector
J 10 Junction Connector
J 11 Junction Connector
J 12 Junction Connector
J 13 Junction Connector

P 3 Parking Brake SW
P 4 Power Outlet (Rear)
P 25 Power Outlet (Front)


R 2 Radio and Player
R 3 Radio and Player
R 4 Radio and Player with Display
R 5 Radio and Player with Display
R 6 Radio and Player with Display
R 7 Radio and Player with Display
R 8 Radio and Player with Display
R 9 Rheostat
R 19 Radio and Player
R 20 Radio and Player
R 21 Radio and Player

S 6 Stop Light SW
S 11 Speaker


T 3 Transponder Key Computer
T 4 Turn Signal Flasher Relay
T 5 Tweeter LH
T 6 Tweeter RH

U 1 Unlock Warning SW


E 6
White

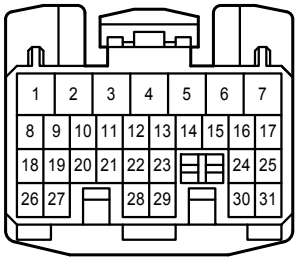


E 7
White

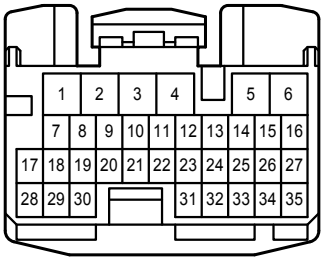


E 8
White

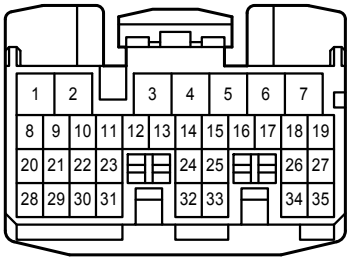


E 9
White

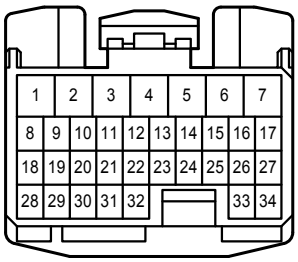


E 10
White

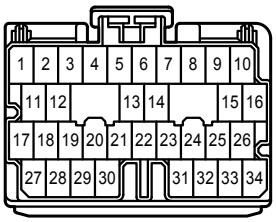


E 11
White

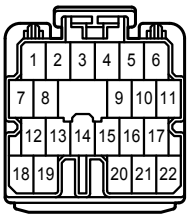


E 12
White

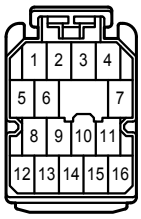


E 13
White

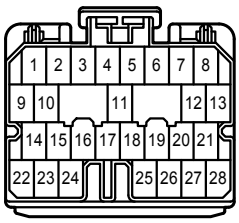


E 15
White

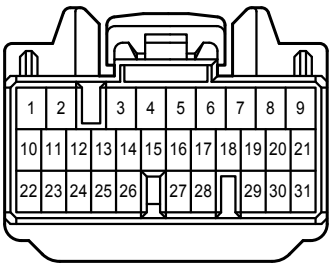


E 16
White

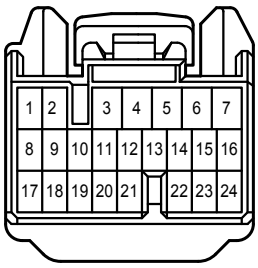


E 17
White

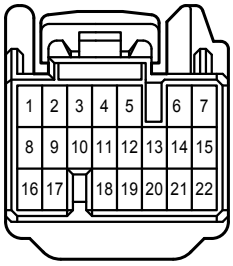


E 18
White

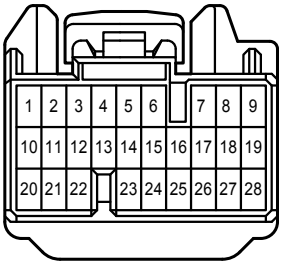


E 19
White

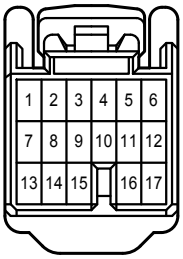


E 20
White

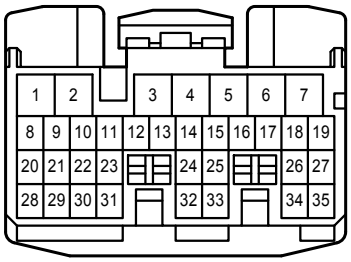


E 21
White

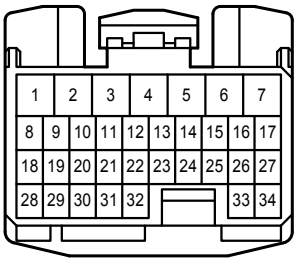


E 22
White

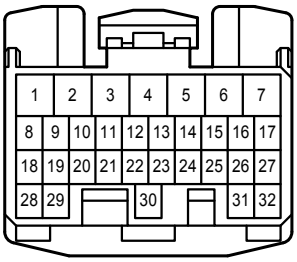

E 23
White

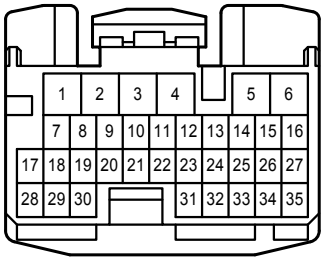

E 24
White

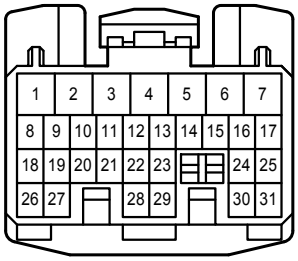

G 1
Black



H 14
Dark Gray




(1MZ-FE Australia, New Zealand)

H 14
Dark Gray




(2AZ-FE Australia, New Zealand)

I 16
Black

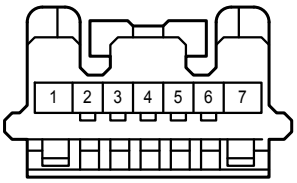


I 17
White

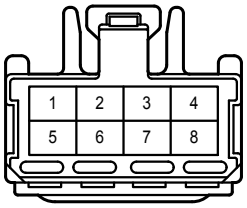

J 1
White



J 2
White



J 3
White



J 4
White



J 5
White



J 6
White



J 7
White



J 8
White



J 9
White



J 10
White



J 11
Black



J 12
Black



J 13
White



(1MZ-FE)

J 13
Black



(2AZ-FE)

P 3
White




P 4
White



P 25
White




R 2
White

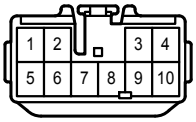


R 3
White




R 4
Black

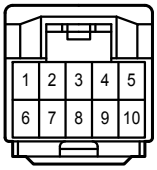

R 5
Gray

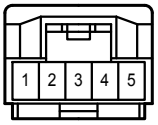

R 6
White

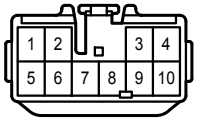


R 7
White




R 8
Black




R 9
White

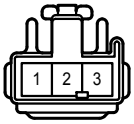


R 19
White

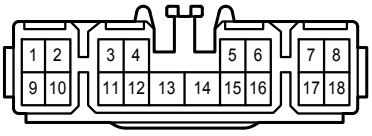


R 20
White

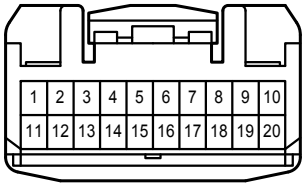


R 21
White




S 6
Blue

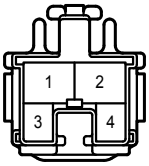


S 11
White




T 3
White

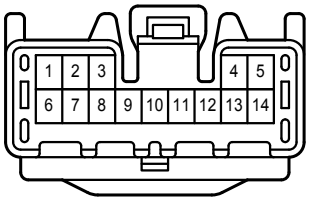


T 4
Black




T 5
White




T 6
White



U 1
White



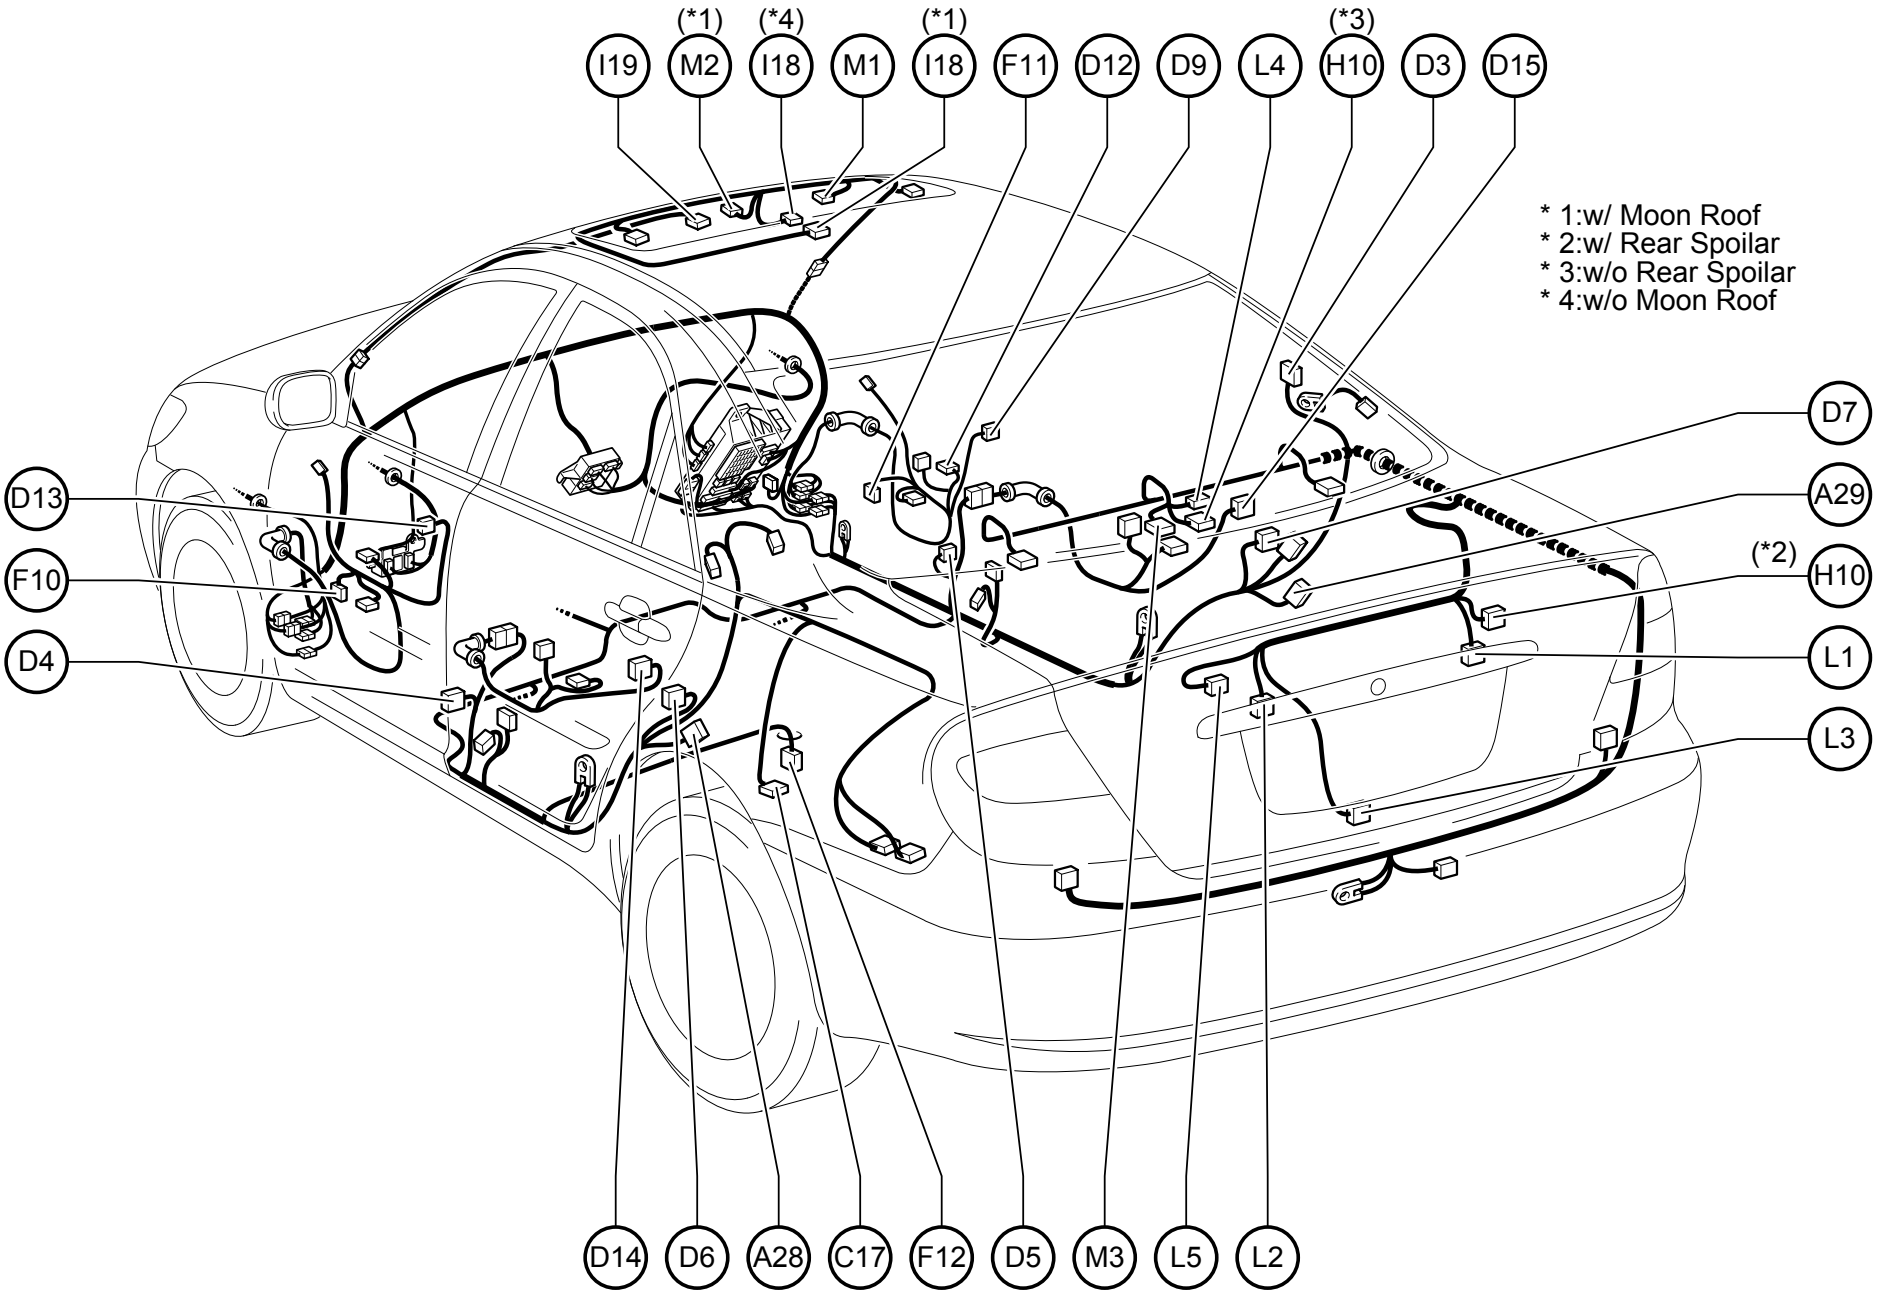
(*1)
(*4)
(*1)
(*3)
I19
M2
I18
M1
I18
F11
D12
D9
L4
H10
D3
D15
* 1:w/ Moon Roof
* 2:w/ Rear Spoilar
* 3:w/o Rear Spoilar
* 4:w/o Moon Roof
D7
A29
(*2)
H10
L1
L3
D13
F10
D4
D14
D6
A28
C17
F12
D5
M3
L5
L2

A 28 ABS Speed Sensor Rear LH
A 29 ABS Speed Sensor Rear RH

C 17 CD Changer

D 3 Door Control Receiver
D 4 Door Courtesy SW Front LH
D 5 Door Courtesy SW Front RH
D 6 Door Courtesy SW Rear LH
D 7 Door Courtesy SW Rear RH
D 9 Door Key Lock and Unlock SW Front RH , Door Lock Motor Front RH , Door Unlock Detection SW Front RH
D 12 Door Lock Control SW Front RH , Power Window Master SW
D 13 Door Lock Motor Front LH , Door Unlock Detection SW Front LH
D 14 Door Lock Motor Rear LH , Door Unlock Detection SW Rear LH
D 15 Door Lock Motor Rear RH , Door Unlock Detection SW Rear RH

F 10 Front Door Speaker LH
F 11 Front Door Speaker RH
F 12 Fuel Pump , Fuel Sender

H 10 High Mounted Stop Light

I 18 Interior Light
I 19 Inner Mirror

L 1 License Plate Light LH
L 2 License Plate Light RH
L 3 Luggage Compartment Door Opener Motor , Luggage Compartment Light SW
L 4 Luggage Compartment Light
L 5 Luggage Compartment Door Key Unlock SW

M 1 Moon Roof Control ECU and Motor
M 2 Moon Roof Control SW , Personal Light
M 3 Mayday Assembly


A 28
White




A 29
White



C 17
White



D 3
White

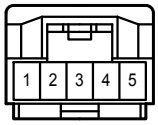

D 4
White



D 5
White




D 6
White




D 7
White




D 9
White

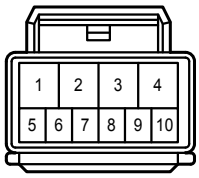


D 12
White

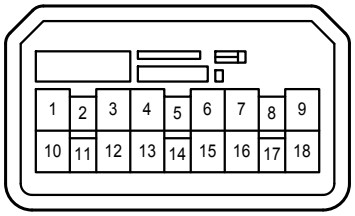


D 13
White

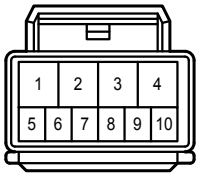

D 14
White

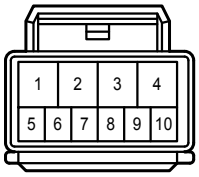

D 15
White

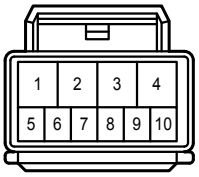

F 10
White



F 11
White



F 12
White



H 10
Black




(w/o Rear Spoiler)

H 10
White




(w/ Rear Spoiler)

I 18
White

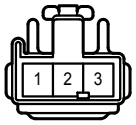


(w/ Moon Roof)

I 18
White



(w/o Moon Roof)

I 19
Black

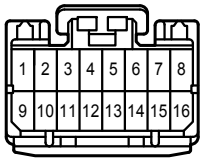


L 1
White



L 2
White



L 3
Black




L 4
Gray




L 5
White




M 1
White

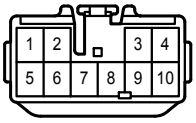


M 2
White

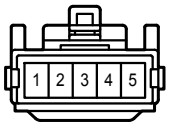

M 3
White

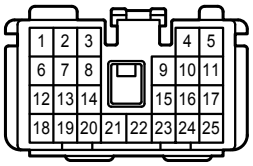

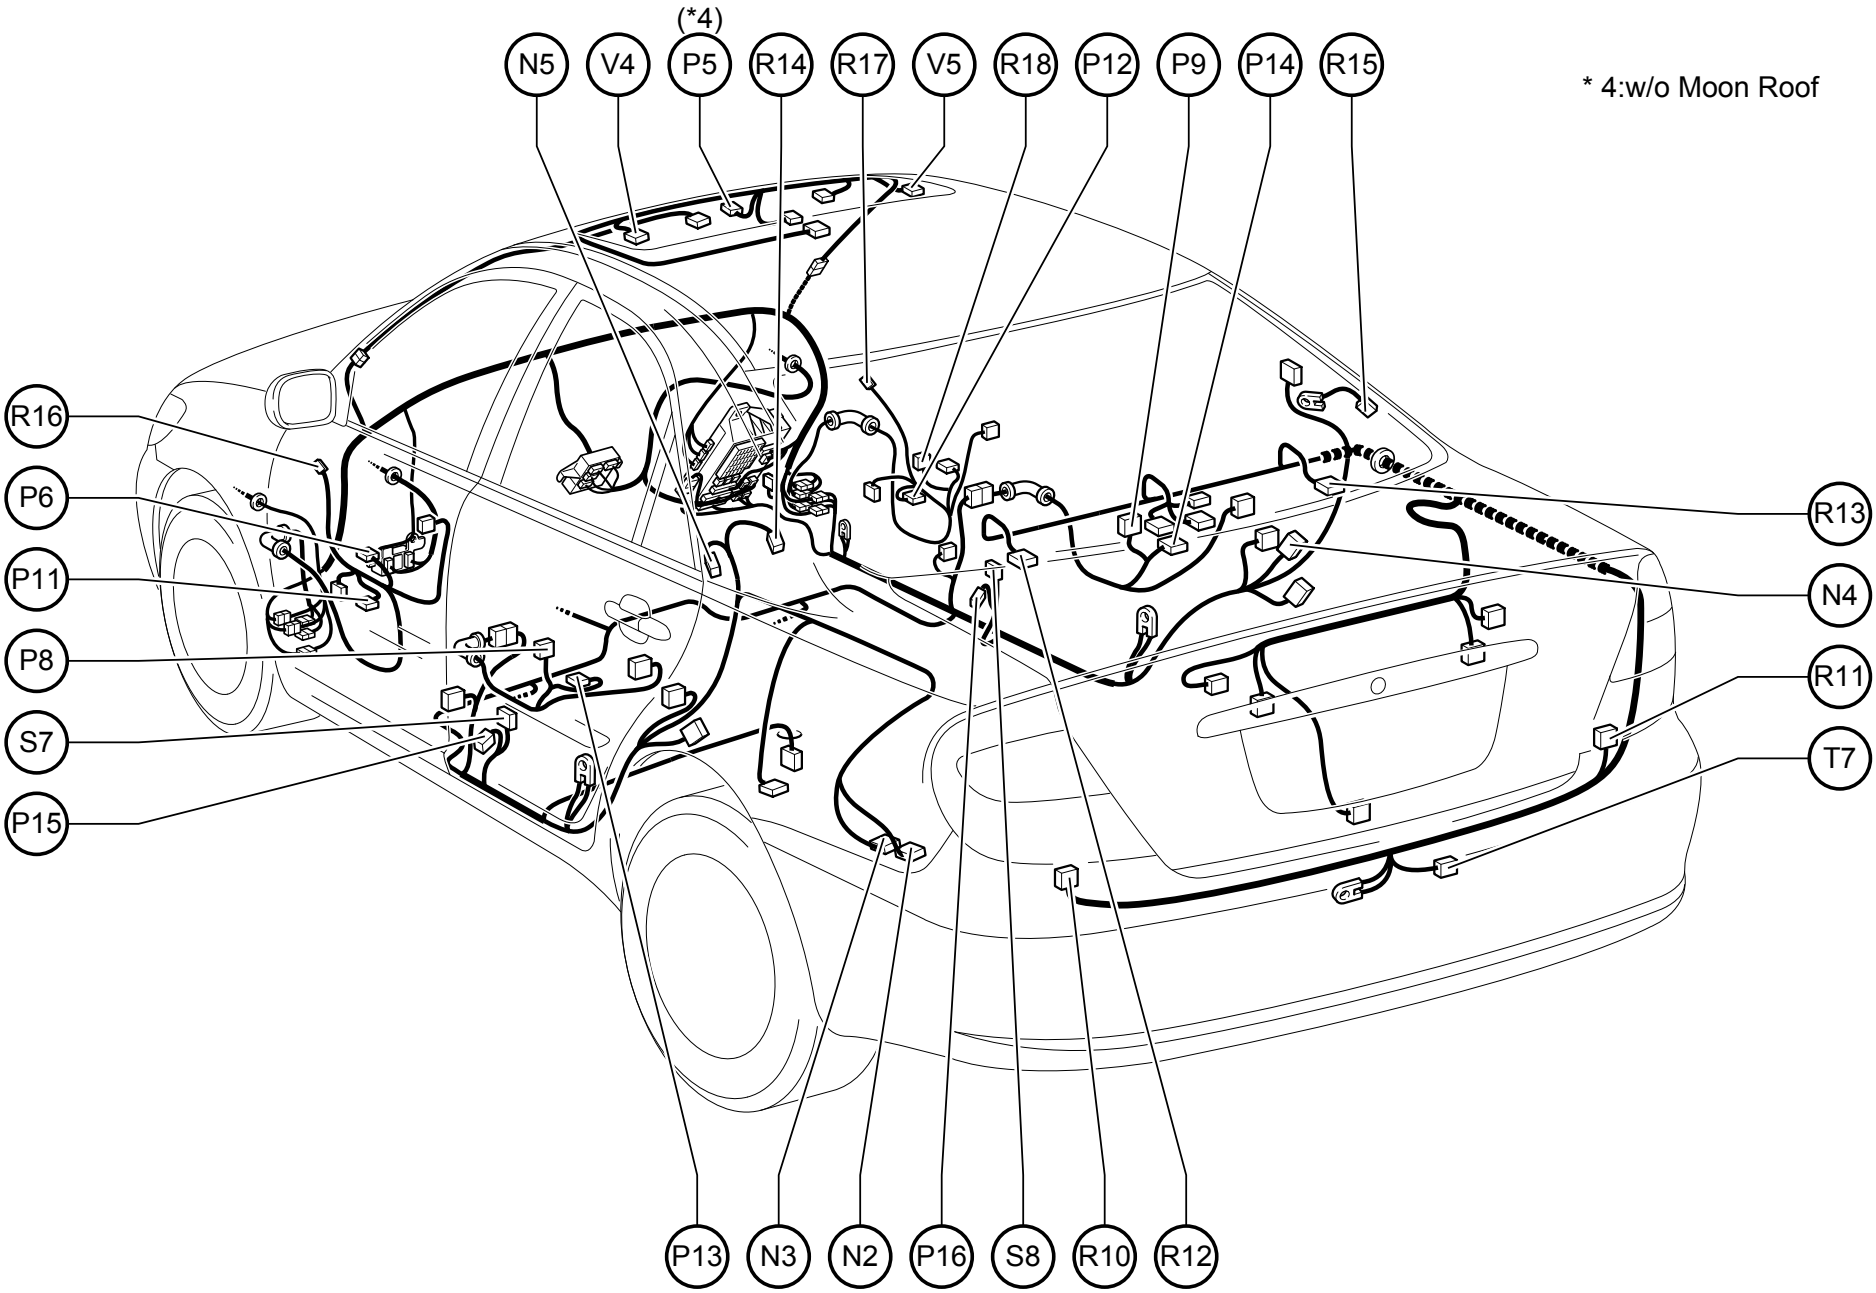
(*4)
N5
V4
P5
R14
R17
V5
R18
P12
P9
P14
R15
* 4:w/o Moon Roof
R16
P6
P11
P8
S7
P15
R13
N4
R11
T7
P13
N3
N2
P16
S8
R10
R12

N 2 Navigation ECU
N 3 Navigation ECU
N 4 Noise Filter
N 5 Noise Filter (Rear Window Defogger)

P 5 Personal Light
P 6 Power Window Control SW Front LH
P 8 Power Window Control SW Rear LH
P 9 Power Window Control SW Rear RH
P 11 Power Window Motor Front LH
P 12 Power Window Motor Front RH
P 13 Power Window Motor Rear LH
P 14 Power Window Motor Rear RH
P 15 Pretensioner LH
P 16 Pretensioner RH


R 10 Rear Combination Light LH
R 11 Rear Combination Light RH
R 12 Rear Speaker LH
R 13 Rear Speaker RH
R 14 Rear Window Defogger
R 15 Rear Window Defogger
R 16 Remote Control Mirror LH
R 17 Remote Control Mirror RH
R 18 Remote Control Mirror SW

S 7 Side Airbag Sensor LH
S 8 Side Airbag Sensor RH


T 7 Trailer Socket

V 4 Vanity Light LH
V 5 Vanity Light RH


N 2
White

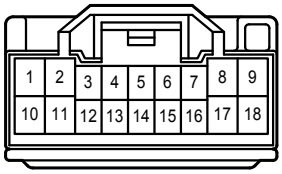


N 3
White

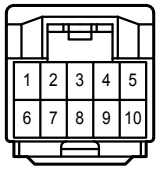


N 4
White




N 5
White




P 5
White




P 6
Black

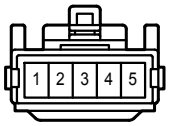

P 8
White

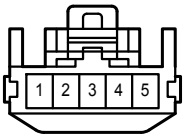

P 9
White

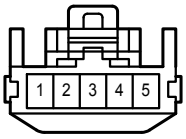

P 11
Black



P 12
Black




P 13
Black




P 14
Black




P 15
Yellow




P 16
Yellow



R 10
White

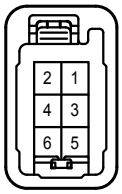

R 11
White

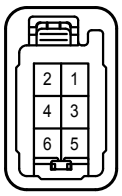

R 12
White



R 13
White



R 14
Black



R 15
Black




R 16
White




R 17
White




R 18
White

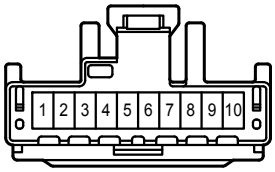

S 7
Yellow

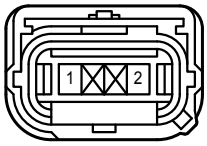

S 8
Yellow

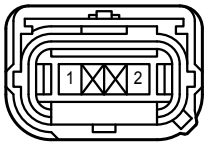

T 7
Blue




V 4
Blue



V 5
Blue

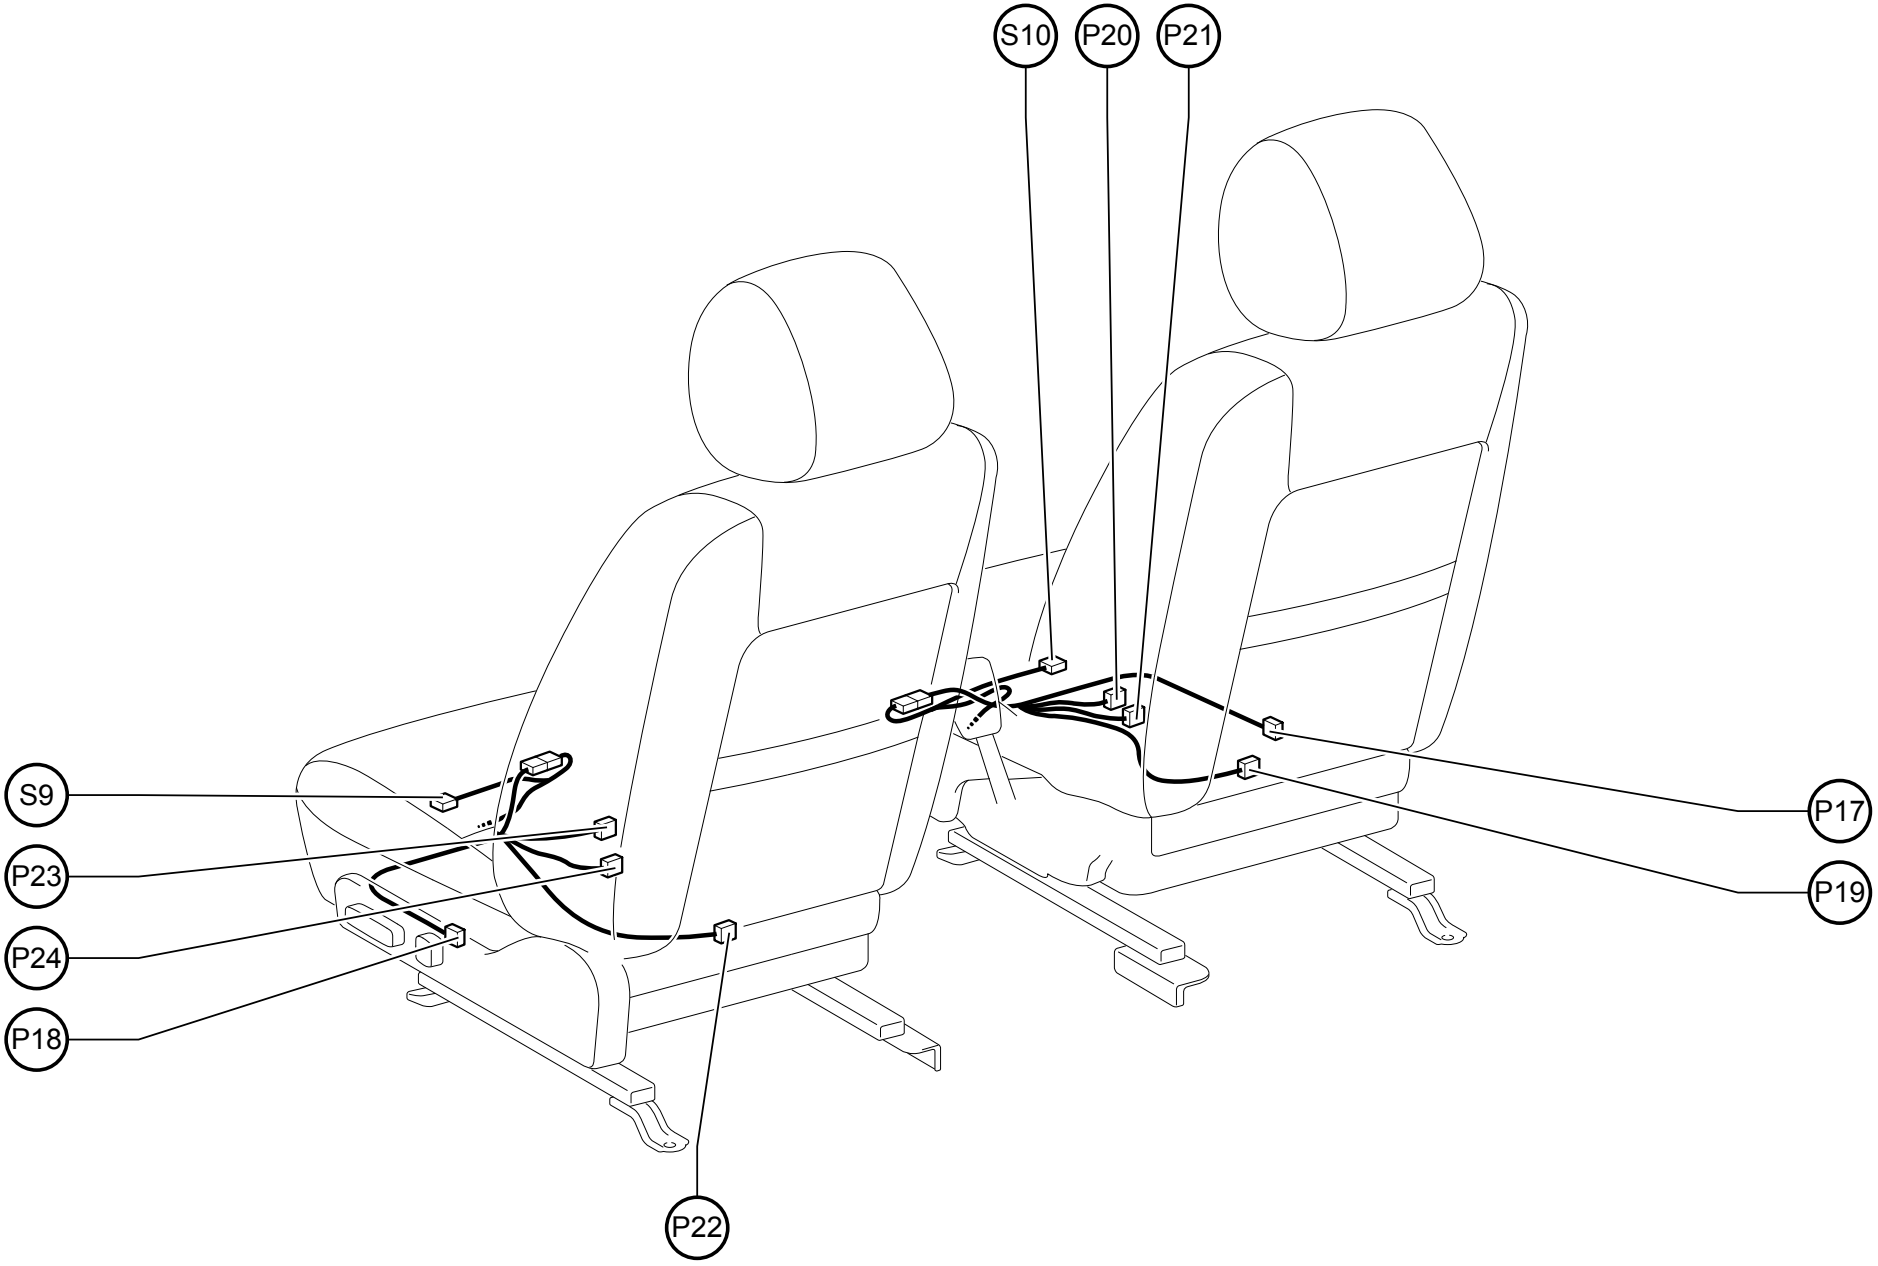



S10
P20
P21
S9
P23
P24
P18
P22
P17
P19


P 17 Power Seat Control SW (Driver's Seat)
P 18 Power Seat Control SW (Front Passenger's Seat)
P 19 Power Seat Motor (Driver's Seat Rear Vertical Control)
P 20 Power Seat Motor (Driver's Seat Reclining Control)
P 21 Power Seat Motor (Driver's Seat Slide Control)
P 22 Power Seat Motor (Front Passenger's Seat Rear Vertical Control)
P 23 Power Seat Motor (Front Passenger's Seat Reclining Control)
P 24 Power Seat Motor (Front Passenger's Seat Slide Control)

S 9 Side Airbag Squib LH
S 10 Side Airbag Squib RH


P 17
Black




P 18
Black




P 19
White




P 20
White




P 21
White




P 22
White



P 23
White



P 24
White





S 9
Yellow





S 10
Yellow

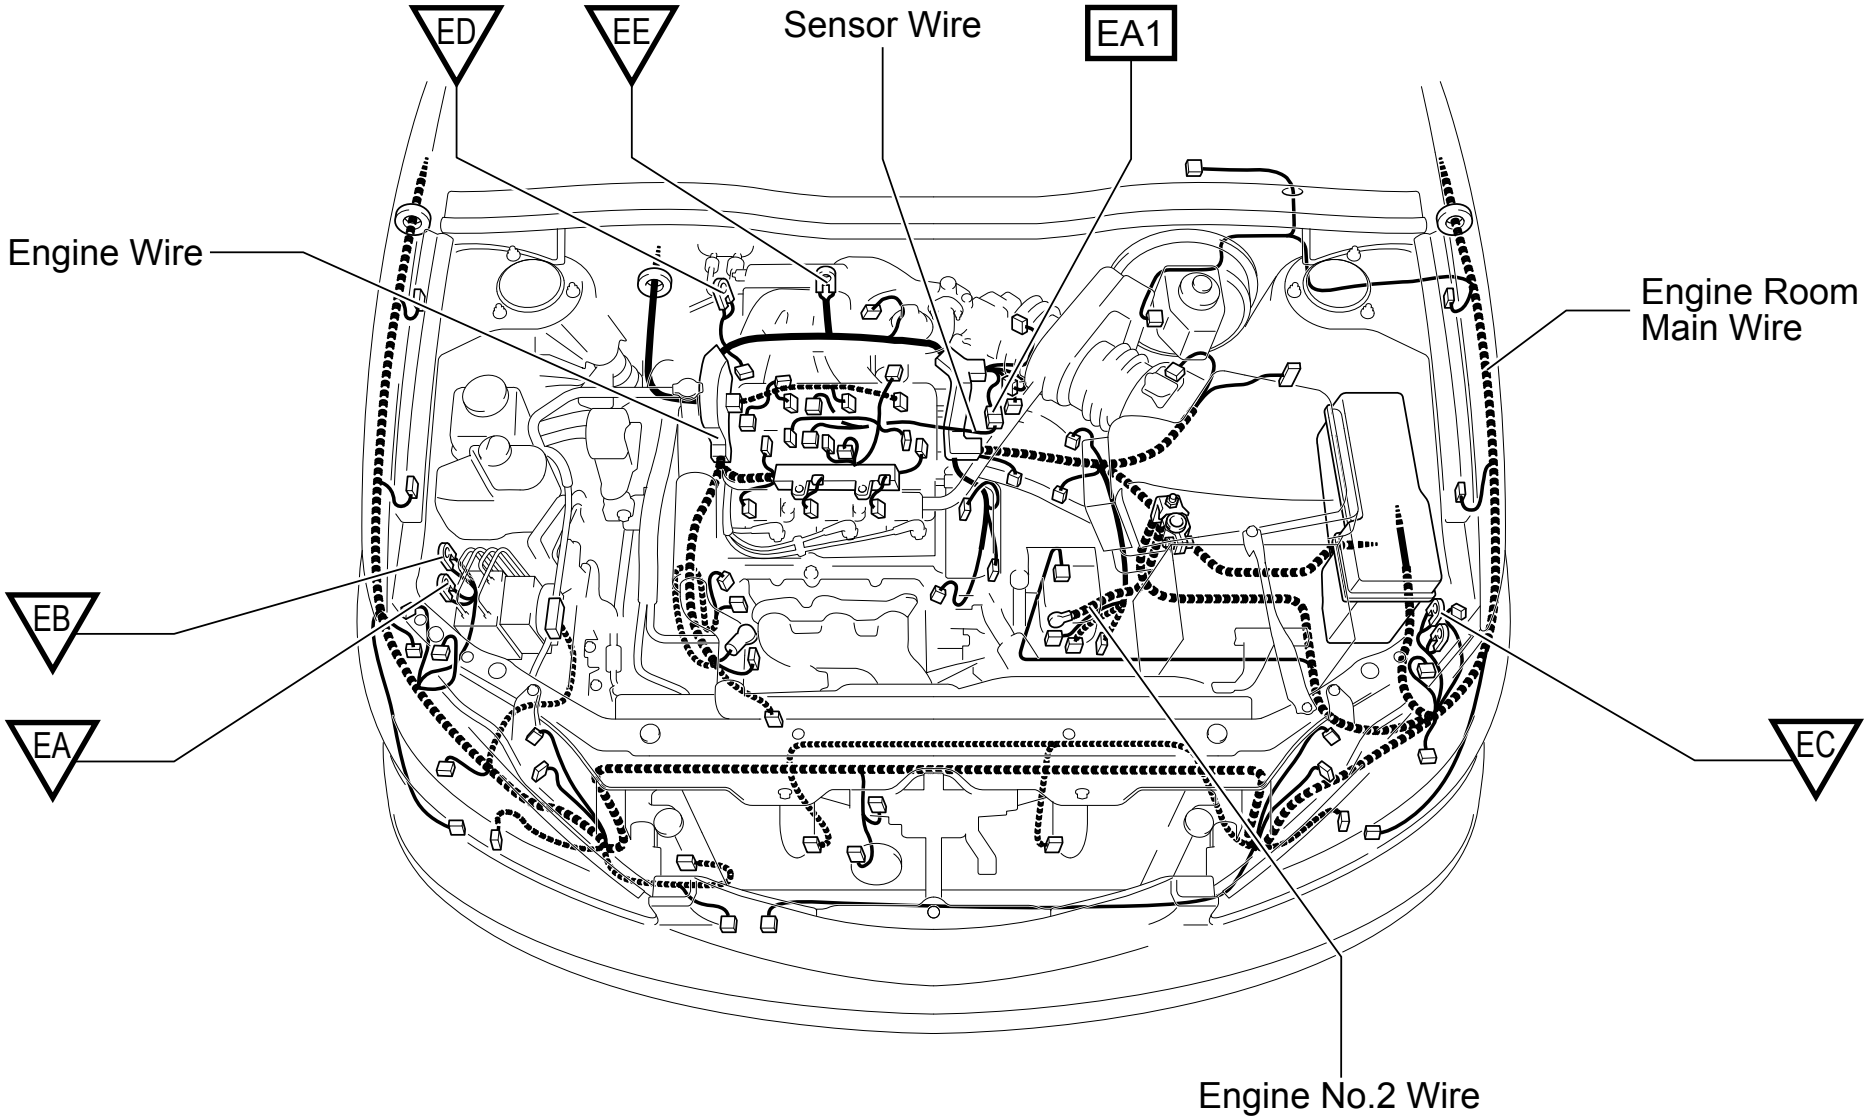



ED
EE
Sensor Wire
EA1
Engine Wire
Engine Room
Main Wire
EB
EA
EC
Engine No.2 Wire

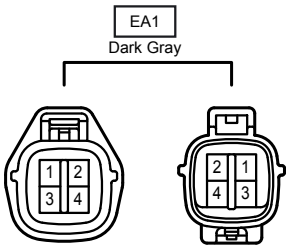
EA1
Dark Gray
1
2
3
4
2
1
4
3

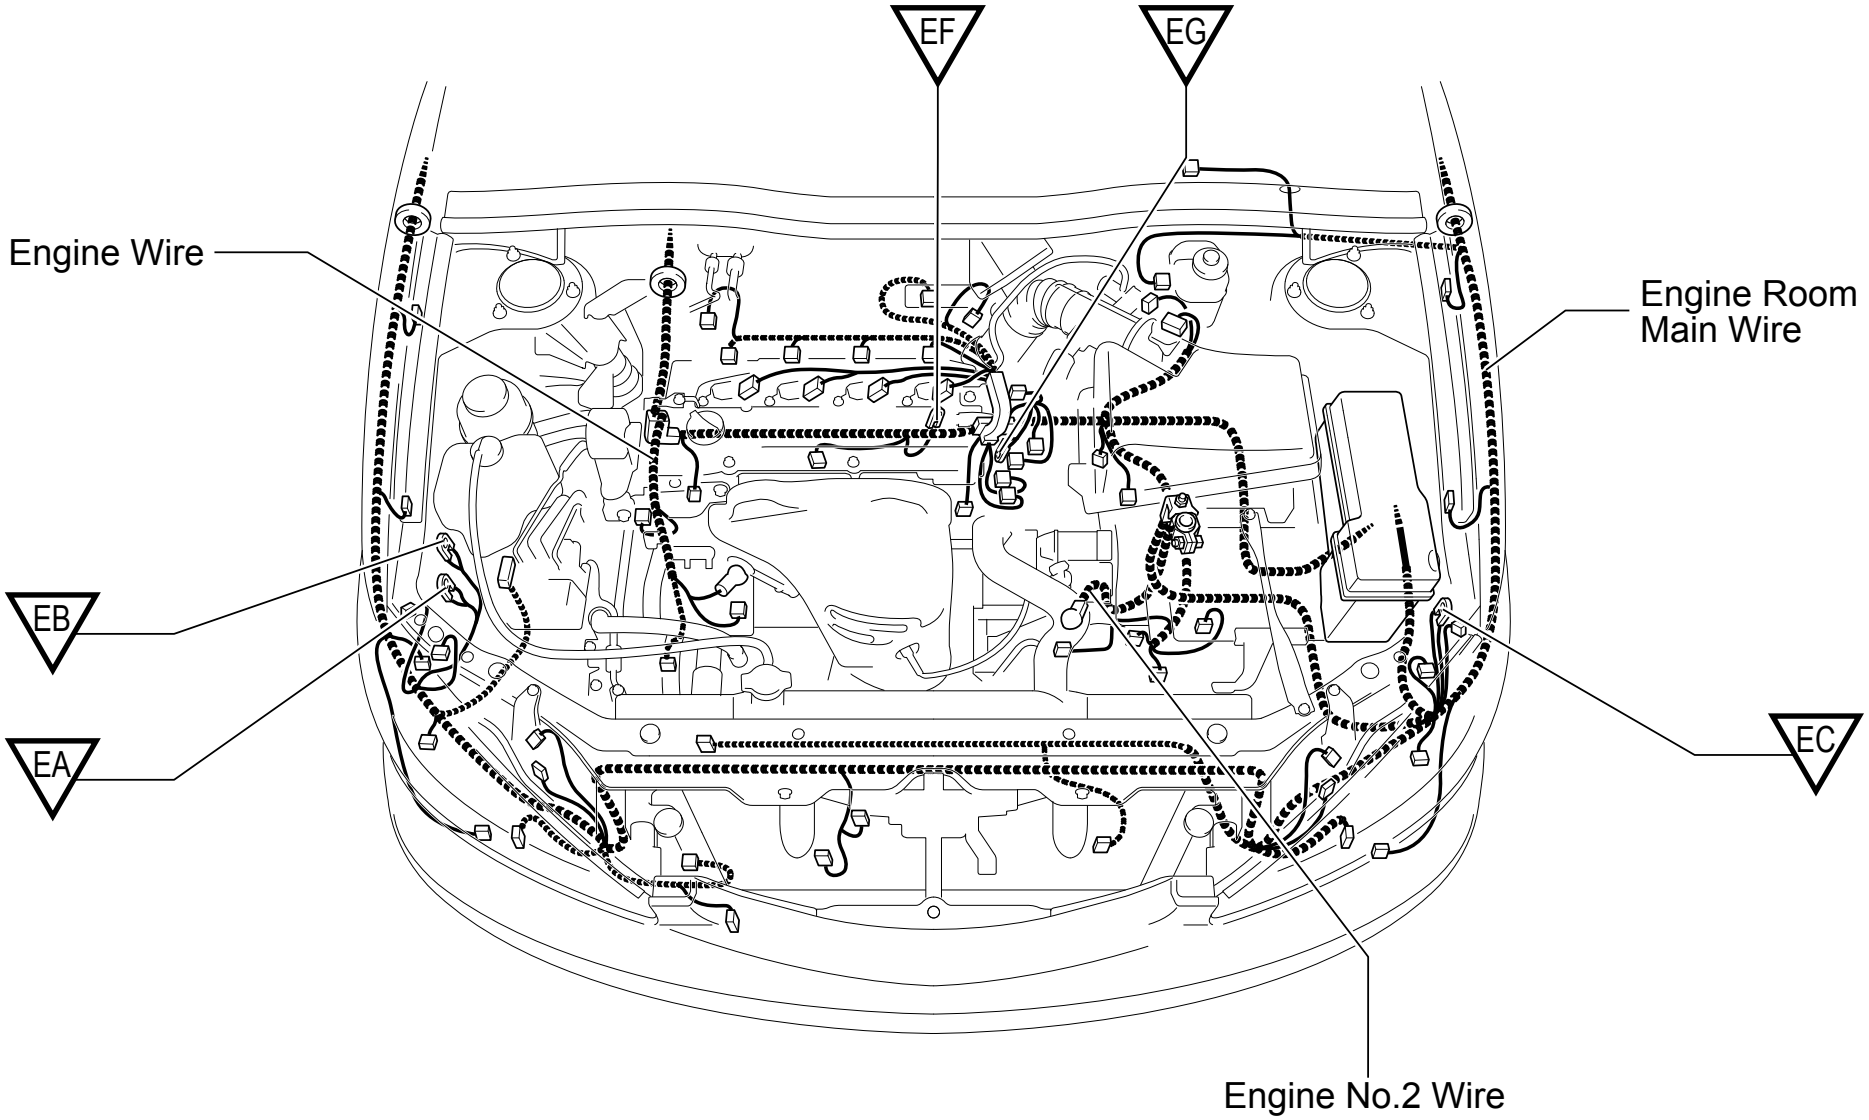
EF
EG
Engine Wire
Engine Room
Main Wire
EB
EA
EC
Engine No.2 Wire

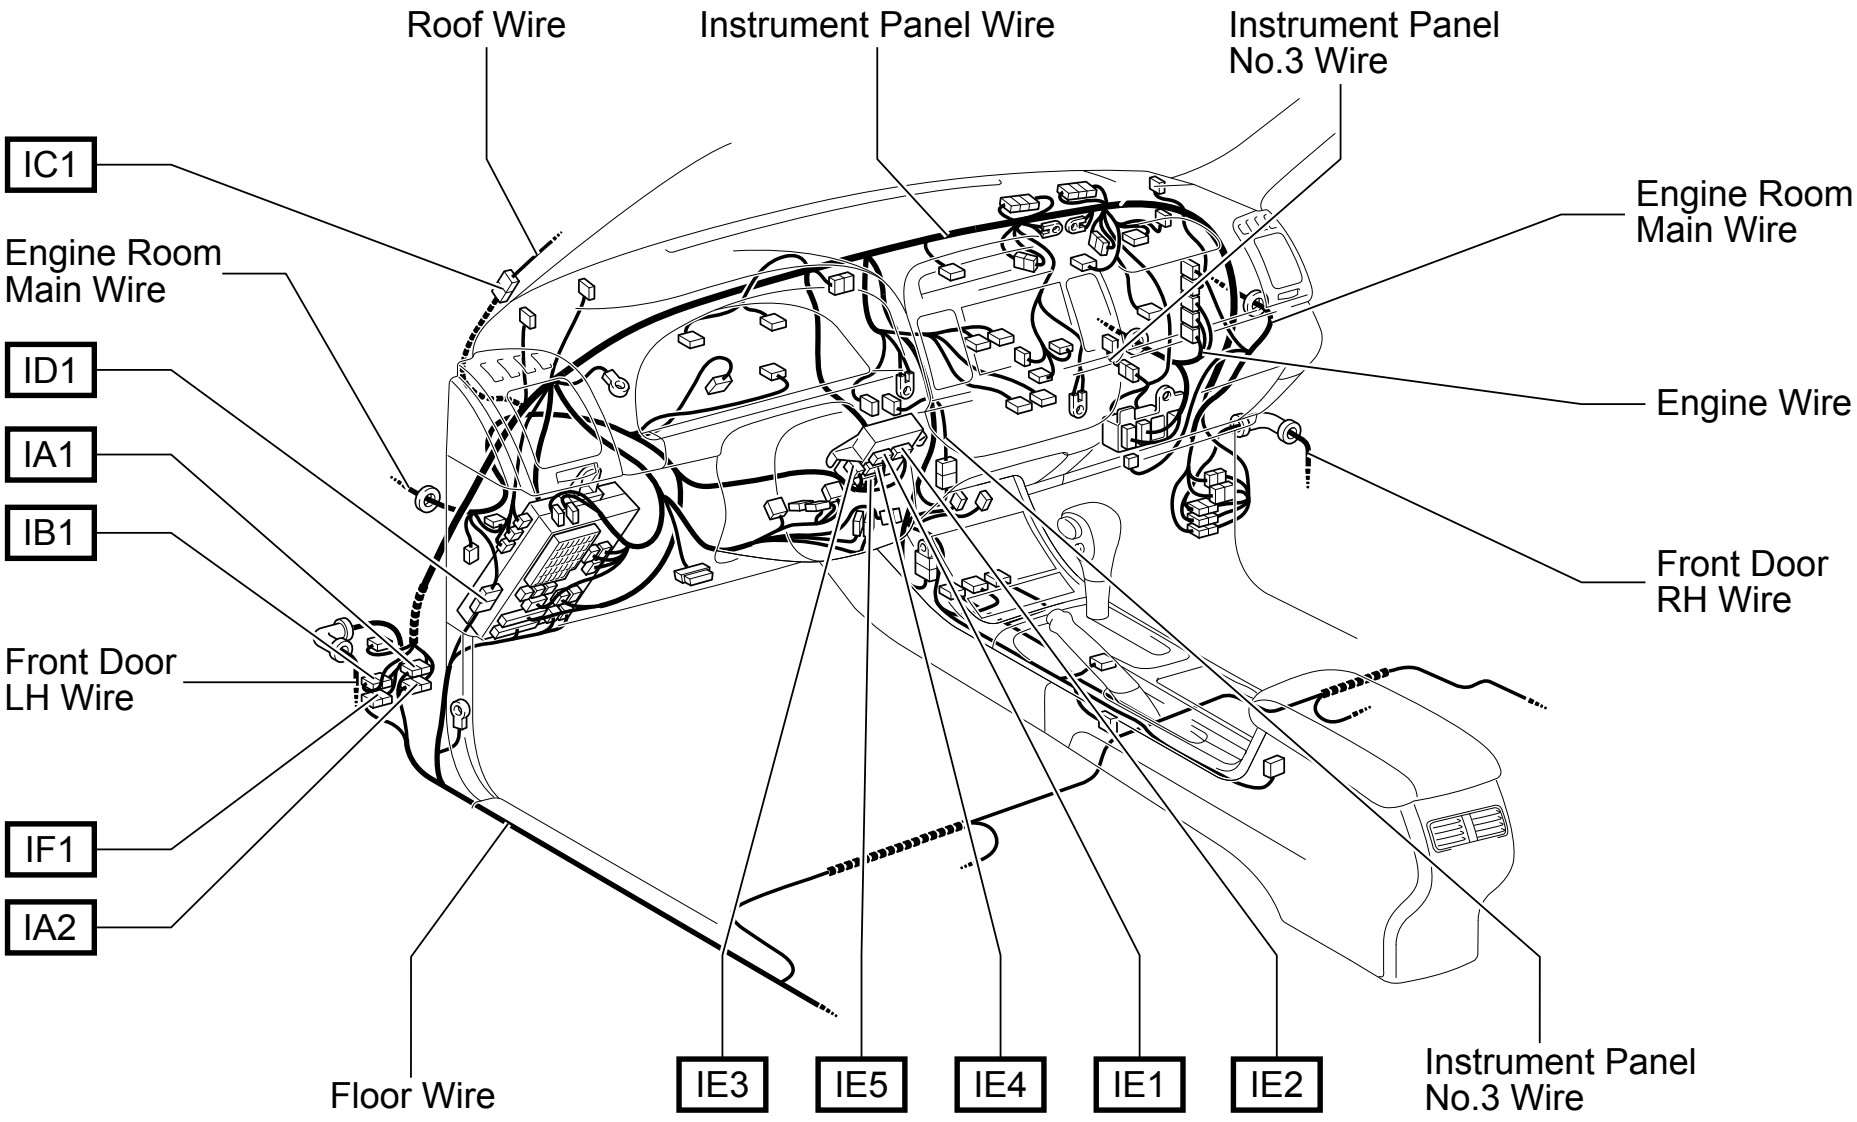

Roof Wire
Instrument Panel Wire
Instrument Panel No.3 Wire
IC1
Engine Room Main Wire
ID1
IA1
IB1
Front Door LH Wire
IF1
IA2
Floor Wire
IE3
IE5
IE4
IE1
IE2
Engine Room Main Wire
Engine Wire
Front Door RH Wire
Instrument Panel No.3 Wire

IA1
White

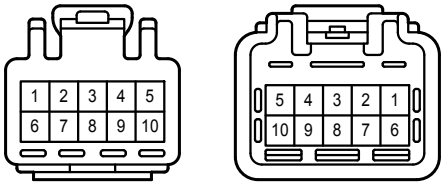


(LHD)

IA1
Gray

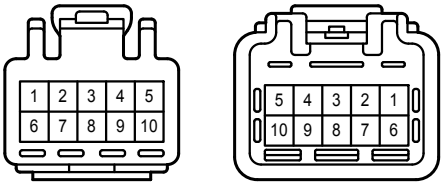


(RHD)


IA2
White

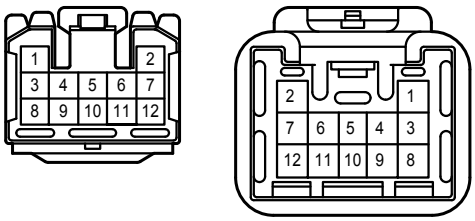


IB1
White

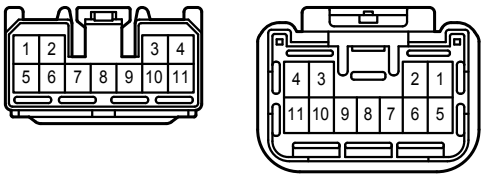

IC1
White

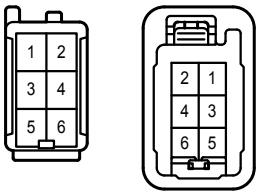


ID1
White

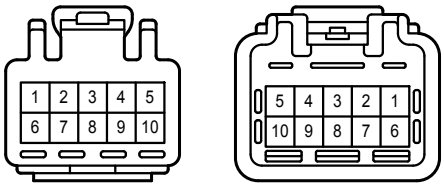


(LHD)

ID1
Gray

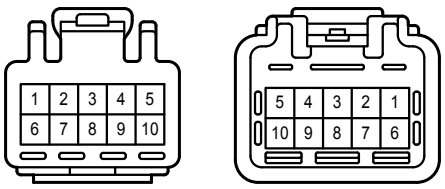


(RHD)


IE1
Blue

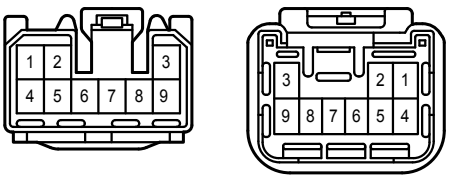



IE2
Blue

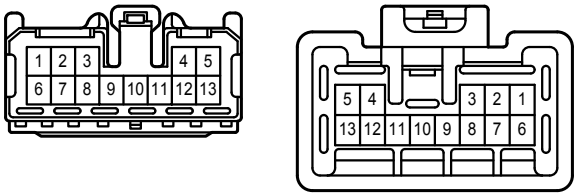


IE3
Yellow

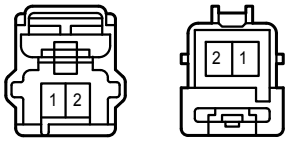

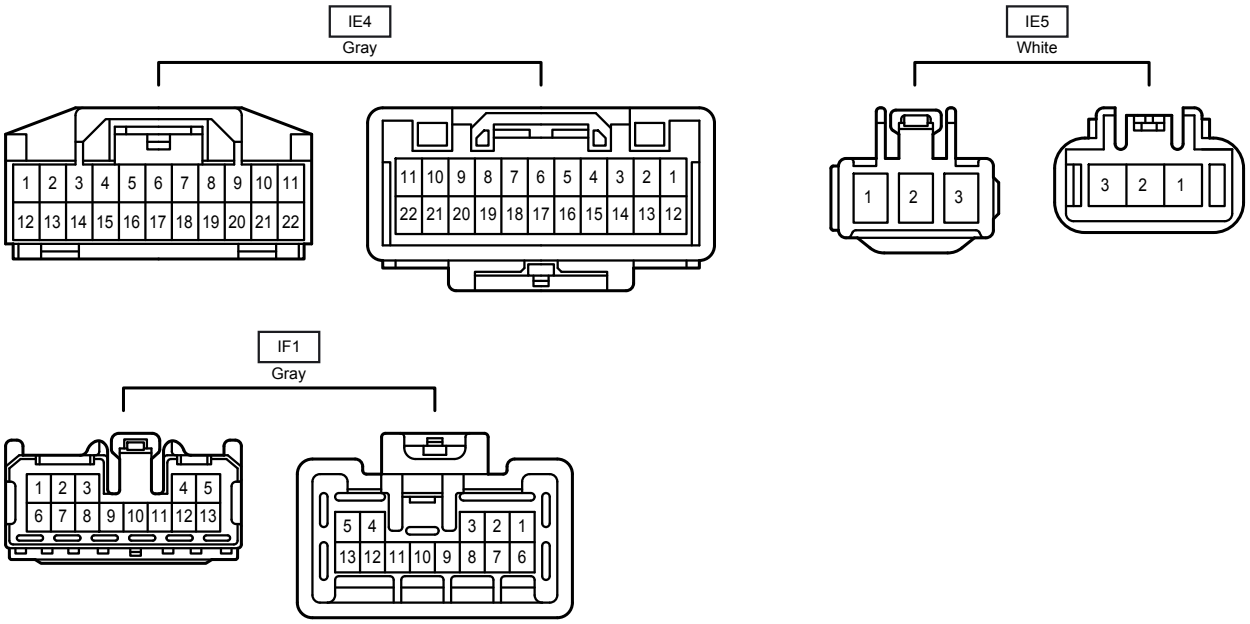

IE4
Gray
1 2 3 4 5 6 7 8 9 10 11
12 13 14 15 16 17 18 19 20 21 22
11 10 9 8 7 6 5 4 3 2 1
22 21 20 19 18 17 16 15 14 13 12
IE5
White
1 2 3
3 2 1
IF1
Gray
1 2 3 4 5
6 7 8 9 10 11 12 13
5 4 3 2 1
13 12 11 10 9 8 7 6

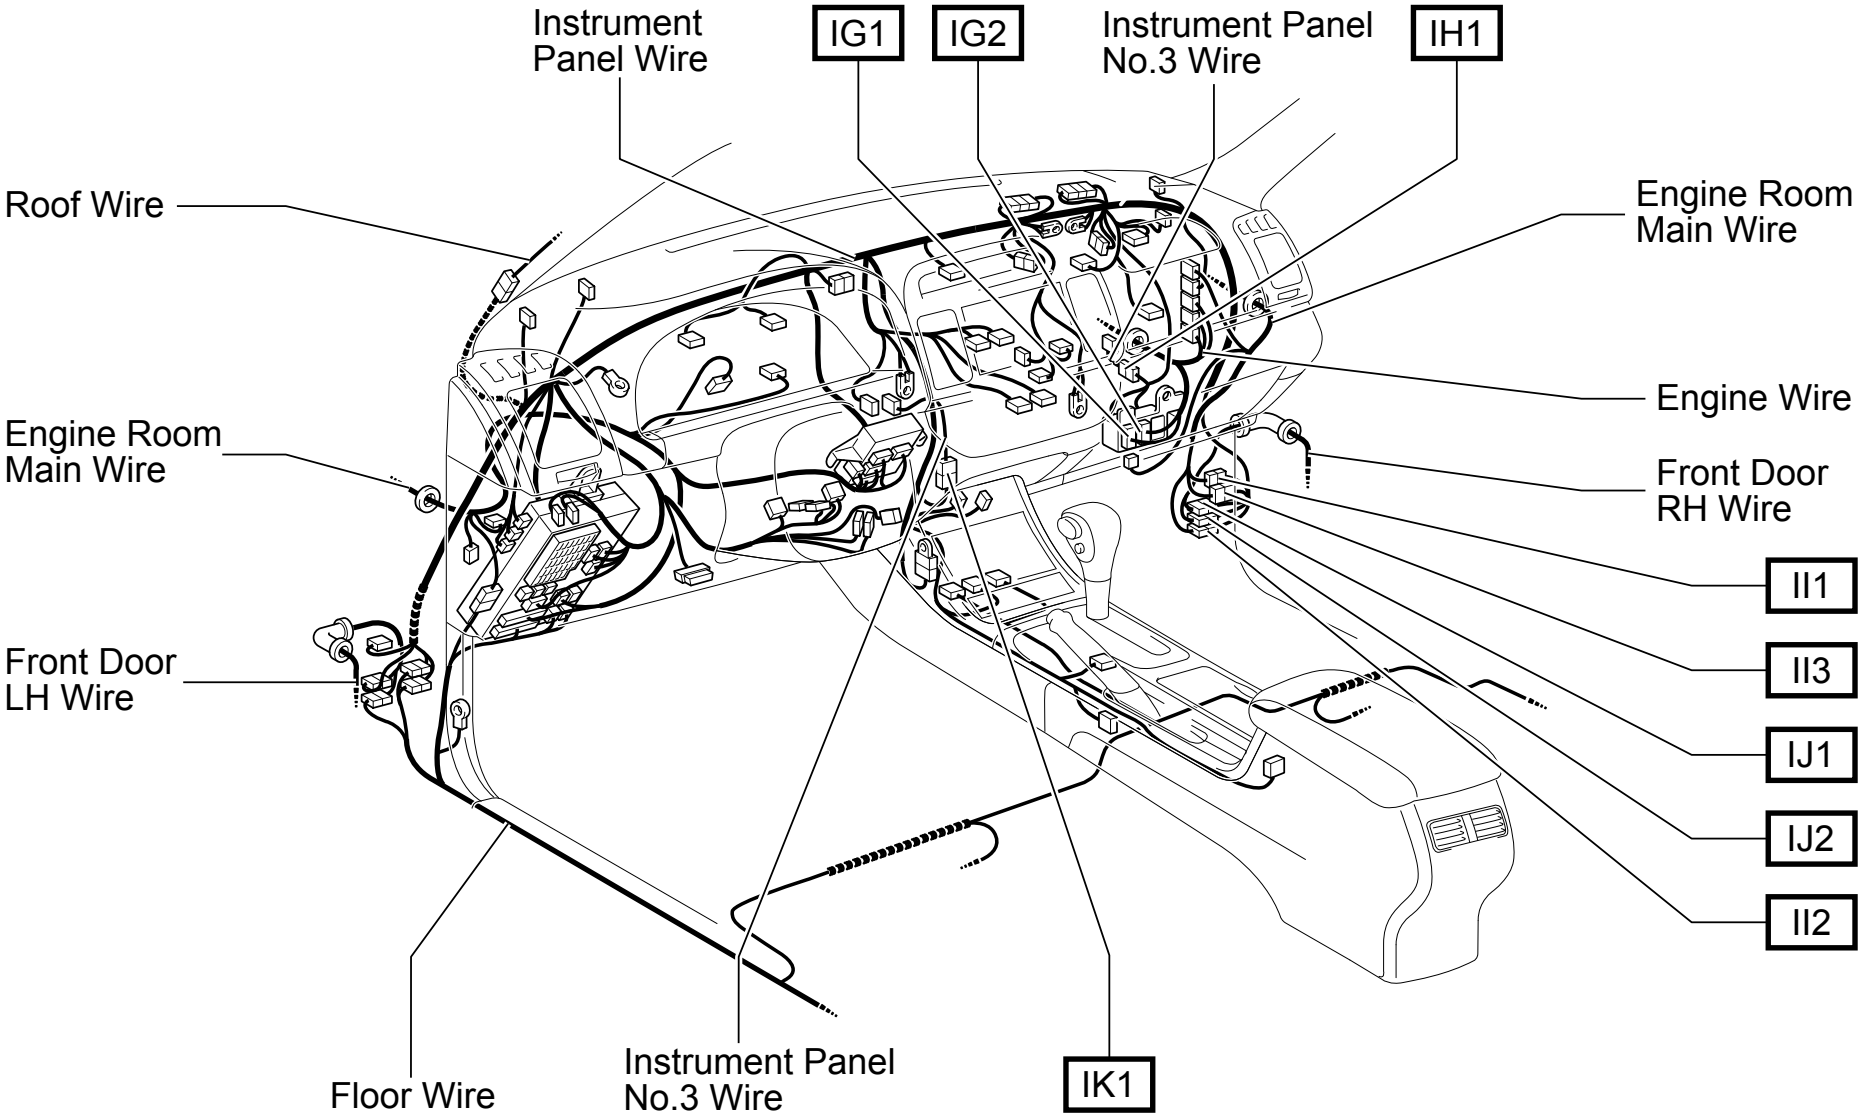
Instrument Panel Wire
IG1
IG2
Instrument Panel No.3 Wire
IH1
Roof Wire
Engine Room Main Wire
Engine Wire
Engine Room Main Wire
Front Door RH Wire
II1
Front Door LH Wire
II3
IJ1
IJ2
II2
Floor Wire
Instrument Panel No.3 Wire
IK1


IG1
White

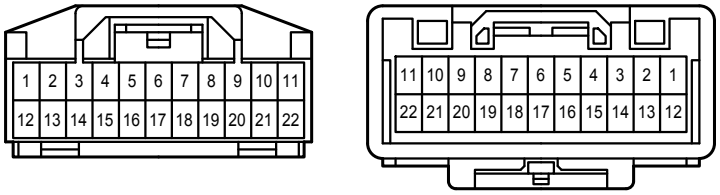


IG2
White

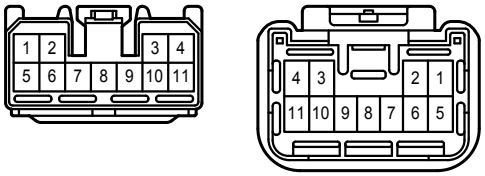


IH1
White

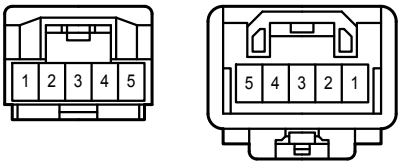


II1
Yellow

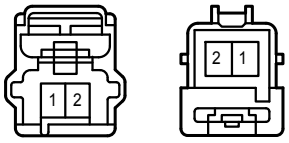


II2
White

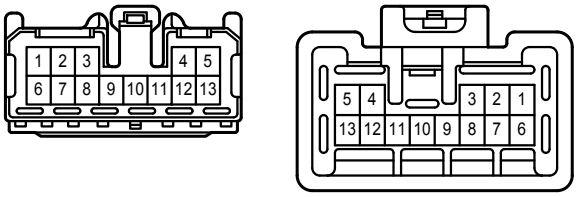


II3
White

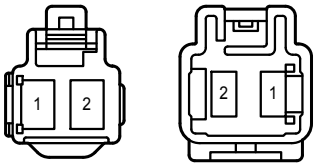


IJ1
White

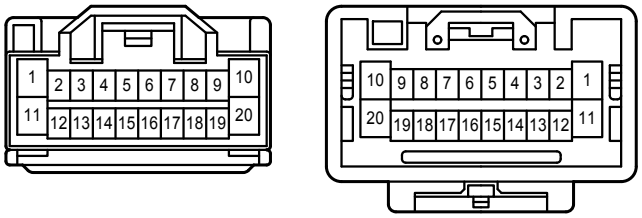



IJ2
White

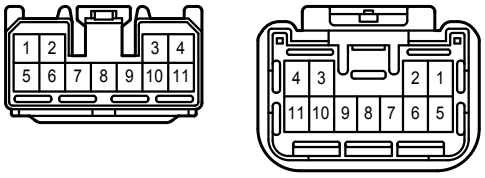



IK1
White

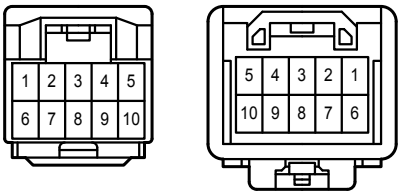


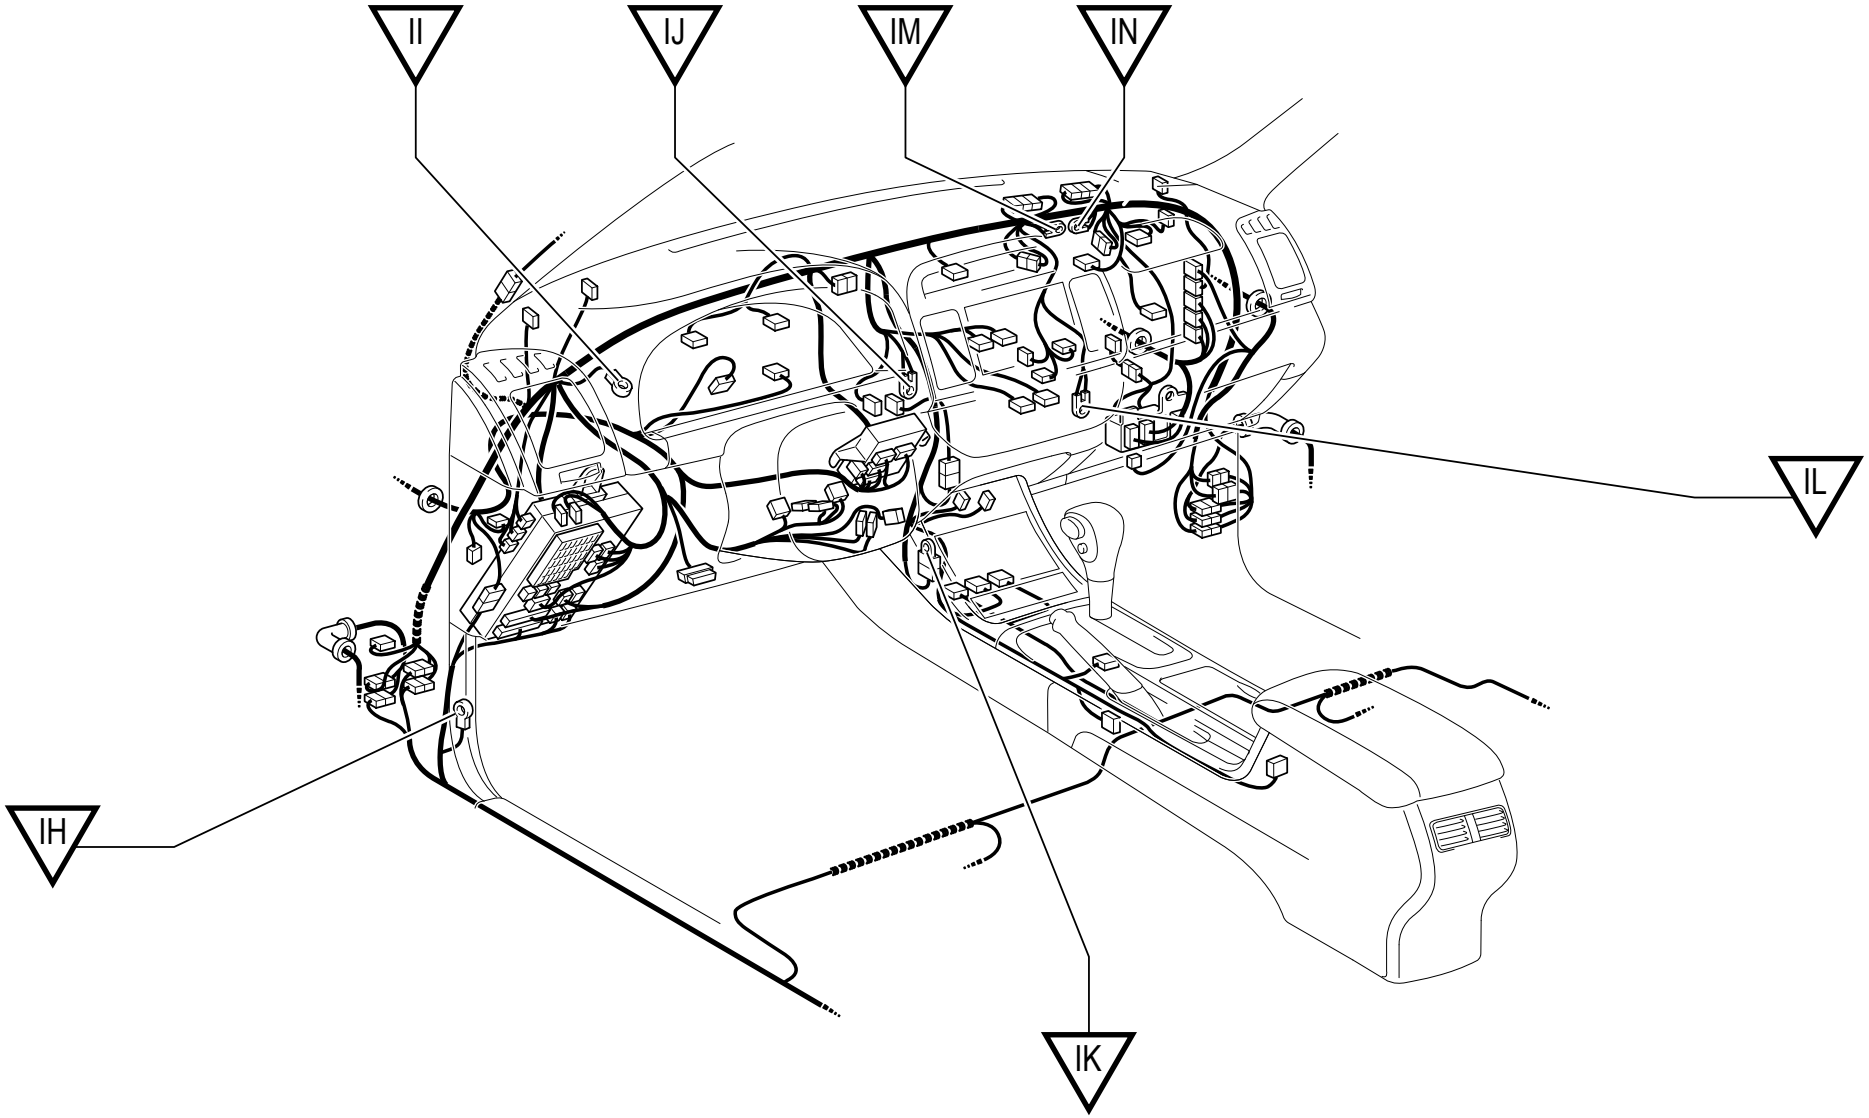

II
IJ
IM
IN
IL
IH
IK

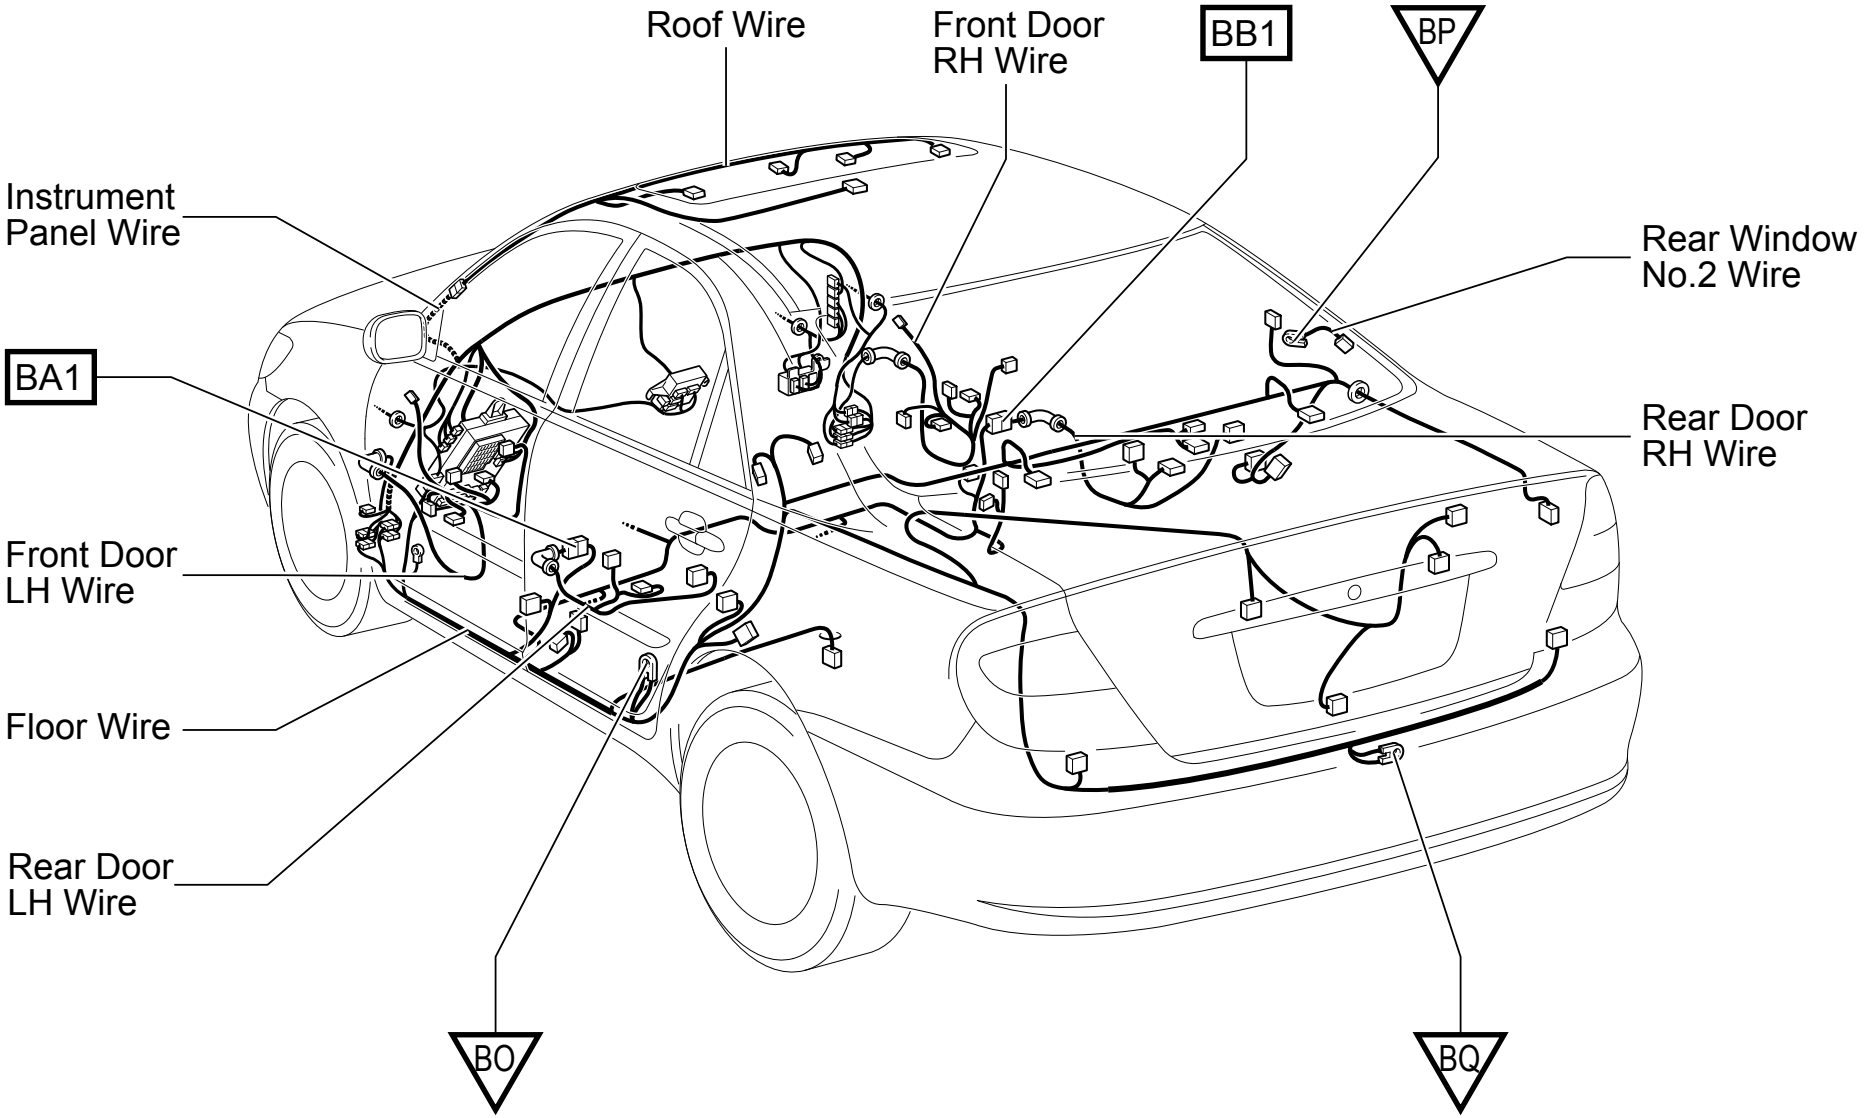

Roof Wire
Front Door RH Wire
BB1
BP
Instrument Panel Wire
Rear Window No.2 Wire
BA1
Rear Door RH Wire
Front Door LH Wire
Floor Wire
Rear Door LH Wire
BO
BQ

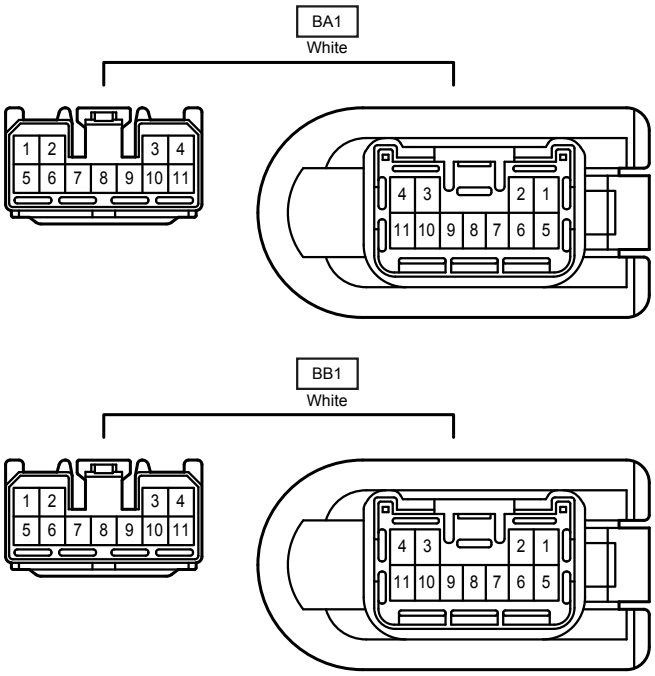

BA1
White
1 2 3 4
5 6 7 8 9 10 11
4 3 2 1
11 10 9 8 7 6 5
BB1
White
1 2 3 4
5 6 7 8 9 10 11
4 3 2 1
11 10 9 8 7 6 5

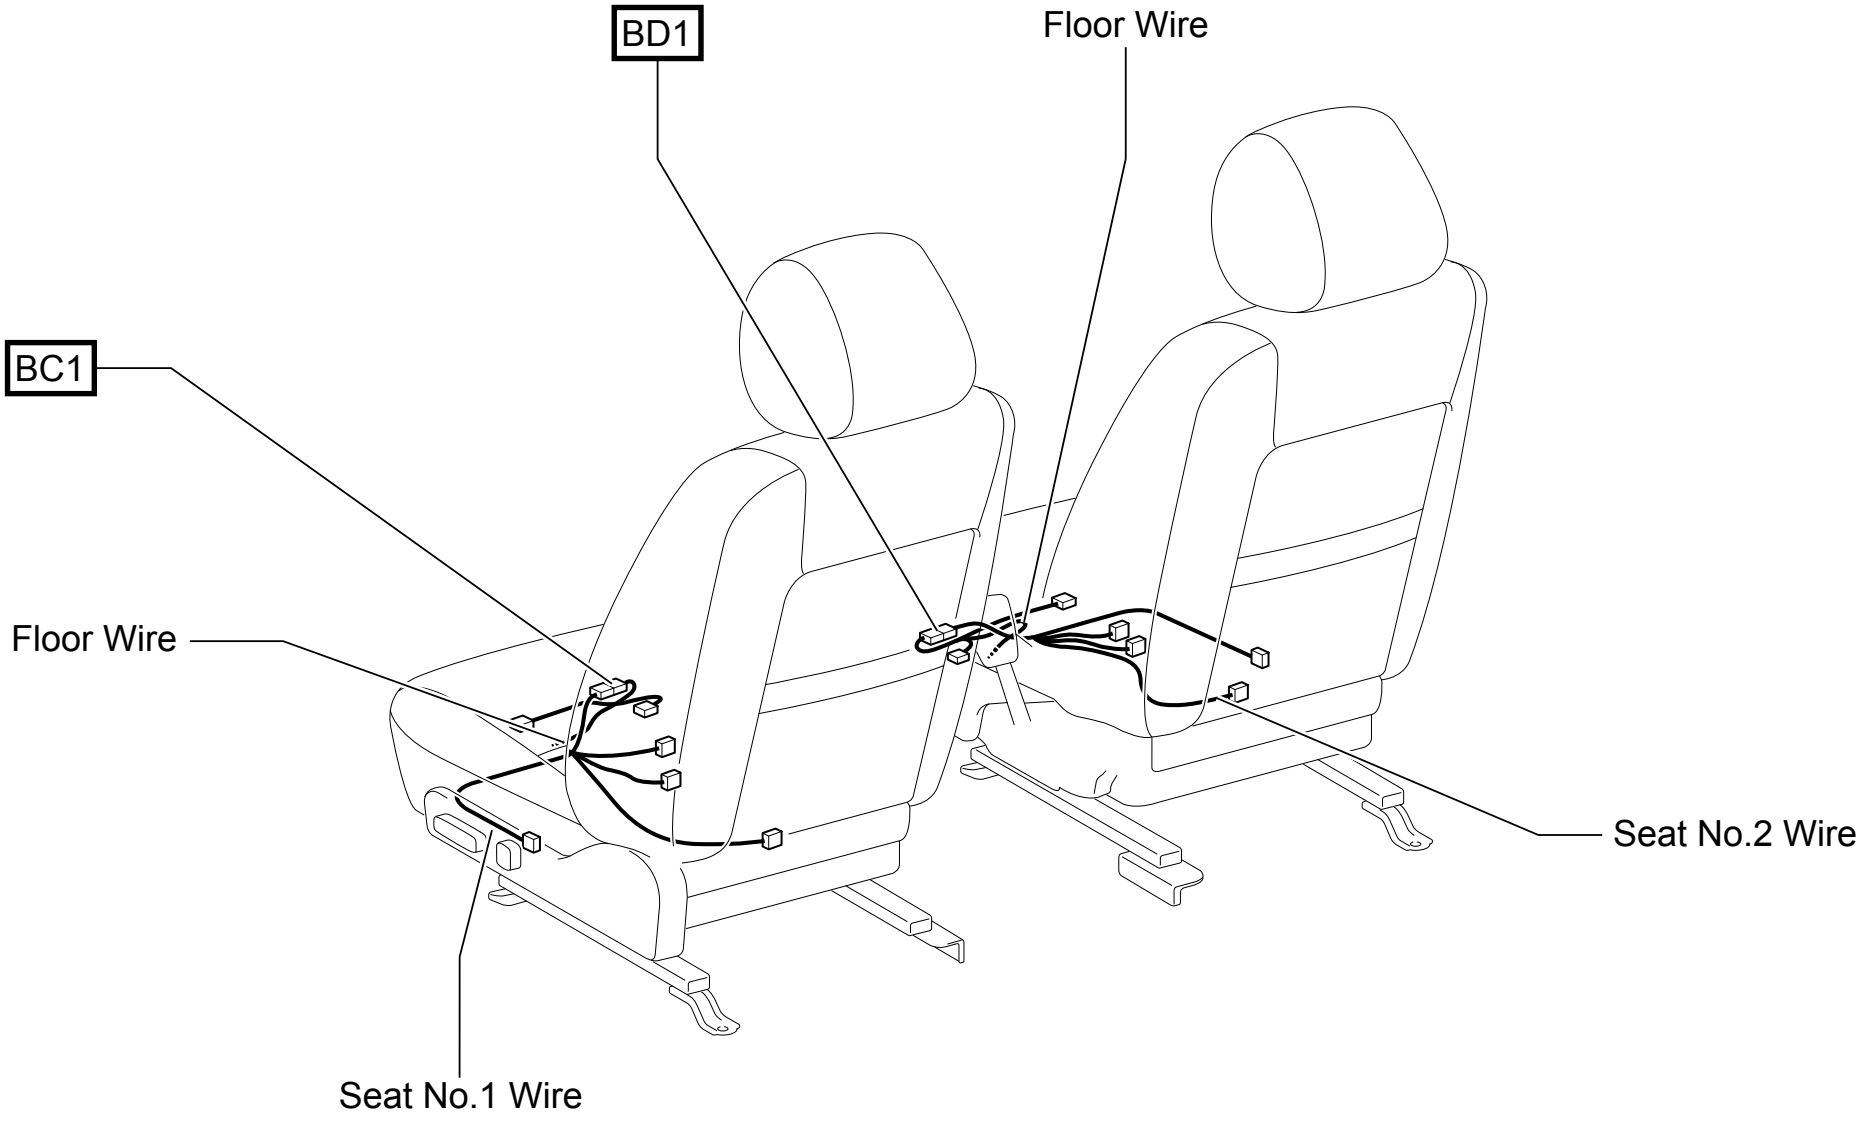

BD1
Floor Wire
BC1
Floor Wire
Seat No.2 Wire
Seat No.1 Wire

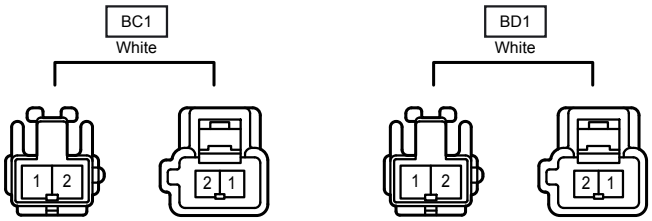
BC1
White
1
2
2
1
BD1
White
1
2
2
1

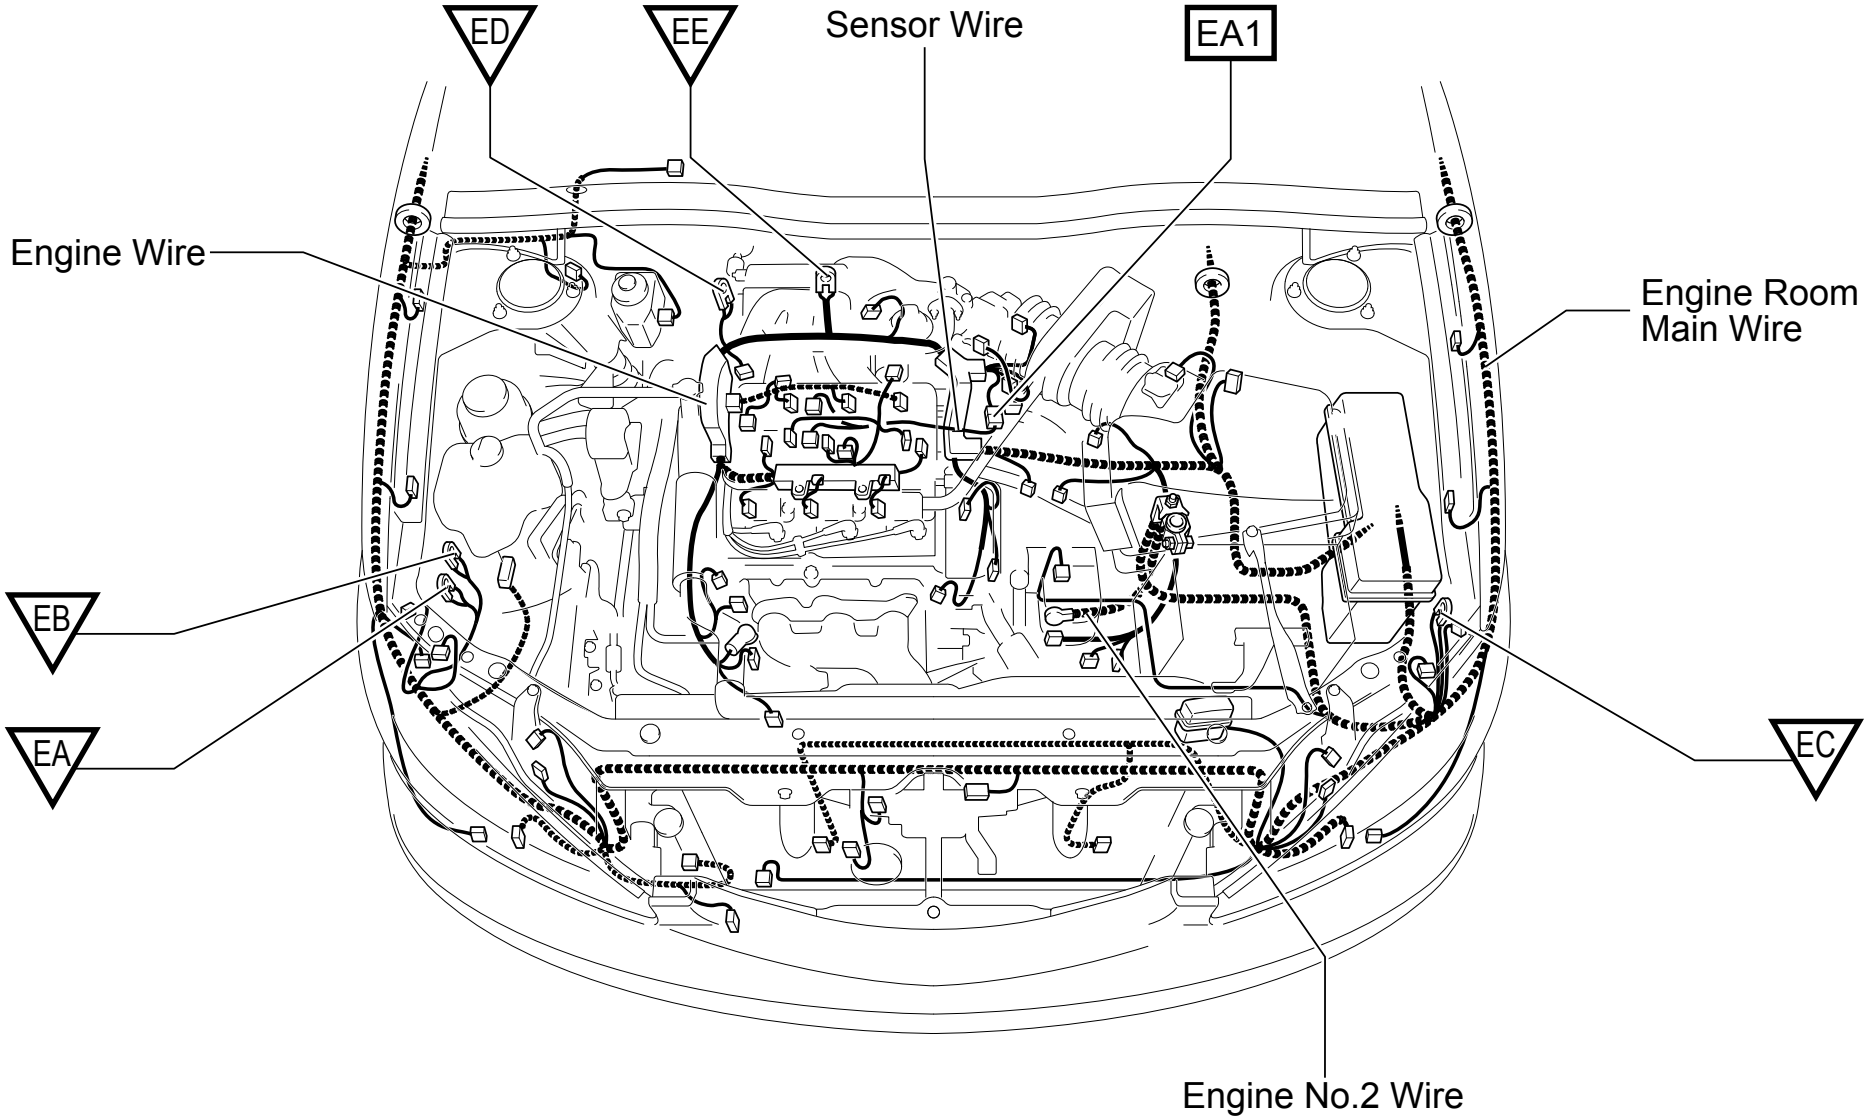

ED
EE
Sensor Wire
EA1
Engine Wire
Engine Room
Main Wire
EB
EA
EC
Engine No.2 Wire

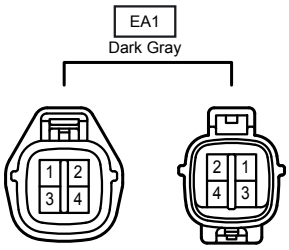
EA1
Dark Gray
1
2
3
4
2
1
4
3

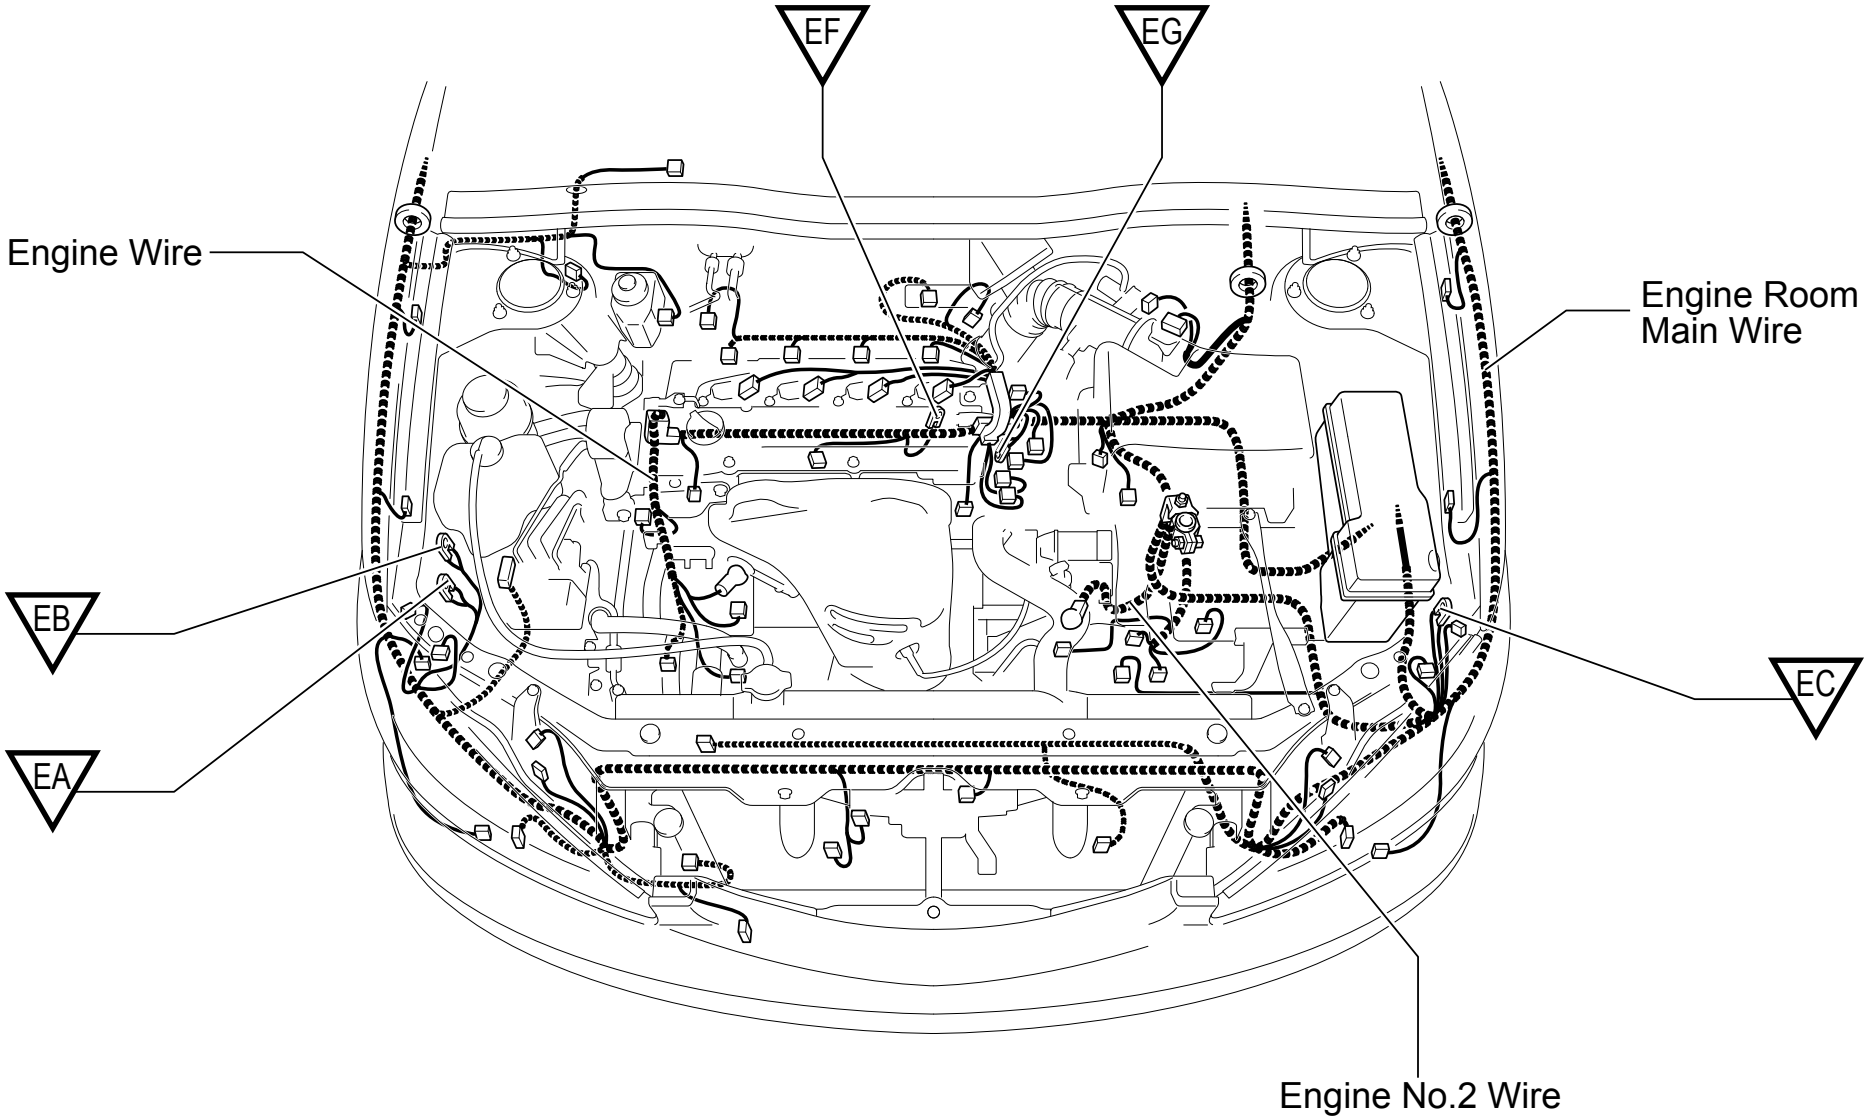

EF
EG
Engine Wire
Engine Room
Main Wire
EB
EA
EC
Engine No.2 Wire

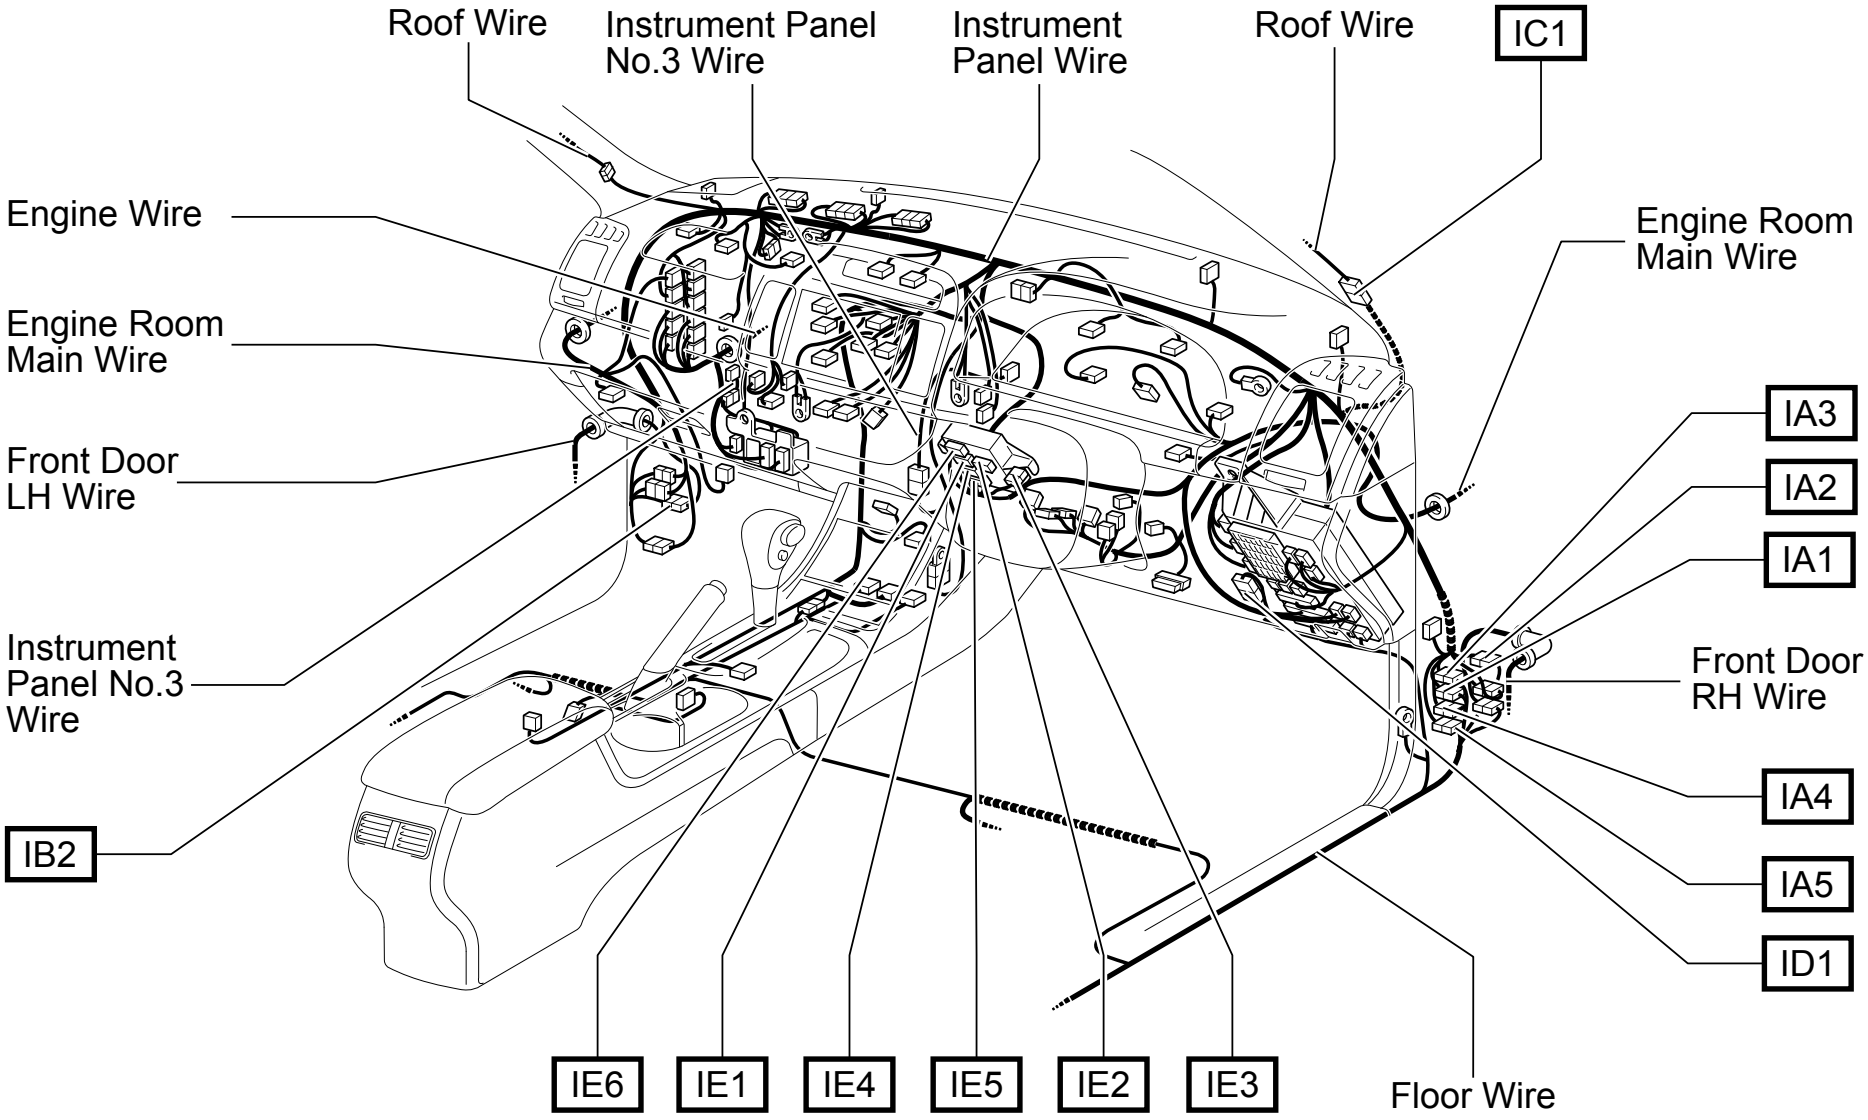
Roof Wire
Instrument Panel No.3 Wire
Instrument Panel Wire
Roof Wire
IC1
Engine Wire
Engine Room Main Wire
Engine Room Main Wire
Front Door LH Wire
IA3
IA2
IA1
Instrument Panel No.3 Wire
Front Door RH Wire
IB2
IA4
IA5
ID1
IE6
IE1
IE4
IE5
IE2
IE3
Floor Wire


IA1
Gray

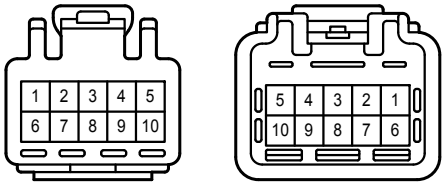


IA2
White

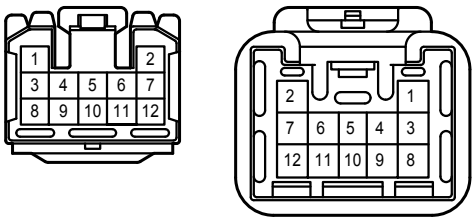


IA3
White

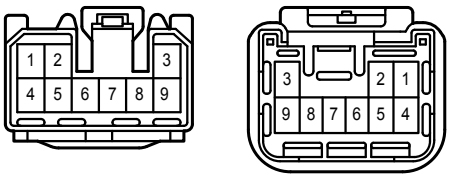


IA4
White

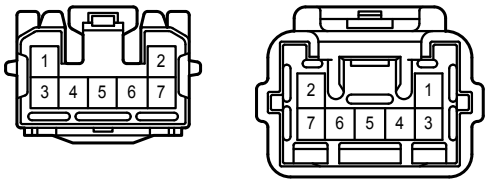


IA5
White

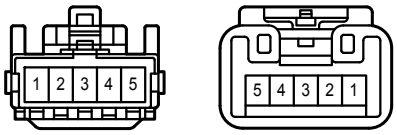


IB2
Blue

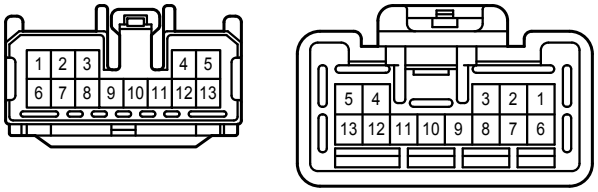



IC1
White

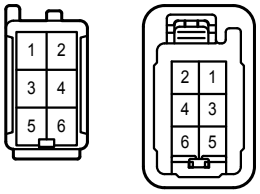



ID1
Gray

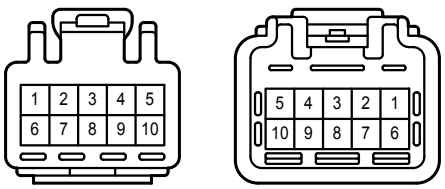


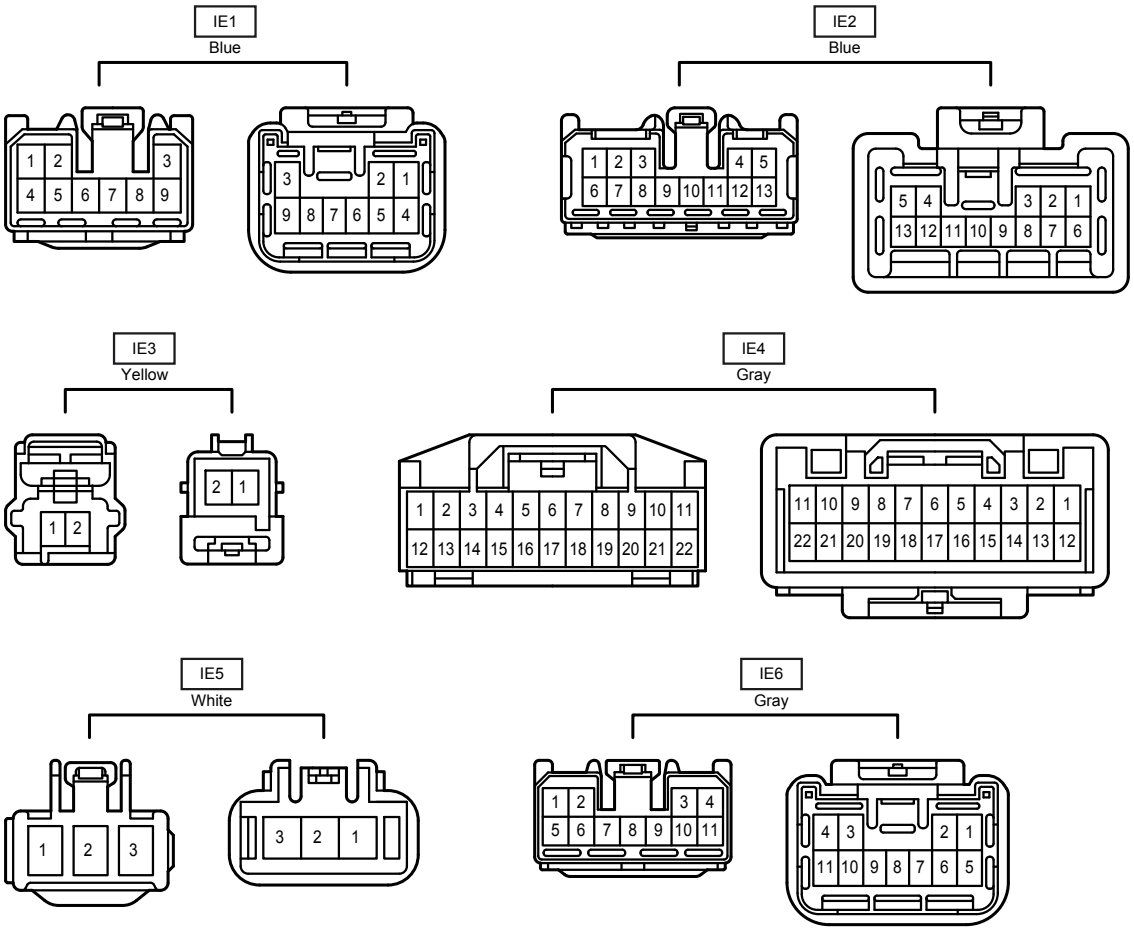

IE1
Blue
1 2 3
4 5 6 7 8 9
3 2 1
9 8 7 6 5 4
IE2
Blue
1 2 3 4 5
6 7 8 9 10 11 12 13
5 4 3 2 1
13 12 11 10 9 8 7 6
IE3
Yellow
1 2
2 1
IE4
Gray
1 2 3 4 5 6 7 8 9 10 11
12 13 14 15 16 17 18 19 20 21 22
11 10 9 8 7 6 5 4 3 2 1
22 21 20 19 18 17 16 15 14 13 12
IE5
White
1 2 3
3 2 1
IE6
Gray
1 2 3 4
5 6 7 8 9 10 11
4 3 2 1
11 10 9 8 7 6 5

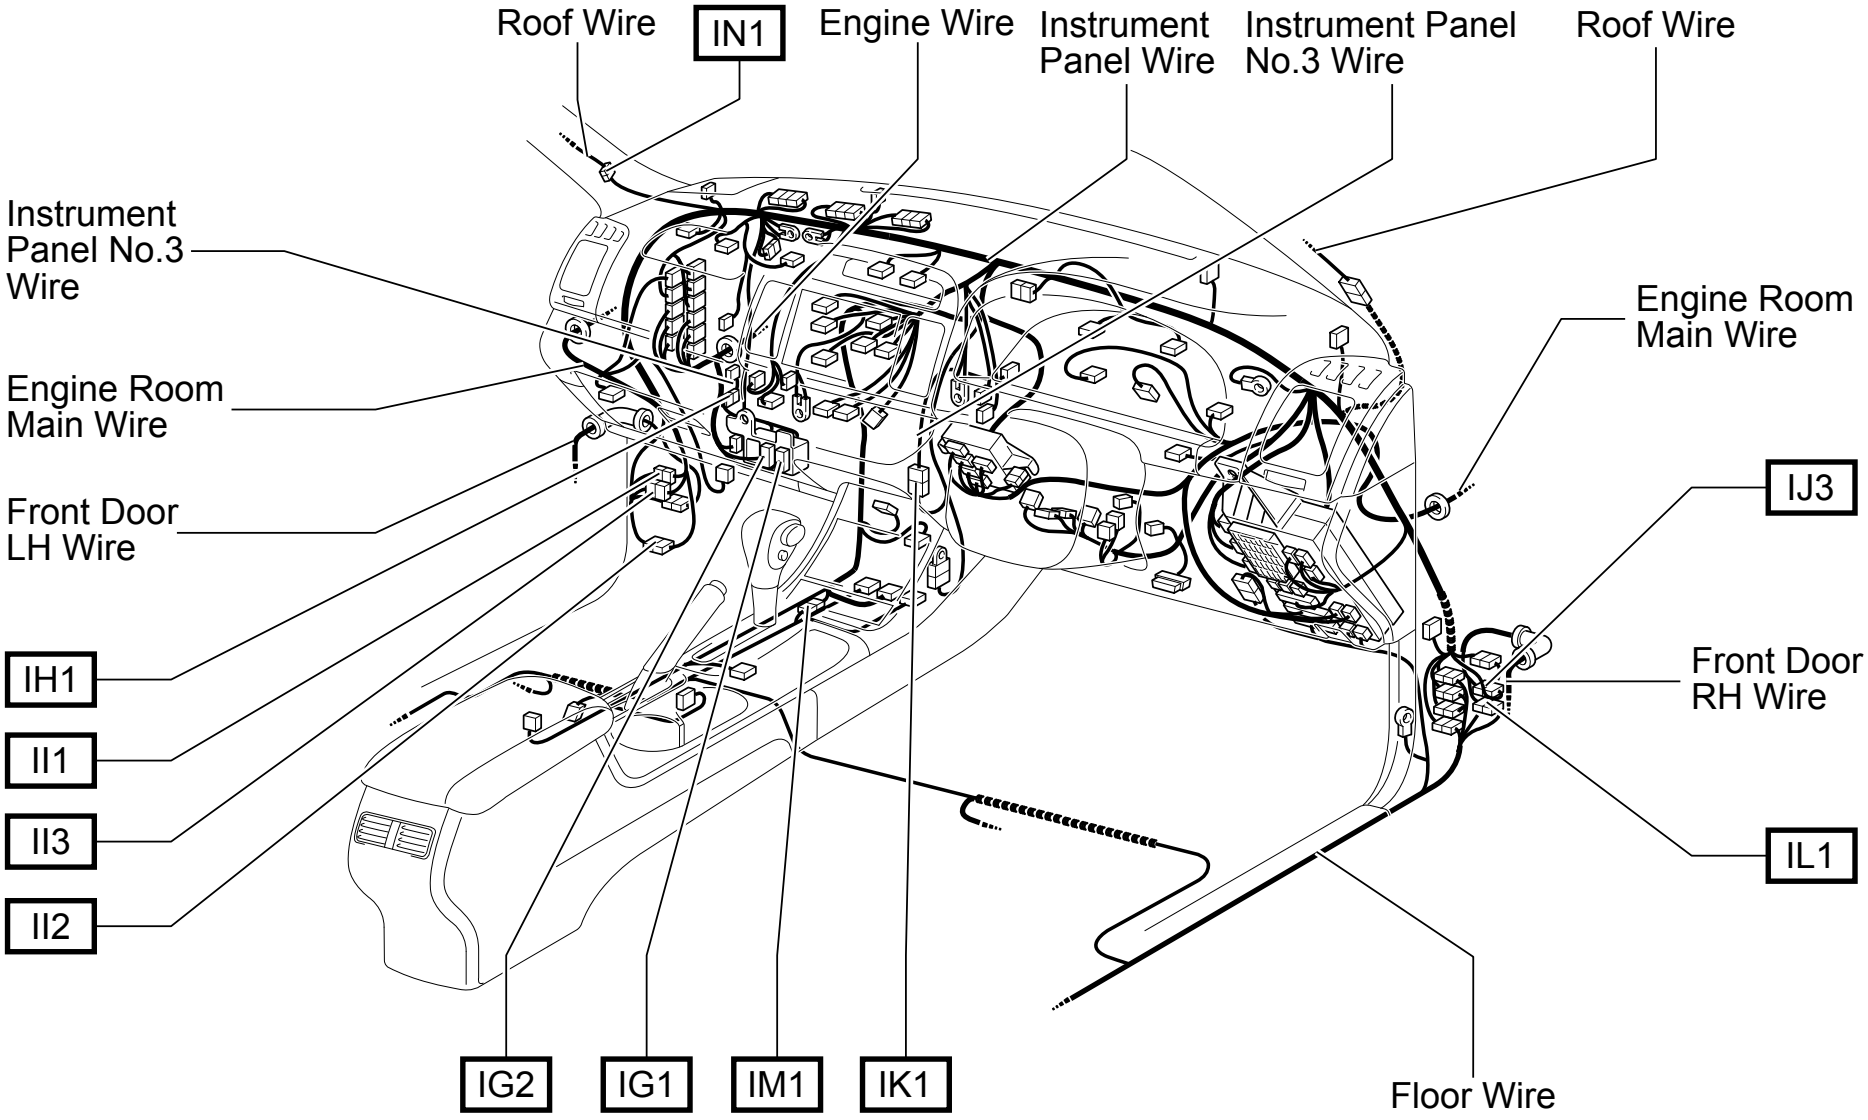

Roof Wire
IN1
Engine Wire
Instrument Panel Wire
Instrument Panel No.3 Wire
Roof Wire
Instrument Panel No.3 Wire
Engine Room Main Wire
Engine Room Main Wire
Front Door LH Wire
IJ3
IH1
Front Door RH Wire
II1
II3
IL1
II2
IG2
IG1
IM1
IK1
Floor Wire

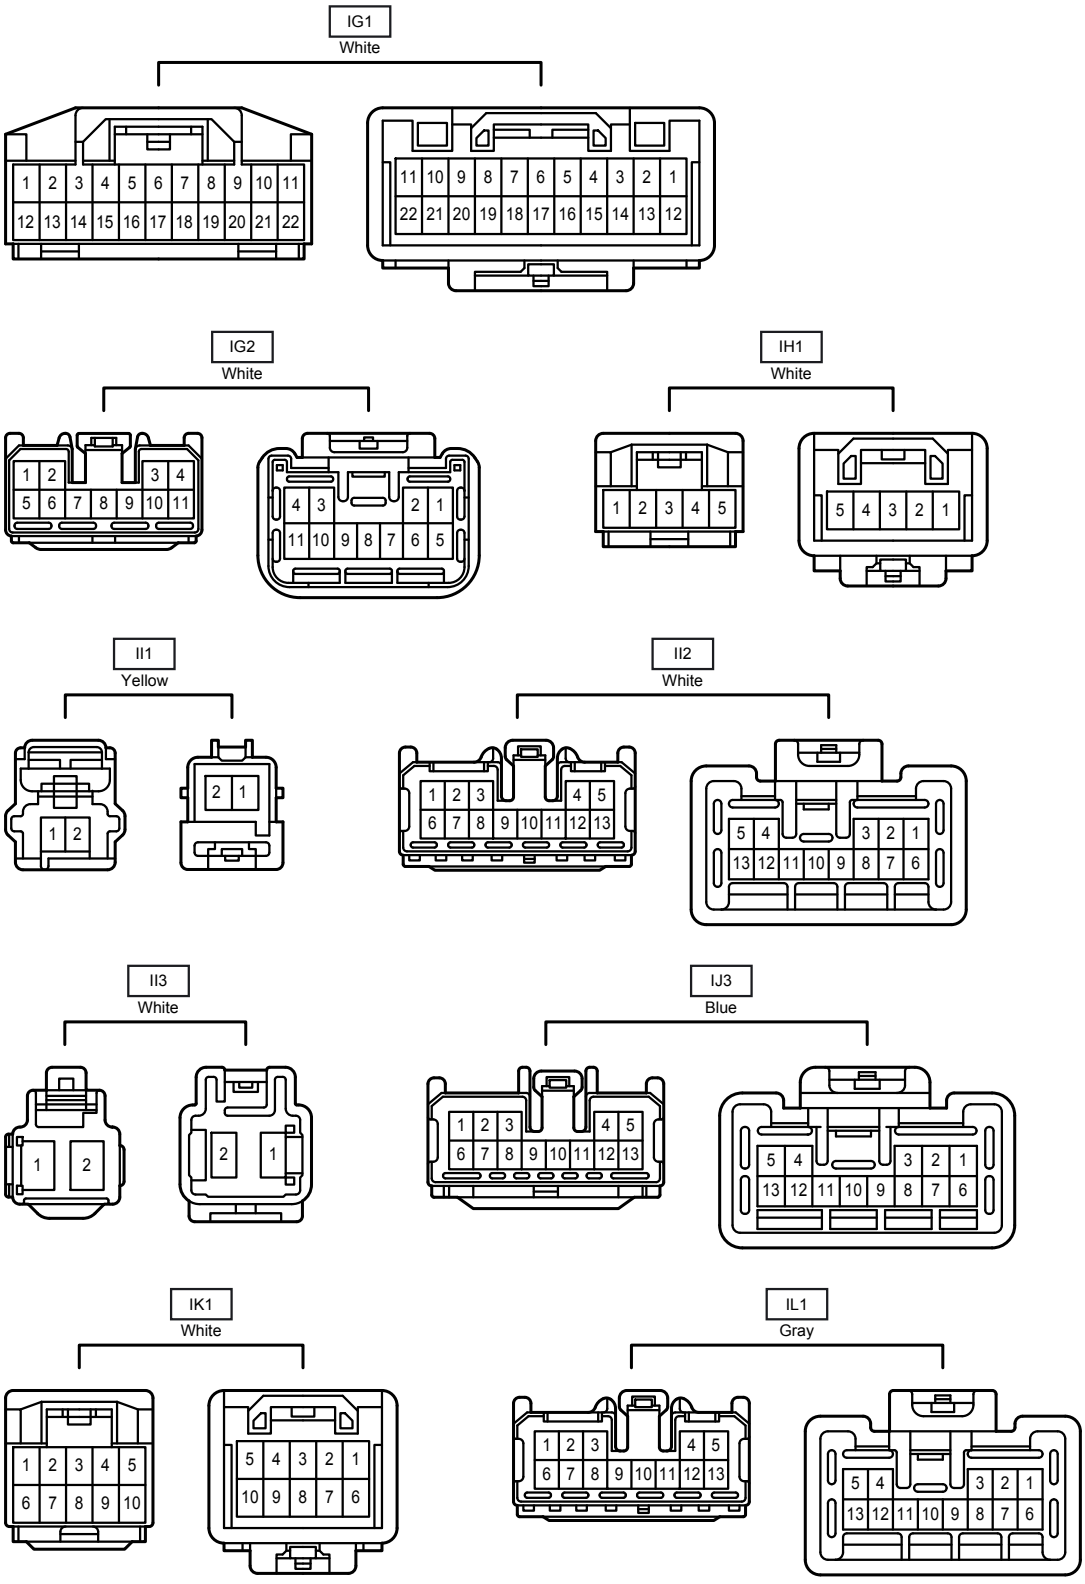

IG1
White
1 2 3 4 5 6 7 8 9 10 11
12 13 14 15 16 17 18 19 20 21 22
11 10 9 8 7 6 5 4 3 2 1
22 21 20 19 18 17 16 15 14 13 12
IG2
White
1 2 3 4
5 6 7 8 9 10 11
4 3 2 1
11 10 9 8 7 6 5
IH1
White
1 2 3 4 5
5 4 3 2 1
II1
Yellow
1 2
2 1
II2
White
1 2 3 4 5
6 7 8 9 10 11 12 13
5 4 3 2 1
13 12 11 10 9 8 7 6
II3
White
1 2
2 1
IJ3
Blue
1 2 3 4 5
6 7 8 9 10 11 12 13
5 4 3 2 1
13 12 11 10 9 8 7 6
IK1
White
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6
IL1
Gray
1 2 3 4 5
6 7 8 9 10 11 12 13
5 4 3 2 1
13 12 11 10 9 8 7 6

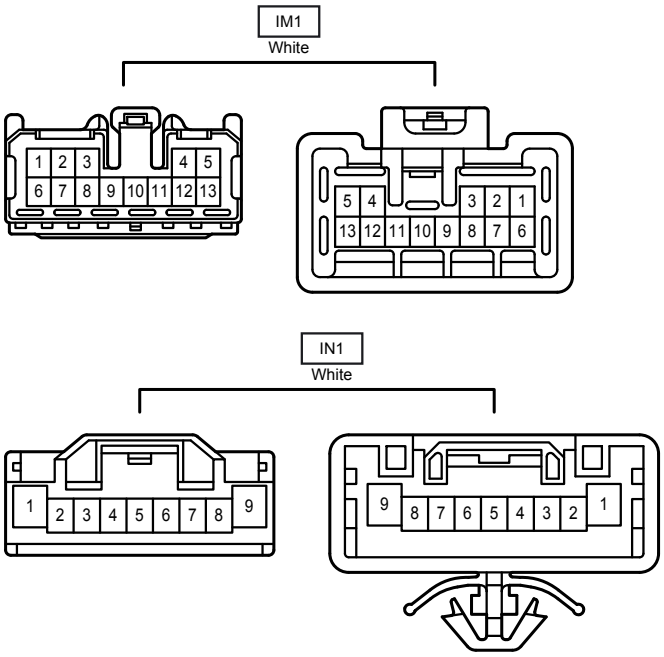

IM1
White
1 2 3 4 5
6 7 8 9 10 11 12 13
5 4 3 2 1
13 12 11 10 9 8 7 6
IN1
White
1 2 3 4 5 6 7 8 9
9 8 7 6 5 4 3 2 1

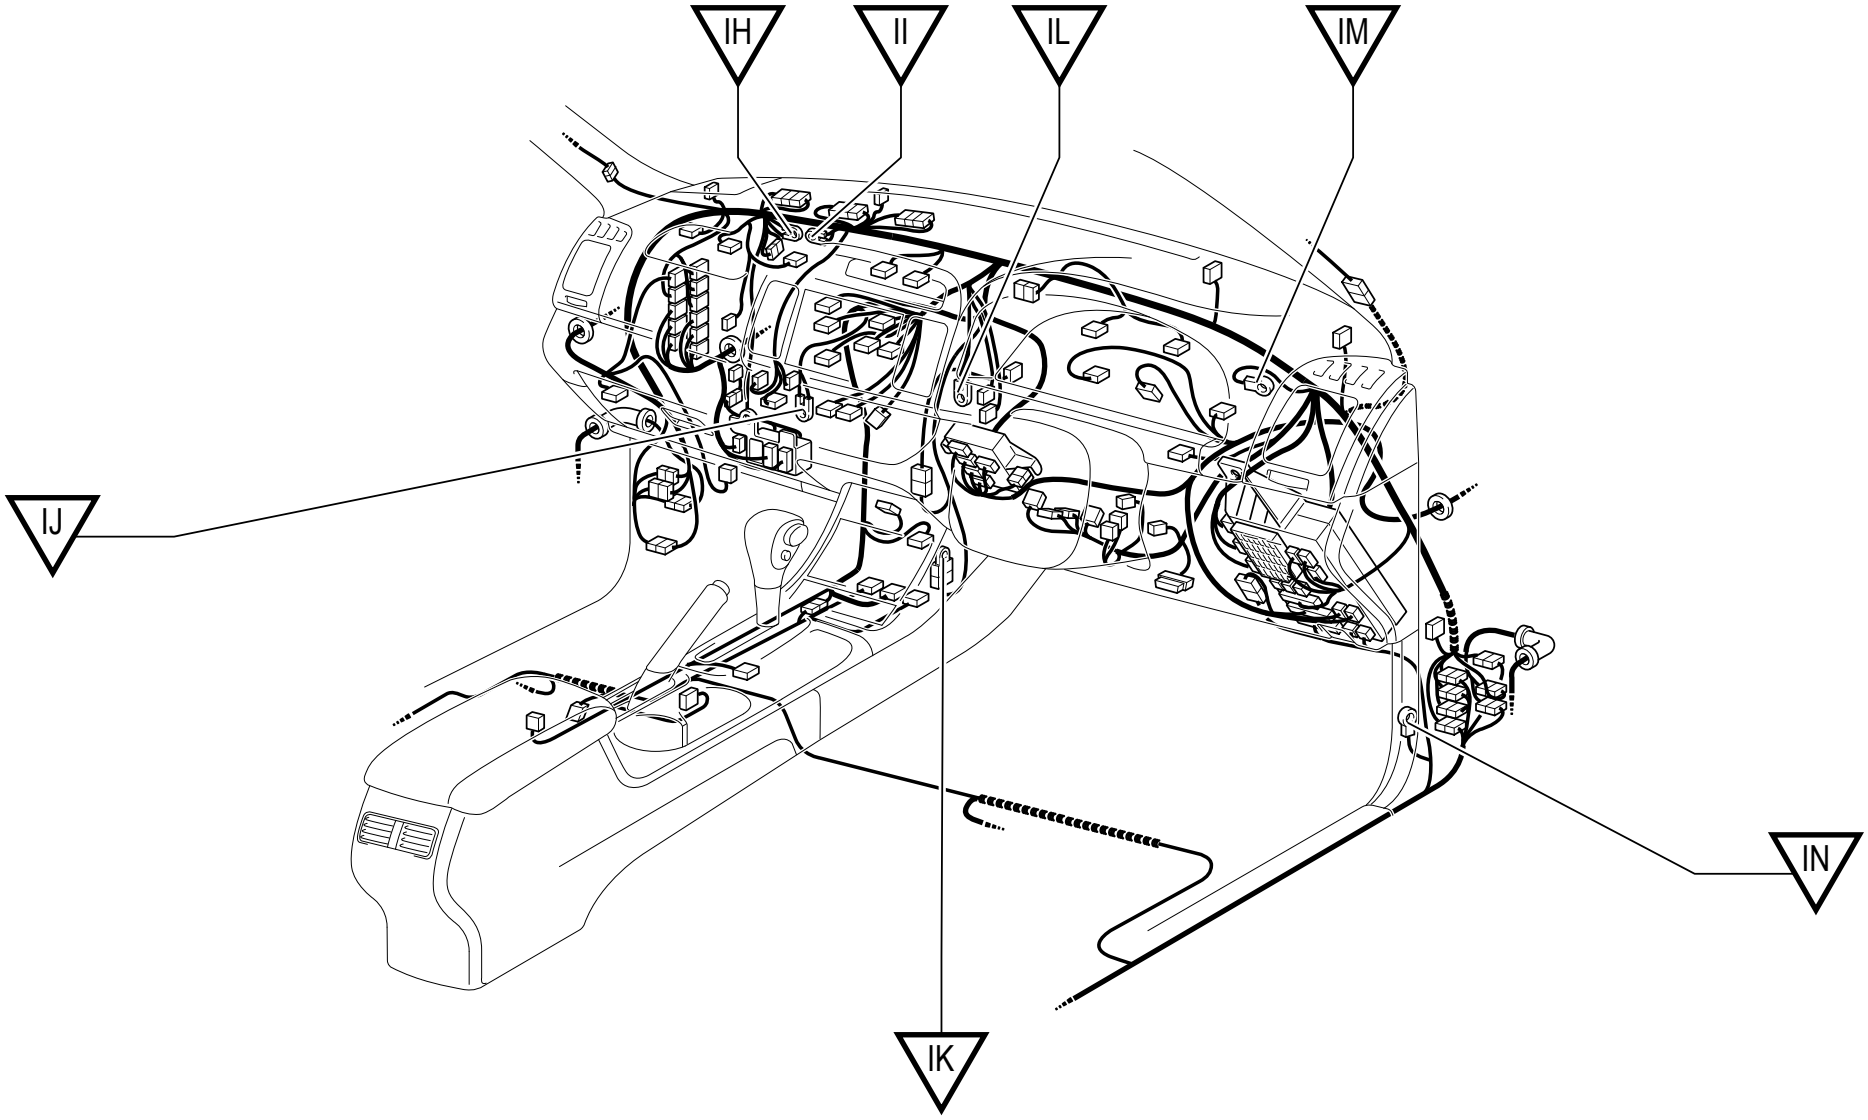
IH
II
IL
IM
IJ
IK
IN

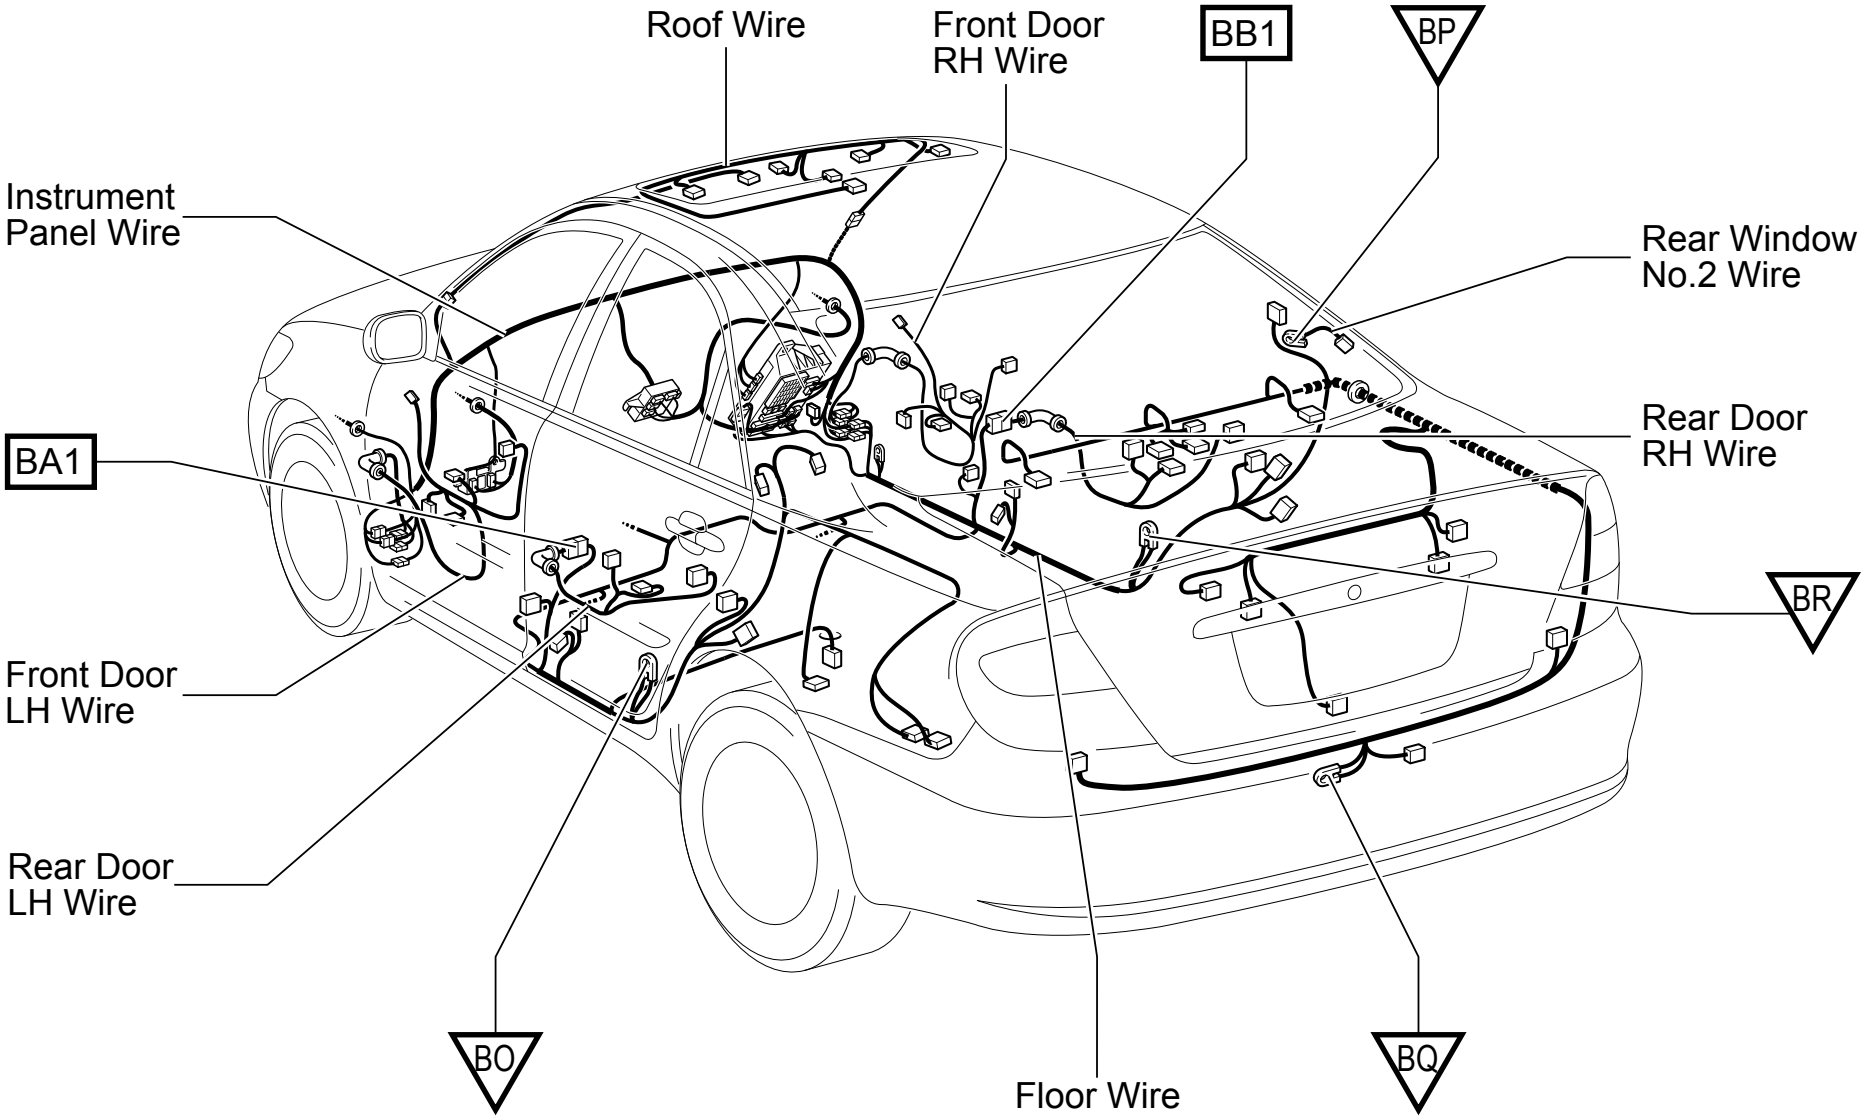
Roof Wire
Front Door RH Wire
BB1
BP
Instrument Panel Wire
Rear Window No.2 Wire
Rear Door RH Wire
BA1
BR
Front Door LH Wire
Rear Door LH Wire
BO
Floor Wire
BQ

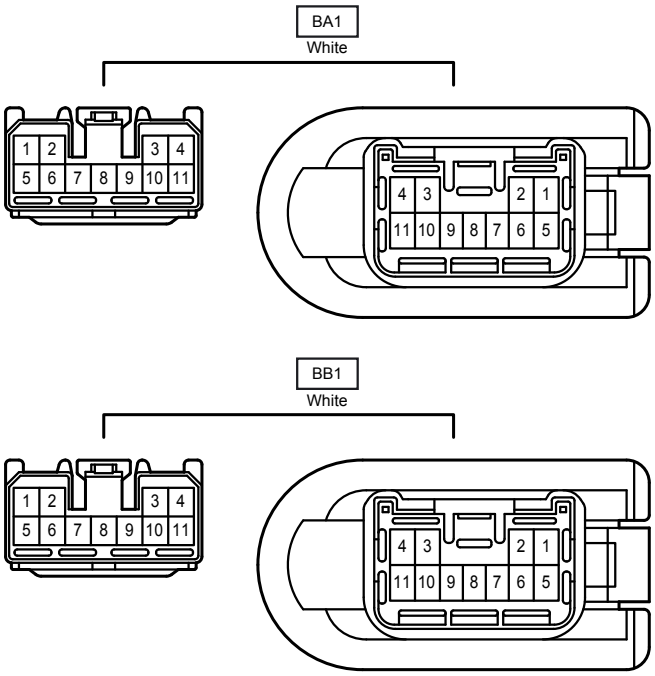

BA1
White
1 2 3 4
5 6 7 8 9 10 11
4 3 2 1
11 10 9 8 7 6 5
BB1
White
1 2 3 4
5 6 7 8 9 10 11
4 3 2 1
11 10 9 8 7 6 5

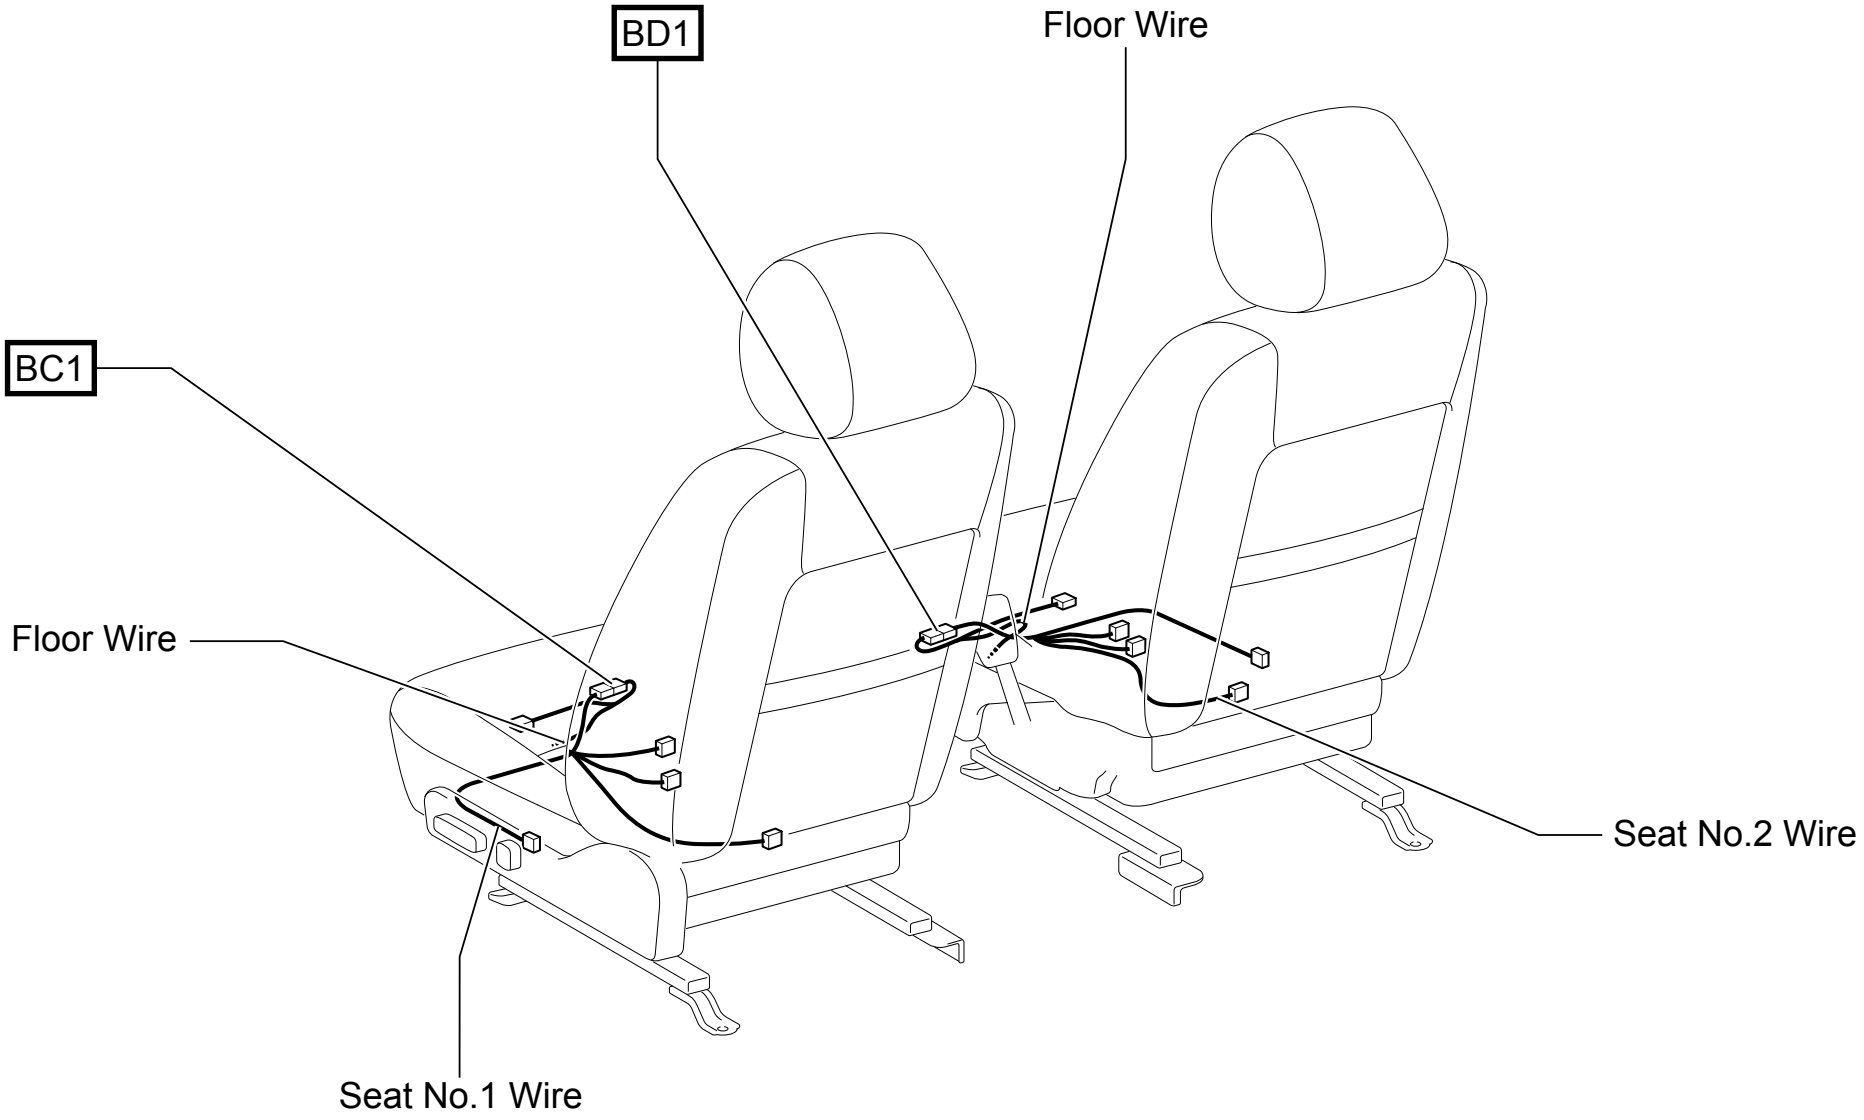
BD1
Floor Wire
BC1
Floor Wire
Seat No.2 Wire
Seat No.1 Wire

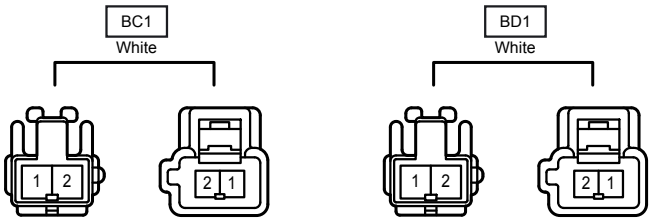

BC1
White
1
2
2
1
BD1
White
1
2
2
1

RELAY LOCATIONS

[Engine Compartment]

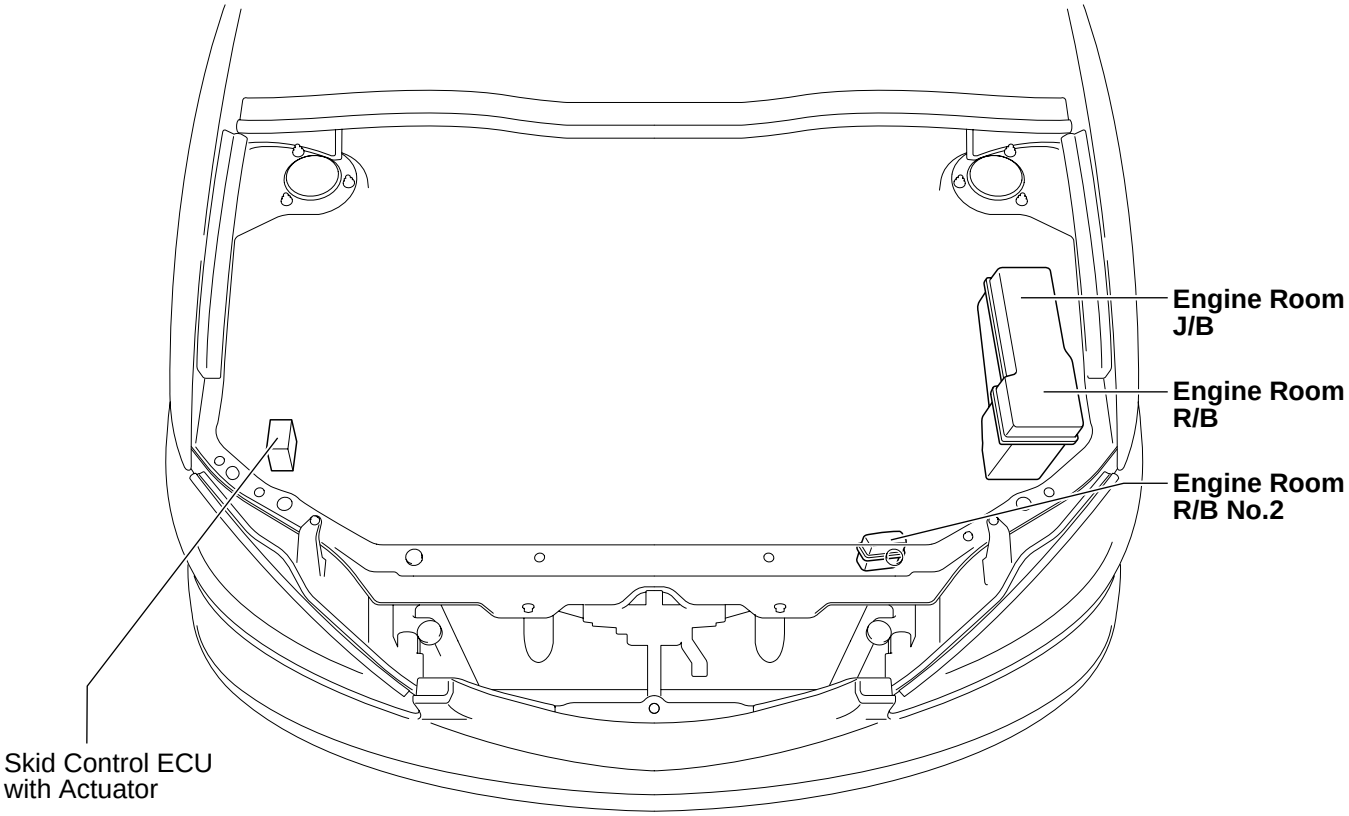


[Body]

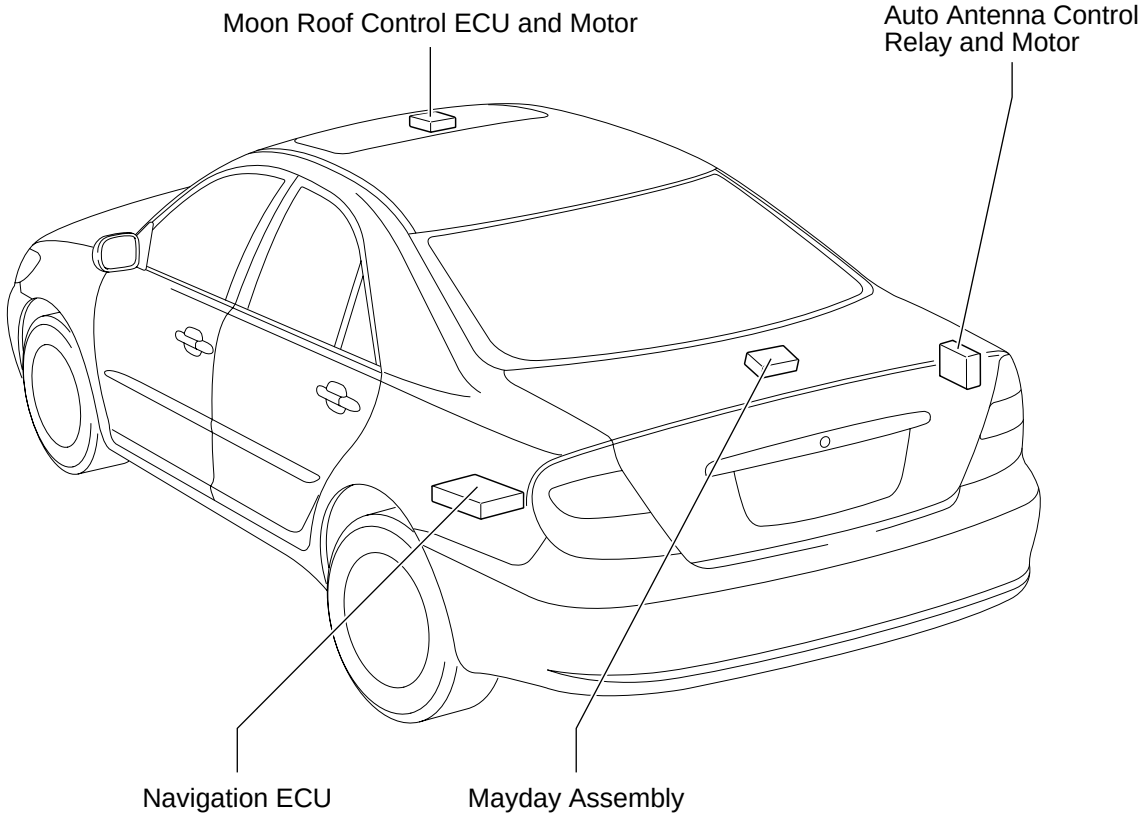


RELAY LOCATIONS

[Instrument Panel]

(LHD)

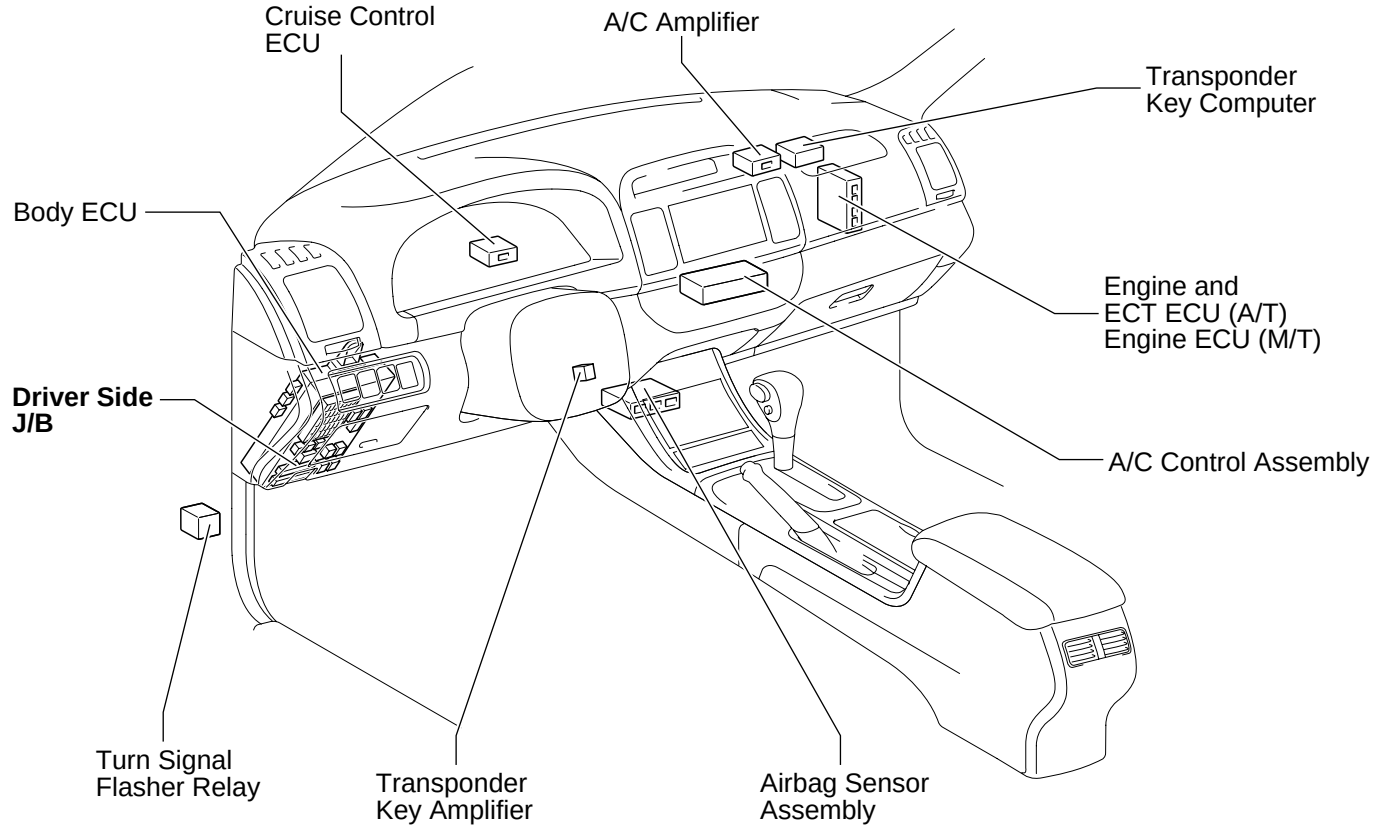


(RHD)

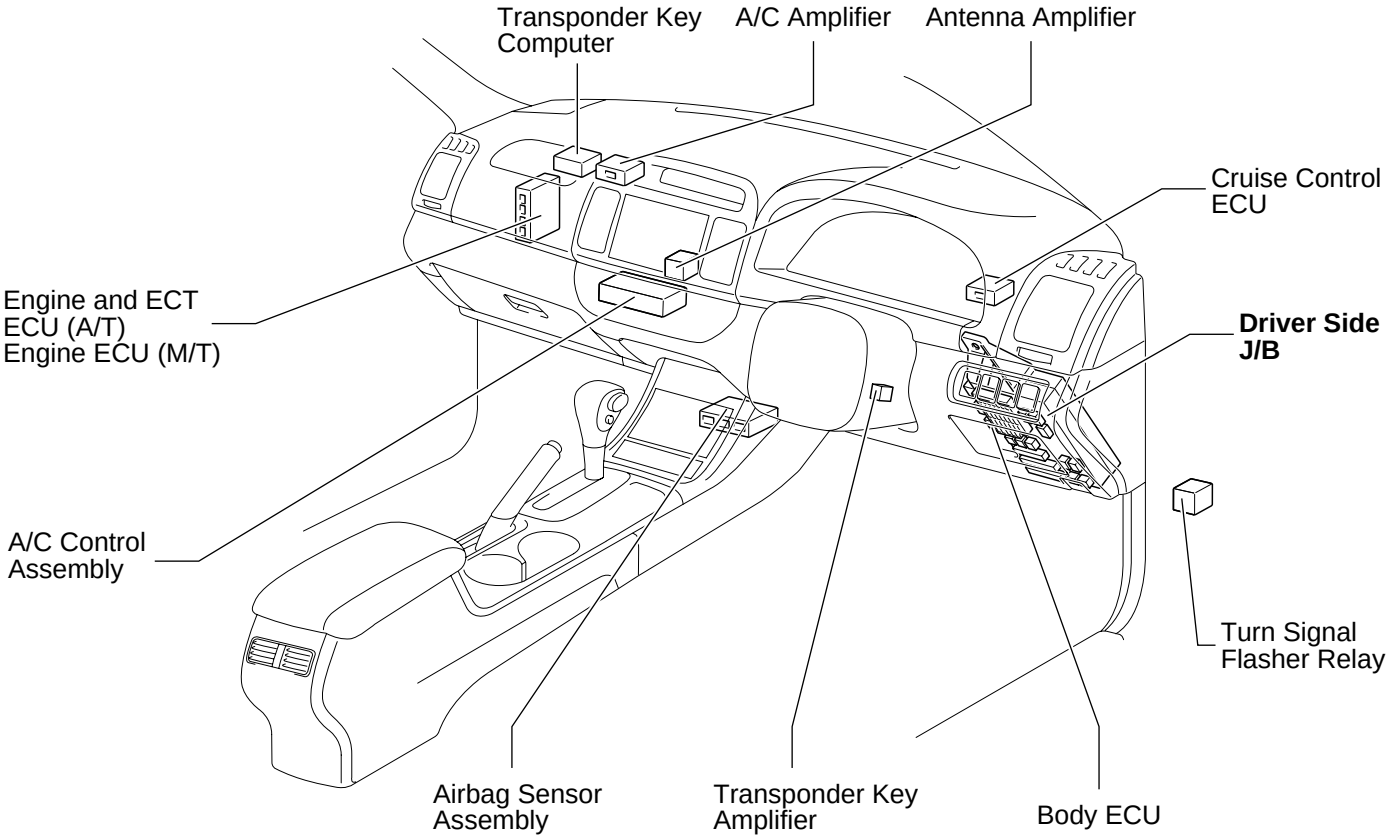


RELAY LOCATIONS

[Instrument Panel]

(LHD)

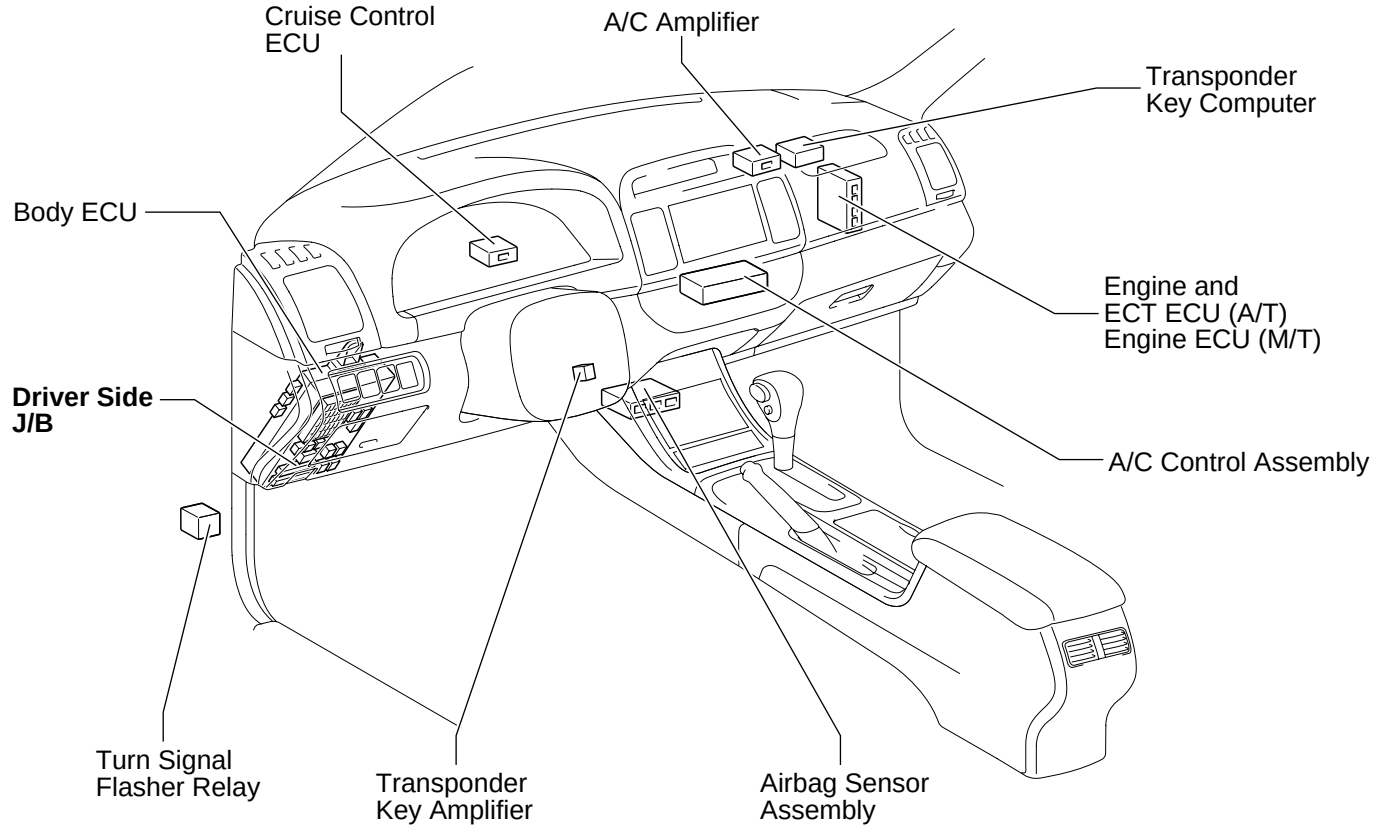


(RHD)

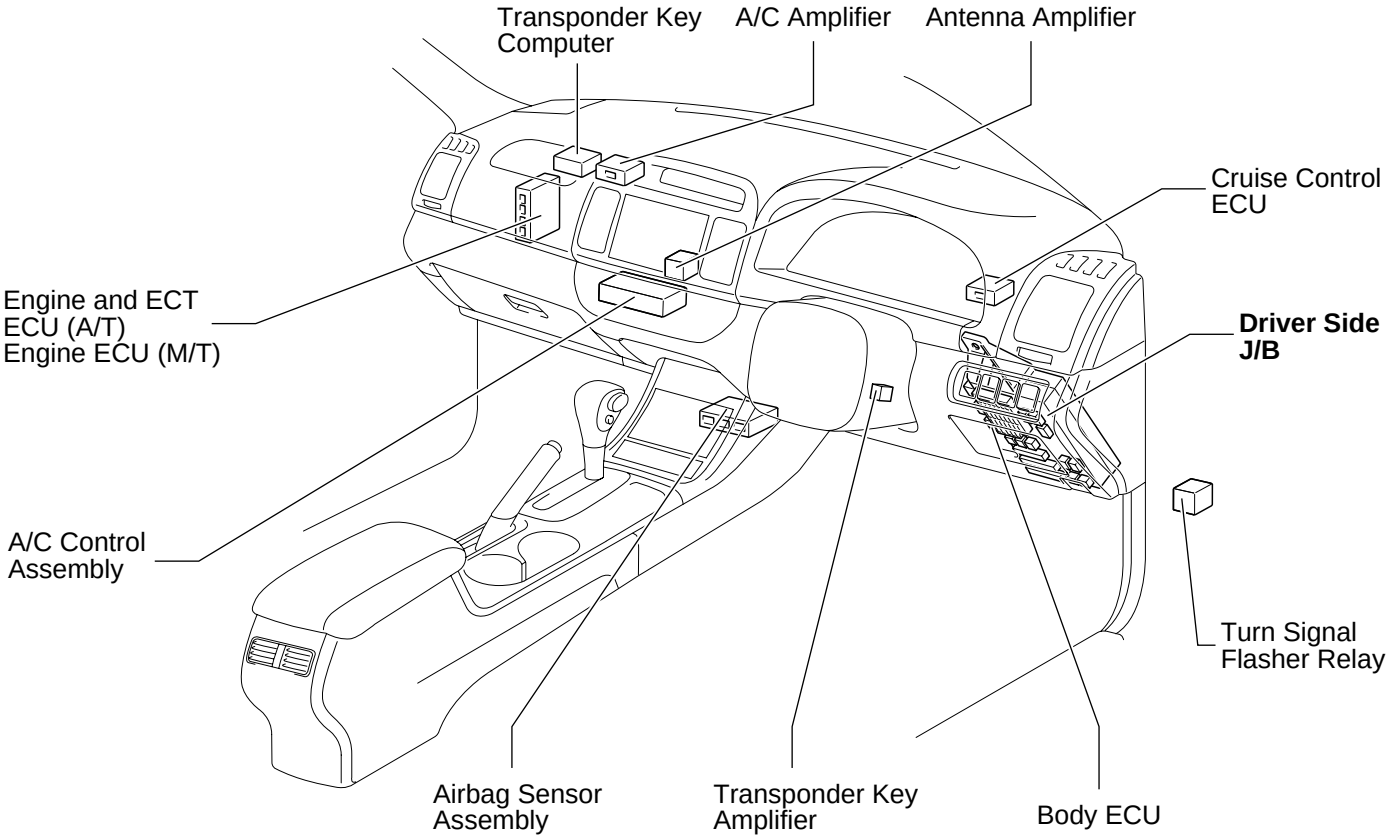


RELAY LOCATIONS

[Engine Compartment]

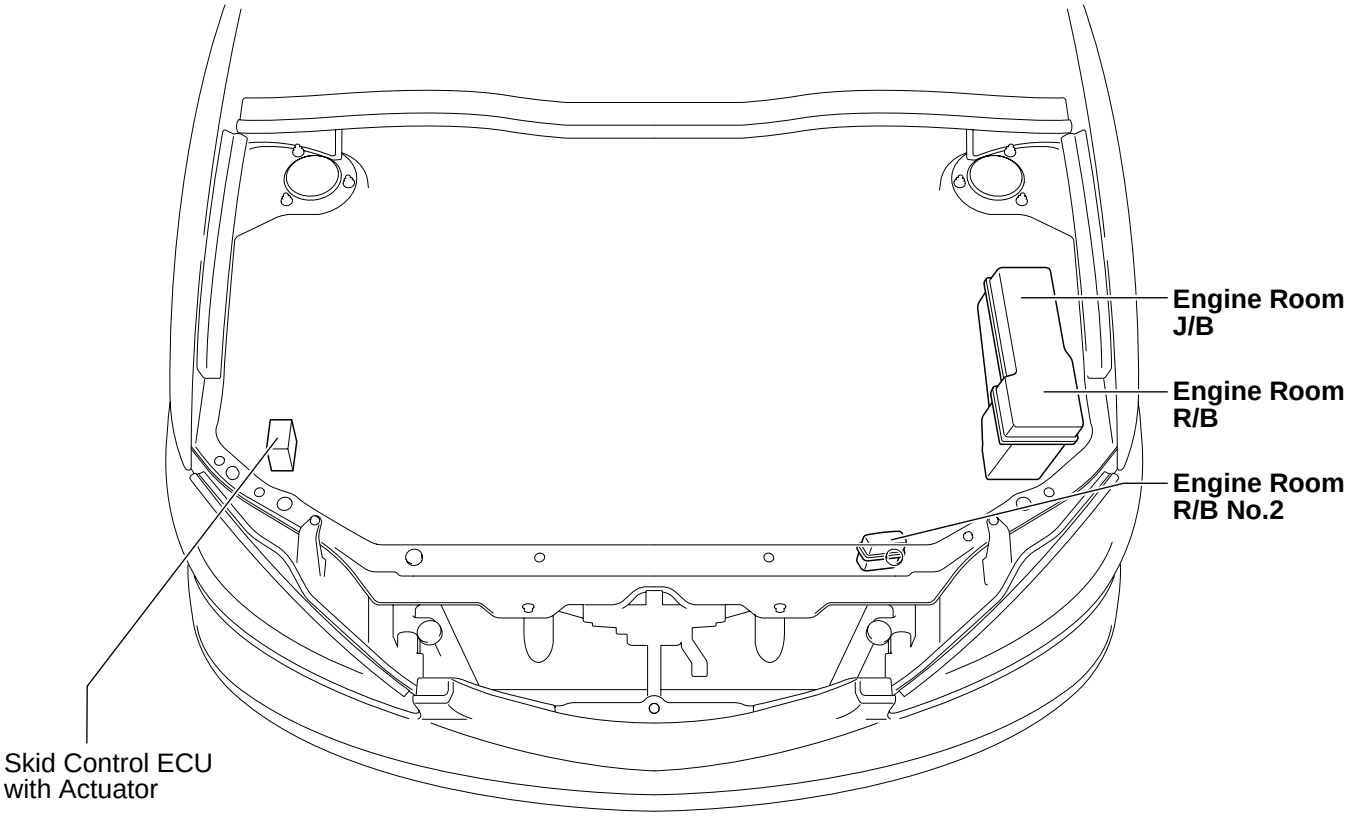


[Body]

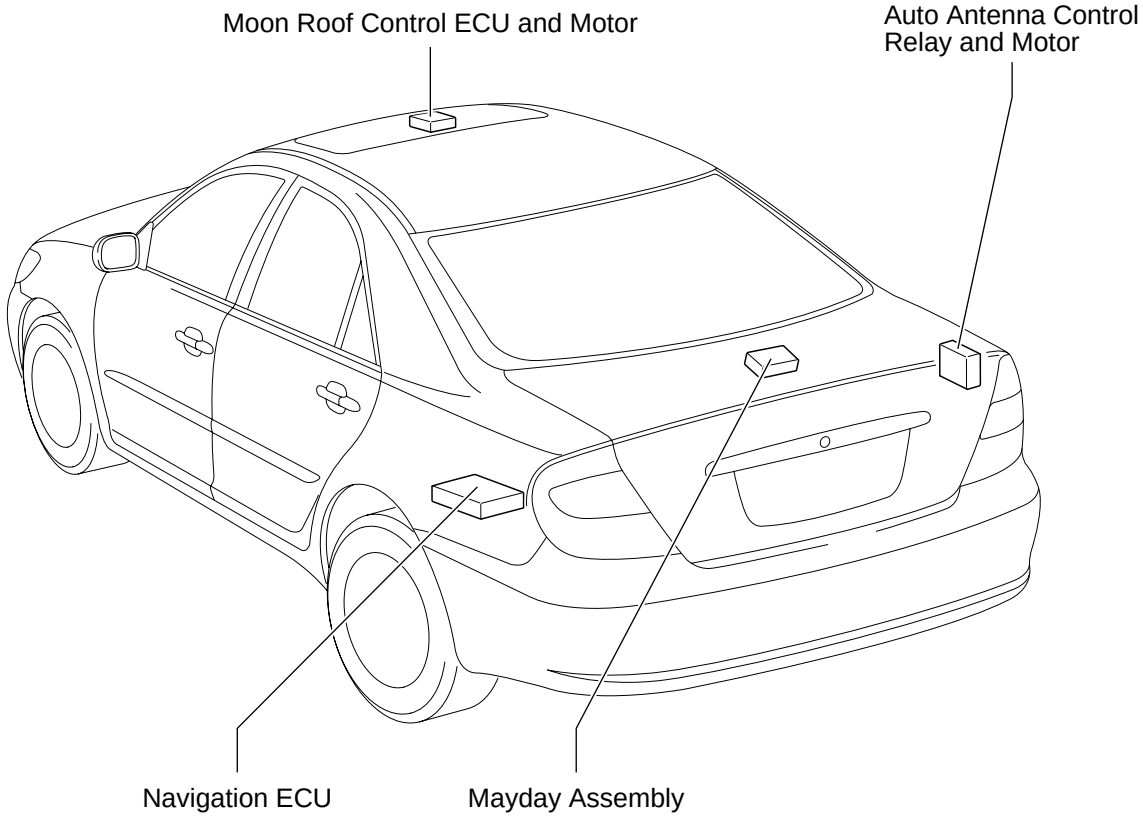


RELAY LOCATIONS

[Engine Room R/B]

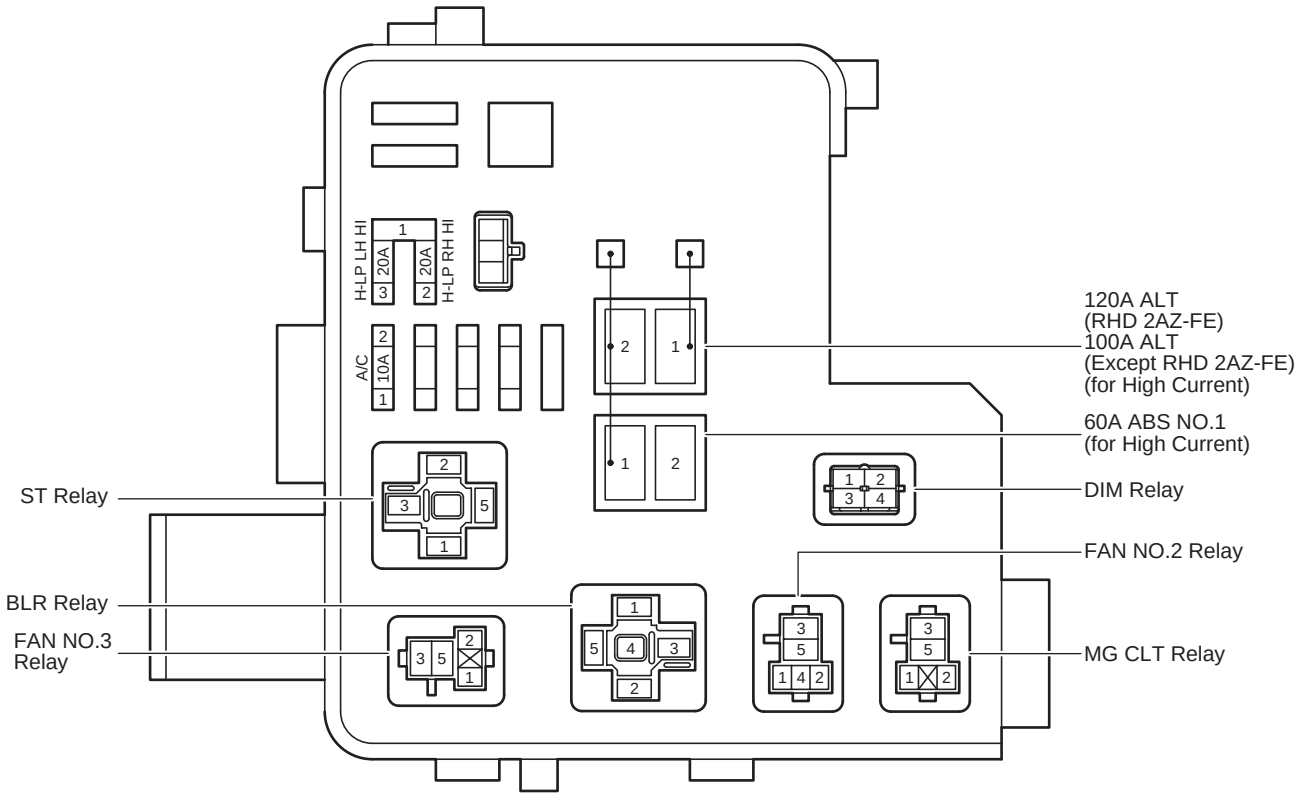


RELAY LOCATIONS

[Engine Room R/B No.2]

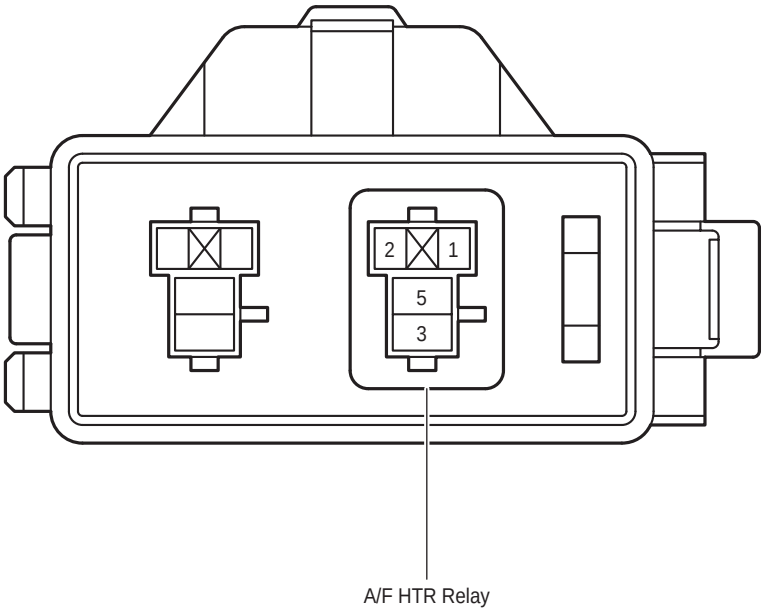


[Engine Room J/B Inner Circuit]

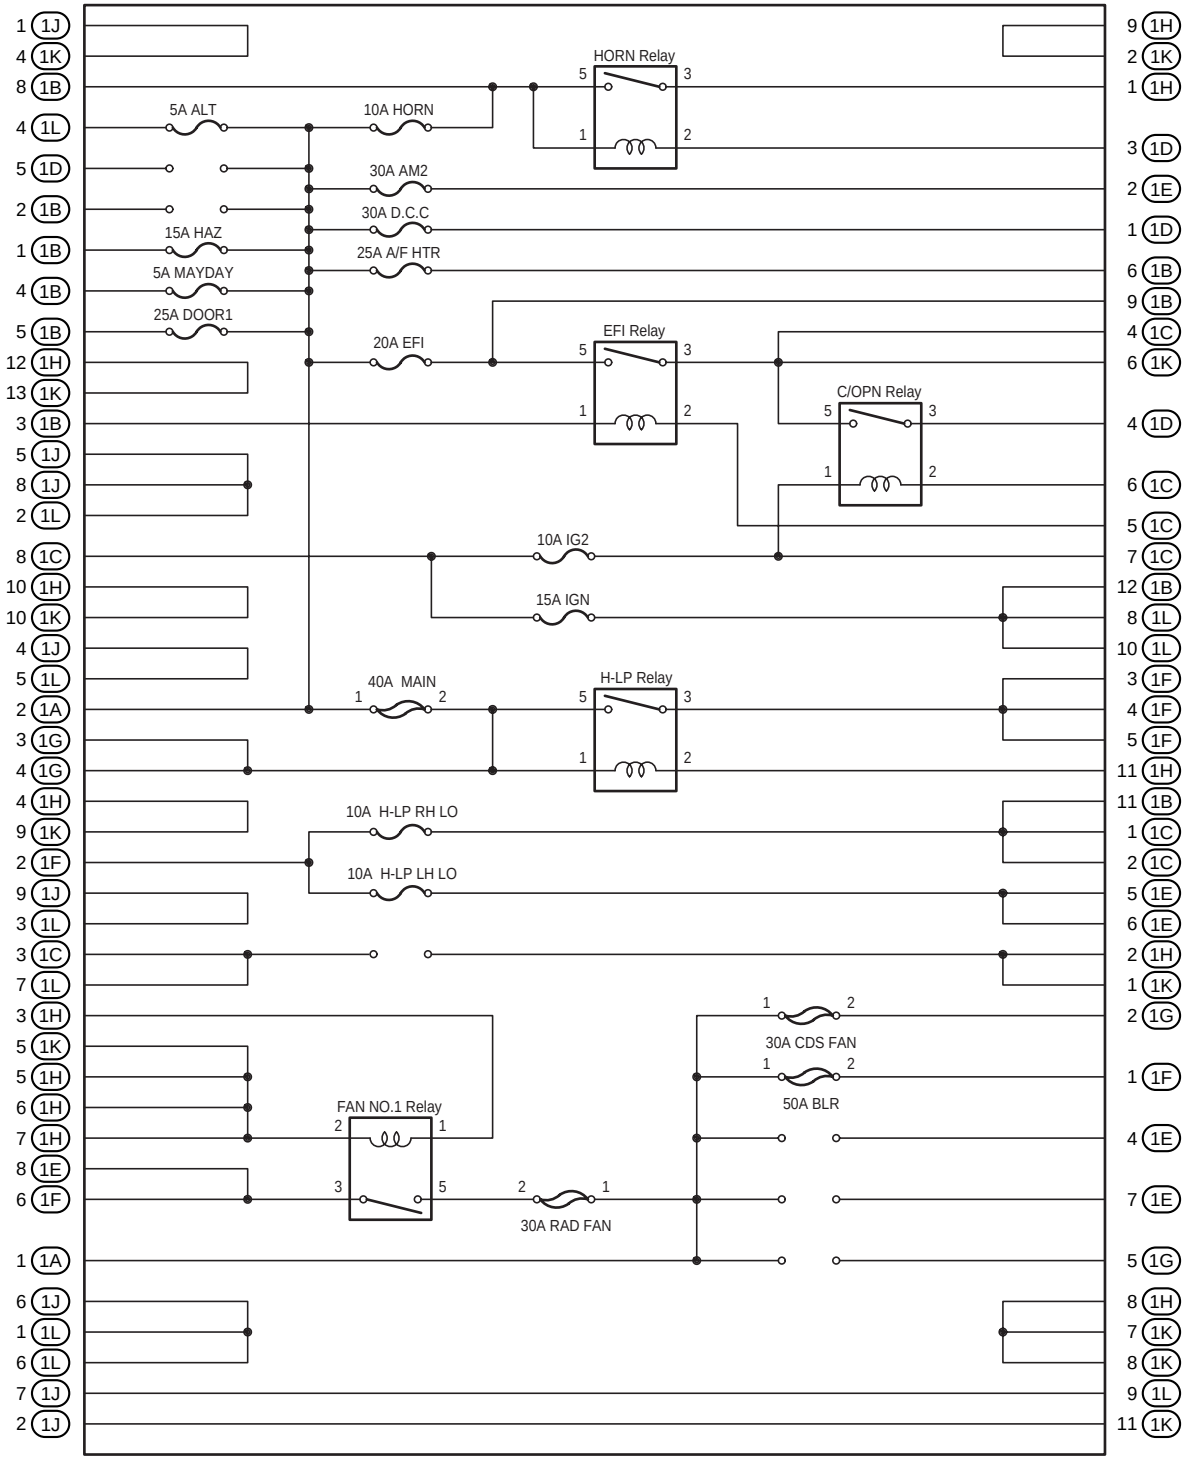


RELAY LOCATIONS

[Engine Room J/B]

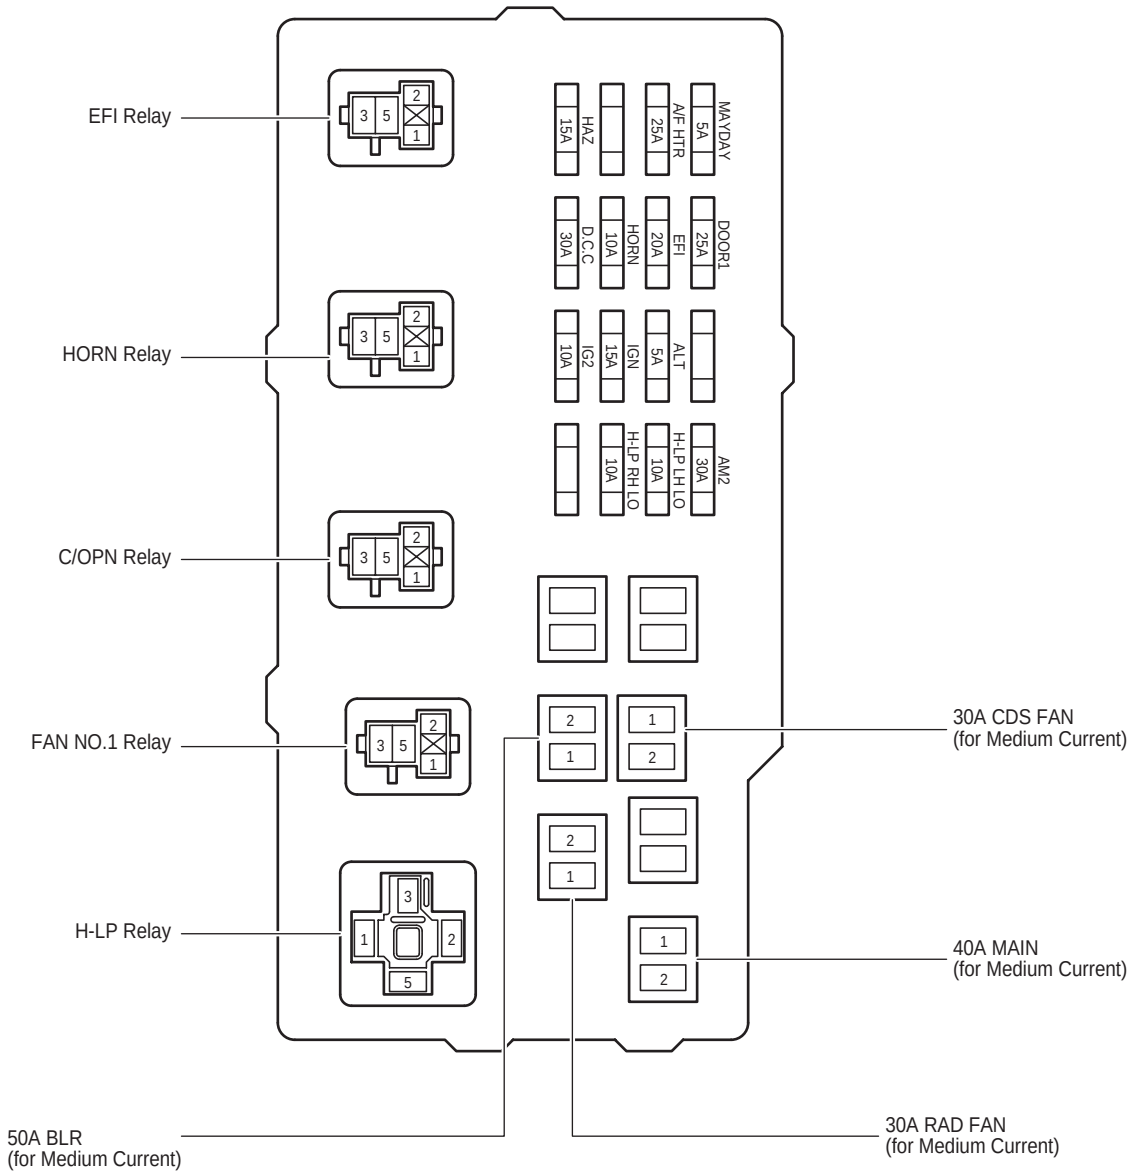


RELAY LOCATIONS

[Engine Room J/B]

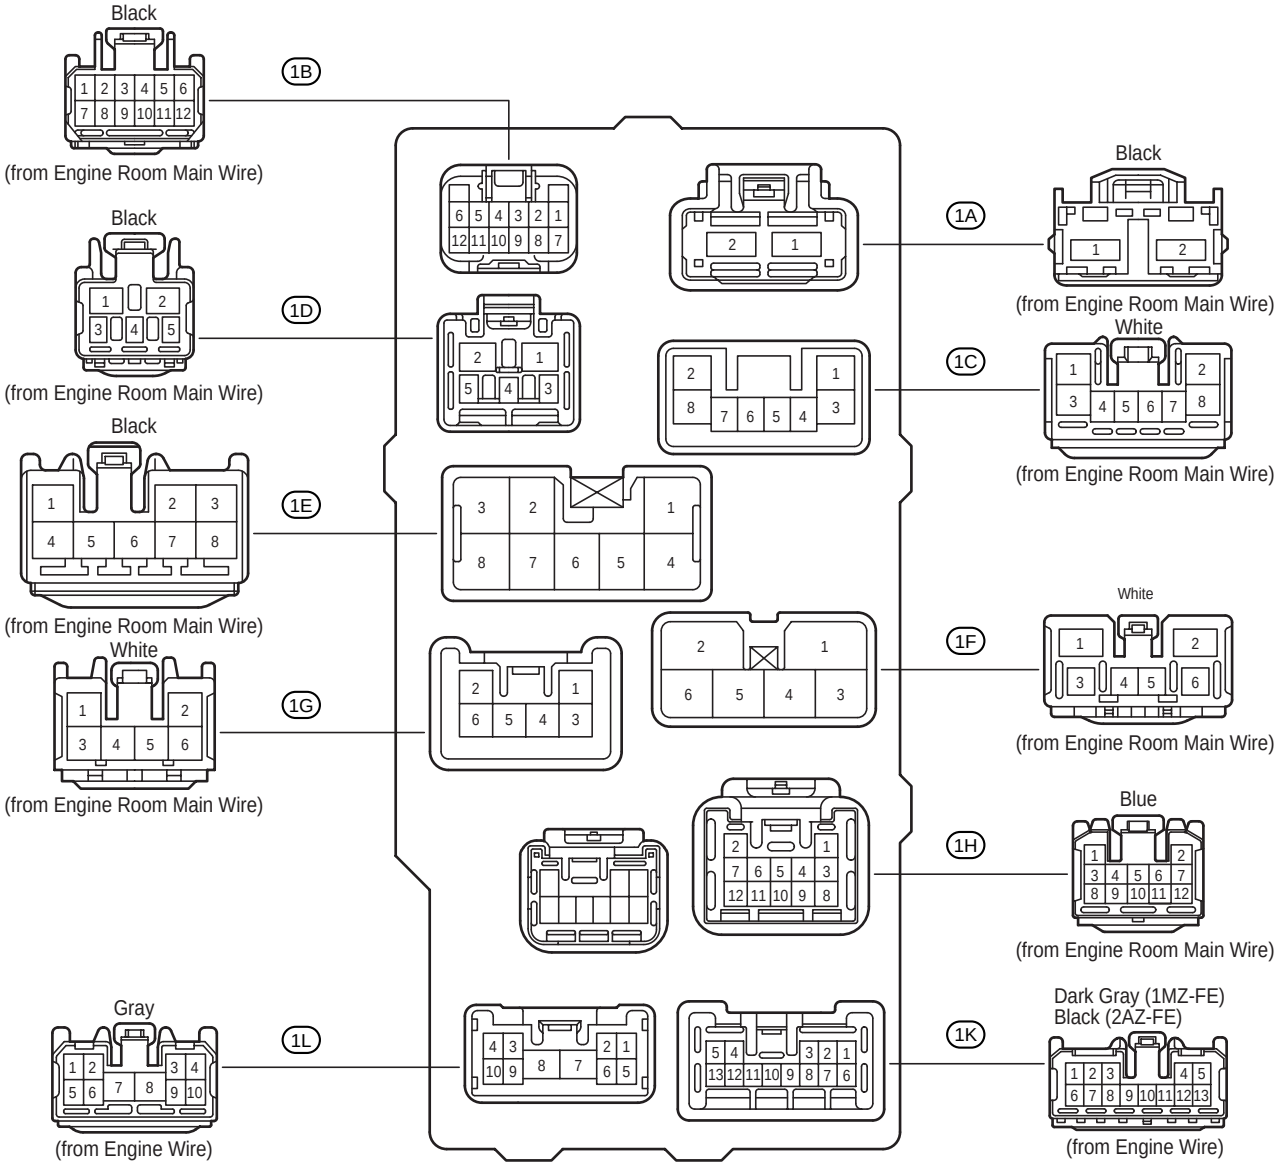


[Driver Side J/B Inner Circuit]

* 1:South Africa
* 2:Except South Africa

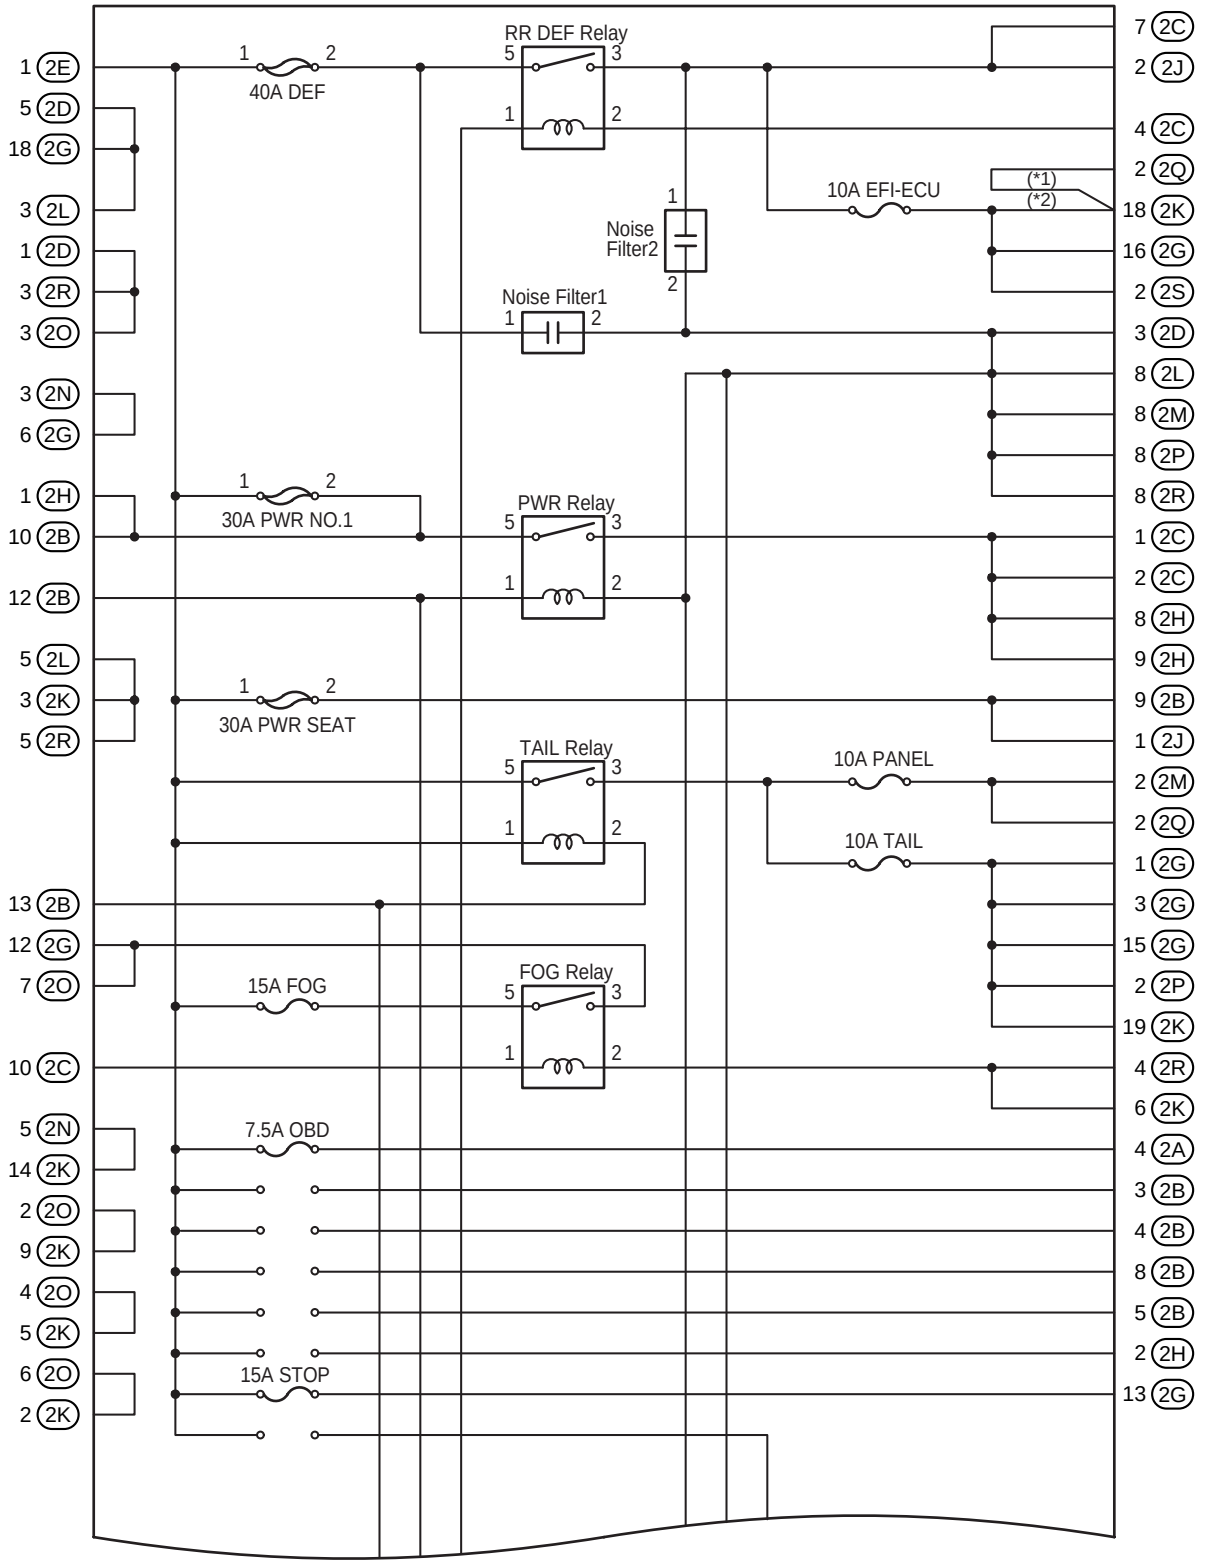


(Cont. next page)

[Driver Side J/B Inner Circuit]

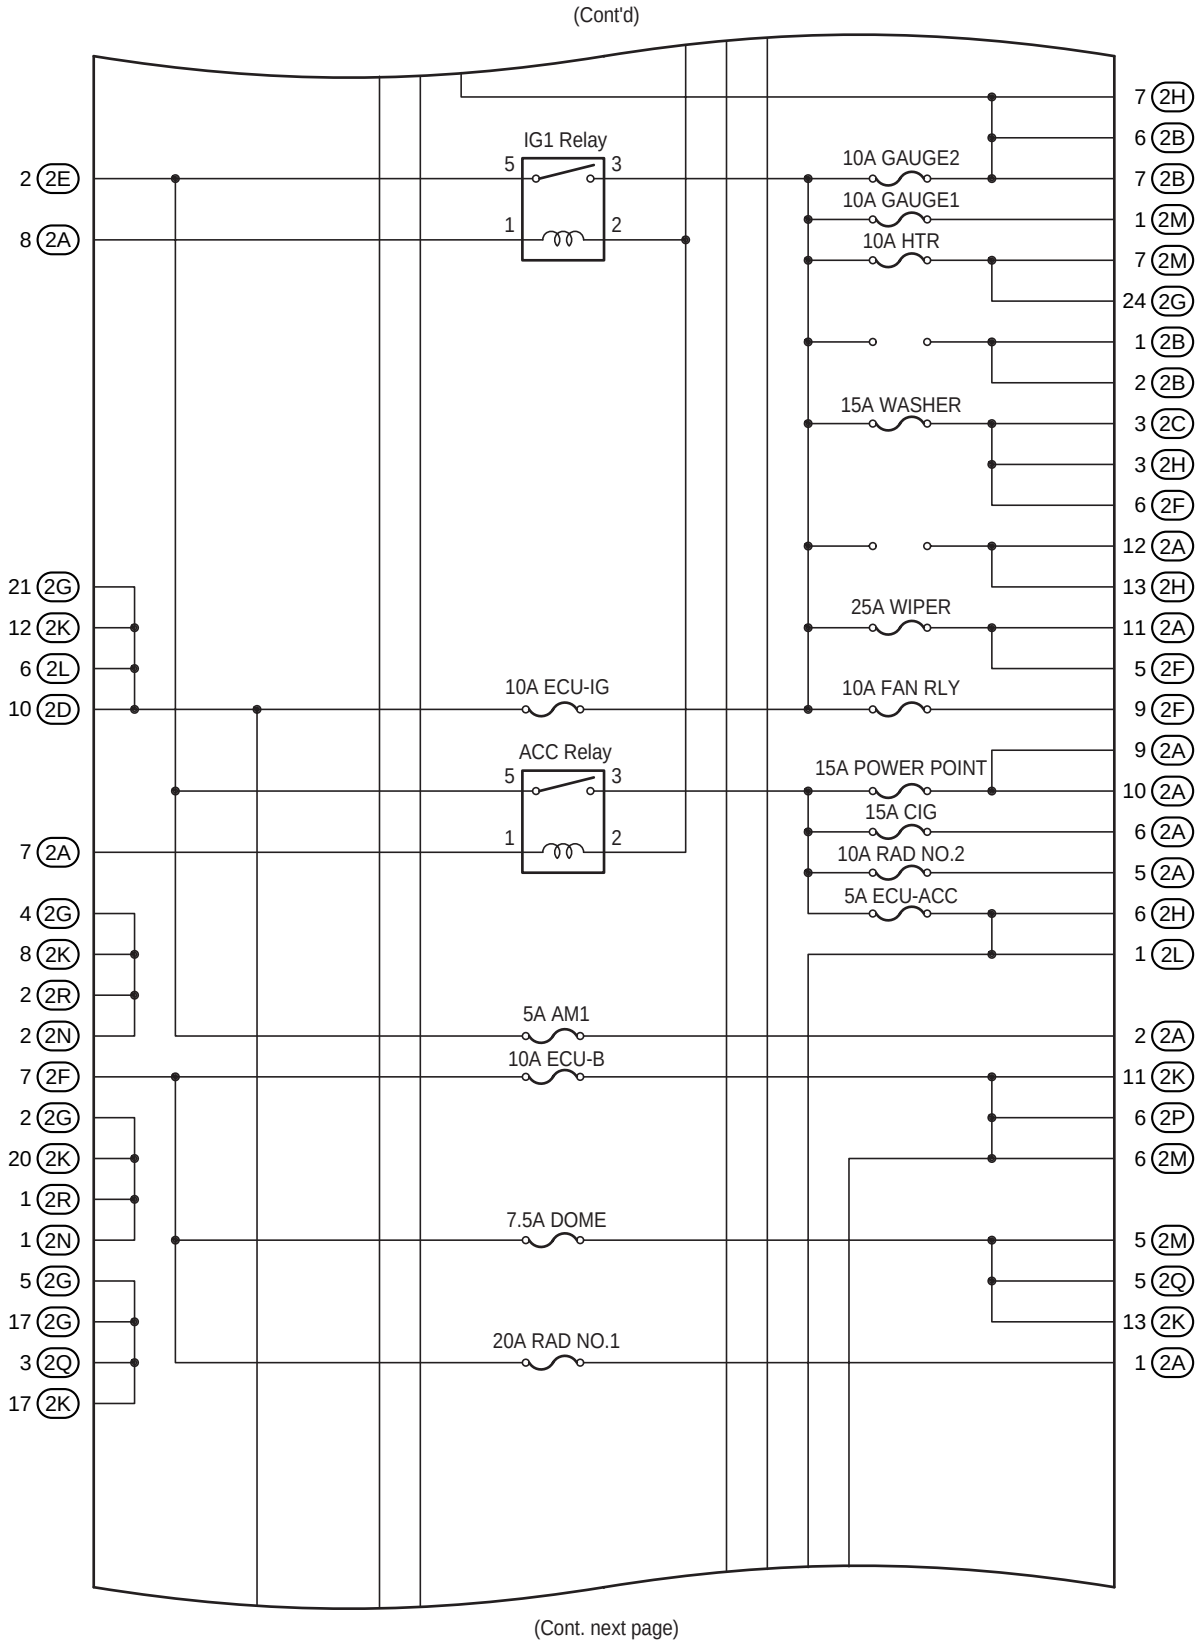

[Driver Side J/B Inner Circuit]

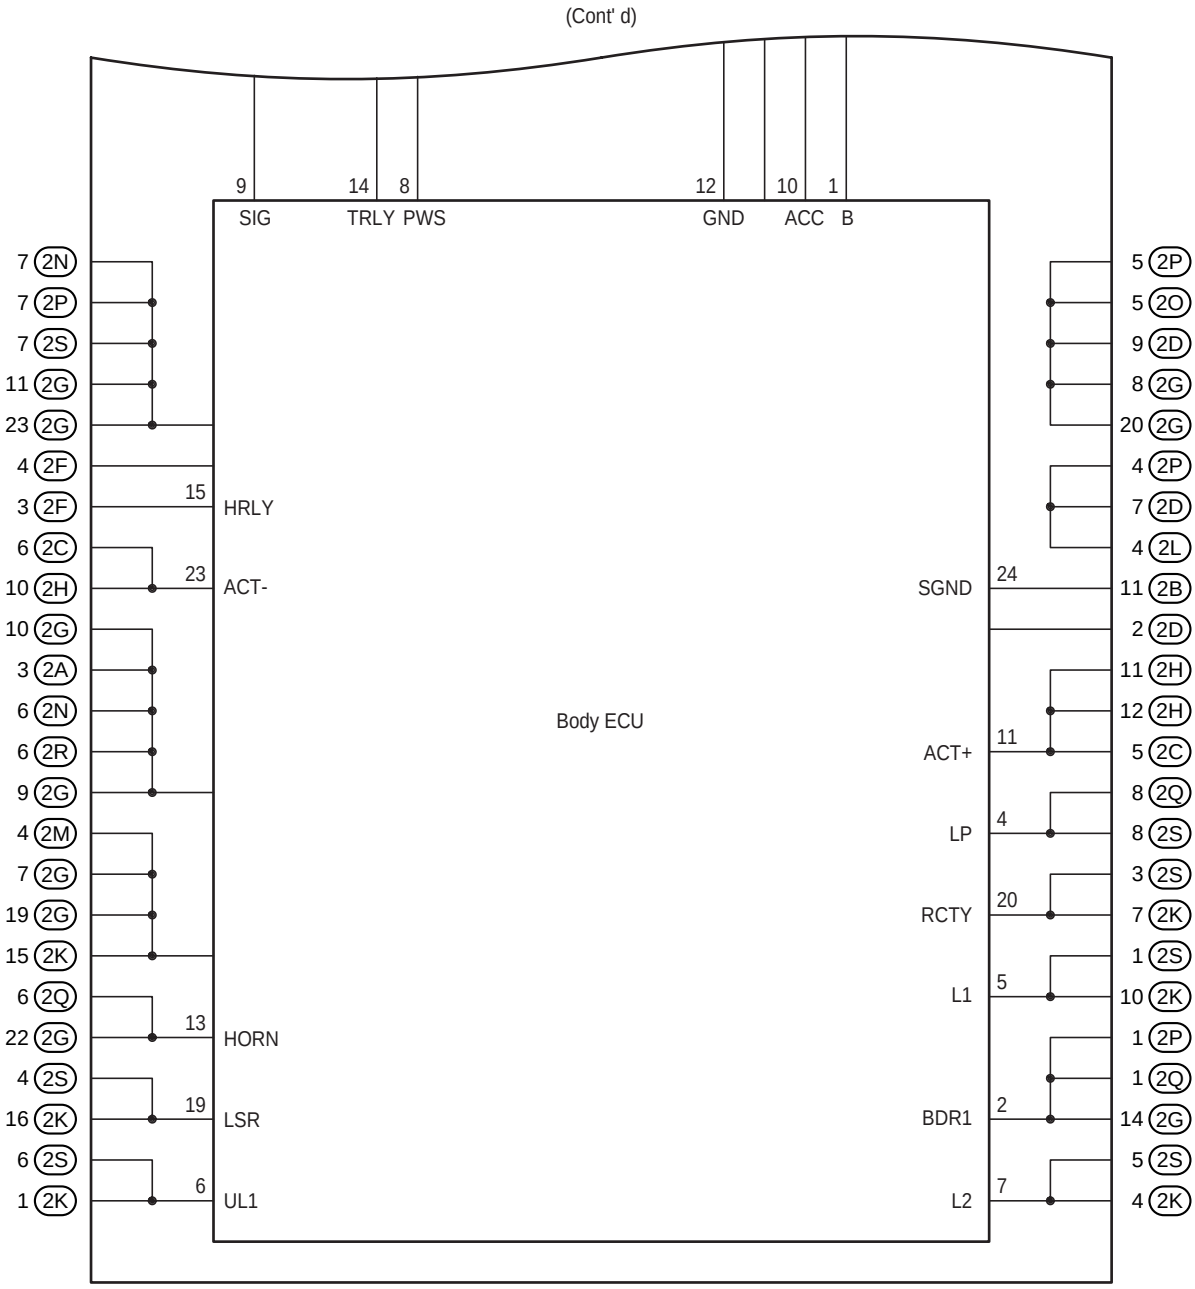

Inside-the-Plate Wiring Connection Diagram

When conducing continuity test inside the plate, see the plate and terminal ID number (View 1) shown below as well as the inside-the-plate wiring connection diagram



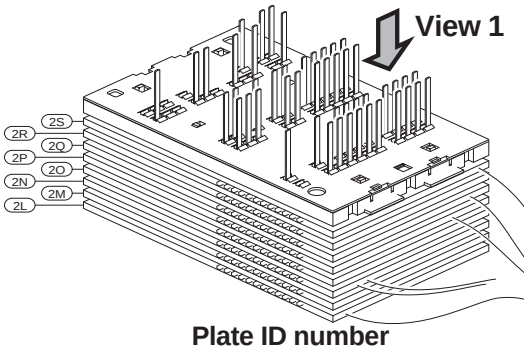


Plate ID number

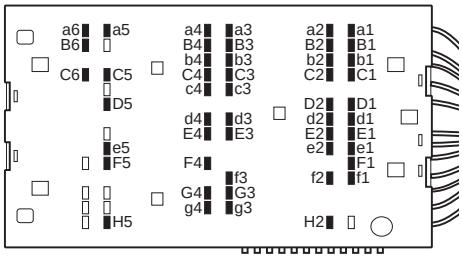


Terminal ID number (View 1)

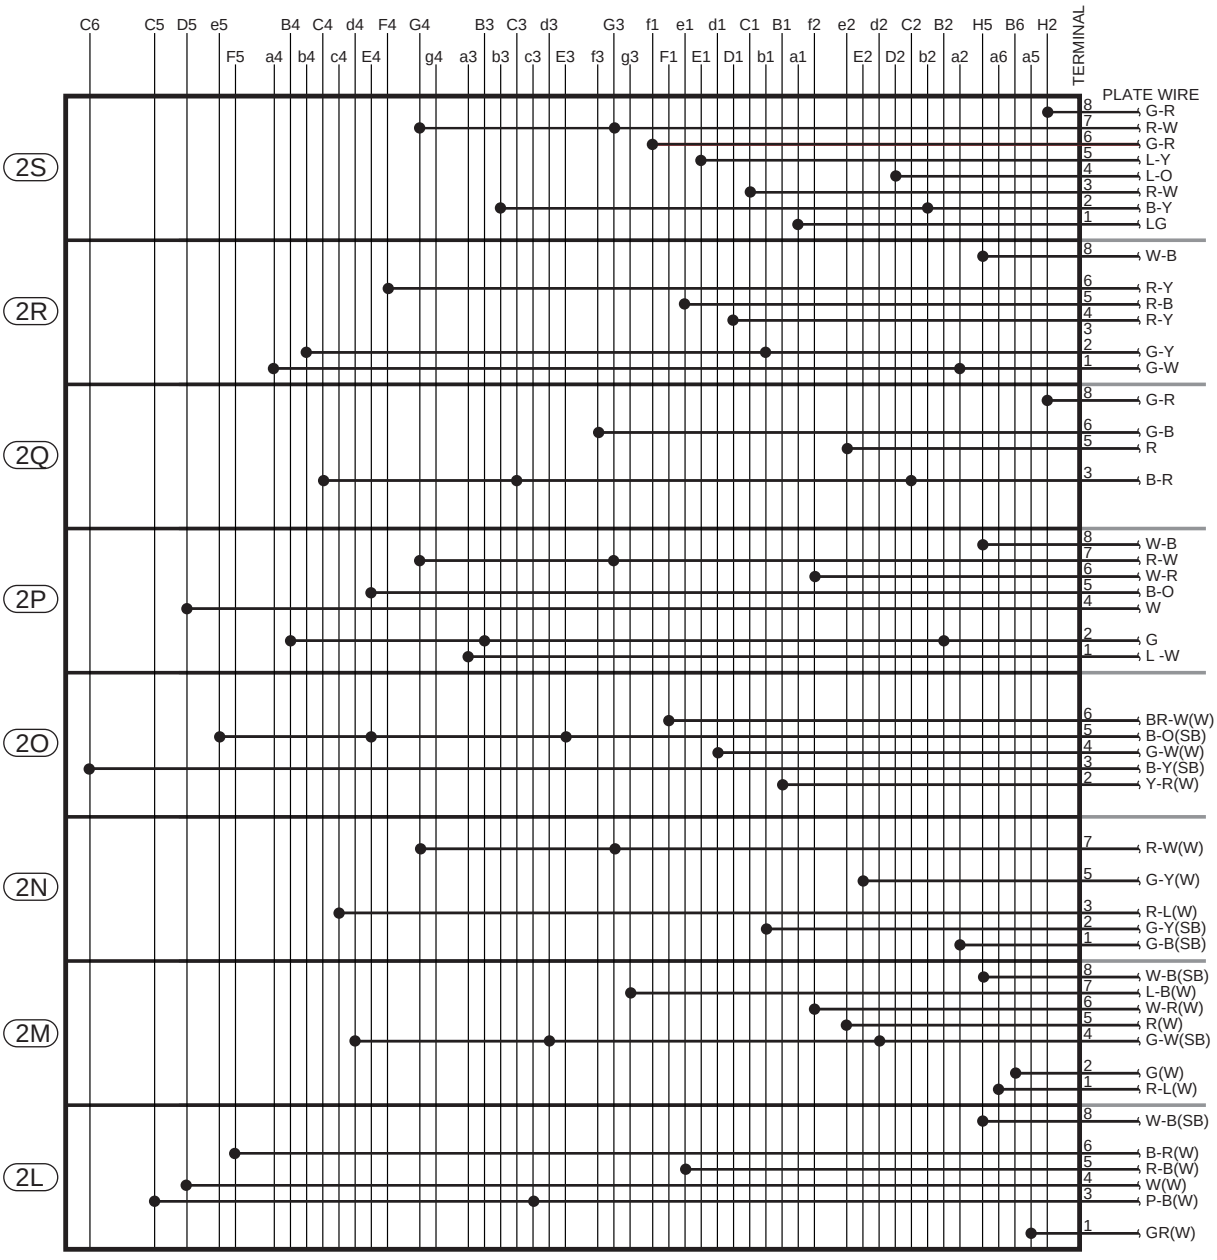


RELAY LOCATIONS

[Driver Side J/B]

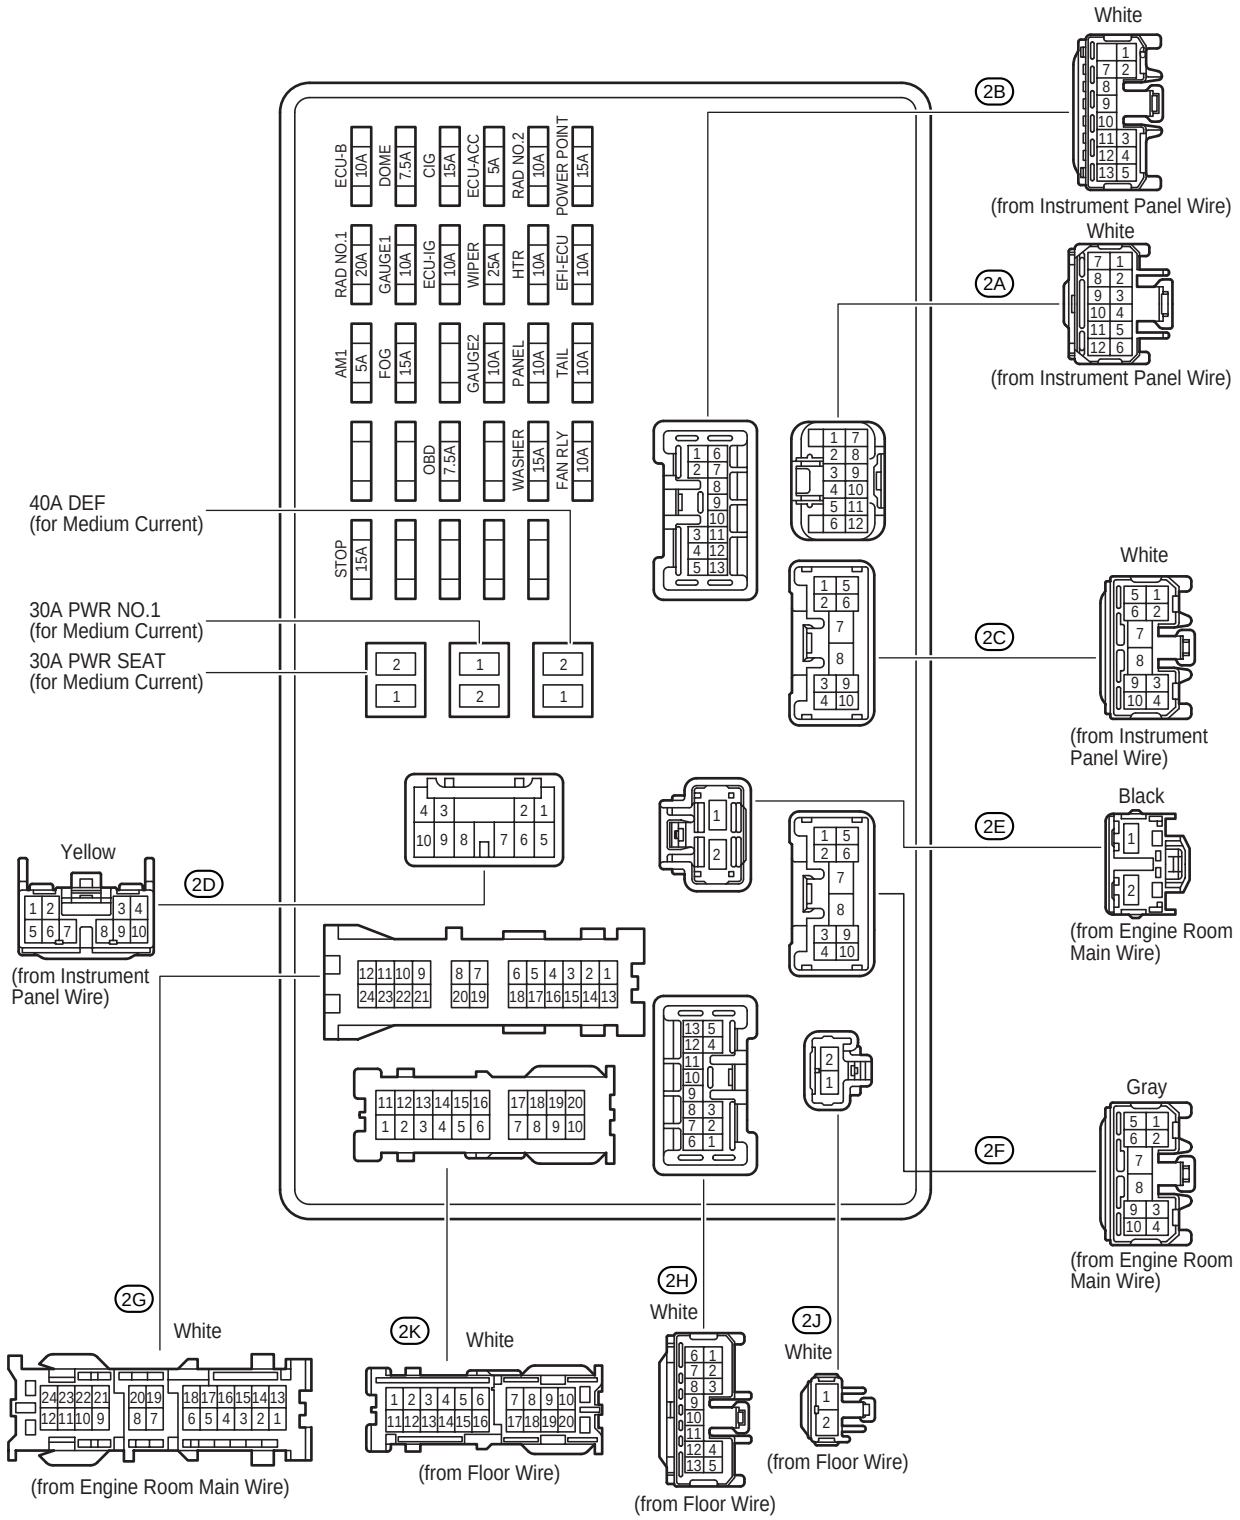

RELAY LOCATIONS

[Driver Side J/B]

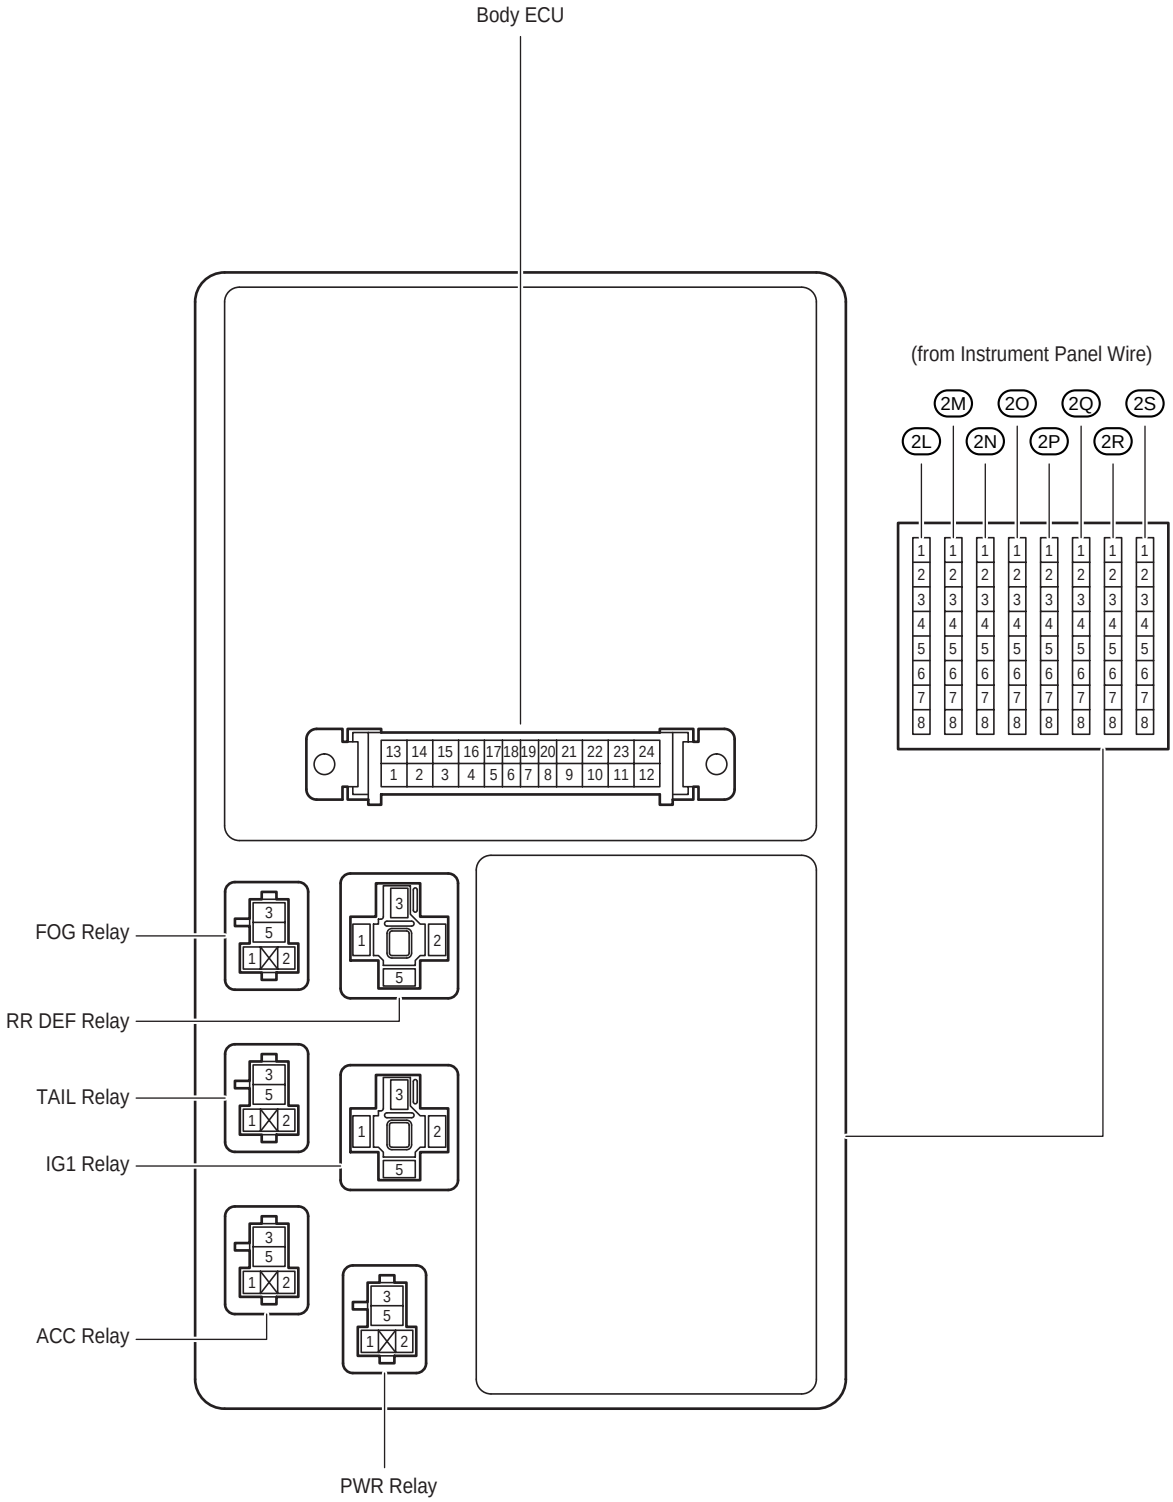


CONNECTOR LIST

A 1
Black




A 2
Gray

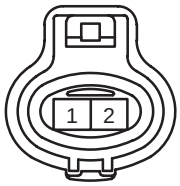


A 3
Gray



A 4
(1MZ–FE) Gray

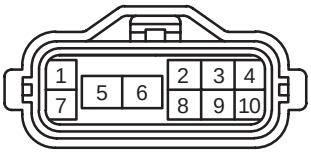

A 4
(2AZ–FE) Gray

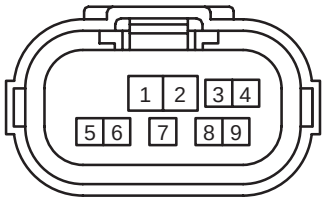


A 5
Gray



A 6
Gray



A 7
Black

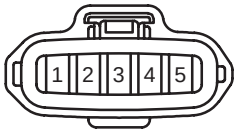


A 8
Yellow




A 9
Yellow




A10



A11
(LHD 1MZ–FE) Gray

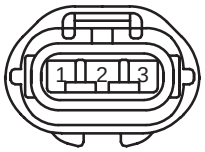


A11
(LHD 2AZ–FE) Black

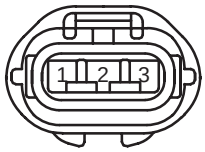


A11
(RHD) Black




A12



A13

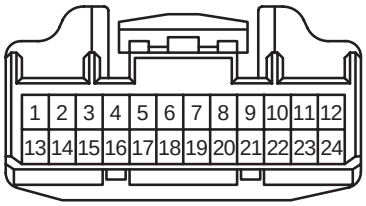

A14

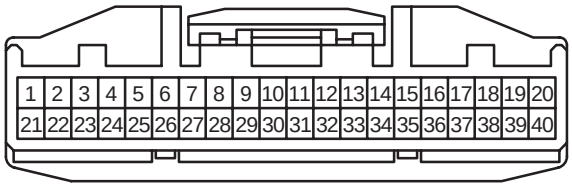

A15
Black




A16
Black




A17




A18




A19
Black

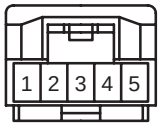


A20
Black

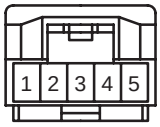

A21
(Automatic A/C) Black

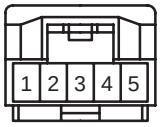


A21
(Manual A/C) Black

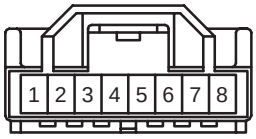


CONNECTOR LIST

*1 : w/o Side Airbag
*2 : RHD w/ Steering SW
*3 : RHD w/o Steering SW, LHD


A22
(w/ Side Airbag) Yellow

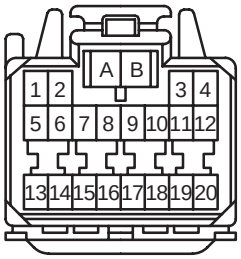


A22
(*1) Yellow

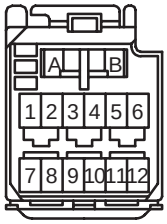


A23
Yellow

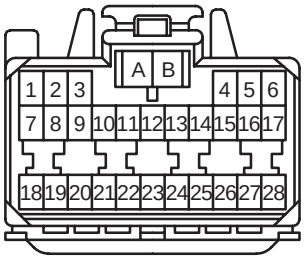


A24
(w/ Side Airbag) Yellow

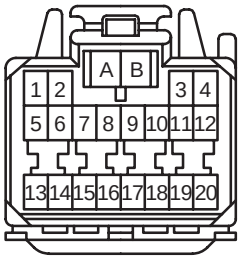


A24
(*1) Yellow

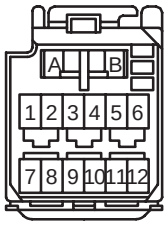


A25
Black



A26
(*2) Yellow

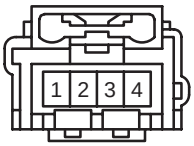

A26
(*3) Yellow

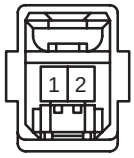

A27



A28
(LHD) Gray




A28
(RHD)



A29



A30

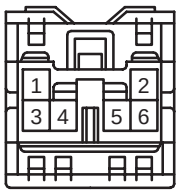


A31
Dark Gray



A32
Dark Gray



A33
Black

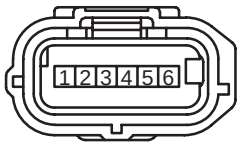


B 1
Gray



B 2
Gray




B 3
(LHD) Black




B 3
(RHD) Black




B 4
Black

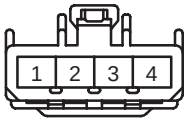


B 5
Black

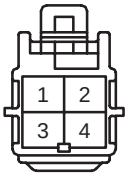


B 6

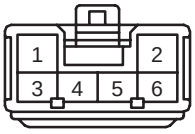


B 7

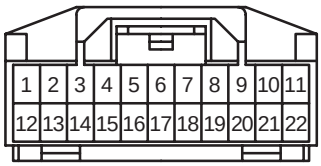


B 8

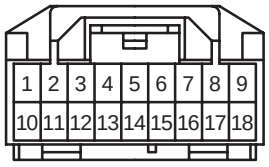


B 9



B10



B11



C 1
Black




CONNECTOR LIST

*2 : RHD w/ Steering SW
*4 : w/ Multi Information Display
*5 : w/o Multi Information Display
*6 : RHD w/o Steering SW

C 2
Black



C 3
Black

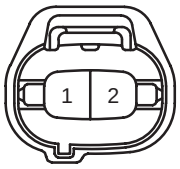

C 4
(1MZ–FE) Black



C 4
(2AZ–FE) Dark Gray




C 5
Black




C 6




C 7
(*4)

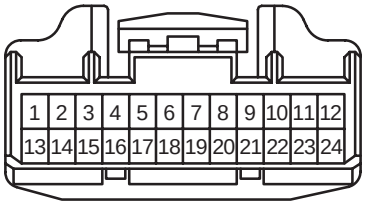


C 7
(*5)

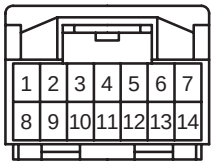


C 8

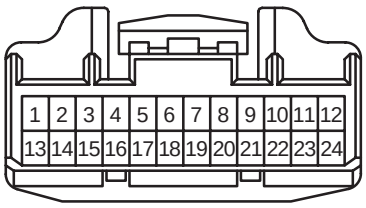


C 9

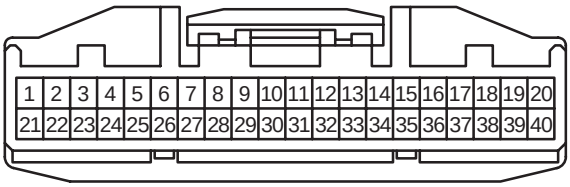


C10

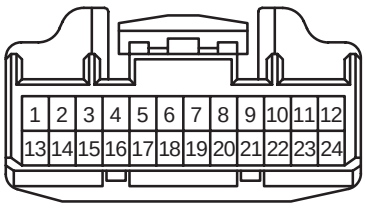

C11
Black

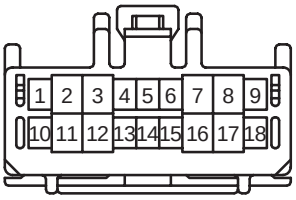


C12
(LHD)

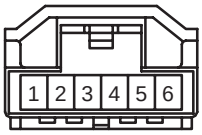


C12
(*2) Black




C12
(*6) Black

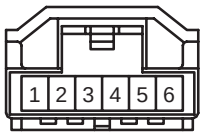


C13
(LHD)

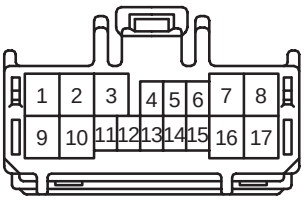

C13
(RHD) Black

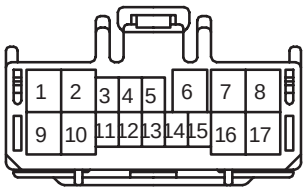


C14
White




C15



C16

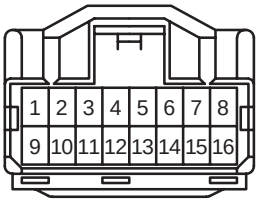

C17




CONNECTOR LIST


D 1
Gray



D 2

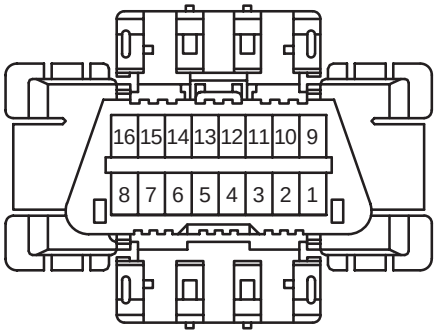

D 3

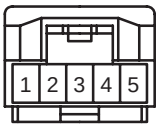

D 4



D 5




D 6




D 7




D 8

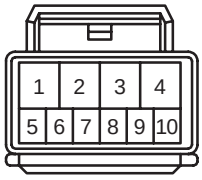

D 9

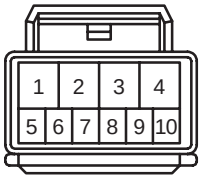


D10

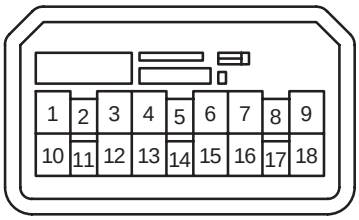

D11




D12

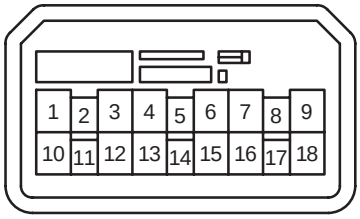

D13



D14

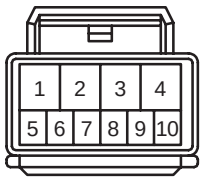

D15




D16
Black



E 1
(1MZ–FE) Gray



E 1
(2AZ–FE) Gray

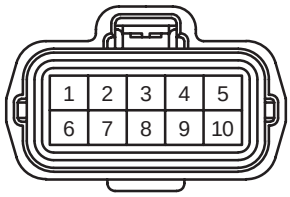

E 2
(1MZ–FE) Dark Gray



E 2
(2AZ–FE) Dark Gray




E 4
Black



E 5
Black




E 6

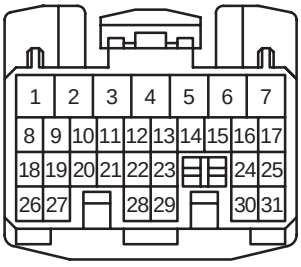


CONNECTOR LIST


E 7

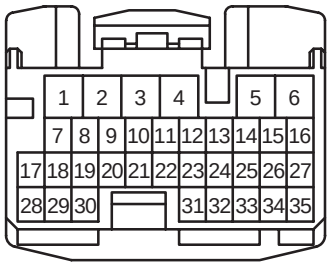


E 8

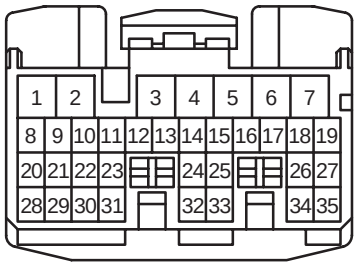


E 9

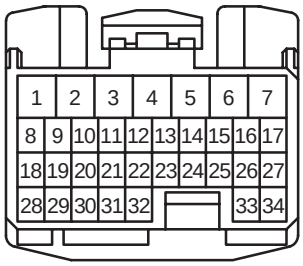


E10

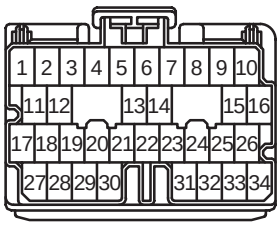


E11

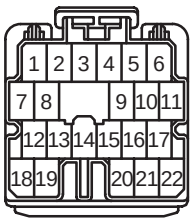

E12

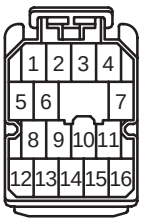


E13

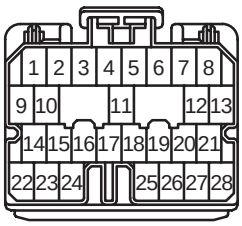


E14
Dark Gray




E15

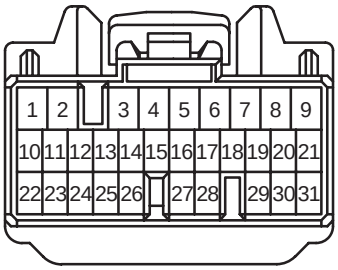


E16

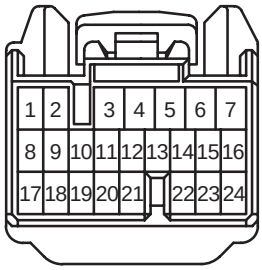


E17

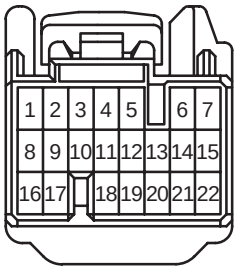


E18

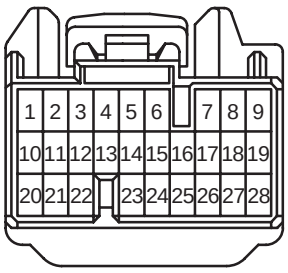


E19

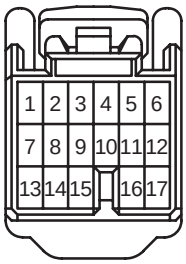


E20

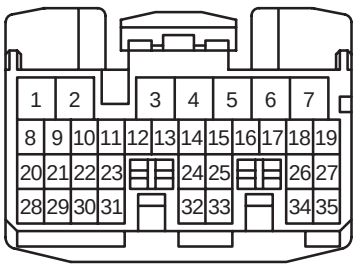


E21

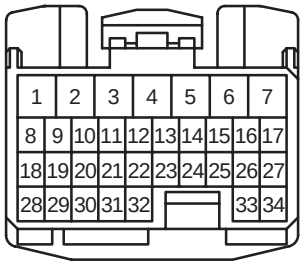

E22

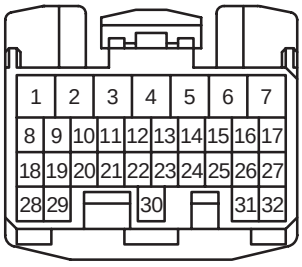


E23

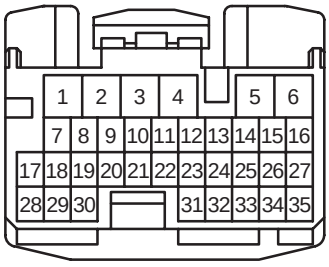


CONNECTOR LIST

*7 : Except LHD 1MZ–FE
*8 : Except South Africa w/o Rear Spoiler
*9 : South Africa w/o Rear Spoiler
*10 : w/ Rear Spoiler
*11 : 1MZ–FE Australia, New Zealand
*12 : 2AZ–FE Australia, New Zealand


E24

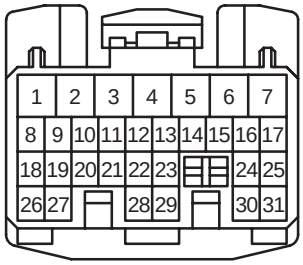

F 1
Gray

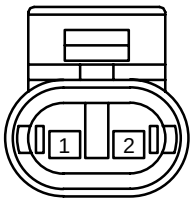

F 2
Gray

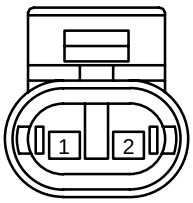

F 3
Brown



F 4
Brown



F 5



F 6



F 7
Gray



F 8
(*7) Gray



F 8
(LHD 1MZ–FE) Black



F 9
Gray



F10



F11



F12




G 1
Black



H 1
Black




H 2
Black



H 3
Black



H 4
Black



H 5
Dark Gray



H 6
Dark Gray



H 7
Dark Gray



H 8
Black



H 9
Black



H10
(*8) Black




H10
(*9) Gray



H10
(*10)




H11
Black

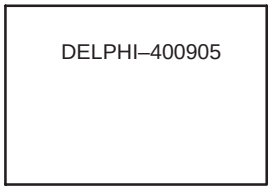


FUMEI CONNECTOR

H12
Black

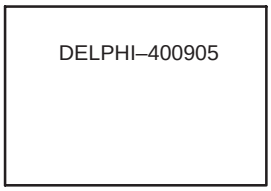

FUMEI CONNECTOR

H13

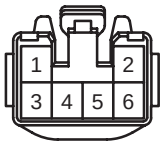

H14
(*11) Dark Gray




H14
(*12) Dark Gray




CONNECTOR LIST


I 1
Black

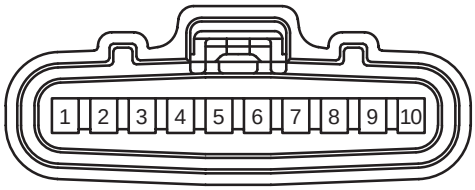


I 2
Black




I 3
Black




I 4
Black




I 5
Black




I 6
Black



I 7
Black




I 8
Black



I 9
(1MZ–FE) Gray




I 9
(2AZ–FE) Black



I10
(1MZ–FE) Gray




I10
(2AZ–FE) Black



I11
(1MZ–FE) Gray




I11
(2AZ–FE) Black



I12
(1MZ–FE) Gray



I12
(2AZ–FE) Black



I13
Gray




I14
Gray




I15
Black



I16
Black

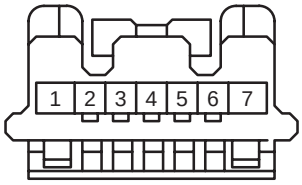

I17

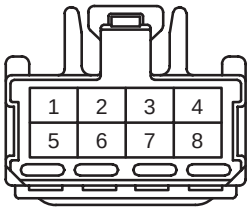


I18
(w/ Moon Roof)



I18
(w/o Moon Roof)




I19
Black

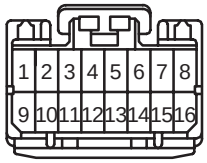


J 1




J 2

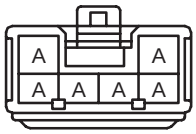


J 3
(LHD)

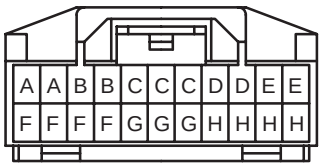


J 3
(RHD)

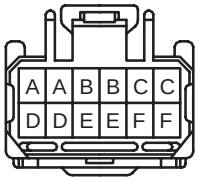


J 4
(LHD)

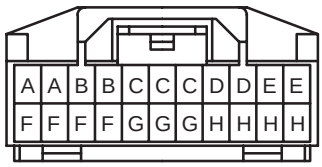


J 4
(RHD)

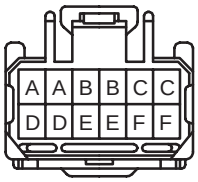


J 5

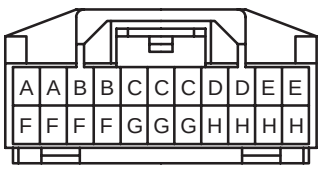

J 6

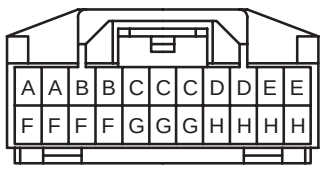


J 7

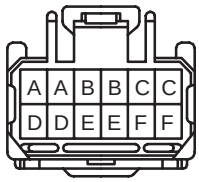


CONNECTOR LIST


J 8

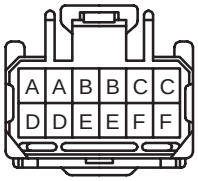


J 9

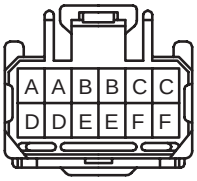


J10

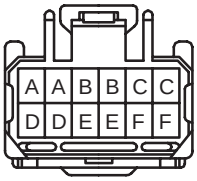


J11
(LHD)

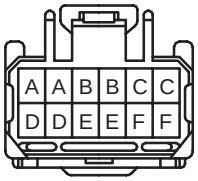


J11
(RHD) Black

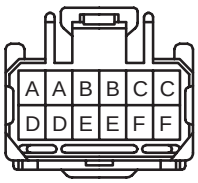


J12
(LHD)

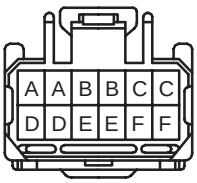


J12
(RHD) Black

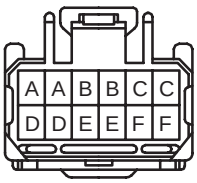

J13
(1MZ–FE)

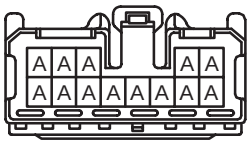

J13
(2AZ–FE) Black

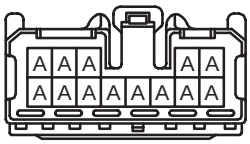

K 1
Black



K 2
Dark Gray



K 3
Dark Gray



L 1



L 2



L 3
Black



L 4
(LHD)




L 4
(RHD) Gray




L 5




M 1

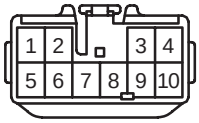

M 2

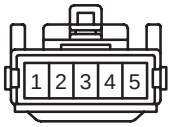


M 3

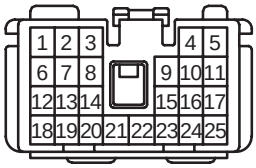


N 1
Gray



N 2

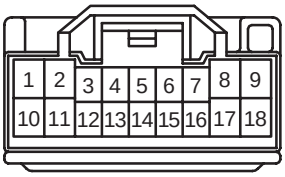


N 3

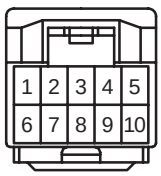

N 4



N 5



O 1
Gray



P 1
Black



P 2
Gray




P 3




P 4




P 5




P 6
Black

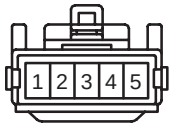


P 7
Black

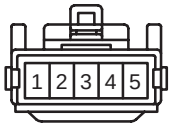

P 8

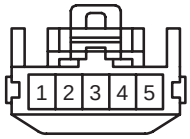


P 9

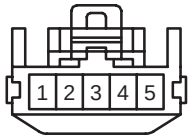

CONNECTOR LIST

P10

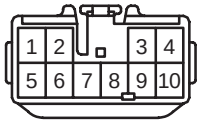

P11
Black



P12
Black




P13
Black




P14
Black




P15
Yellow




P16
Yellow



P17
Black



P18
Black



P19



P20



P21



P22



P23




P24




P25



R 1
Gray

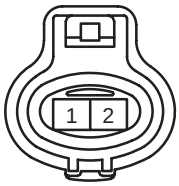

R 2

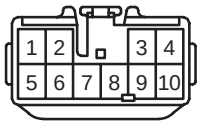


R 3




R 4
Black



R 5
Gray

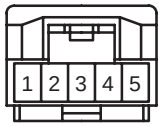


R 6

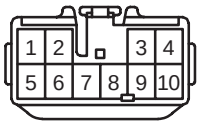

R 7



R 8
Black

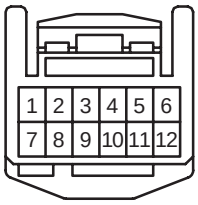


R 9
(LHD)




R 9
(RHD)



R10

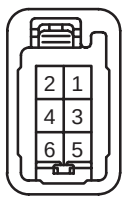

R11

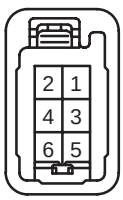

R12



R13



R14
Black



R15
Black




R16




R17




R18

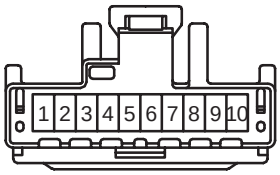

R19

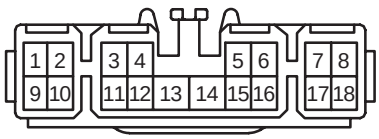

R20

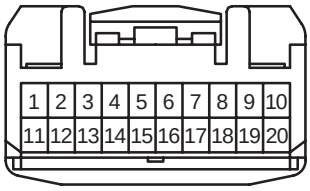


CONNECTOR LIST

*12 : 2AZ–FE Australia, New Zealand

*13 : Except 2AZ–FE Australia, New Zealand


R21



S 1
Black



S 2
Red

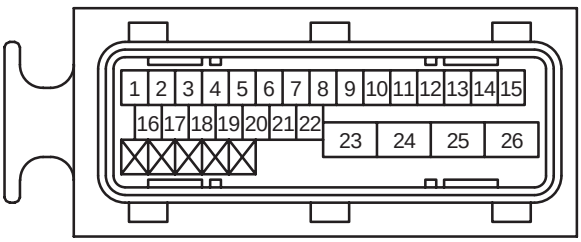


S 3
Black




S 4
Black




S 5
(1MZ–FE)




S 5
(2AZ–FE)




S 6
Blue

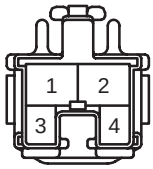

S 7
Yellow

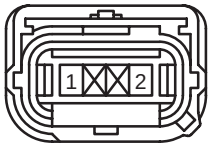

S 8
Yellow

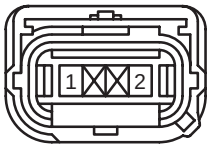

S 9
Yellow




S10
Yellow



S11




T 1
(*12) Black

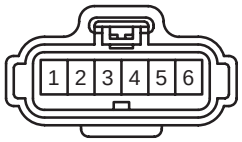


T 1
(*13) Black



T 2
Black

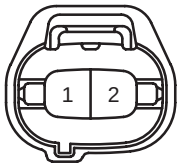


T 3

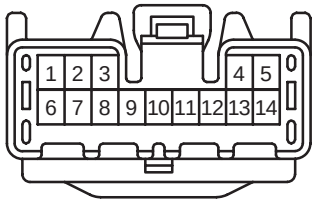

T 4
Black



T 5



T 6




T 7
Blue




U 1



V 1
Brown

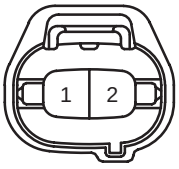


V 2
Brown

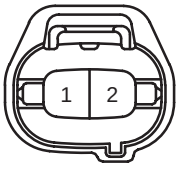

V 3
(1MZ–FE) Blue



V 3
(2AZ–FE) Black

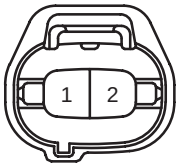

V 4
Blue



V 5
Blue



W 1
Black



CONNECTOR LIST

W 2
Gray




W 3
Gray




CONNECTOR LIST


EA1 Dark Gray

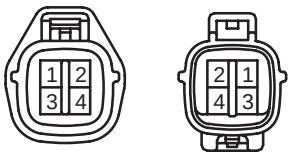


(LHD) **IA1**

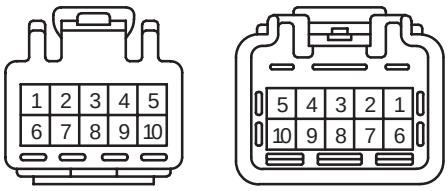


(RHD) **IA1** Gray

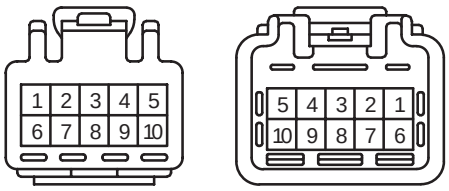


IA2

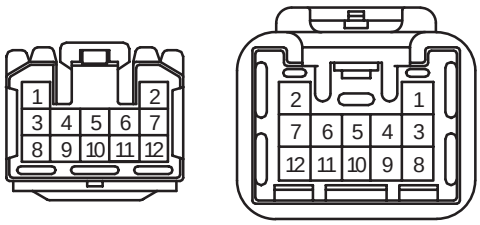


IA3

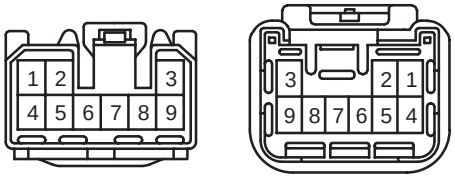


IA4

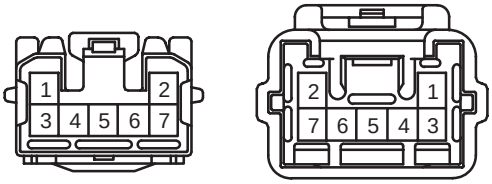


IA5

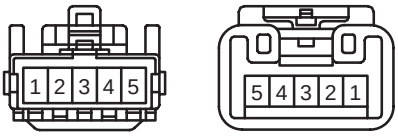


IB1

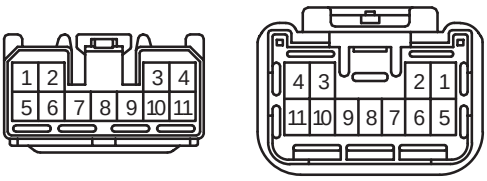

IB2 Blue

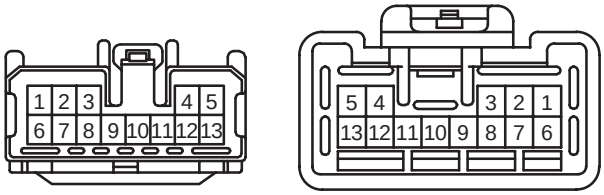


IC1

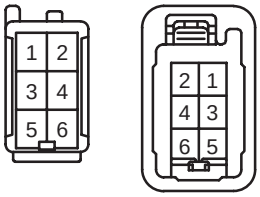


CONNECTOR LIST


(LHD) **ID1**

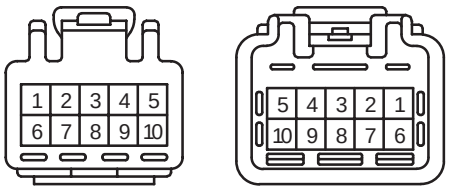


(RHD) **ID1** Gray

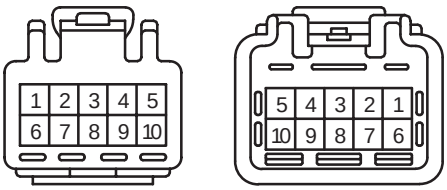


IE1 Blue

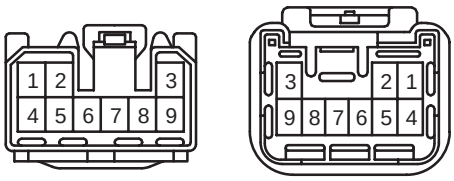


IE2 Blue

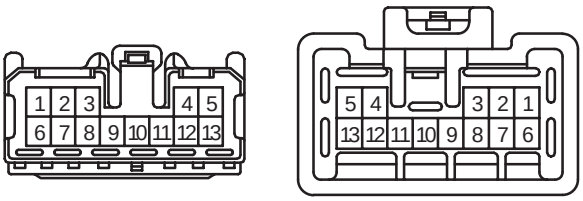


IE3 Yellow

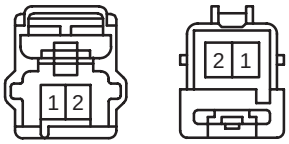


IE4 Gray

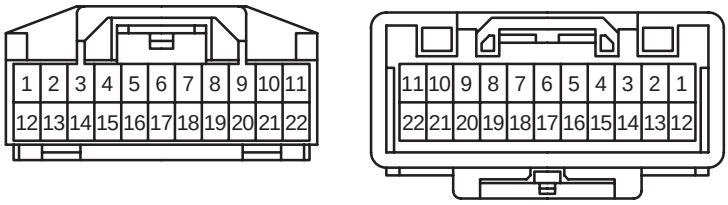


IE5

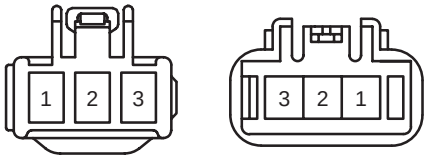


IE6 Gray

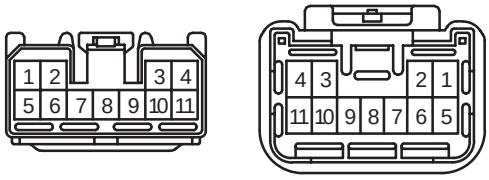

IF1 Gray

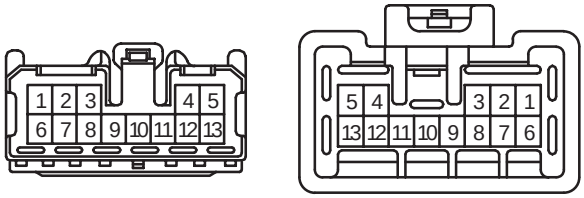


CONNECTOR LIST

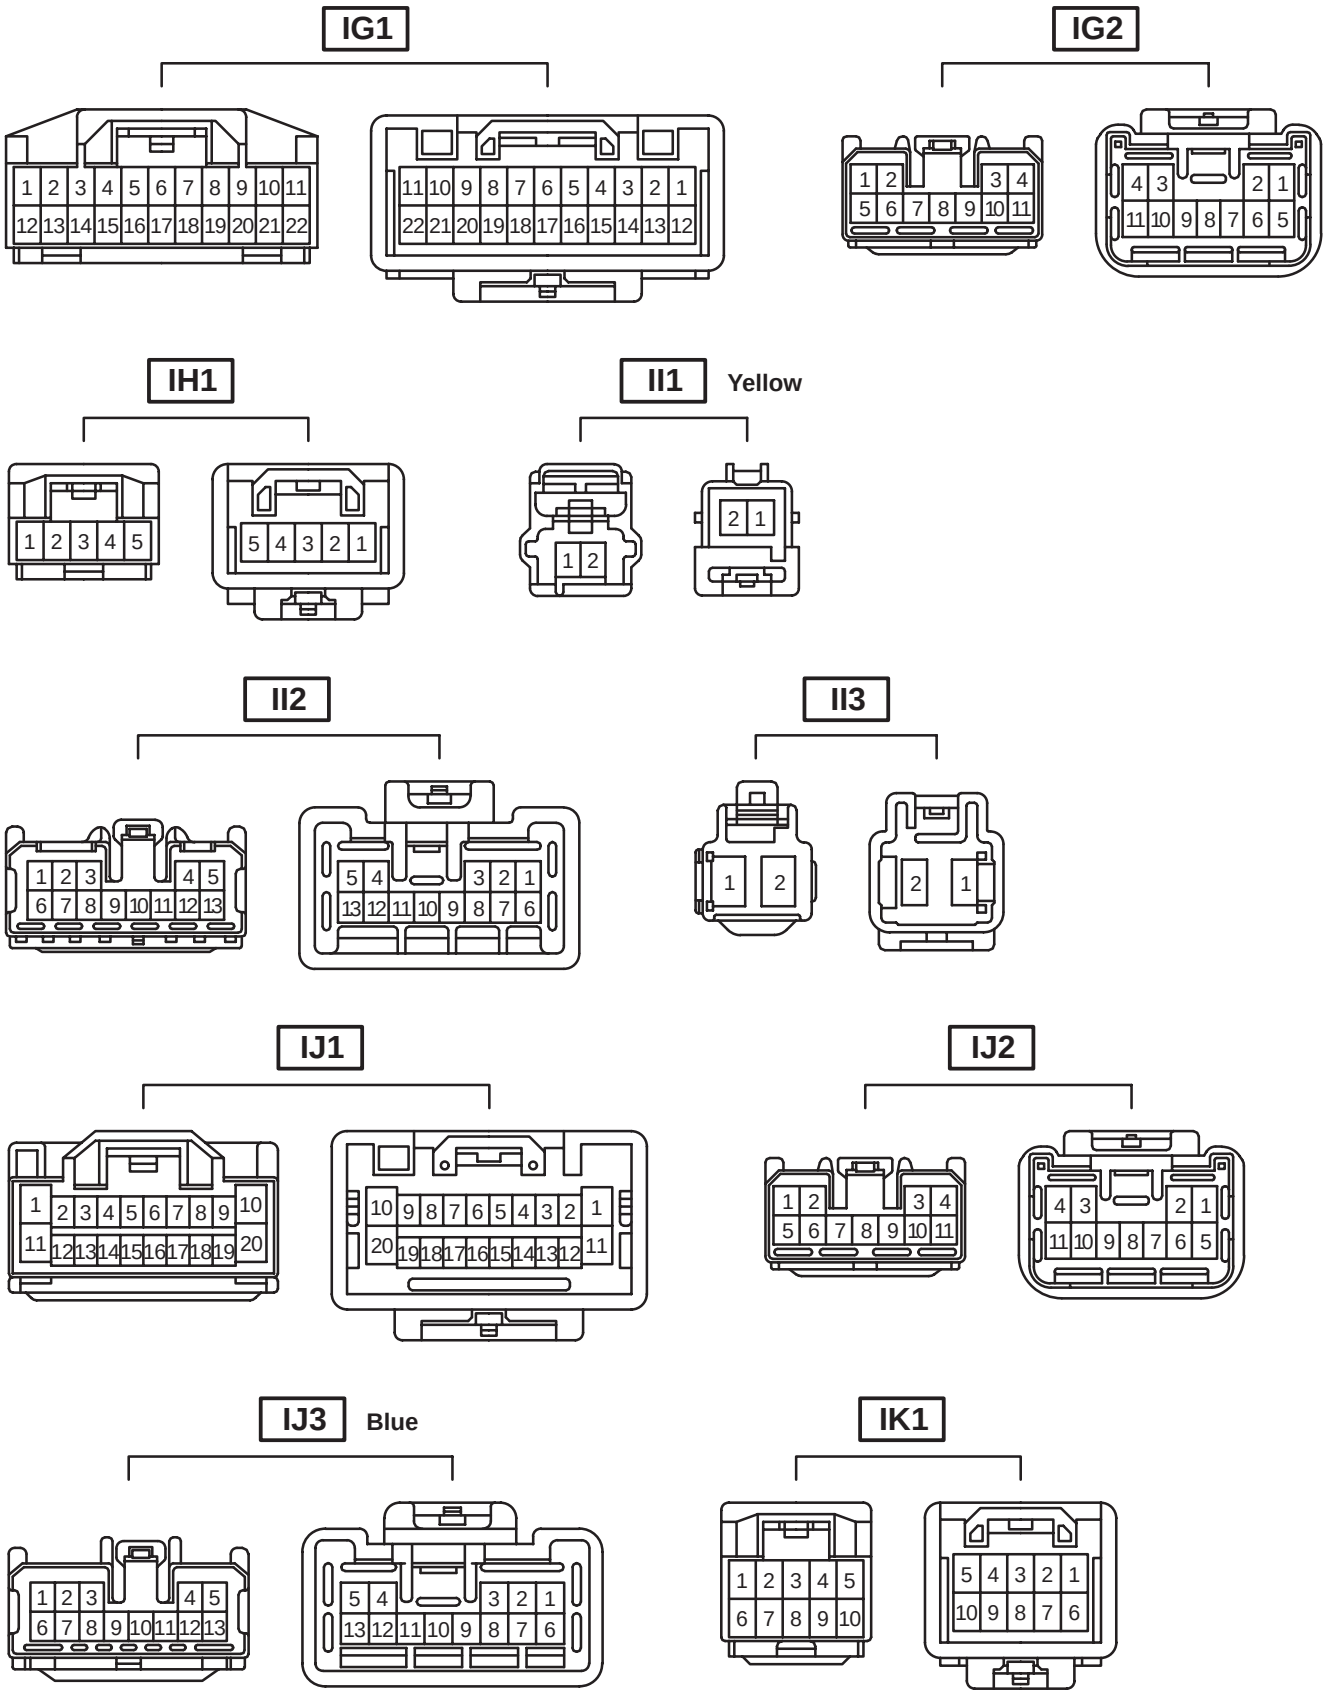


CONNECTOR LIST


IL1 Gray

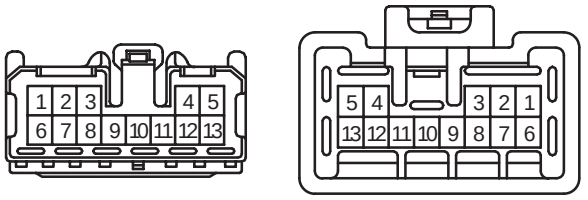


IM1

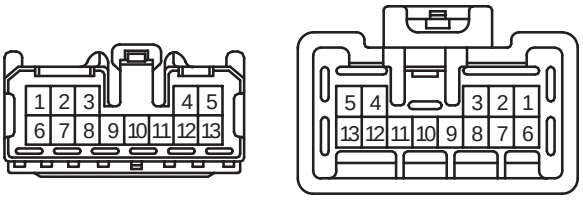


IN1

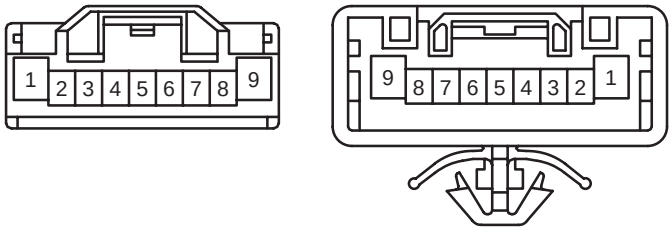


BA1

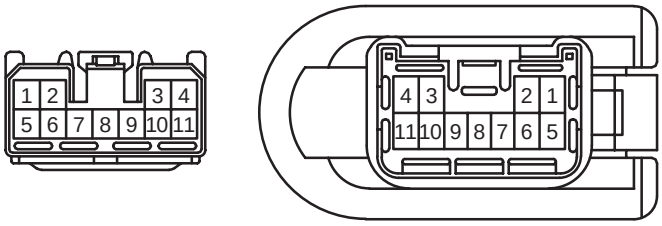

BB1

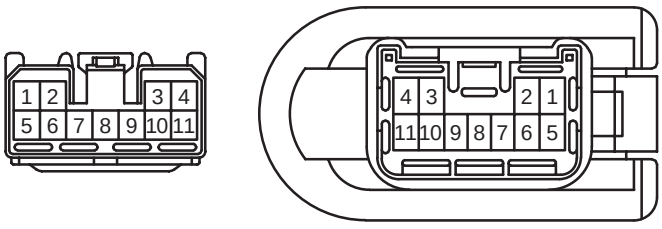

BC1

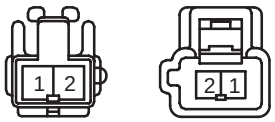

BD1

