




(BAT)
30A
P/SEAT
2
11 IL
G
6 EO1
G
6 A
O20(A), T18(B)
Junction Connector
9 B
8 B
G
G
3
1
T8
Power Seat SW (Front RH Seat)
T9
Power Seat SW
(Front RH Seat Lumbar Support Control)
B
Front
Rear
E
H
R
E2
5
4
1
2
Y
W
6 jT1
11 jT1
W–B
Y
W
W–B
2
M
1
J2
Power Seat Motor
(Front RH Seat Lumbar
Support Control)
W–B
Up
Down
Front
Rear
E
SLDF
Slide
SLDR
FUP
Front
Vertical
FDWN
RCLF
Reclining
RCLR
4
9
6
5
10
3
2
L
Y
R
B
P
BR
7 jT1
12 jT1
P
BR
T1
Power Seat Motor
(Front RH Seat
Slide Control)
T2
Power Seat Motor
(Front RH Seat
Front Vertical Control)
J1
Power Seat Motor
(Front RH Seat
Reclining Control)
3 B
2 B
4 B
O20(A), T18(B)
Junction Connector
5 A
W–B
1 EO1
W–B
E3


T8
Power Seat SW (Front RH Seat)
Up
Down
LUP
Lifter
LDWN
8
7
W
V
2
M
1
T4
Power Seat Motor
(Front RH Seat
Lifter Control)


O 20
White

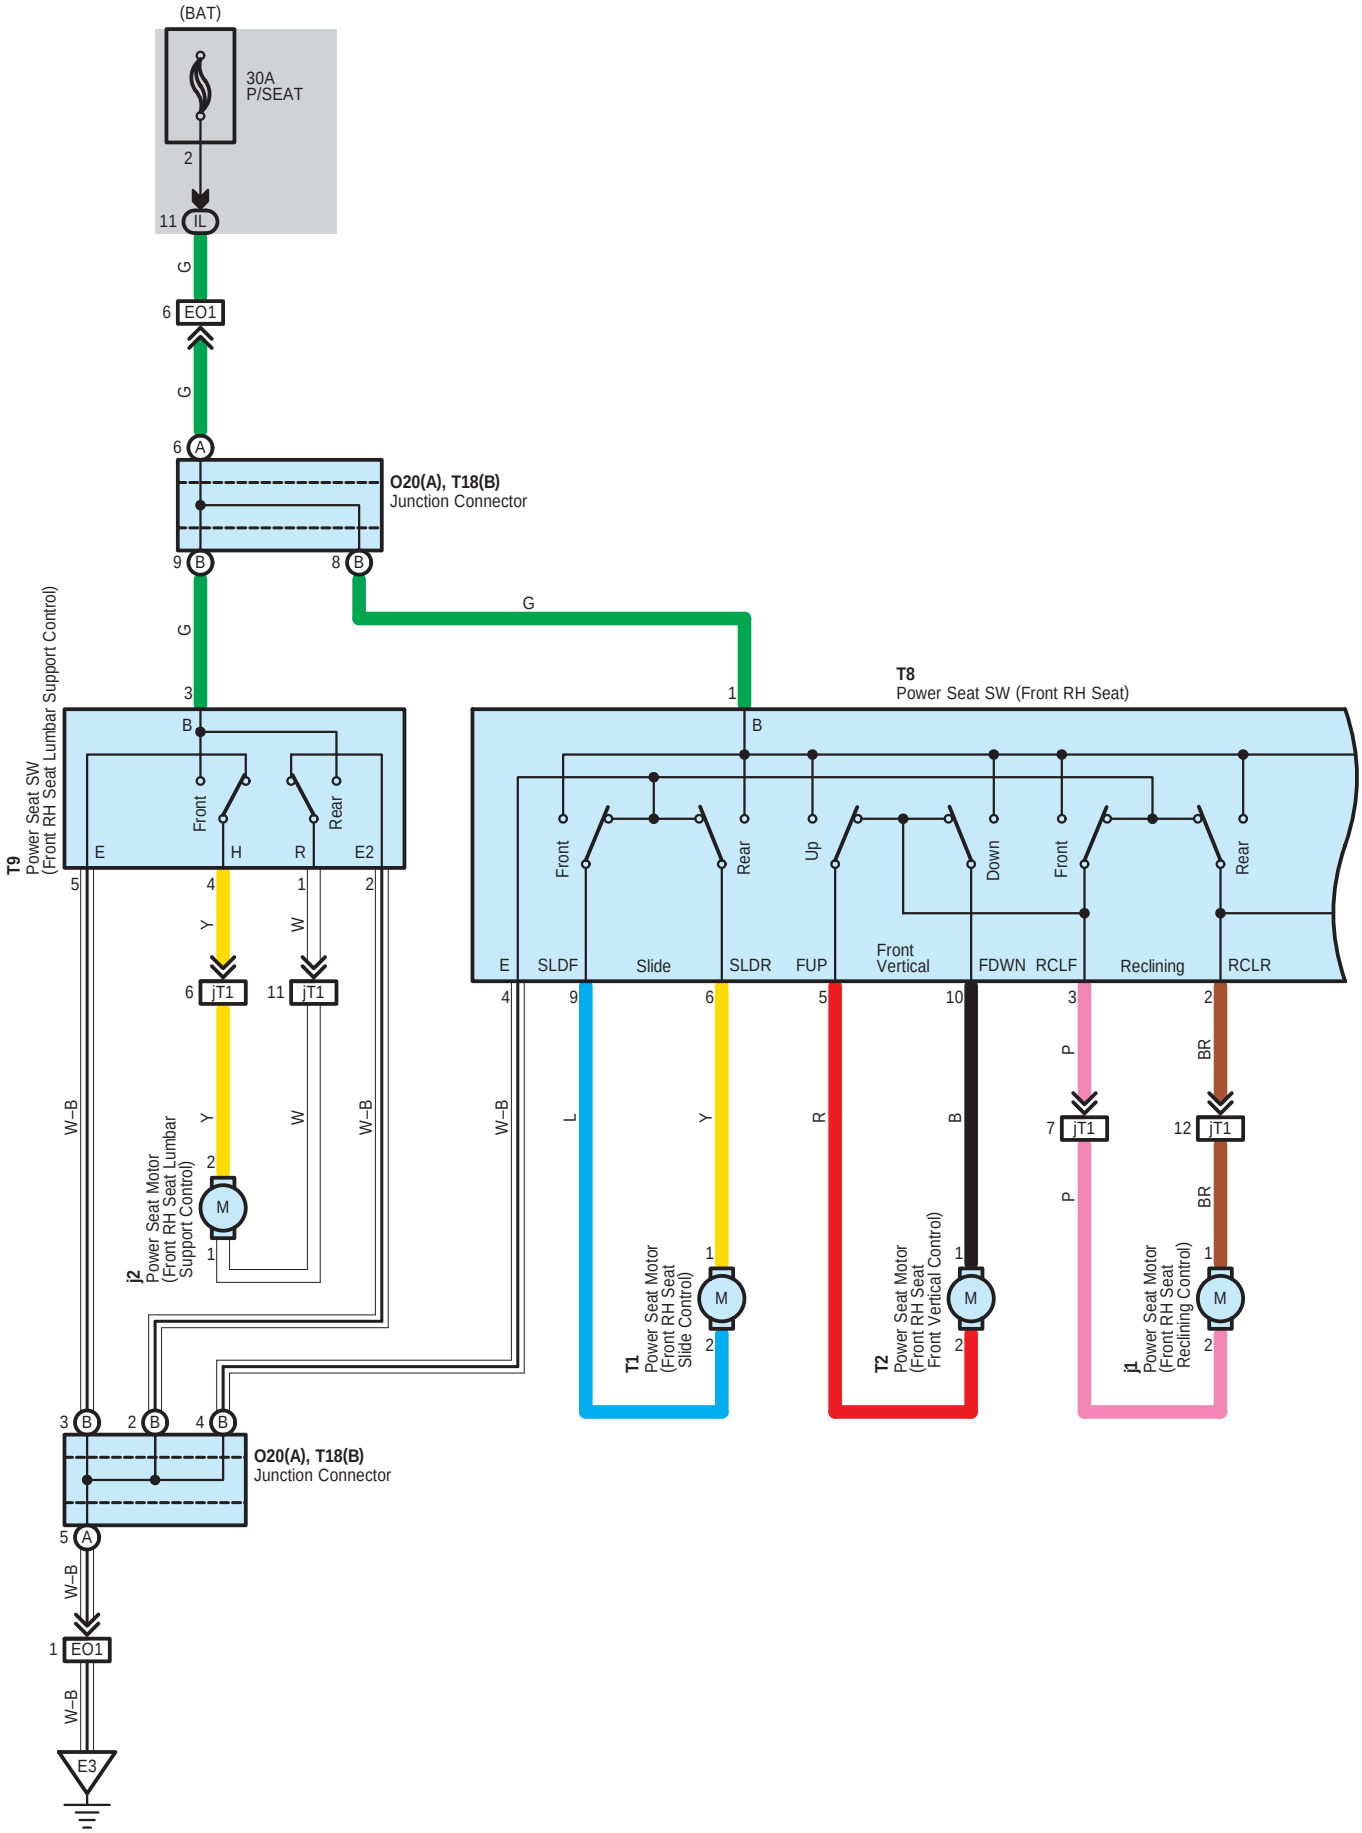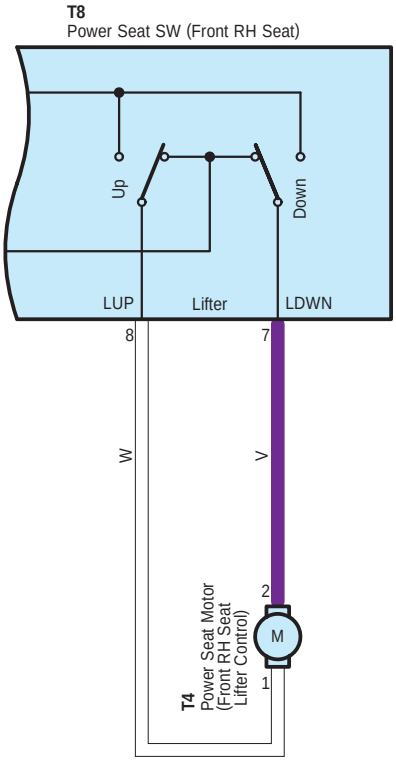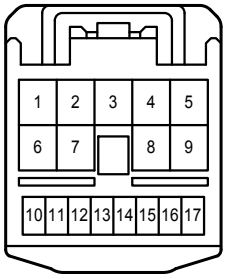


T 1
White




T 2
Orange




T 4
Blue




T 8
Black

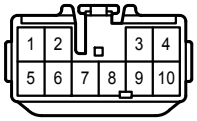


T 9
White

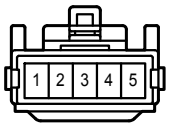


T 18
White

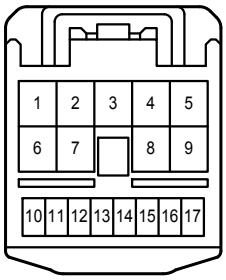


j 1
White




j 2
White



IL
White

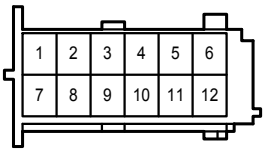

EO1
White

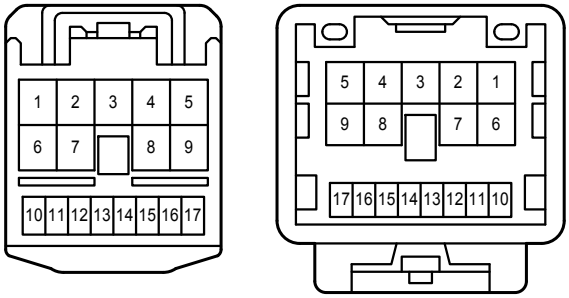

jT1
White

