BODY PANEL SEALING AREAS


Be sure to apply body sealer to the body panel joints and door edges (tip of outer panel folded part), etc., to waterproof and rustproof them.

HINT:

1) *Apply degreasing agent to a clean cloth and clean the sealer application areas.*
2) *After removing the applied spot sealer from the sealer application areas using thinner or equivalent, rustproof the areas by applying primer or equivalent. Then apply body sealer.*
3) *If sealer is unnecessarily applied to an area, apply degreasing agent to a clean cloth and clean off the sealer immediately.*


++++++++++	Flat Finishing	————	No Flat Finishing

1. ENGINE COMPARTMENT

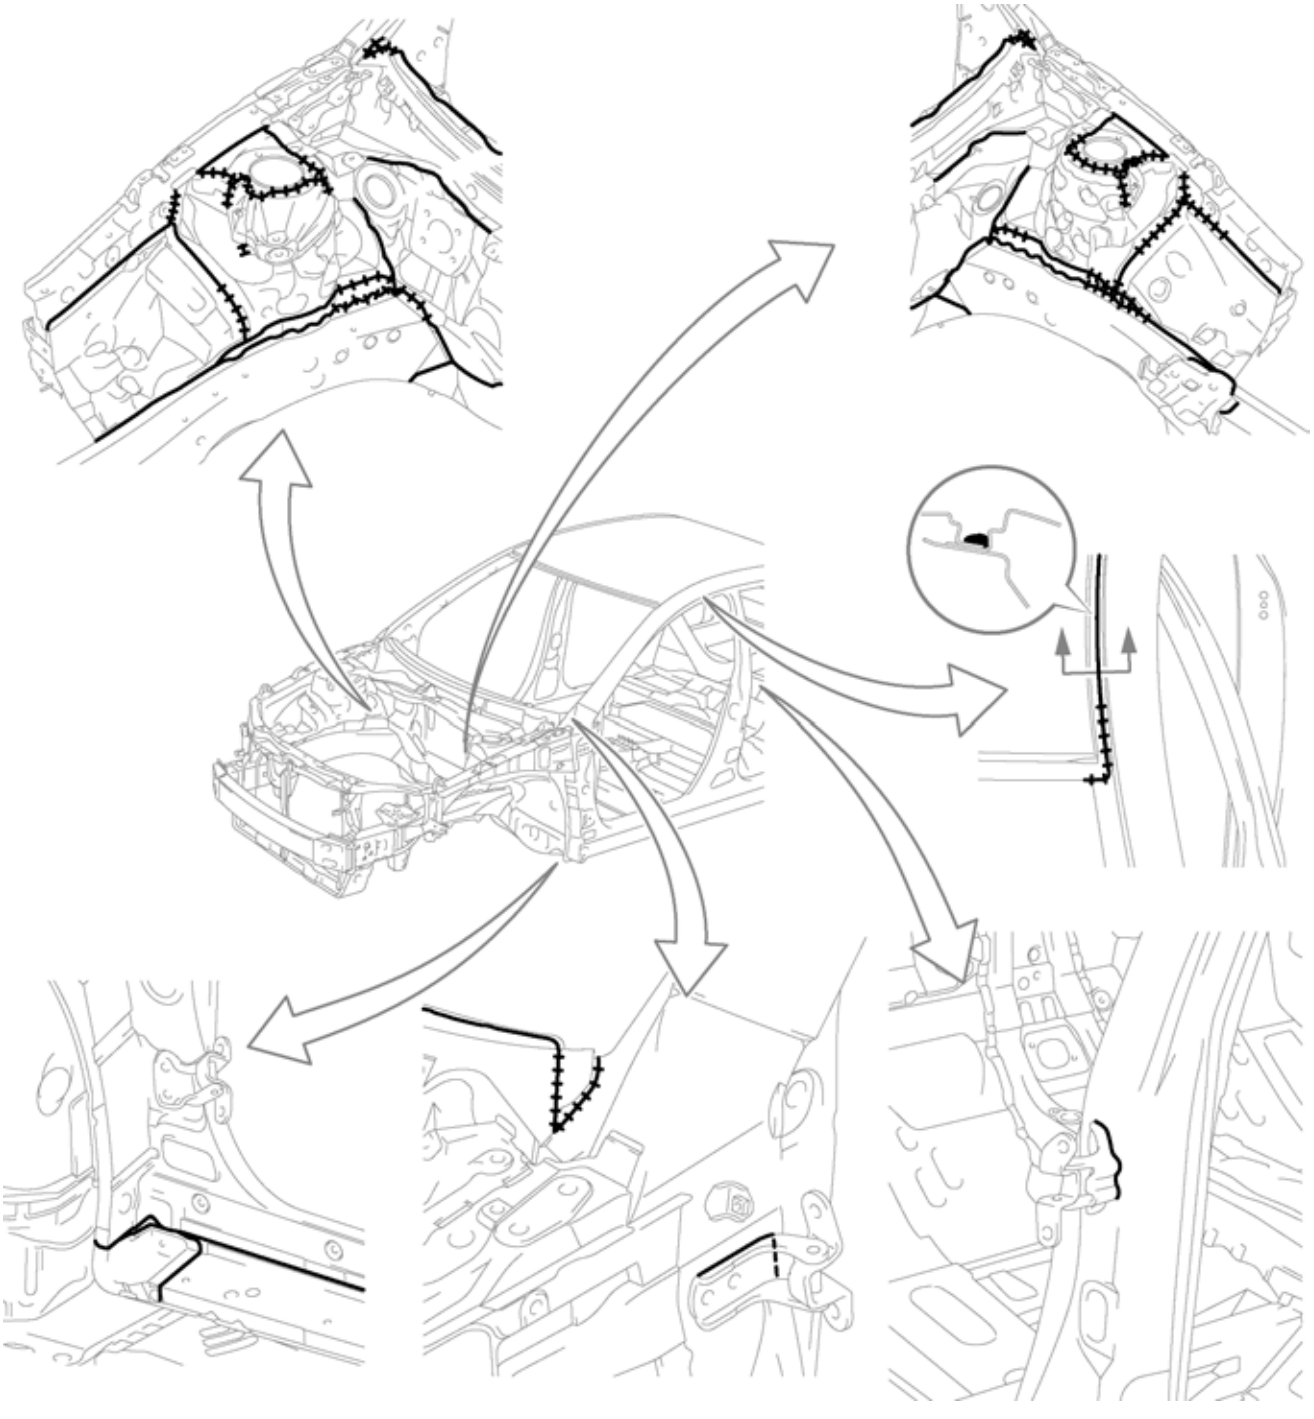


F25781

2. INSIDE

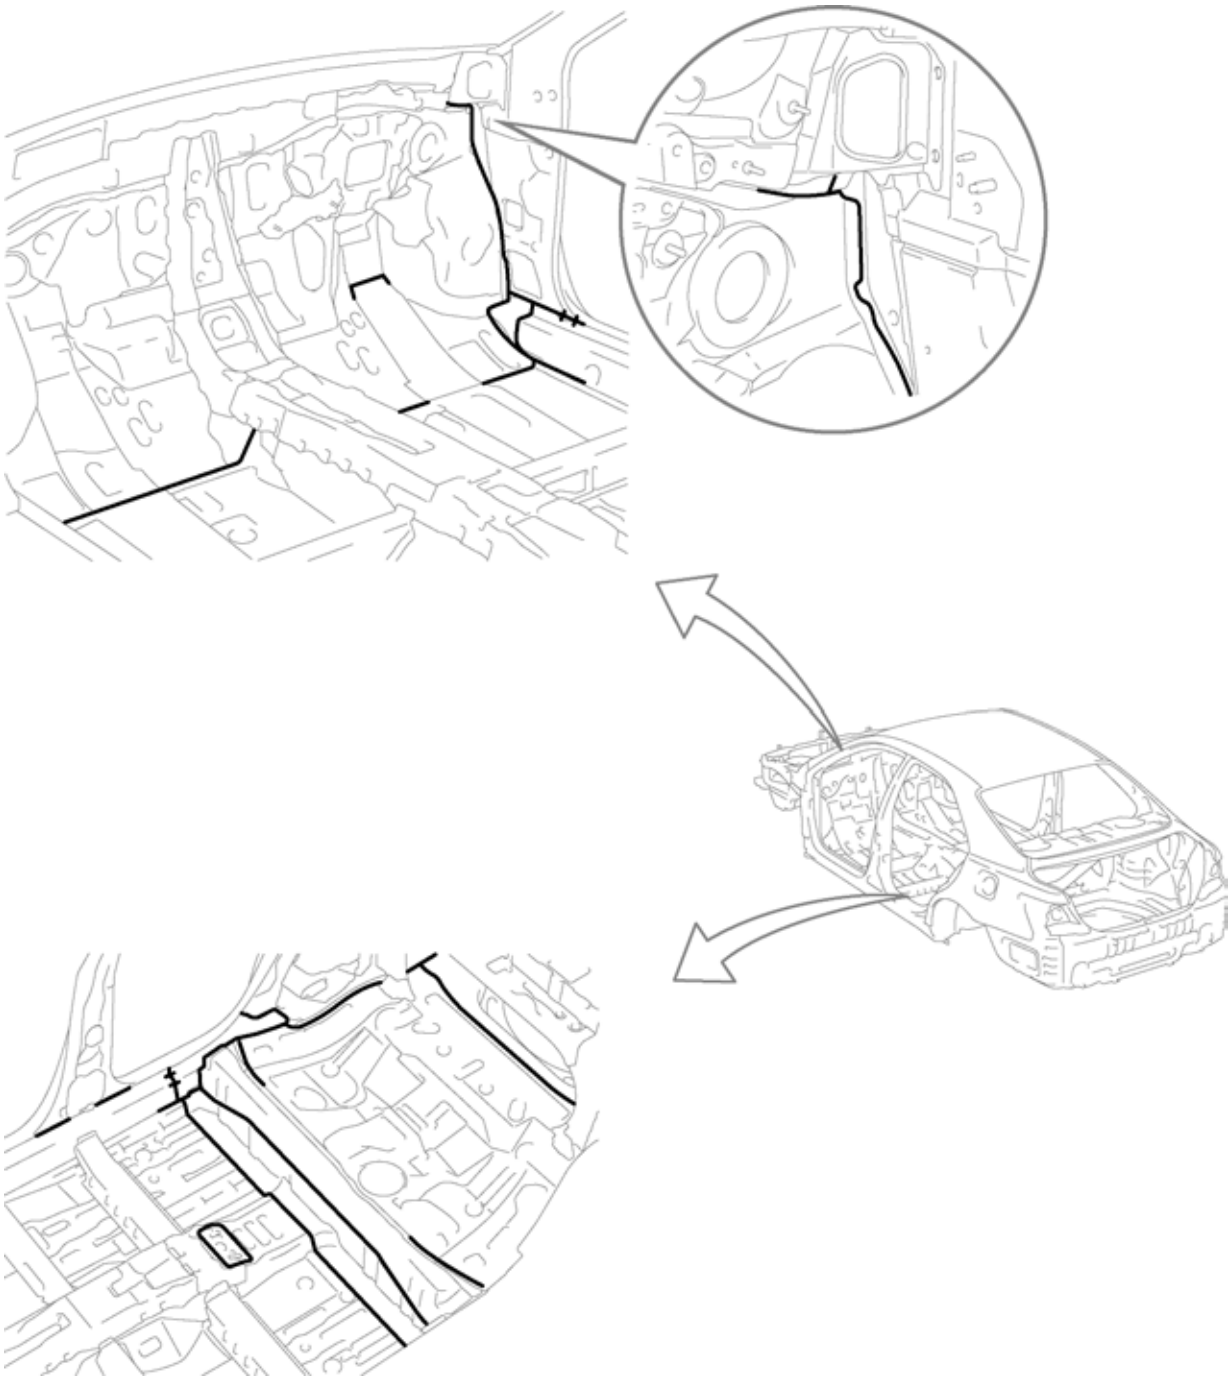


F26455

3. OUTSIDE

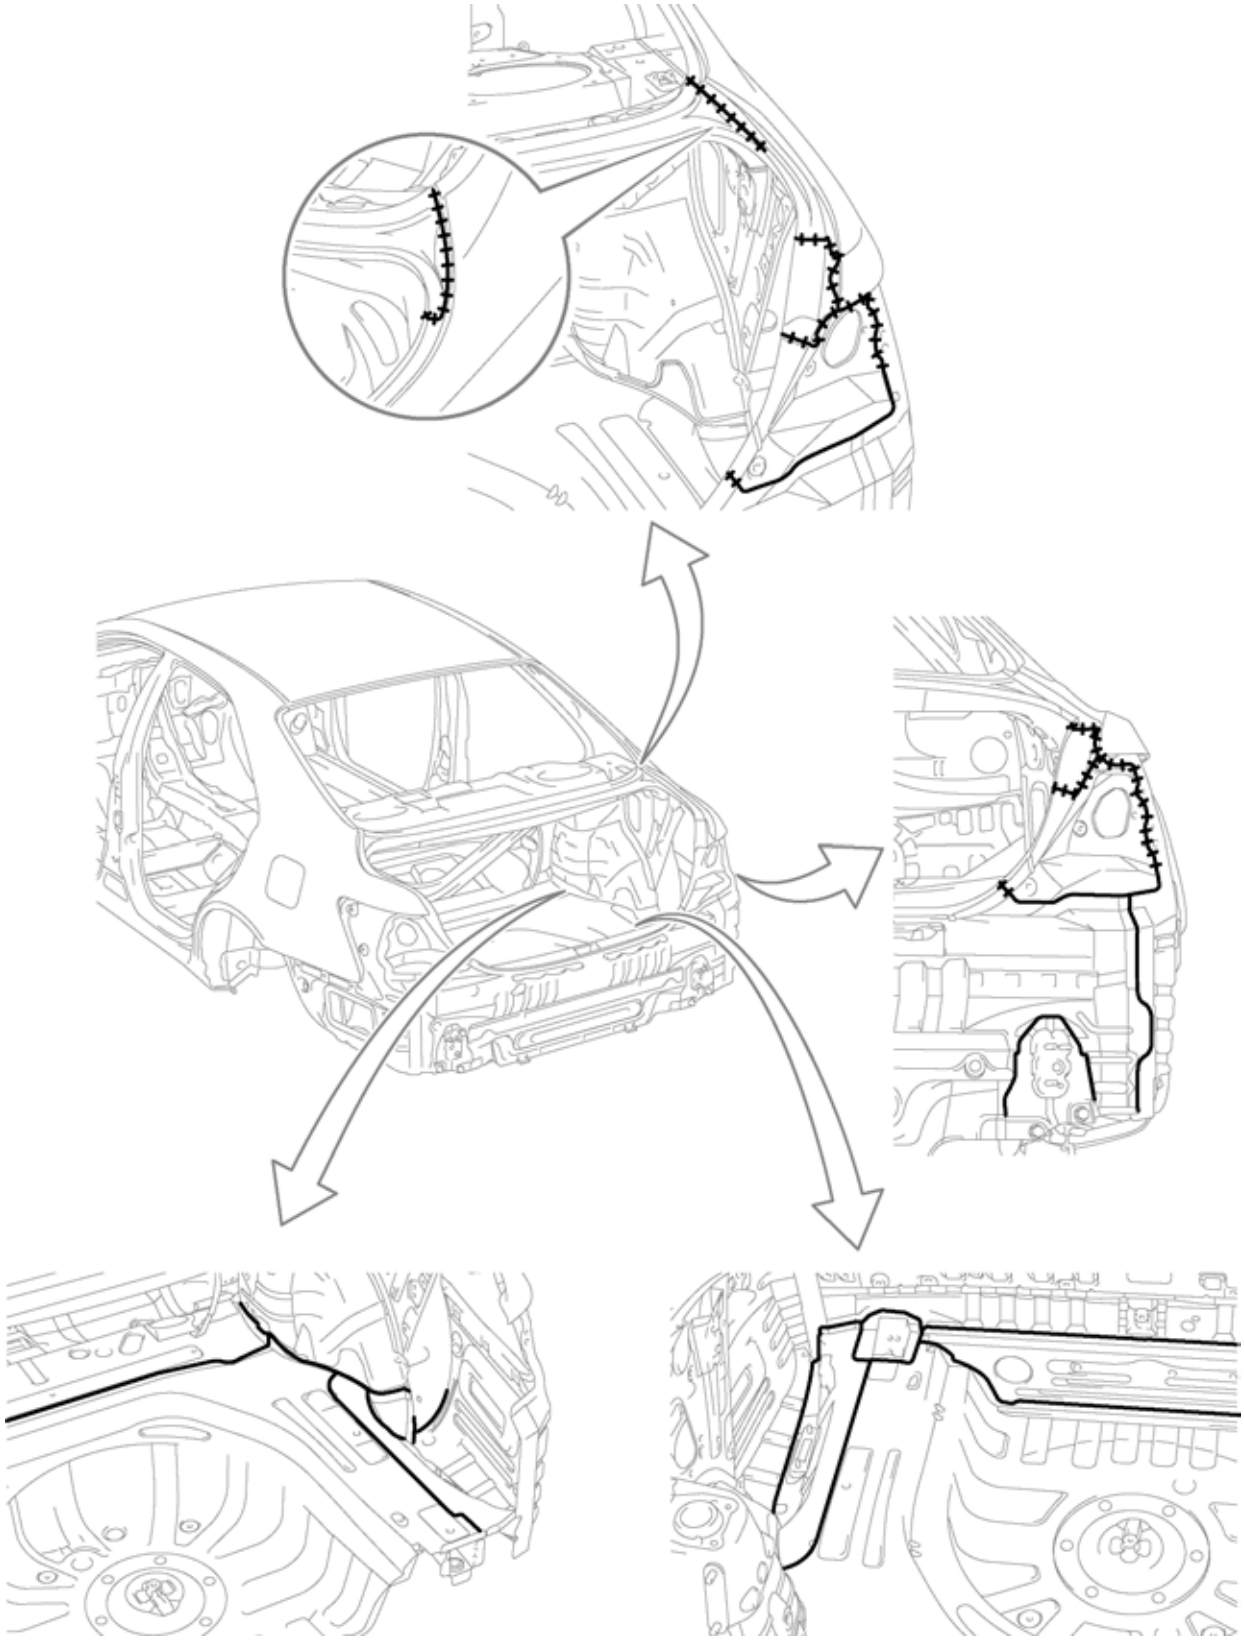


F25783

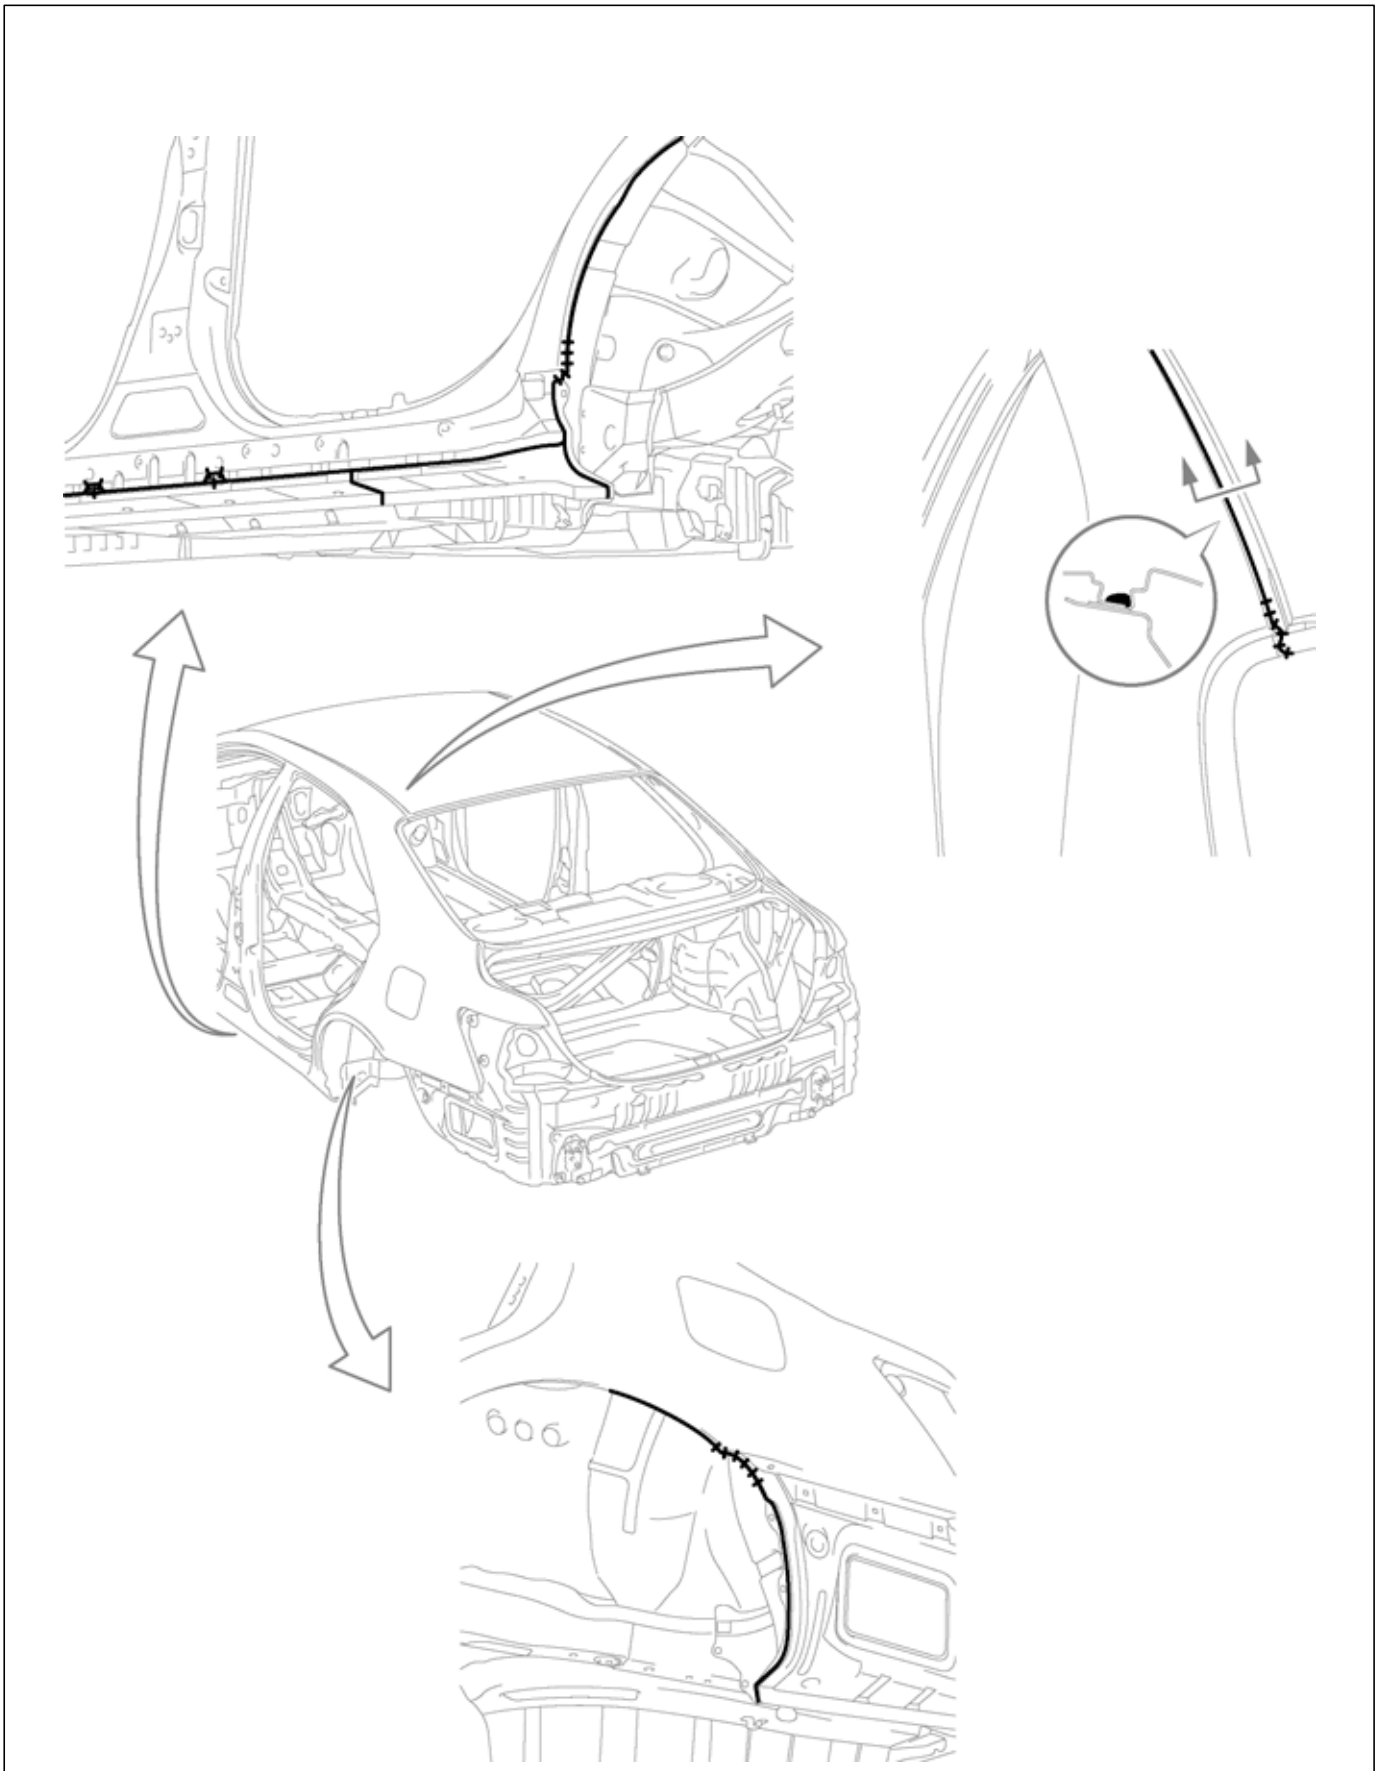


F26456

4. DOOR PARTS

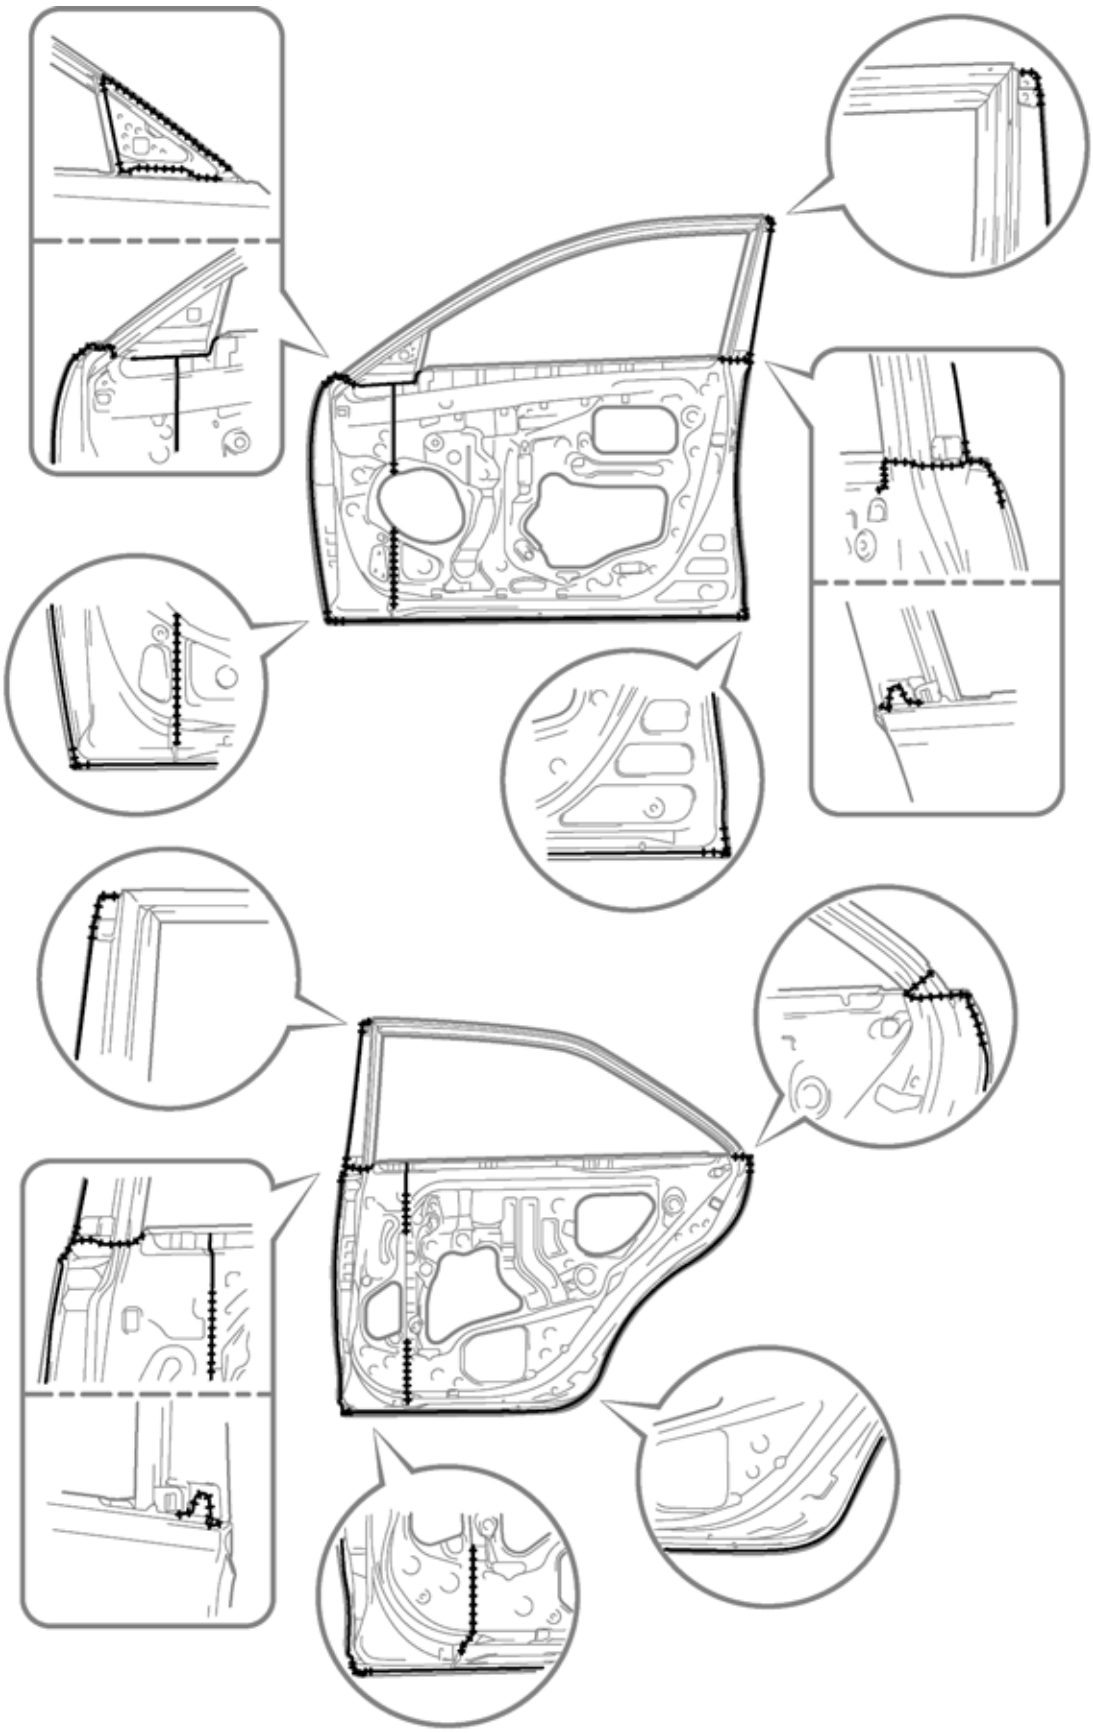


F26121

[for 2AZ-FE]

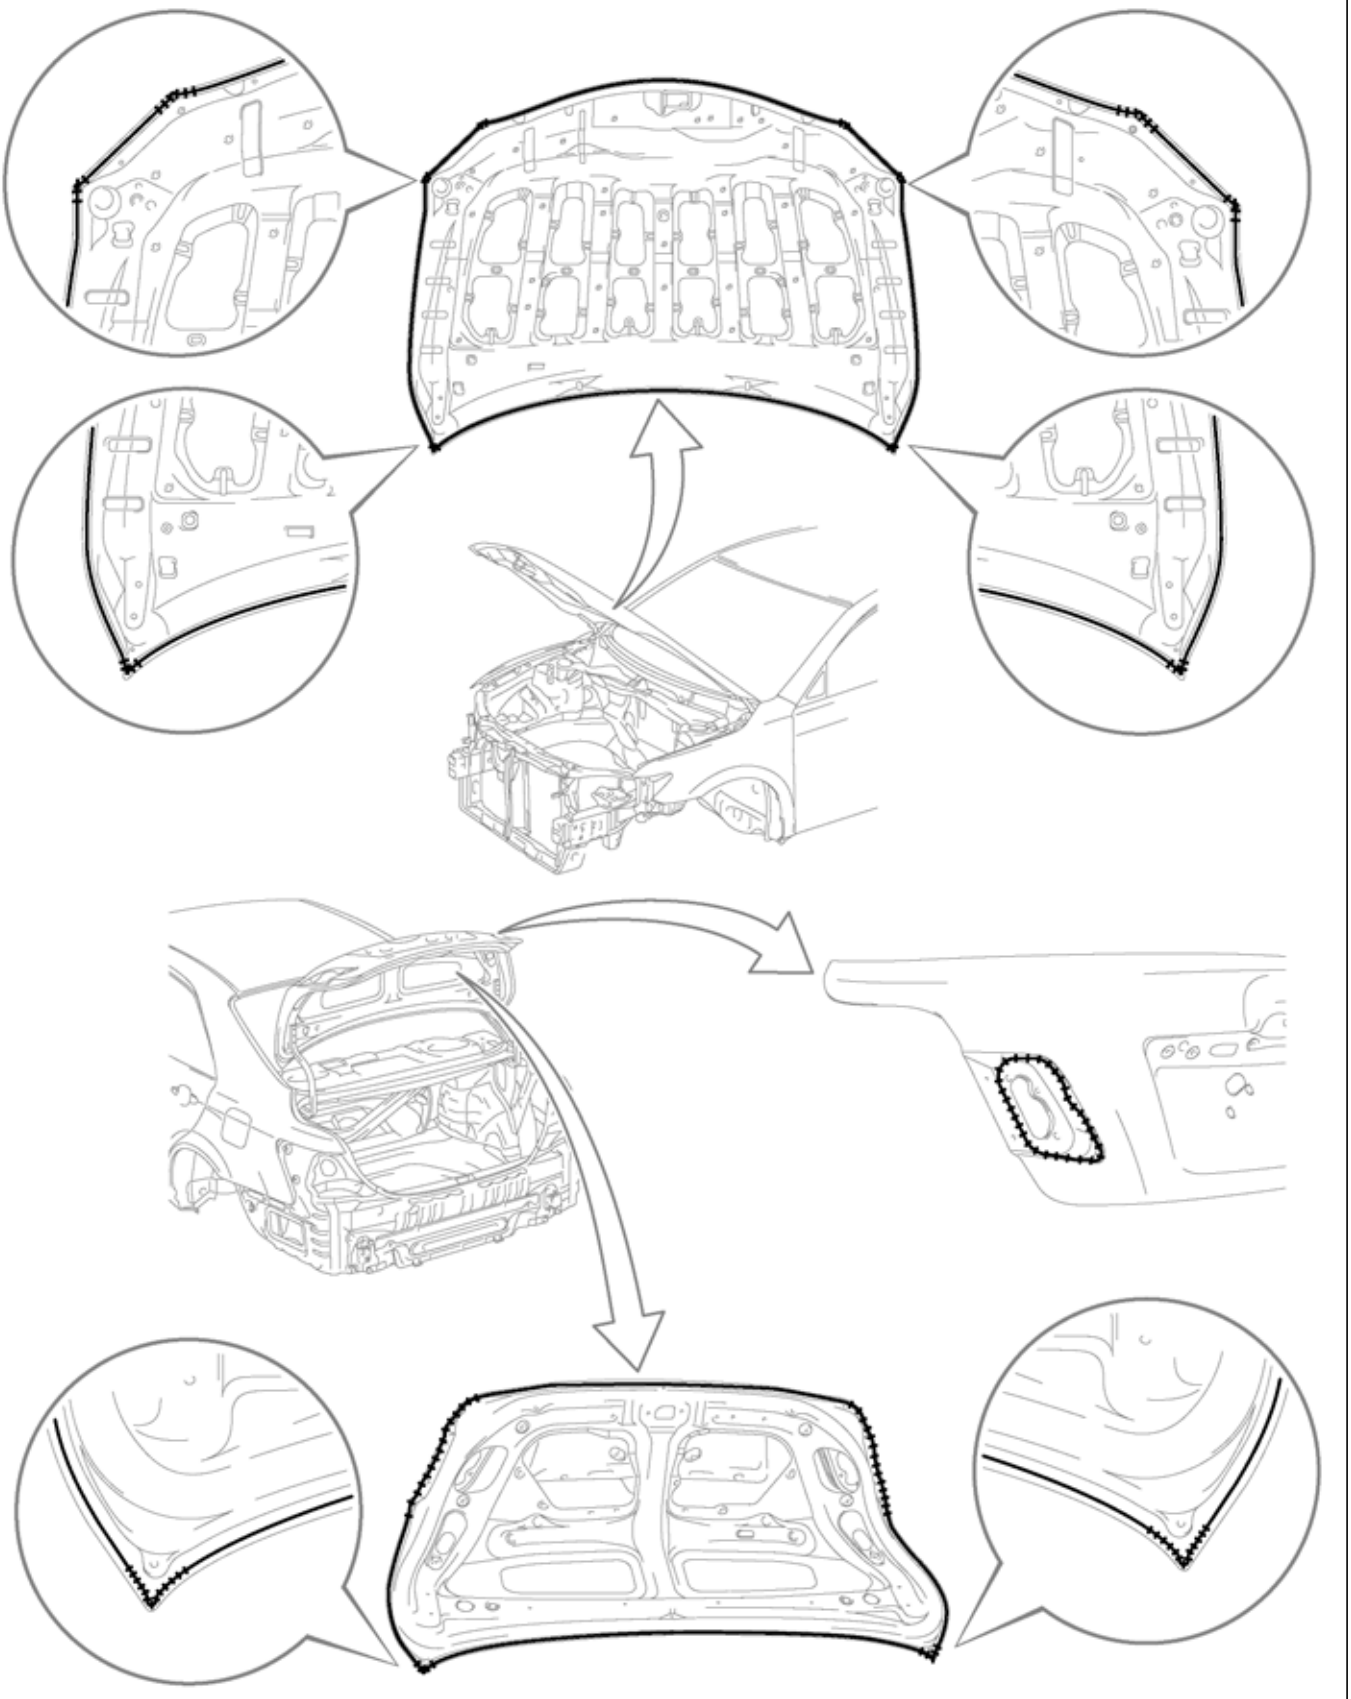

F25786

[for 2GR-FE]

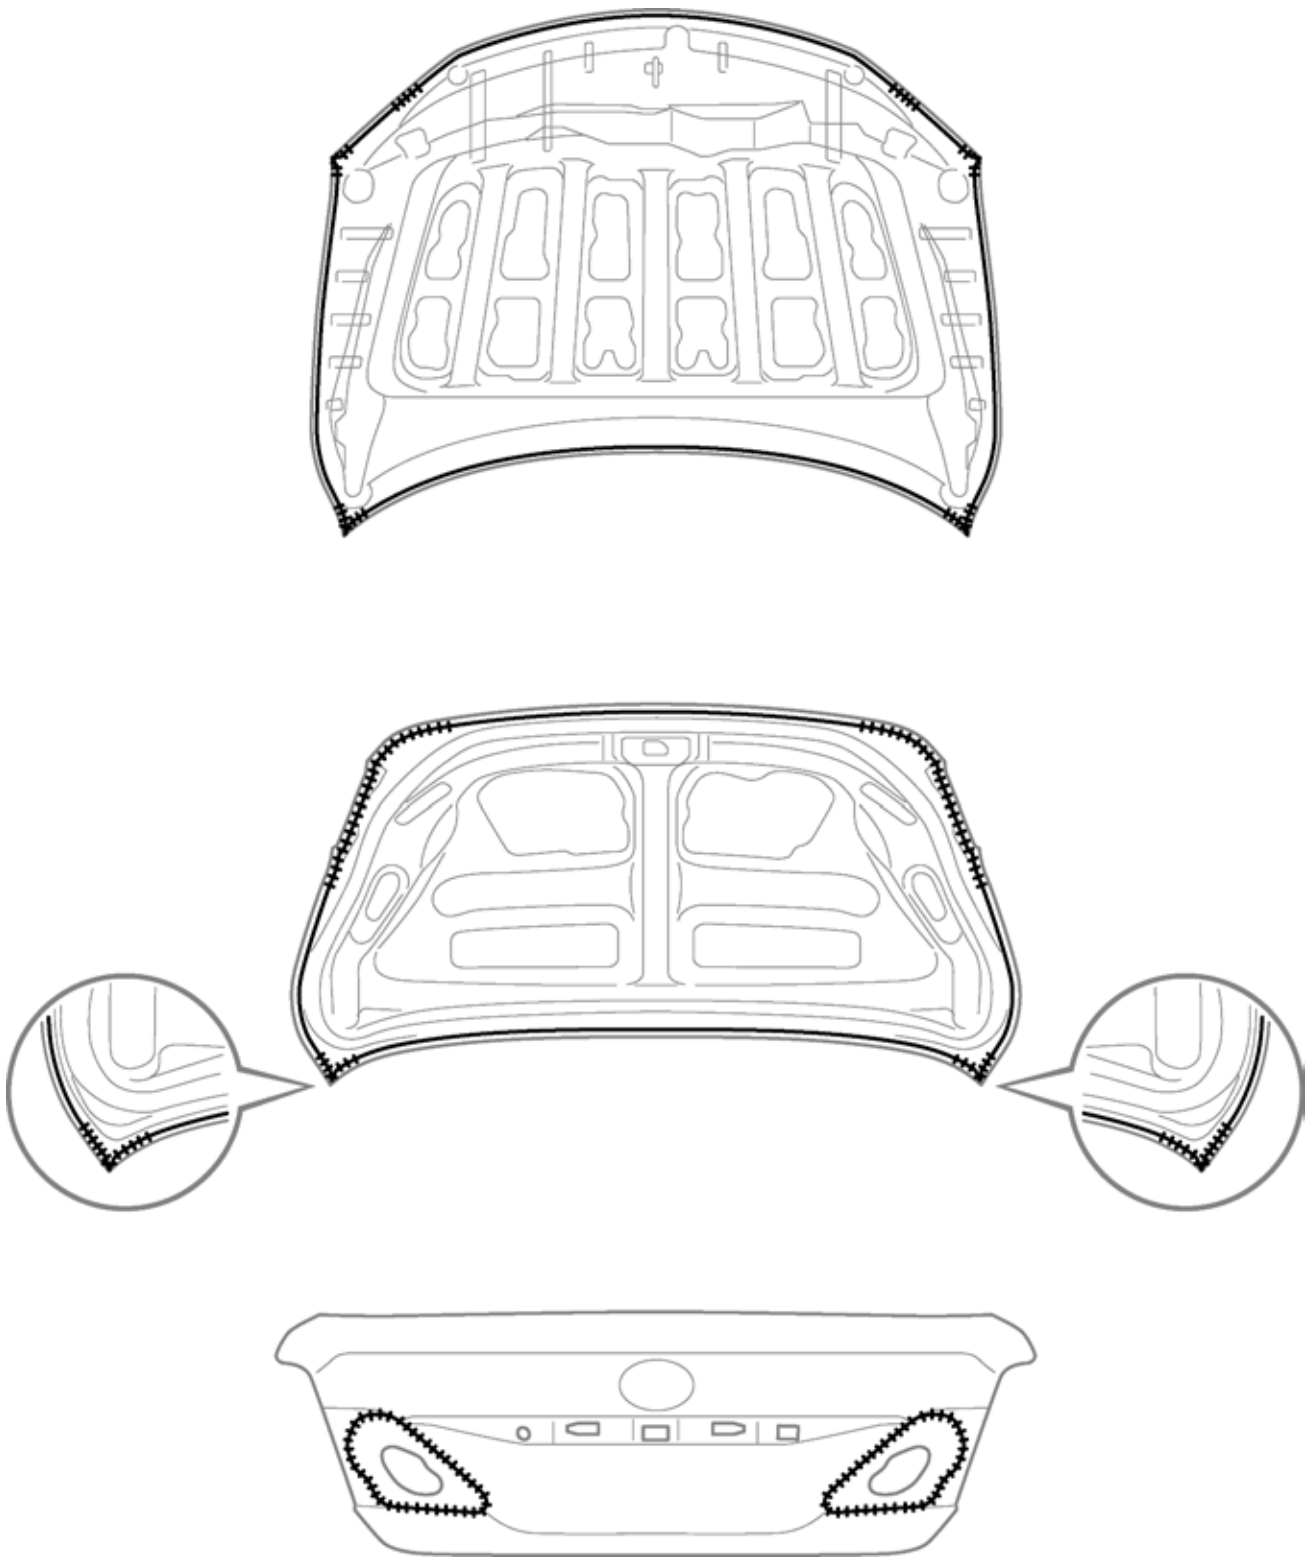

F26122