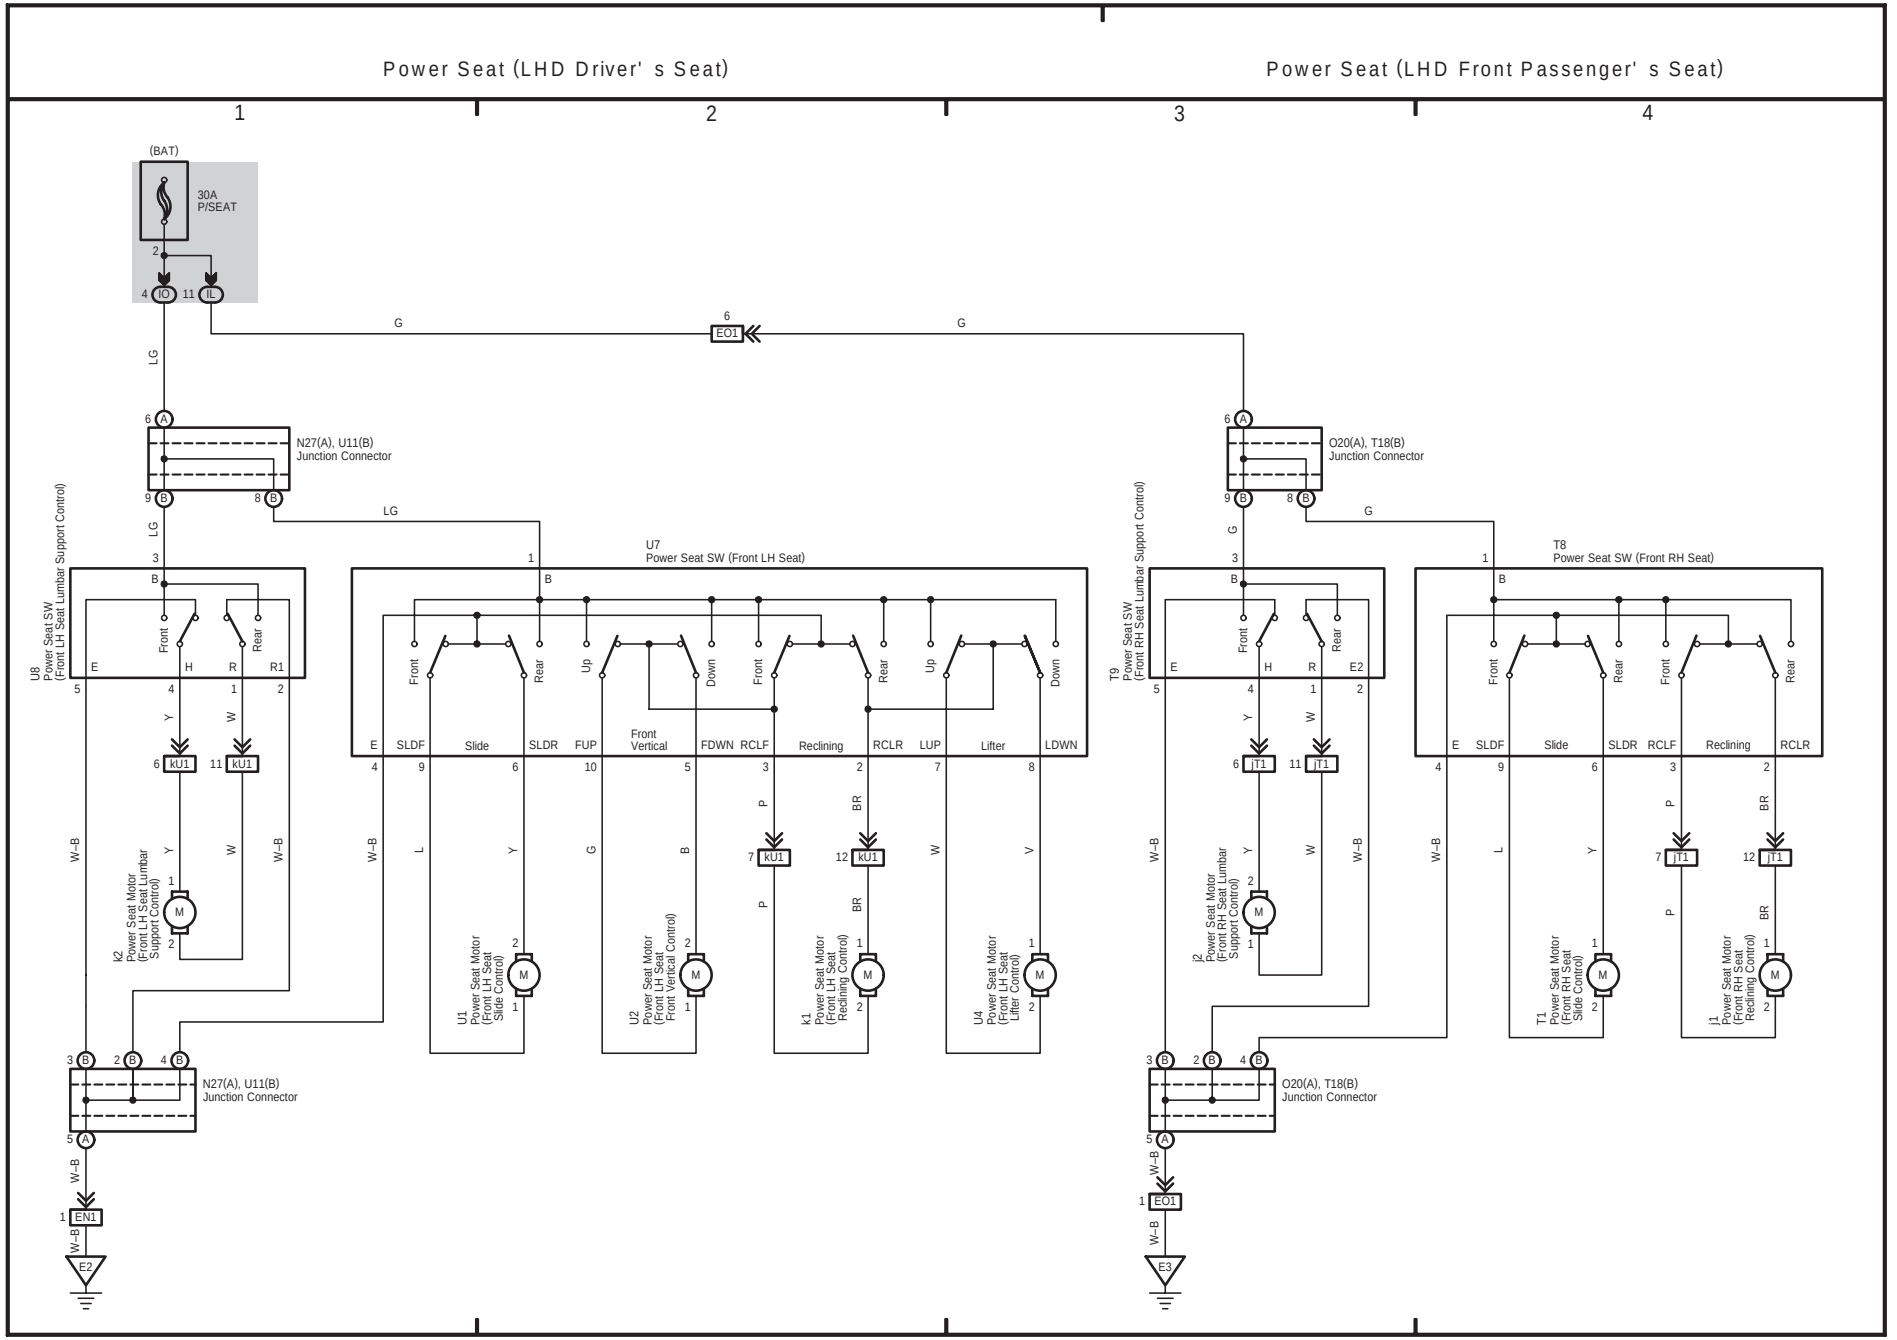

Power Seat (LHD Driver' s Seat)
Power Seat (LHD Front Passenger' s Seat)
1
2
3
4
(BAT)
30A P/SEAT
IO
IL
EO1
N27(A), U11(B) Junction Connector
O20(A), T18(B) Junction Connector
U8 Power Seat SW (Front LH Seat Lumbar Support Control)
U7 Power Seat SW (Front LH Seat)
T9 Power Seat SW (Front RH Seat Lumbar Support Control)
T8 Power Seat SW (Front RH Seat)
Front
Rear
Up
Down
SLDF
Slide
SLDR
FUP
Front Vertical
FDWN
RCLF
Reclining
RCLR
LUP
Lifter
LDWN
kU1
jT1
k2 Power Seat Motor (Front LH Seat Lumbar Support Control)
j2 Power Seat Motor (Front RH Seat Lumbar Support Control)
U1 Power Seat Motor (Front LH Seat Slide Control)
U2 Power Seat Motor (Front LH Seat Front Vertical Control)
k1 Power Seat Motor (Front LH Seat Reclining Control)
U4 Power Seat Motor (Front LH Seat Lifter Control)
T1 Power Seat Motor (Front RH Seat Slide Control)
j1 Power Seat Motor (Front RH Seat Reclining Control)
EN1
E2
E3