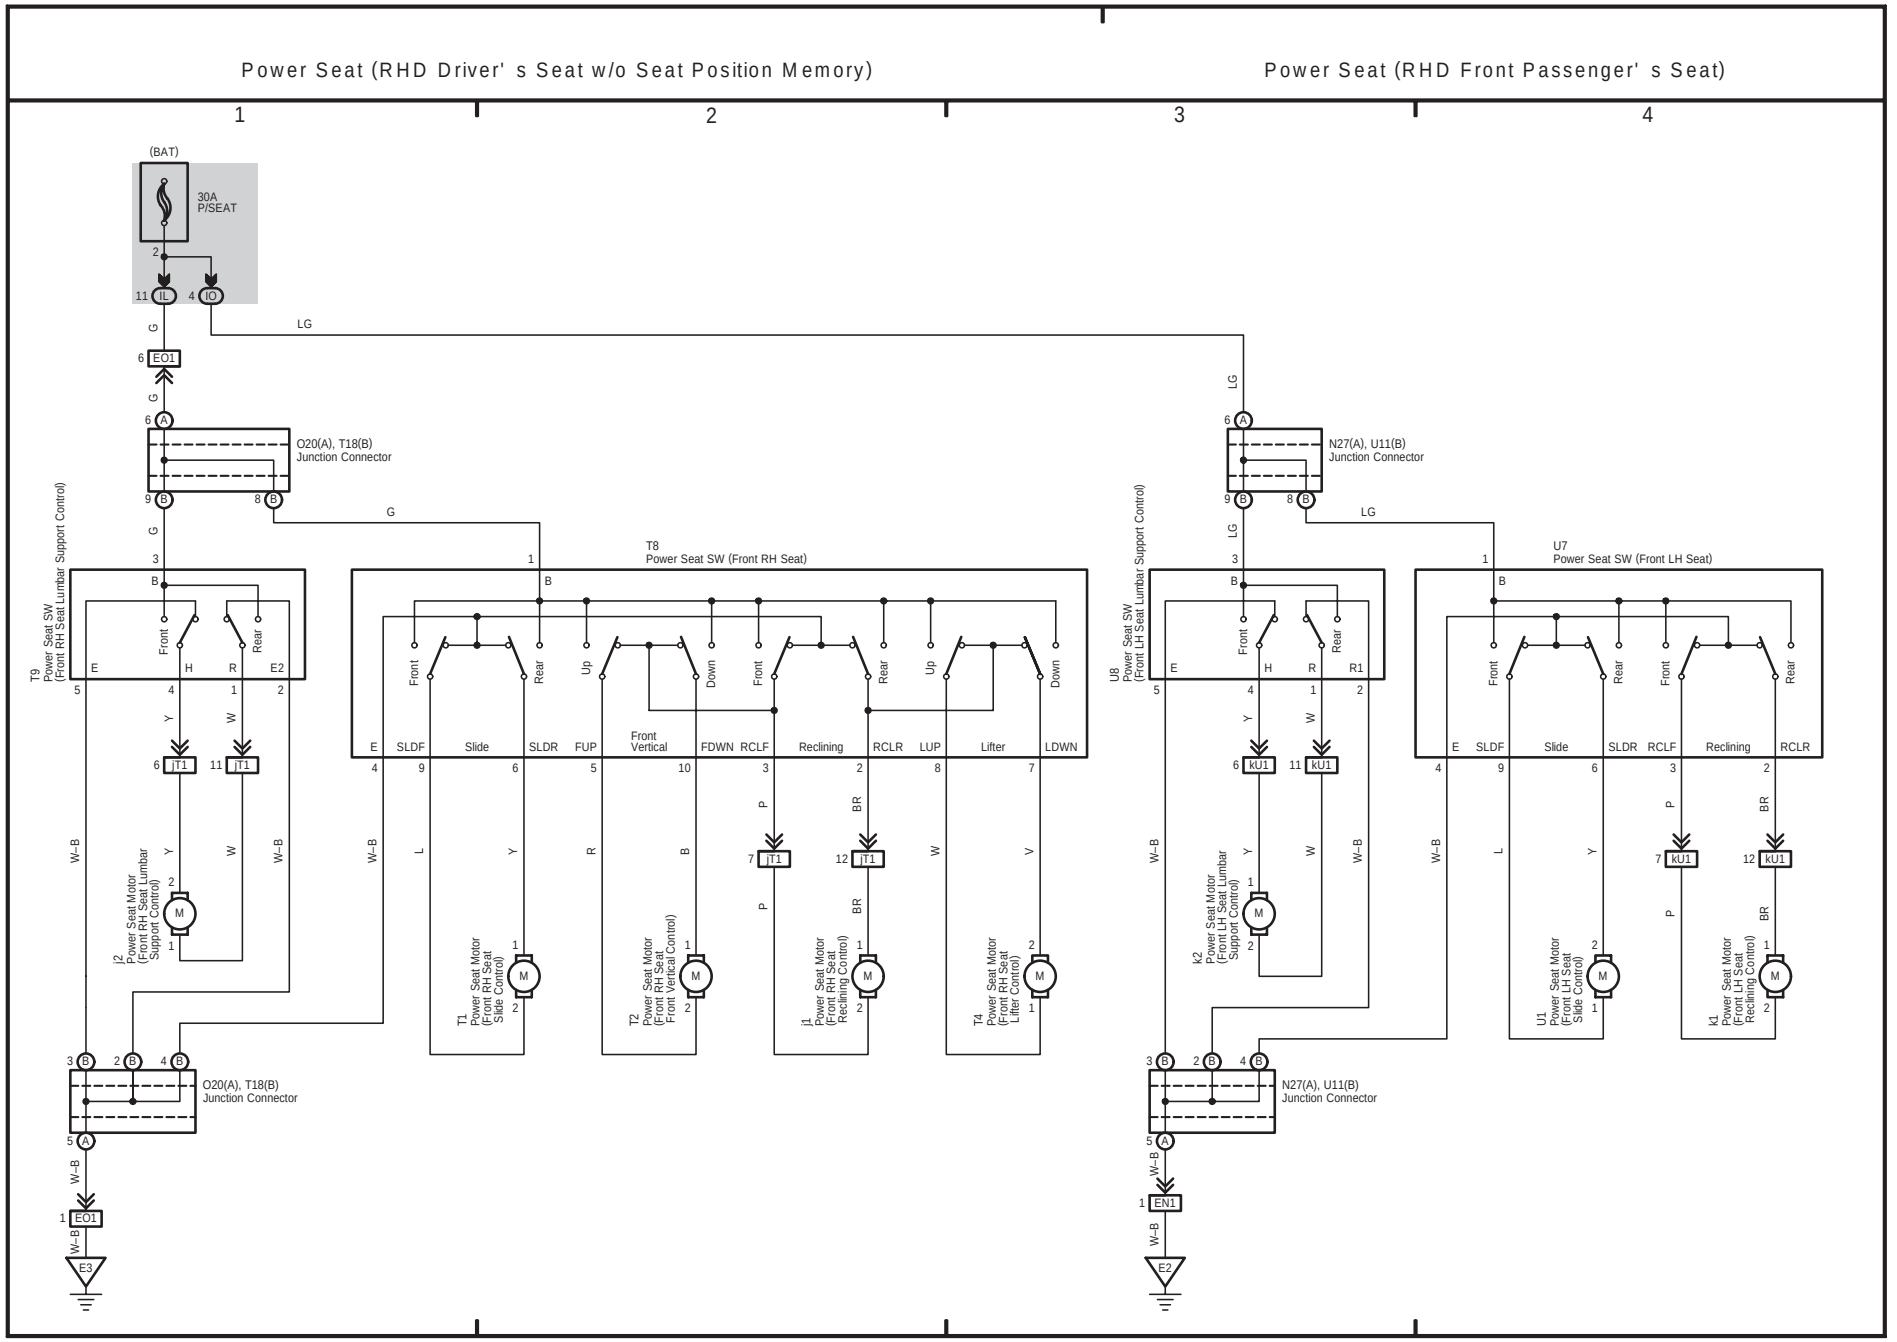

Power Seat (RHD Driver' s Seat w/o Seat Position Memory)
Power Seat (RHD Front Passenger' s Seat)
1
2
3
4
(BAT)
30A
P/SEAT
IL
IO
EO1
LG
O20(A), T18(B)
Junction Connector
N27(A), U11(B)
Junction Connector
T9
Power Seat SW
(Front RH Seat Lumbar Support Control)
U8
Power Seat SW
(Front LH Seat Lumbar Support Control)
T8
Power Seat SW (Front RH Seat)
U7
Power Seat SW (Front LH Seat)
Front
Rear
Up
Down
SLDF
Slide
SLDR
FUP
Front
Vertical
FDWN
RCLF
Reclining
RCLR
LUP
Lifter
LDWN
R1
jT1
kU1
j2
Power Seat Motor
(Front RH Seat Lumbar
Support Control)
k2
Power Seat Motor
(Front LH Seat Lumbar
Support Control)
T1
Power Seat Motor
(Front RH Seat
Slide Control)
T2
Power Seat Motor
(Front RH Seat
Front Vertical Control)
j1
Power Seat Motor
(Front RH Seat
Reclining Control)
T4
Power Seat Motor
(Front RH Seat
Lifter Control)
U1
Power Seat Motor
(Front LH Seat
Slide Control)
k1
Power Seat Motor
(Front LH Seat
Reclining Control)
EN1
E3
E2