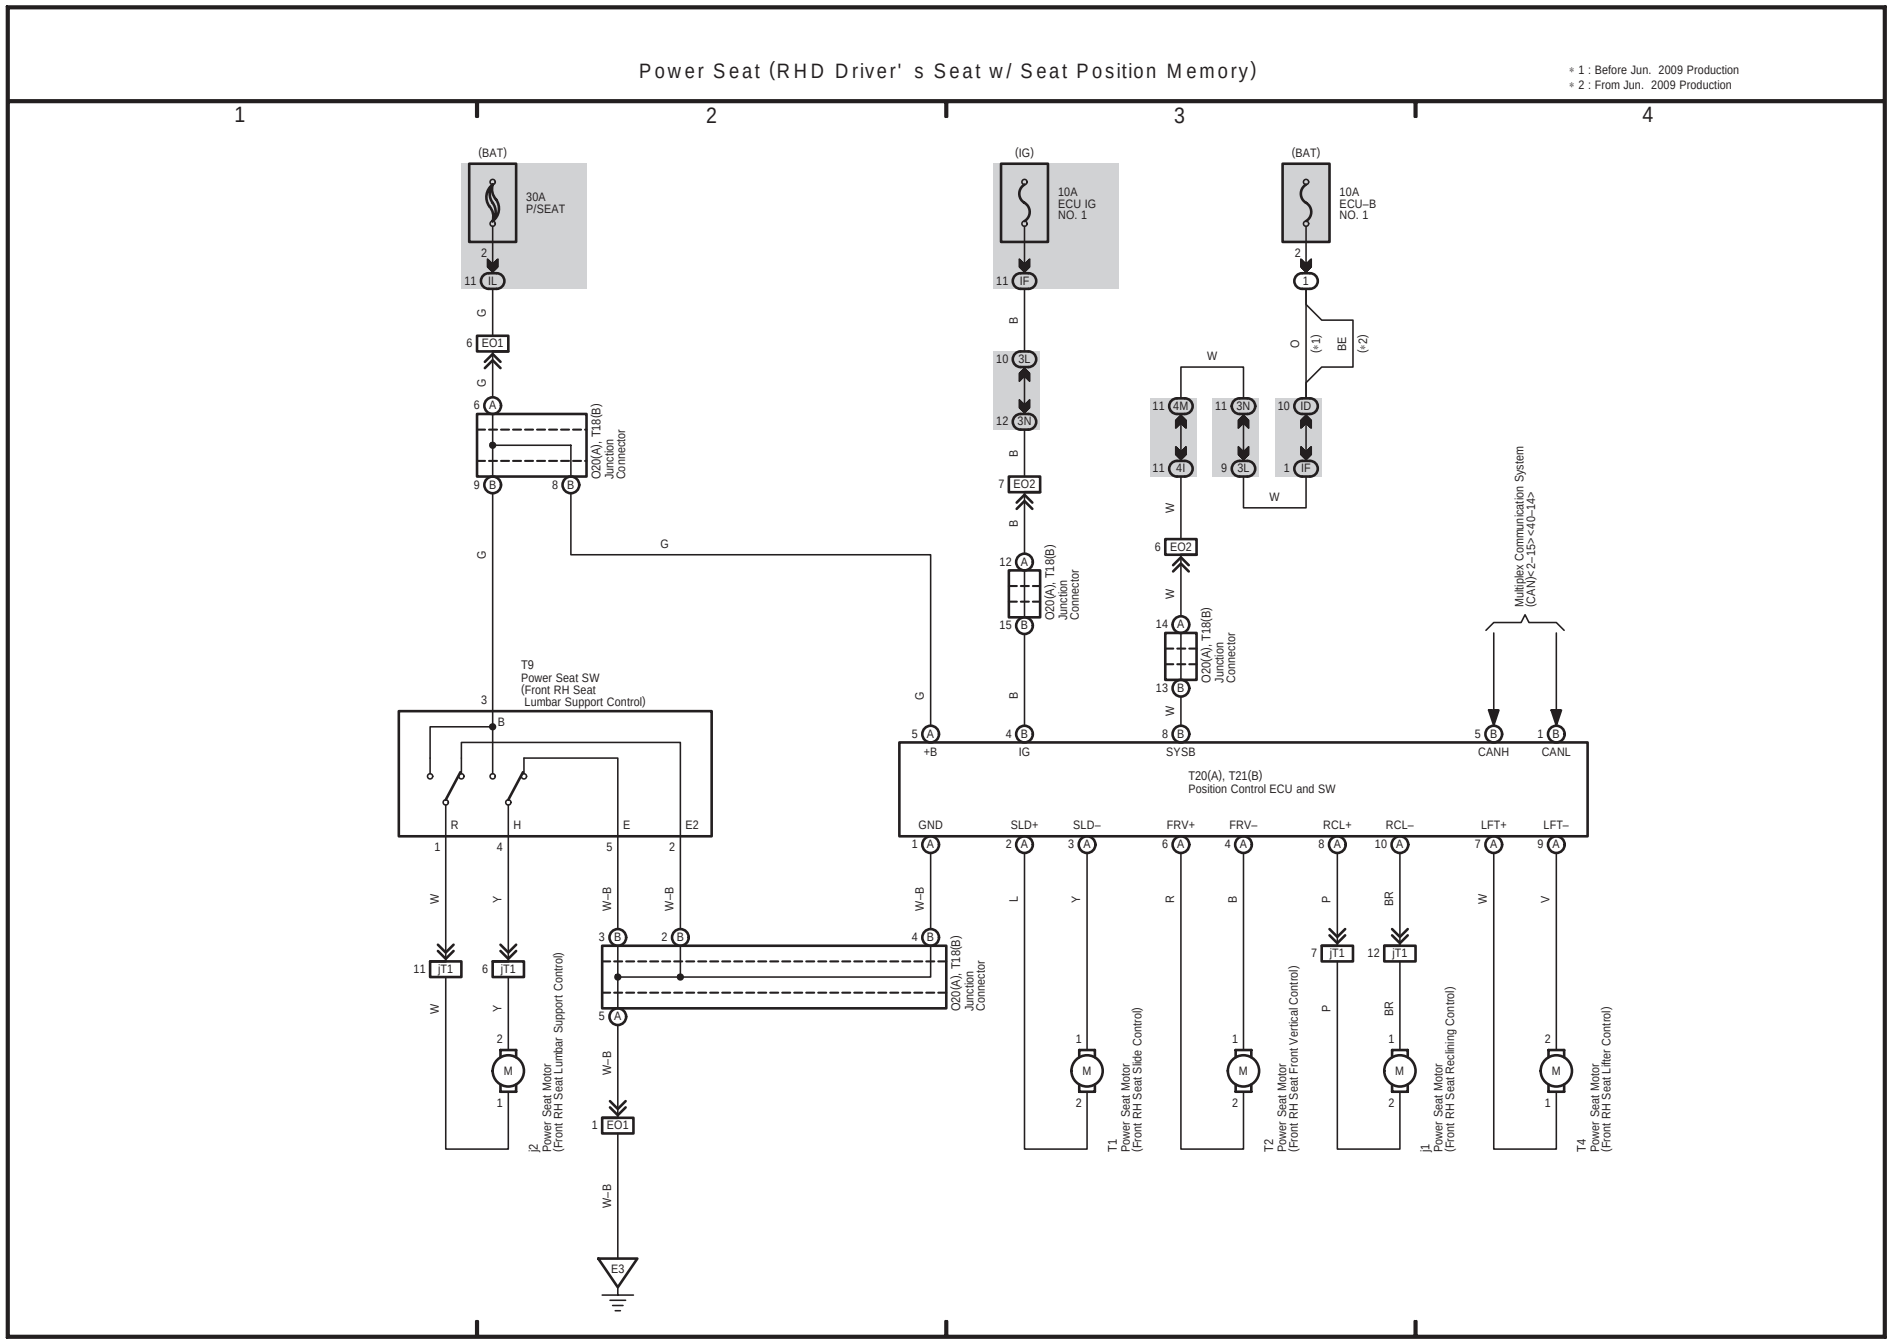

Power Seat (RHD Driver' s Seat w/ Seat Position Memory)
* 1 : Before Jun. 2009 Production
* 2 : From Jun. 2009 Production
1
2
3
4
(BAT)
30A P/SEAT
(IG)
10A ECU IG NO. 1
(BAT)
10A ECU–B NO. 1
O20(A), T18(B) Junction Connector
T9 Power Seat SW (Front RH Seat Lumbar Support Control)
R
H
E
E2
T20(A), T21(B) Position Control ECU and SW
GND
SLD+
SLD–
FRV+
FRV–
RCL+
RCL–
LFT+
LFT–
+B
IG
SYSB
CANH
CANL
Multiplex Communication System (CAN)<2–15><40–14>
(+1)
(+2)
BE
E3
J2 Power Seat Motor (Front RH Seat Lumbar Support Control)
T1 Power Seat Motor (Front RH Seat Slide Control)
T2 Power Seat Motor (Front RH Seat Front Vertical Control)
J1 Power Seat Motor (Front RH Seat Reclining Control)
T4 Power Seat Motor (Front RH Seat Lifter Control)