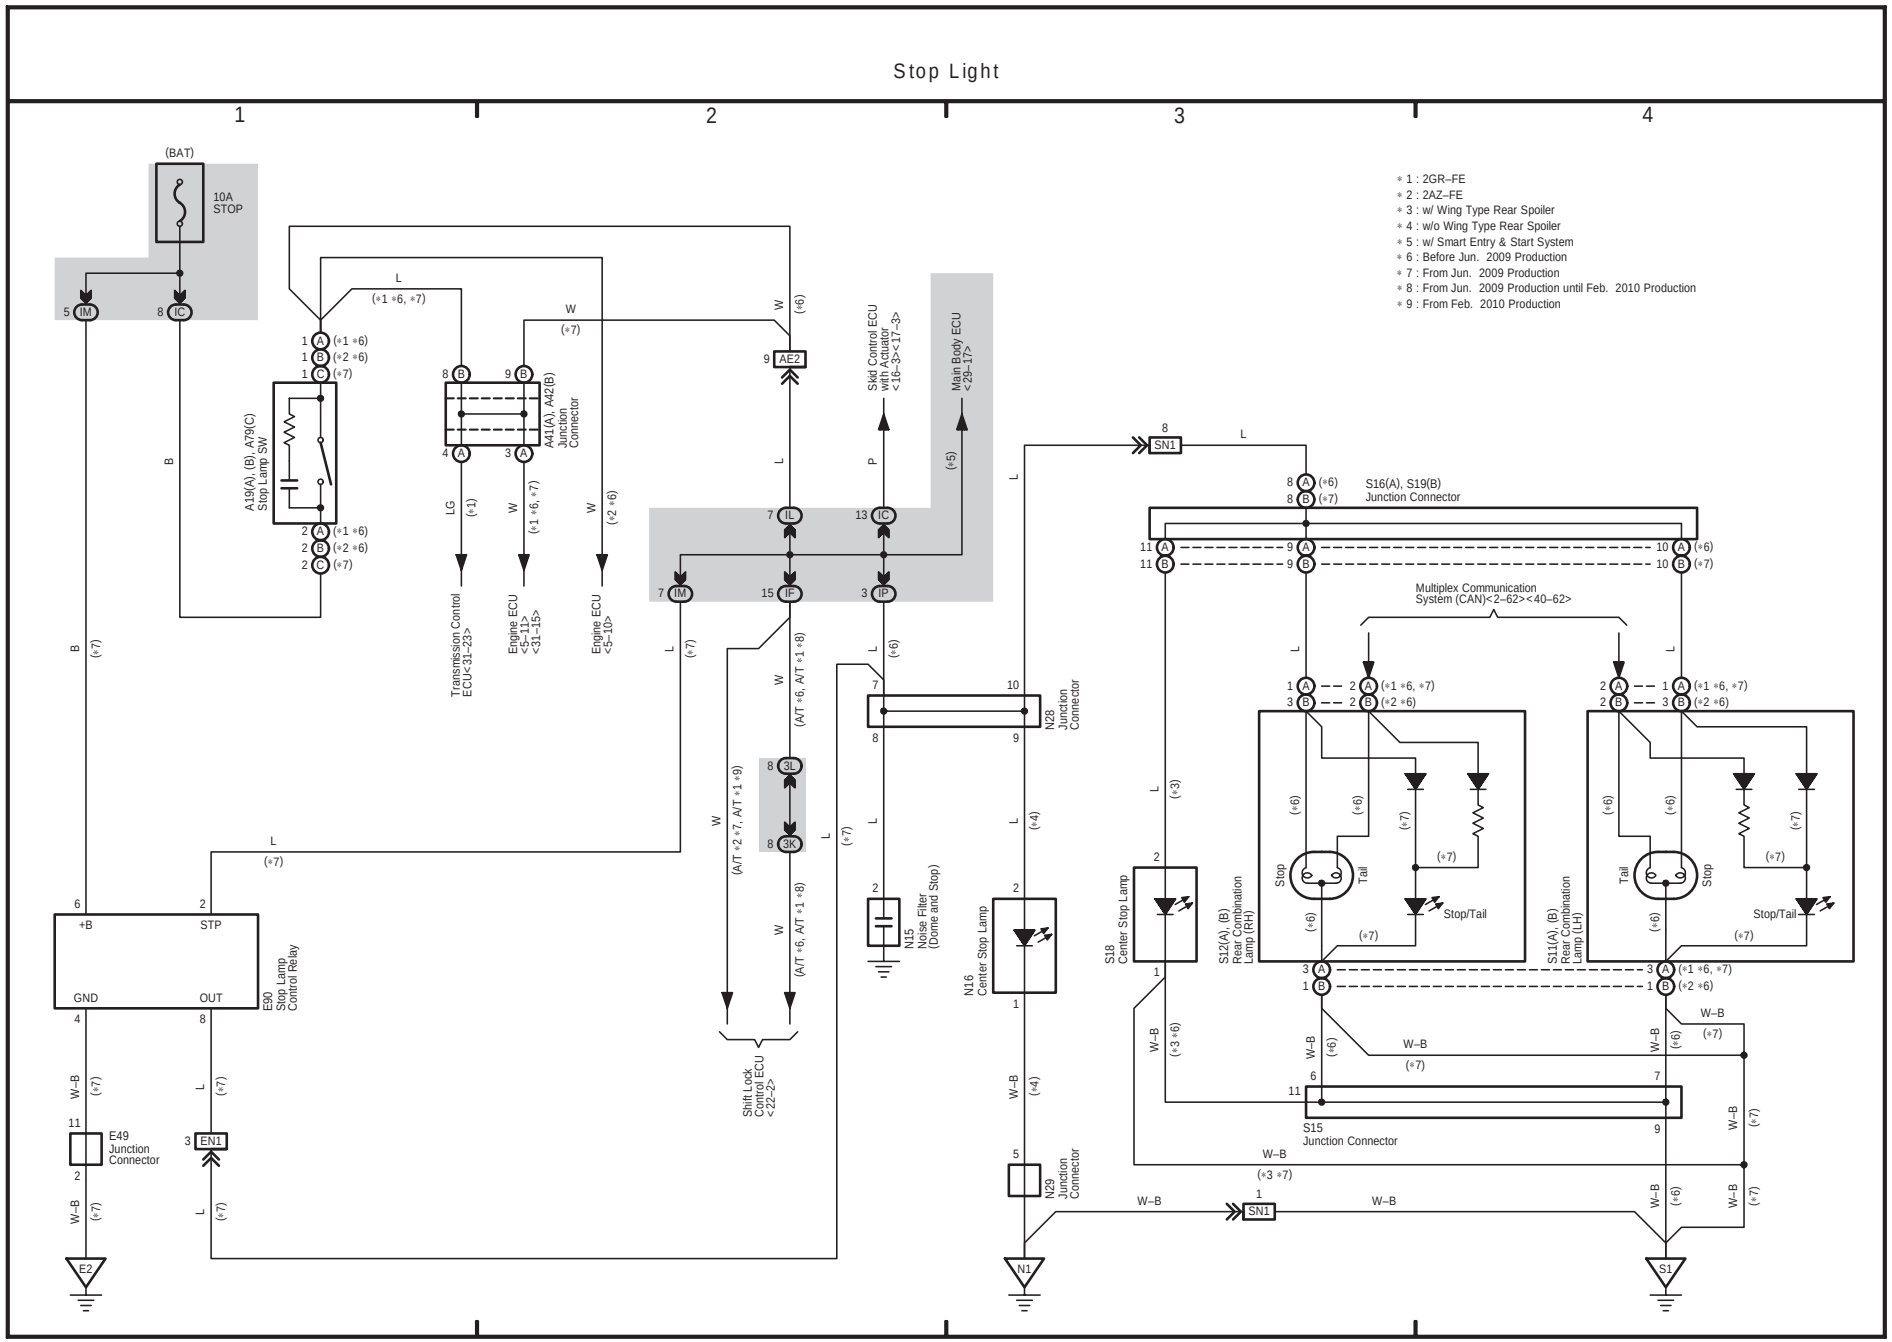

Stop Light
1
2
3
4
(BAT)
10A STOP
5 IM
8 IC
A19(A), (B), A79(C) Stop Lamp SW
A41(A), A42(B) Junction Connector
Transmission Control ECU<31–23>
Engine ECU <5–11> <31–15>
Engine ECU <5–10>
Skid Control ECU with Actuator <16–3><17–3>
Main Body ECU <29–17>
9 AE2
7 IL
13 IC
7 IM
15 IF
3 IP
N28 Junction Connector
8 3L
8 3K
N15 Noise Filter (Dome and Stop)
Shift Lock Control ECU <22–2>
N16 Center Stop Lamp
N29 Junction Connector
8 SN1
S16(A), S19(B) Junction Connector
Multiplex Communication System (CAN)<2–62><40–62>
S18 Center Stop Lamp
S12(A), (B) Rear Combination Lamp (RH)
S11(A), (B) Rear Combination Lamp (LH)
Stop
Tail
Stop/Tail
S15 Junction Connector
6 +B
2 STP
4 GND
8 OUT
E90 Stop Lamp Control Relay
11 E49 Junction Connector
3 EN1
E2
N1
S1
∗1 : 2GR–FE
∗2 : 2AZ–FE
∗3 : w/ Wing Type Rear Spoiler
∗4 : w/o Wing Type Rear Spoiler
∗5 : w/ Smart Entry & Start System
∗6 : Before Jun. 2009 Production
∗7 : From Jun. 2009 Production
∗8 : From Jun. 2009 Production until Feb. 2010 Production
∗9 : From Feb. 2010 Production