

F RELAY LOCATIONS

① : Engine Room R/B ⬭ : Engine Room J/B	Engine Compartment Left (See Page 20)

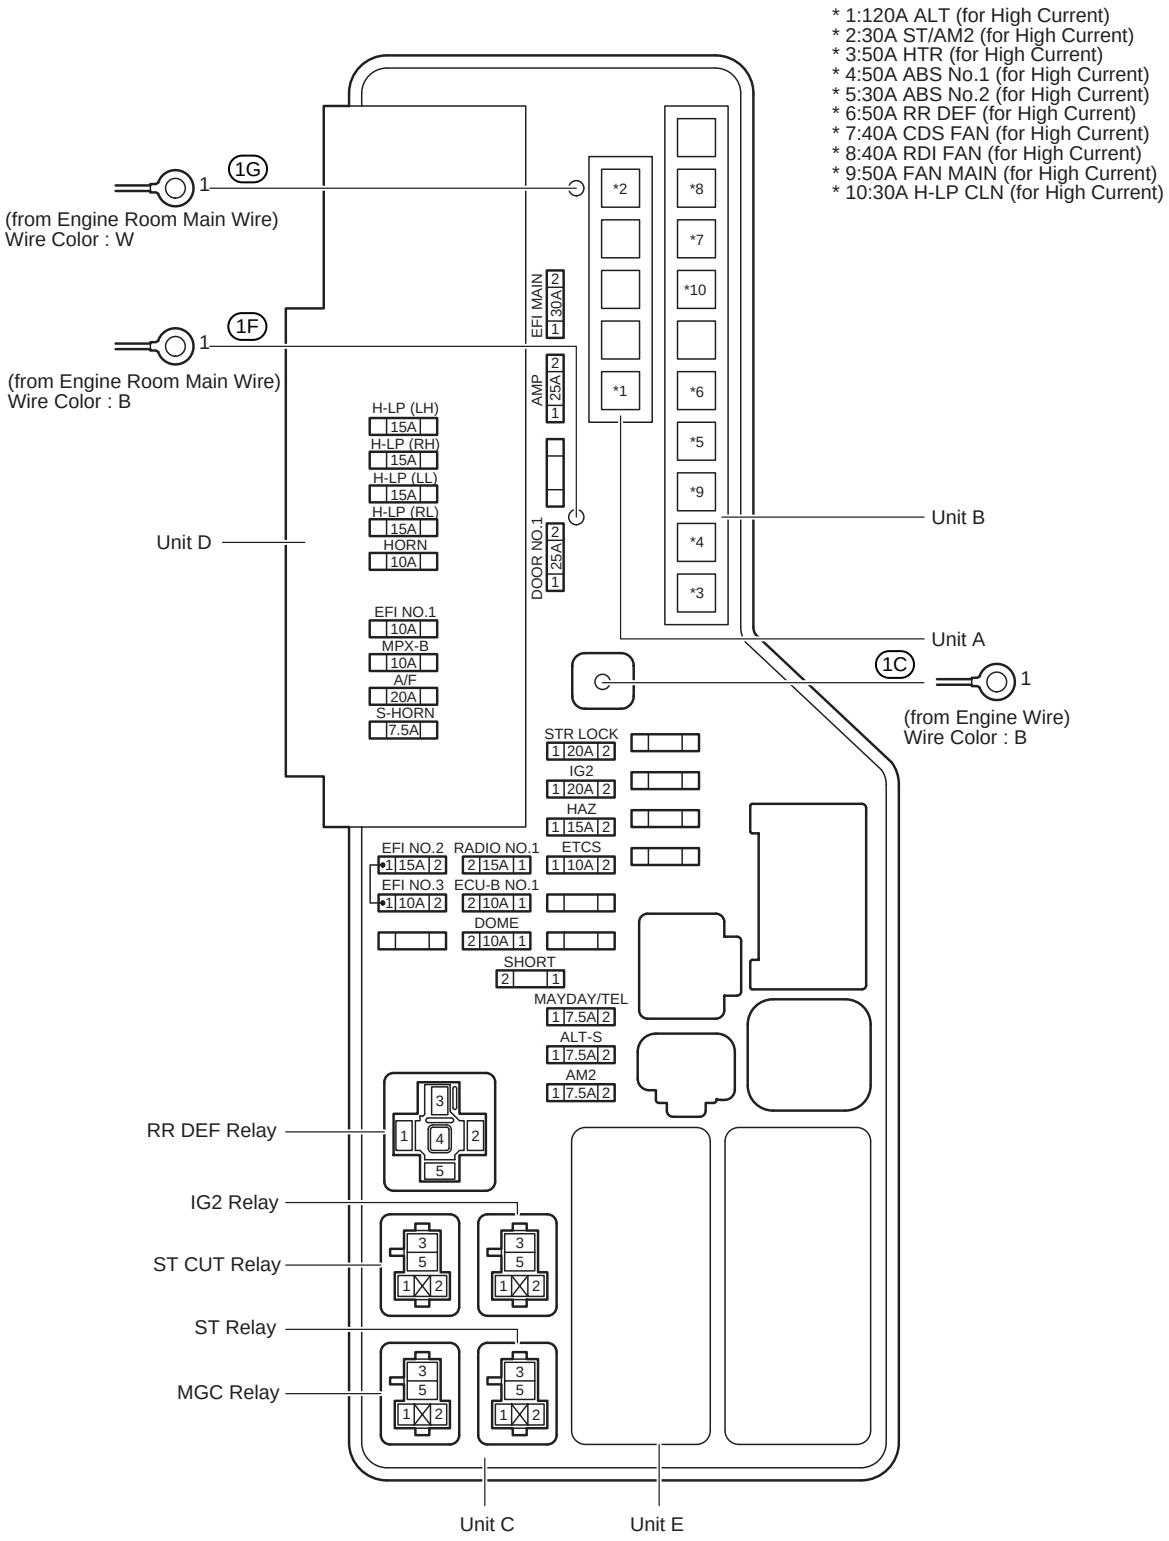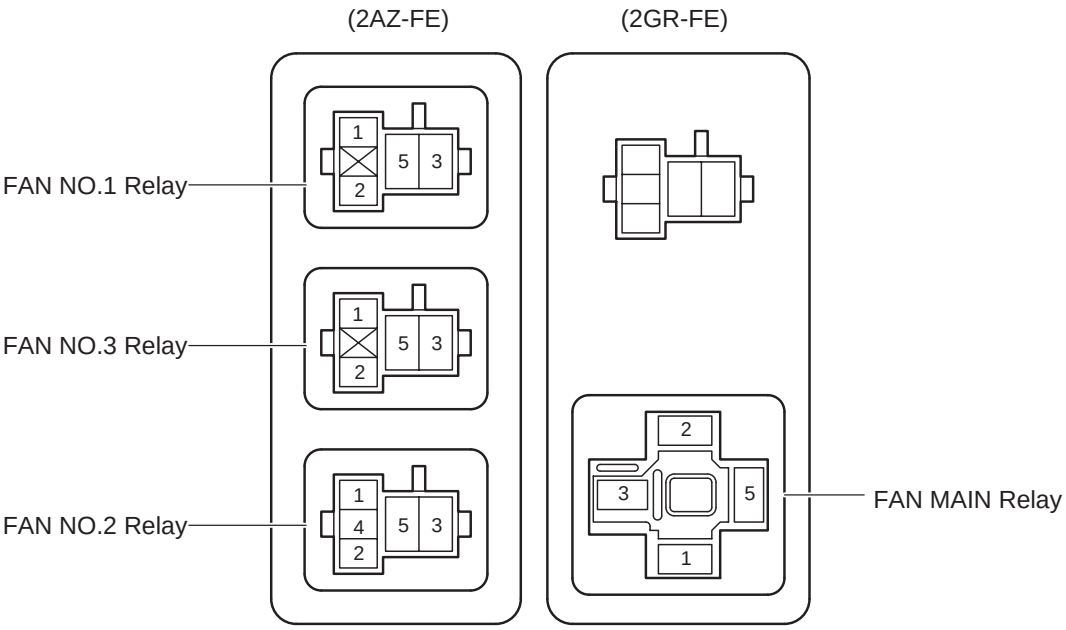


Unit E



(2AZ-FE)
(2GR-FE)
FAN NO.1 Relay
FAN NO.3 Relay
FAN NO.2 Relay
FAN MAIN Relay
1
2
3
4
5

F RELAY LOCATIONS

① : Engine Room R/B ⬭ : Engine Room J/B	Engine Compartment Left (See Page 20)

Unit D

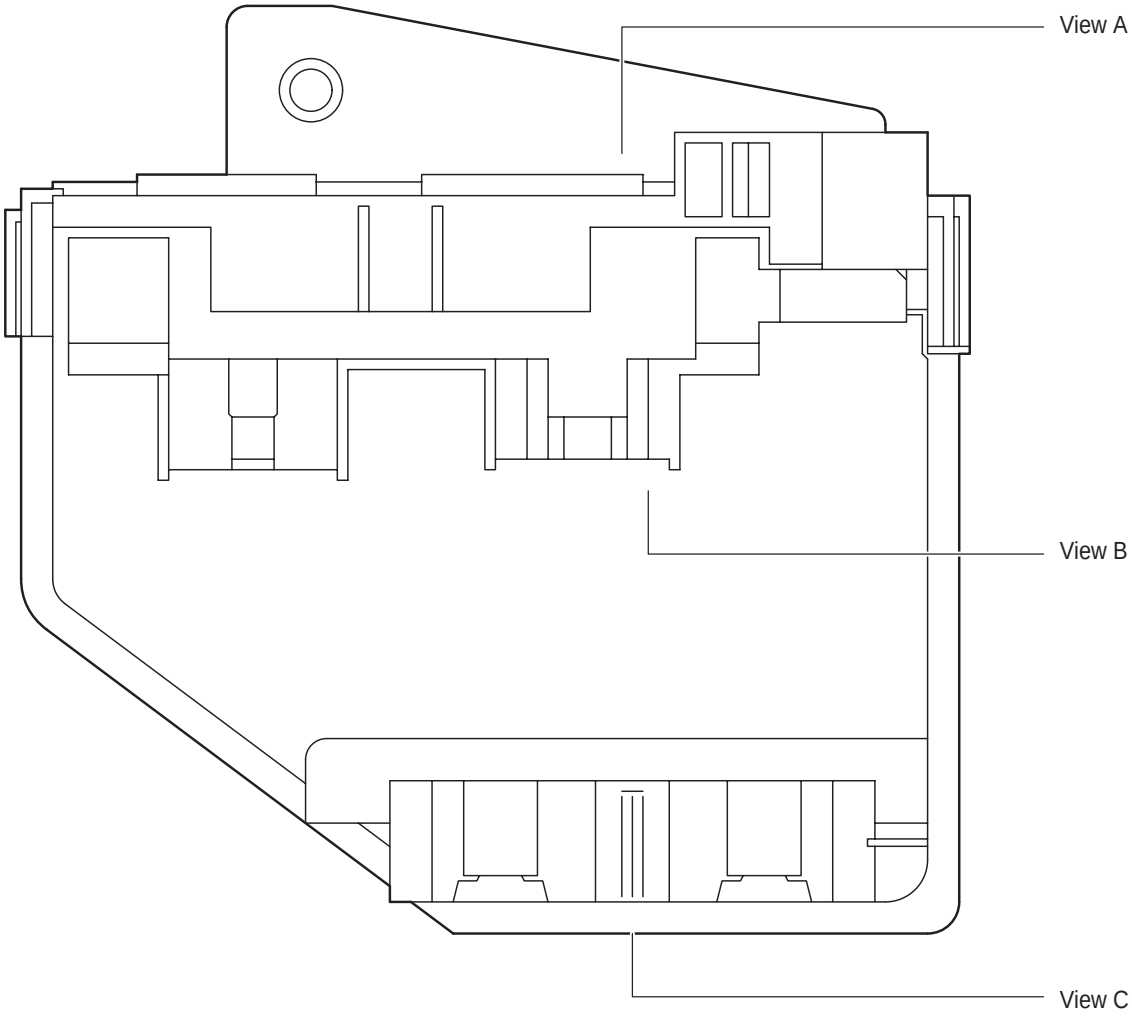

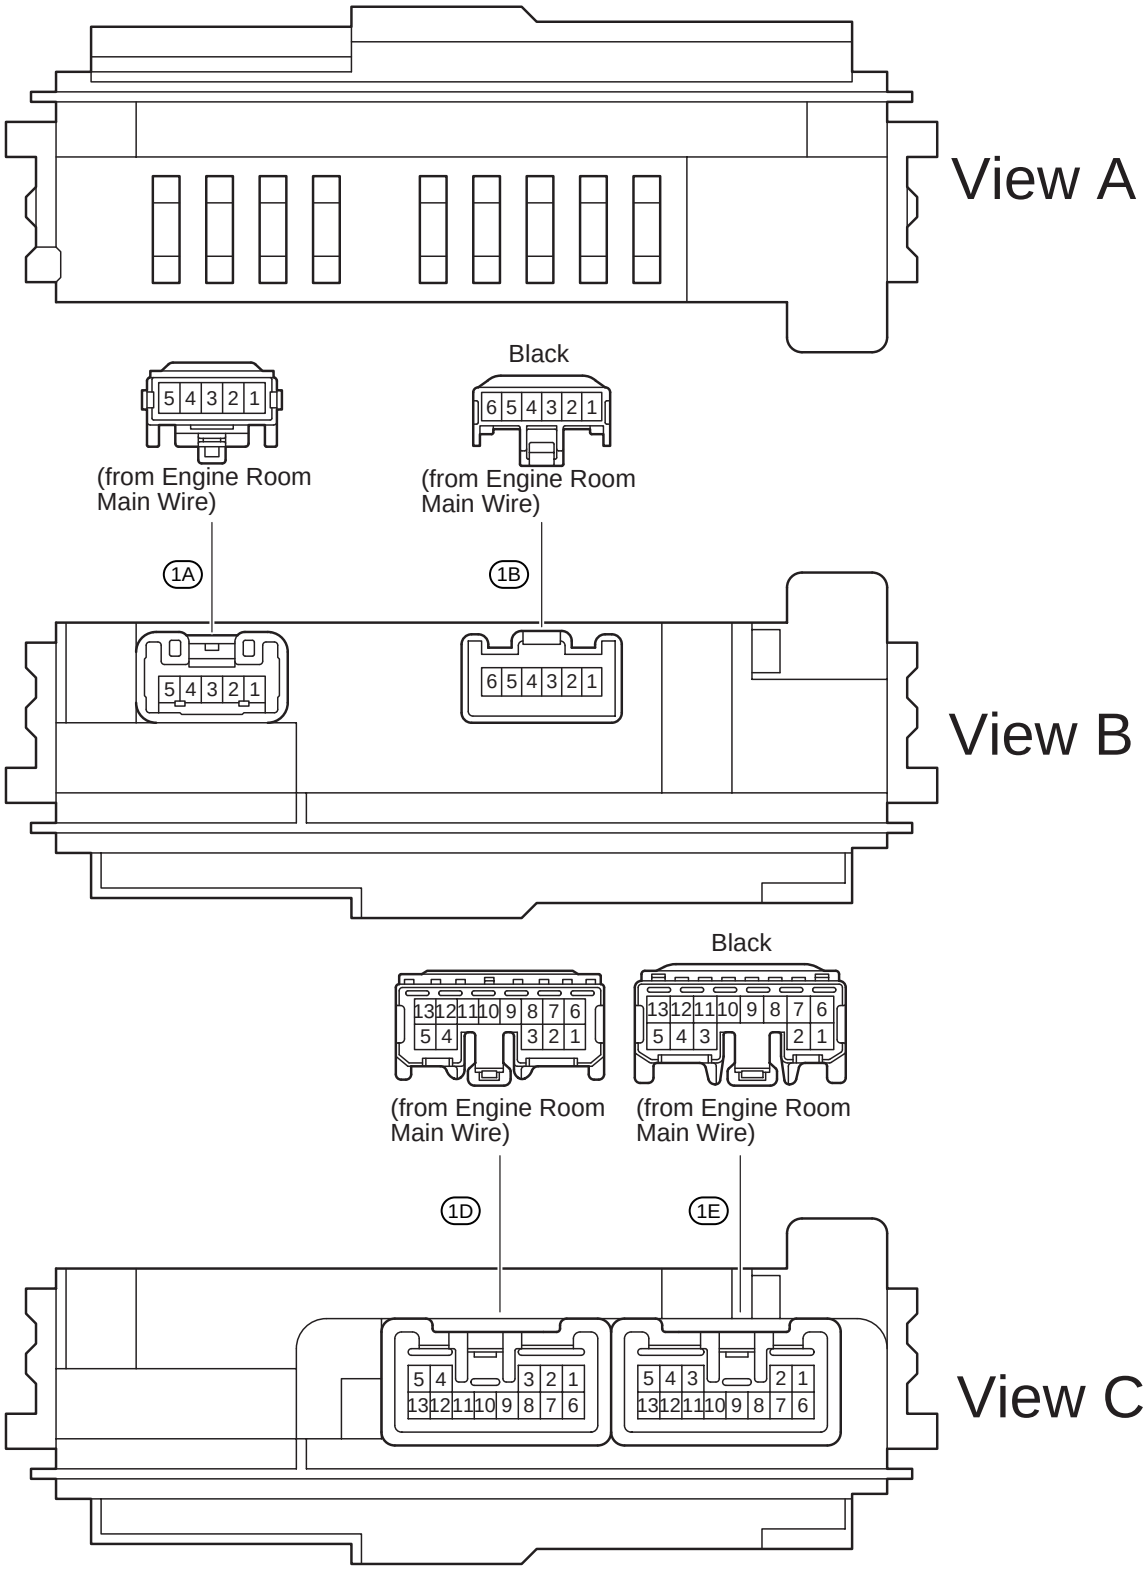
View A
Black
5 4 3 2 1
6 5 4 3 2 1
(from Engine Room Main Wire)
(from Engine Room Main Wire)
1A
1B
5 4 3 2 1
6 5 4 3 2 1
View B
Black
13 12 11 10 9 8 7 6
5 4
3 2 1
13 12 11 10 9 8 7 6
5 4 3
2 1
(from Engine Room Main Wire)
(from Engine Room Main Wire)
1D
1E
5 4
13 12 11 10 9 8 7 6
3 2 1
5 4 3
13 12 11 10 9 8 7 6
2 1
View C