


C30
C9
C13
C8
C12
C10
C14
C31
C5
C6
C2
* 1:Before Jun. 2009 Production
* 2:From Jun. 2009 Production
C7
C11
C32
C17
C20
C19
C18
C15
C24
(*1)
C16
(*2)
C59
C4
C27
C28
(M/T)
C3
C26
C25
C21
C22
C23
D1
C3
(A/T)
C1

C 1 Park/Neutral Position SW
C 2 Air Flow Meter
C 3 Starter
C 4 Water Temp. Sensor
C 5 Throttle Body Assembly
C 6 VSV (Purge)
C 7 Fuel Injector (No.1)
C 8 Fuel Injector (No.3)
C 9 Fuel Injector (No.2)
C 10 Fuel Injector (No.4)
C 11 Ignition Coil (No.1)
C 12 Ignition Coil (No.3)
C 13 Ignition Coil (No.2)
C 14 Ignition Coil (No.4)
C 15 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
C 16 Noise Filter (Ignition RH)
C 17 Power Steering Oil Pressure SW
C 18 Alternator
C 19 Alternator
C 20 Crankshaft Position Sensor
C 21 A/C Compressor
C 22 Heated Oxygen Sensor (Bank 1 Sensor 2)
C 23 Engine Oil Pressure SW
C 24 Engine ECU
C 25 ECT Solenoid
C 26 Transmission Revolution Sensor (Turbine)
C 27 Transmission Revolution Sensor (Counter Gear)
C 28 Back-Up Lamp SW
C 30 Knock Control Sensor (Bank 1)
C 31 Camshaft Position Sensor
C 32 Camshaft Timing Oil Control Valve
C 59 Noise Filter (Ignition RH)

D 1 Starter

C 1
Gray

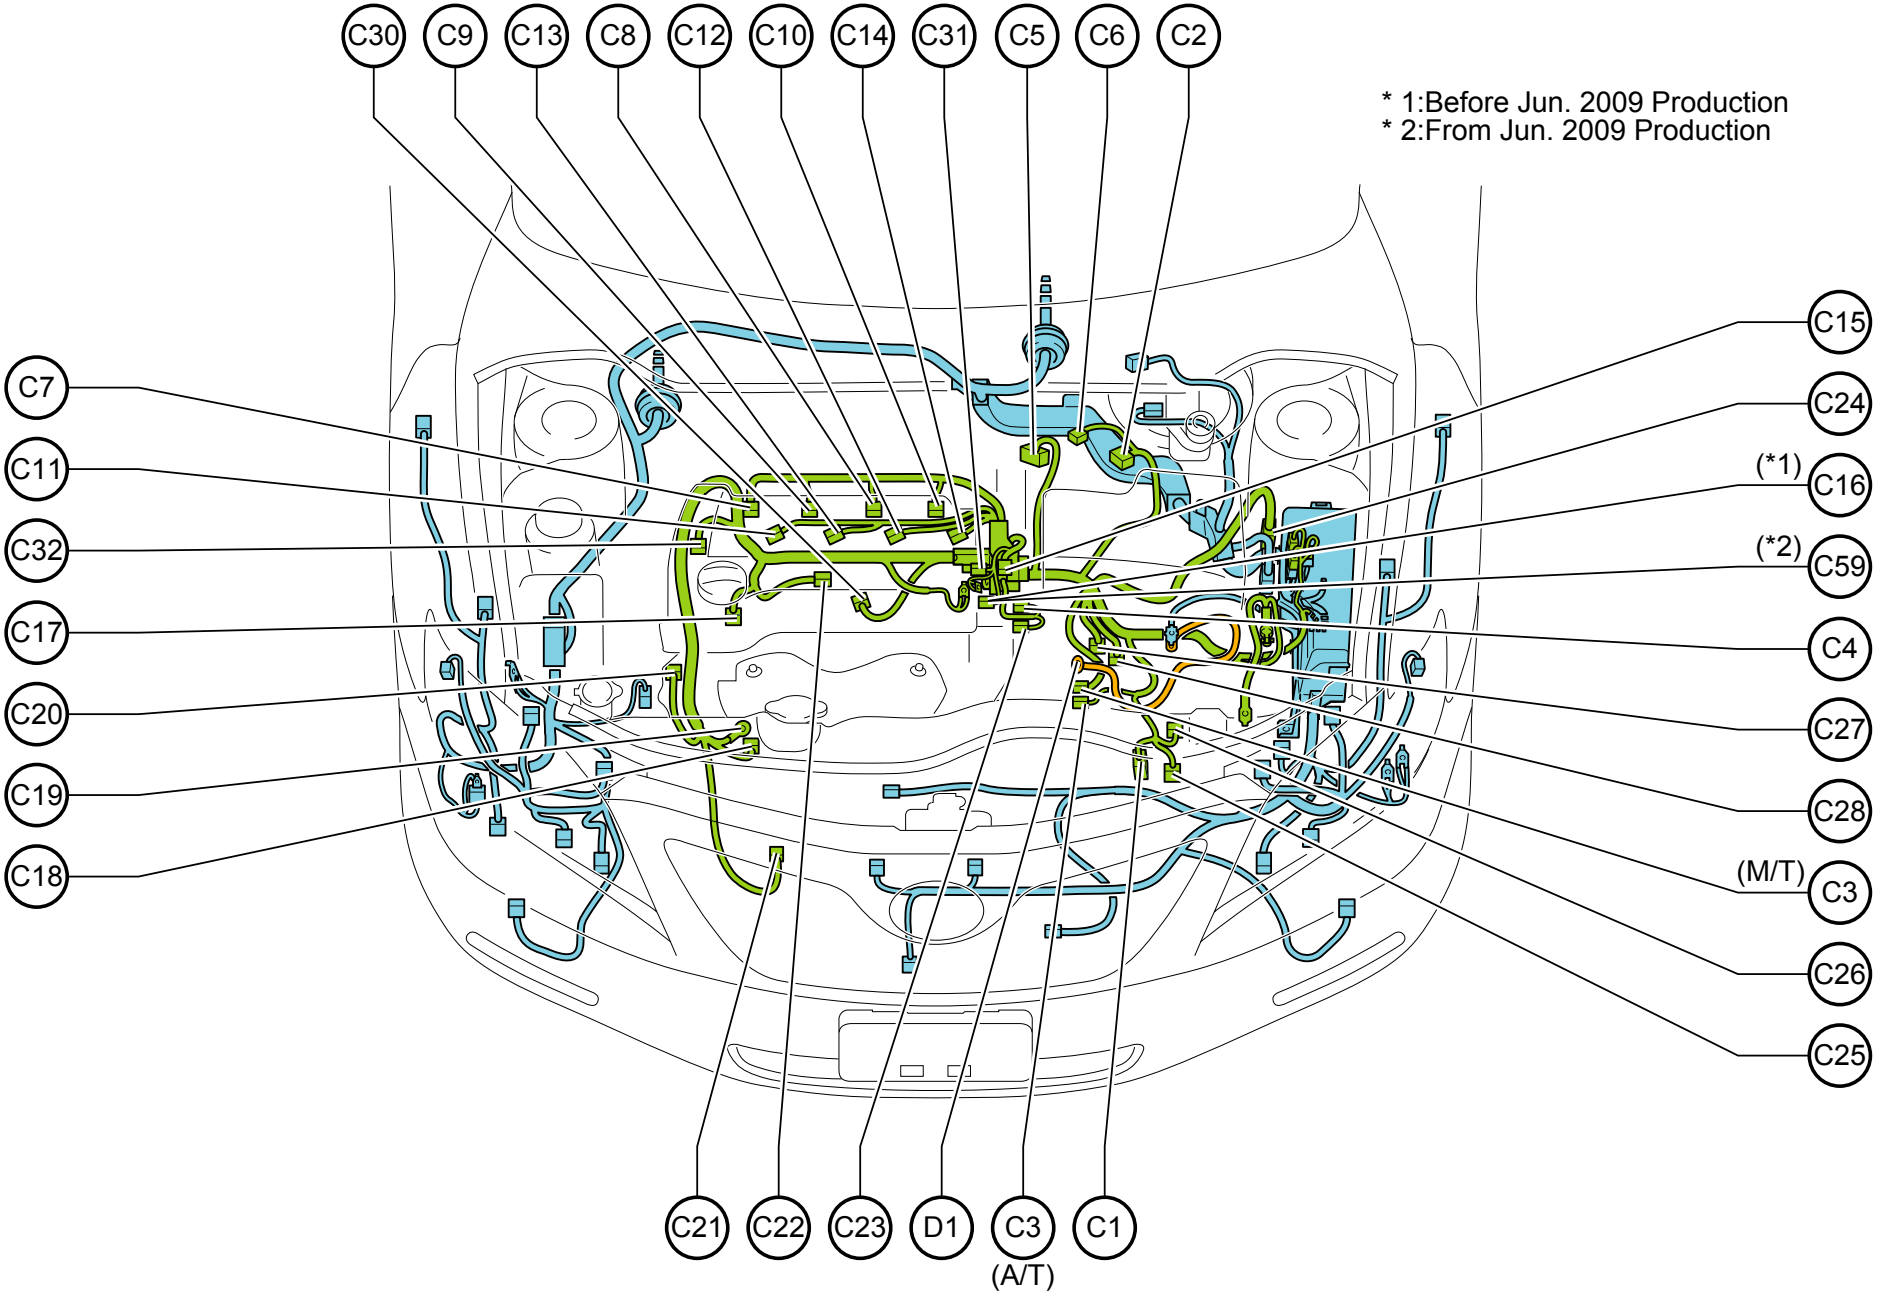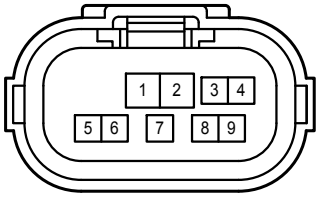

C 2
Black




C 3
Black




C 4
Black




C 5
Black

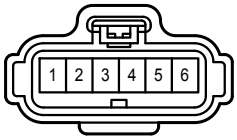


C 6
Black

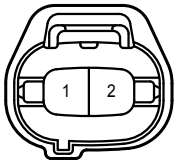


C 7
Gray




C 8
Gray




C 9
Gray

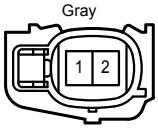


C 10
Gray

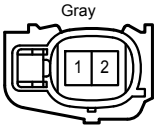


C 11
Black




C 12
Black



C 13
Black



C 14
Black



C 15
Dark Gray



C 16
Gray




C 17
Black



C 18
Black



C 19




(2AZ-FE)

C 20
Black



C 21
Gray

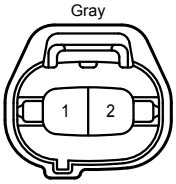


C 22
White




C 23
Gray




C 24
Black

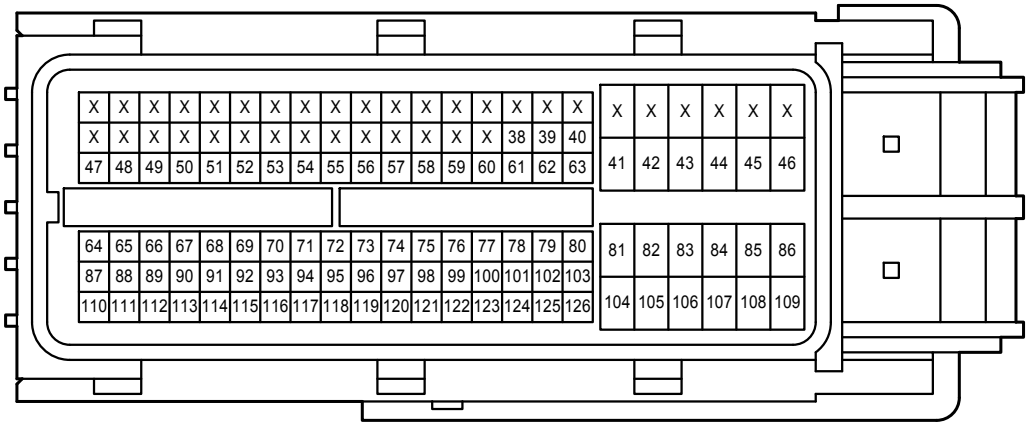


C 25
Gray

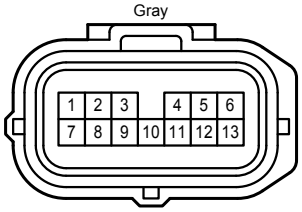


C 26
Black

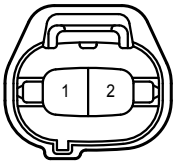


C 27
Black

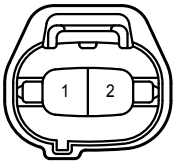

C 28
Gray

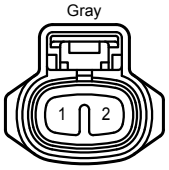

C 30
Gray

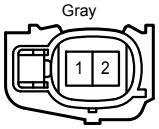


C 31
Black



C 32
Black



C 59
Gray

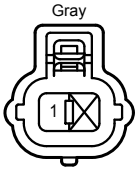

D 1

