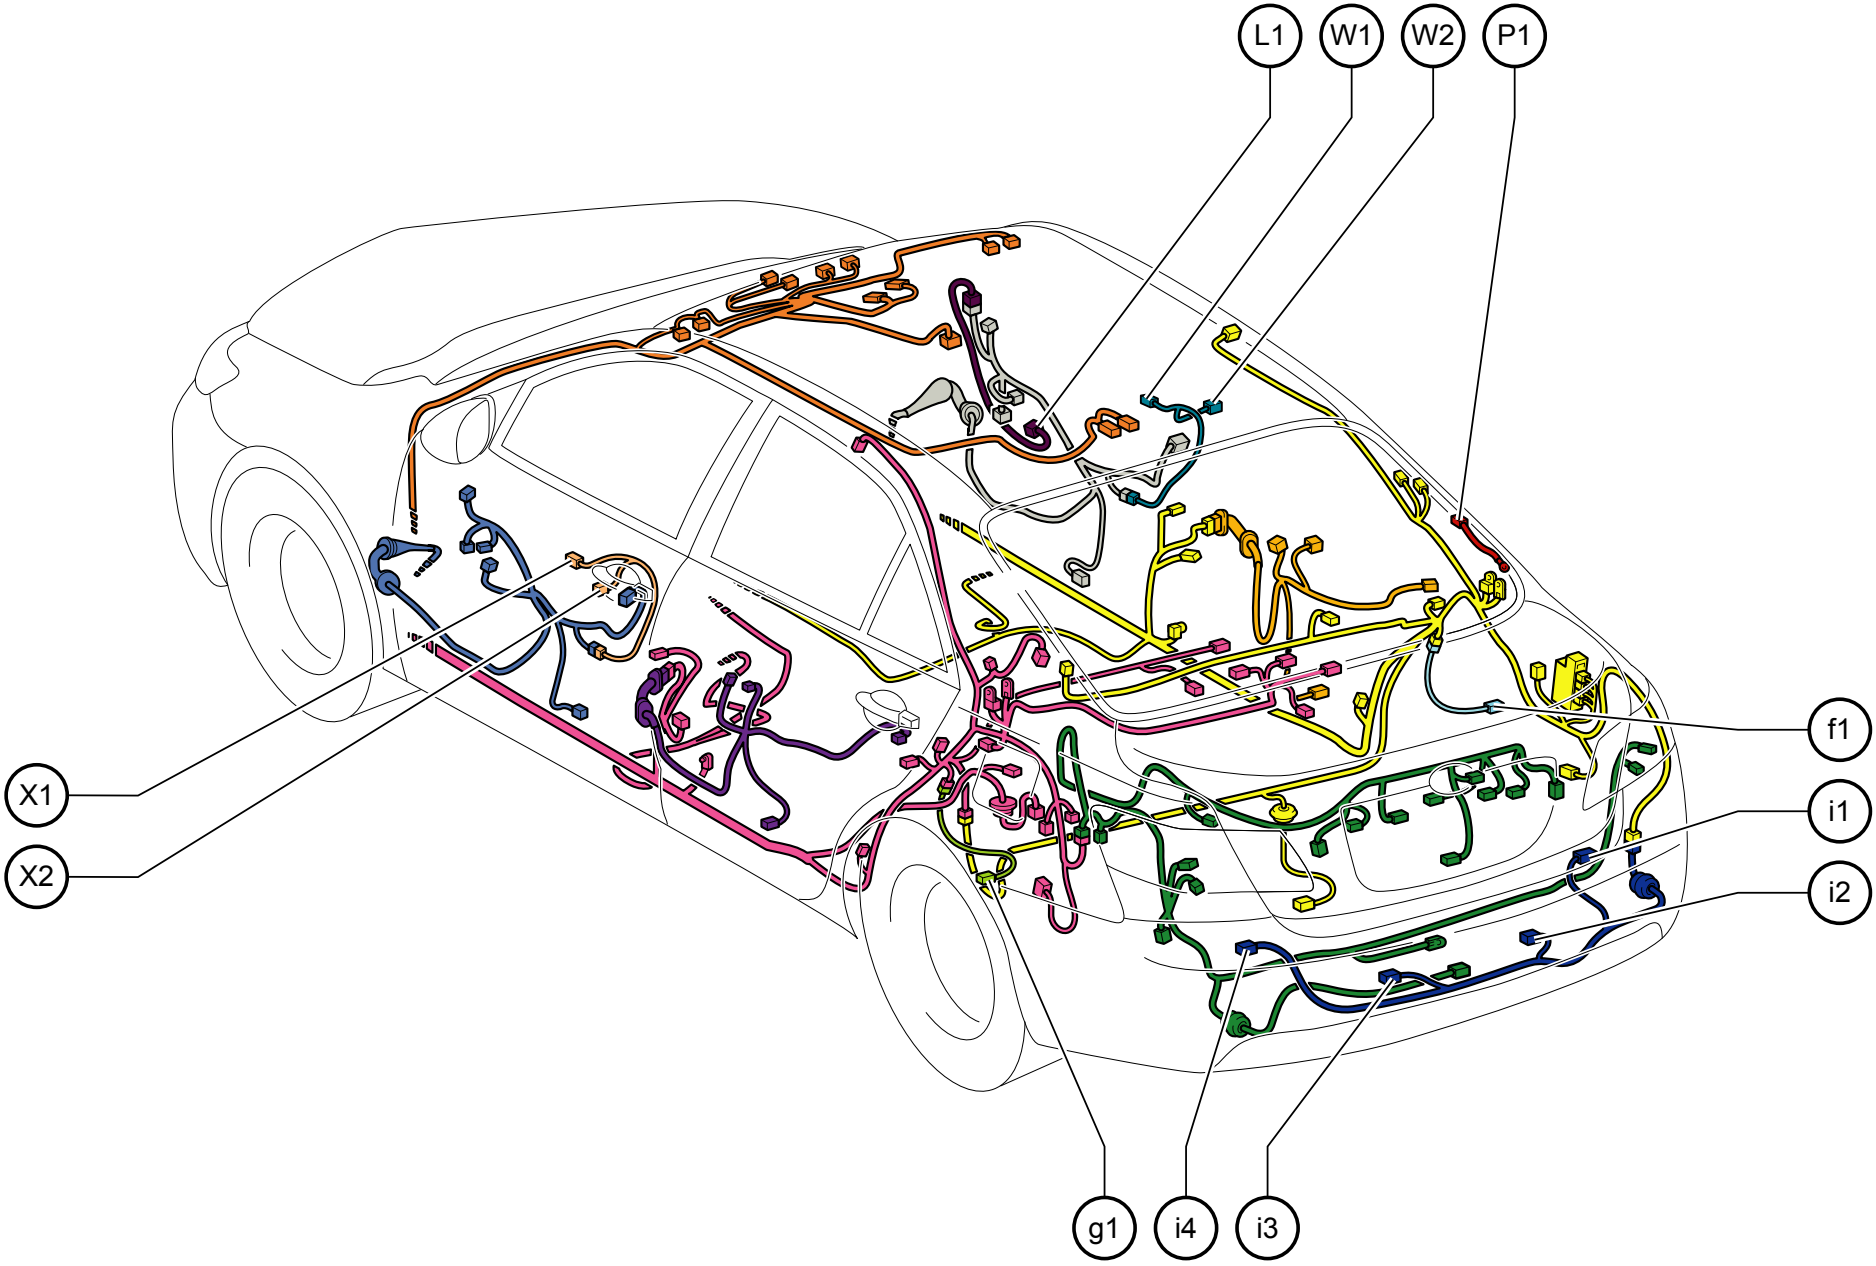

L1
W1
W2
P1
X1
X2
f1
i1
i2
g1
i4
i3

L 1 Power Window Master SW

P 1 Rear Window Defogger

W 1 Door Outside Handle (Front RH)
W 2 Electrical Key Oscillator (Front Door RH)


X 1 Door Outside Handle (Front LH)
X 2 Electrical Key Oscillator (Front Door LH)

f 1 Speed Sensor (Rear RH)

g 1 Speed Sensor (Rear LH)

i 1 Ultrasonic Sensor (Rear Corner RH)
i 2 Ultrasonic Sensor (Rear Center RH)
i 3 Ultrasonic Sensor (Rear Center LH)
i 4 Ultrasonic Sensor (Rear Corner LH)


L 1
White

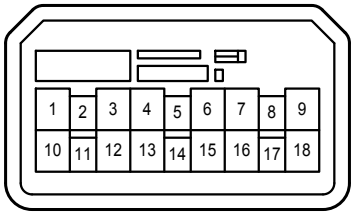


P 1
Black




W 1
White

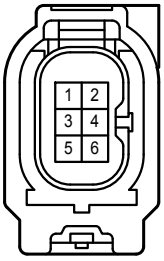

W 2
Black

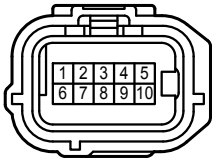

X 1
White

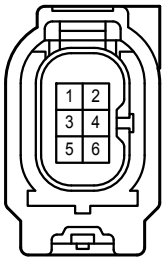

X 2
Black




f 1
Black




g 1
Black




i 1
Black

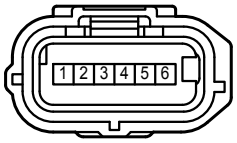

i 2
Black

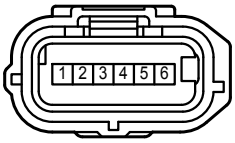

i 3
Black

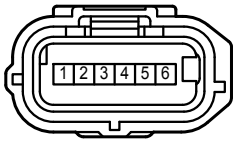

i 4
Black

