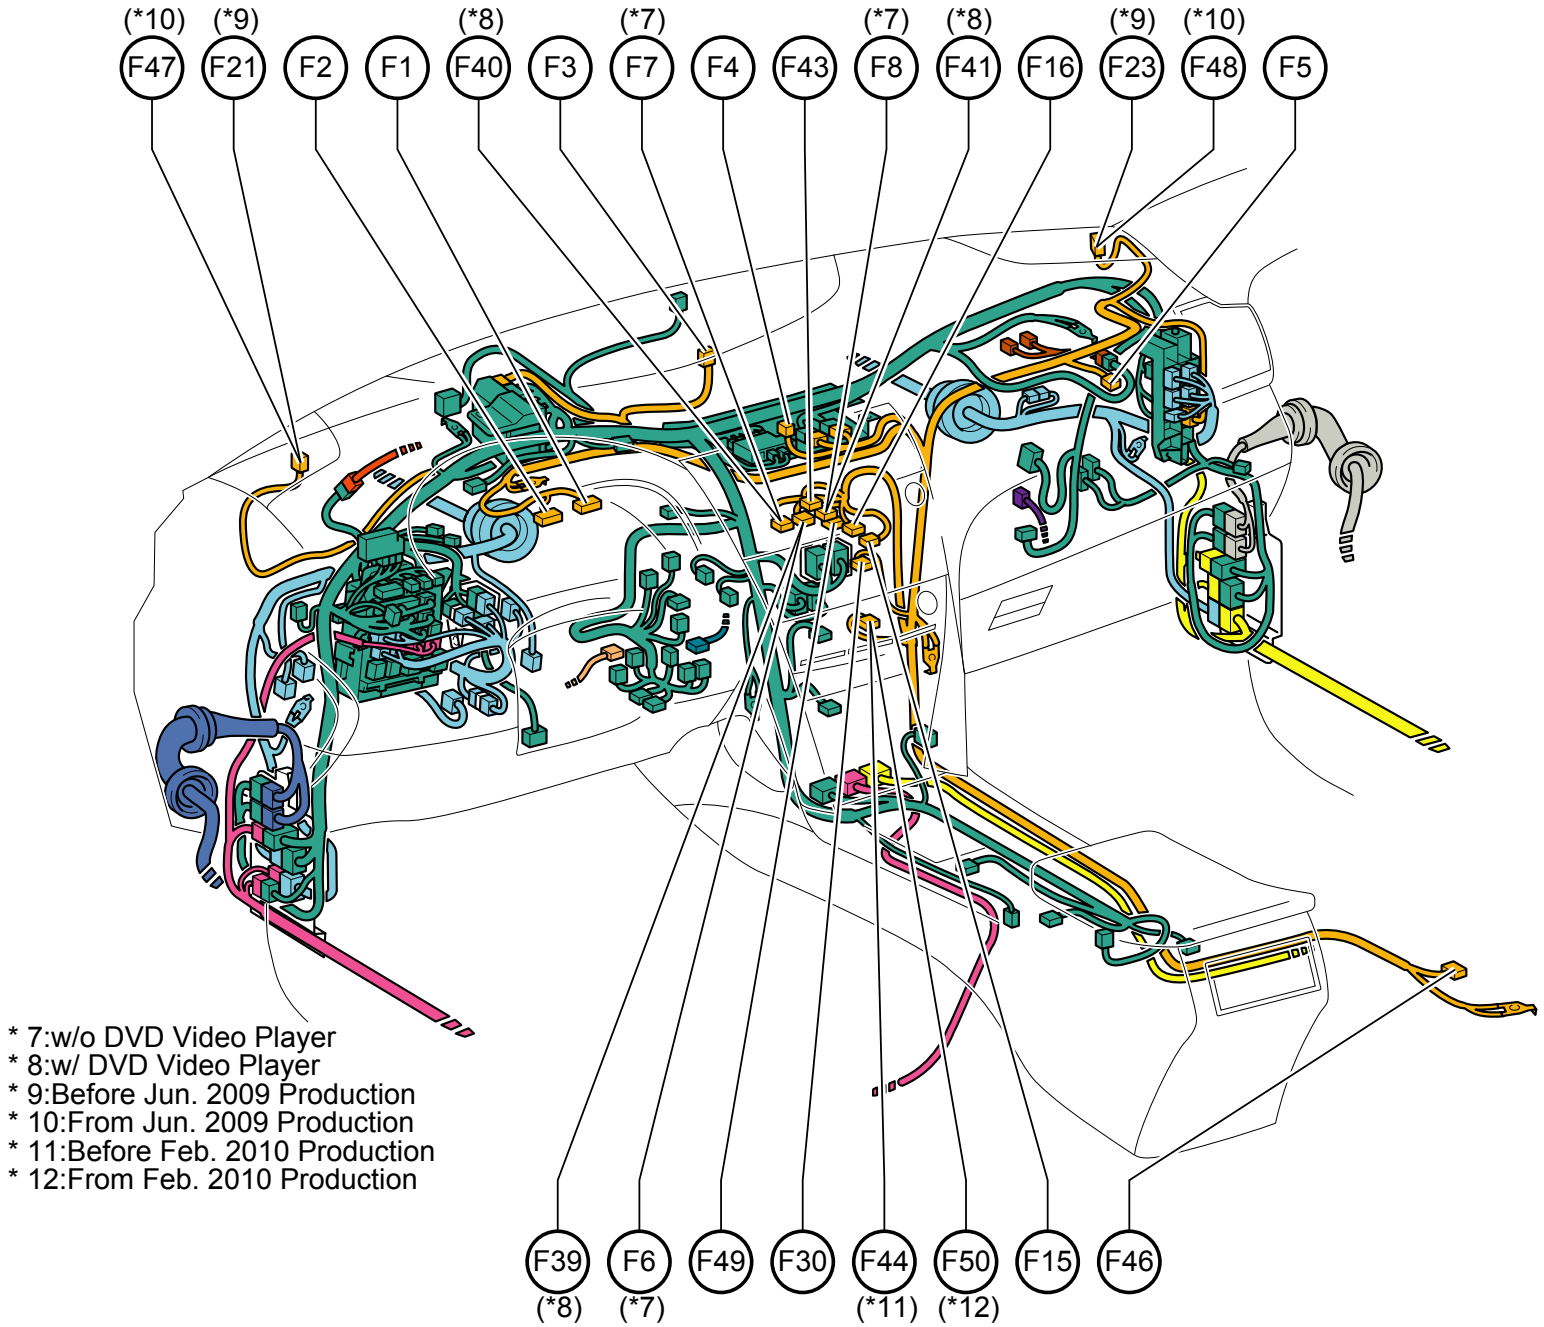
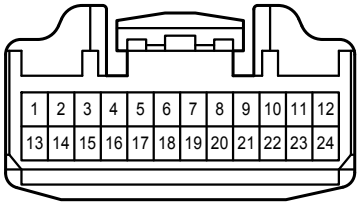


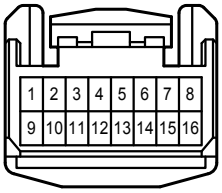

* 7:w/o DVD Video Player
* 8:w/ DVD Video Player
* 9:Before Jun. 2009 Production
* 10:From Jun. 2009 Production
* 11:Before Feb. 2010 Production
* 12:From Feb. 2010 Production

F 1 Combination Meter
F 2 Combination Meter
F 3 Clock
F 3 Clock
F 4 Hazard Warning Signal SW
F 5 Glove Box Lamp
F 6 Radio Receiver Assembly
F 7 Radio Receiver Assembly
F 8 Radio Receiver Assembly
F 15 Antenna Amplifier
F 16 A/C Control Assembly
F 16 A/C Control Assembly
F 21 Tweeter (Front LH)
F 23 Tweeter (Front RH)
F 30 Clearance Warning Buzzer
F 39 Option Connector (Radio Receiver Assembly)
F 40 Option Connector (Radio Receiver Assembly)
F 41 Option Connector (Radio Receiver Assembly)
F 43 Radio Receiver Assembly
F 44 Stereo Jack Adapter
F 46 Stereo Component Amplifier
F 47 Tweeter (Front LH)
F 48 Tweeter (Front RH)
F 49 Option Connector (Radio Receiver Assembly)
F 50 Stereo Jack Adapter

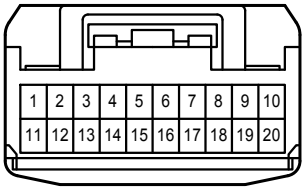
F 1
White




F 2
White

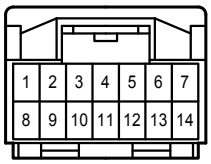



F 3
White



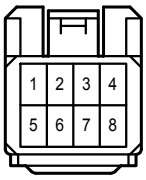

(LHD 2GR-FE, 2AZ-FE)

F 3
White




(RHD 2GR-FE)

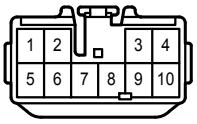
F 4
White




F 5
White



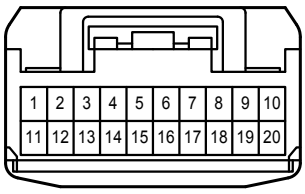

F 6
White




F 7
White



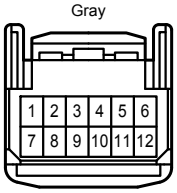

F 8
White




F 15
White

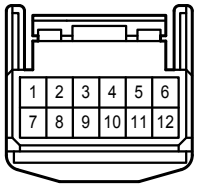



F 16
Gray





(2AZ-FE, From Feb. 2010 Production 2GR-FE)

F 16
Gray





(Before Feb. 2010 Production 2GR-FE)


F 21
White



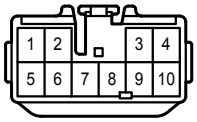

F 23
White




F 30
Black



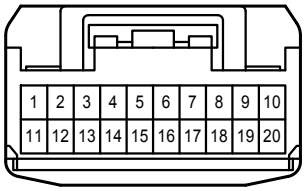

F 39
White



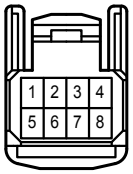

F 40
White



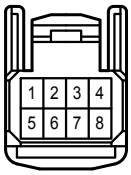

F 41
White





F 43
White





F 44
White





F 46
White



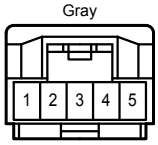

F 47
White




F 48
White




F 49
Gray



F 50
Black

