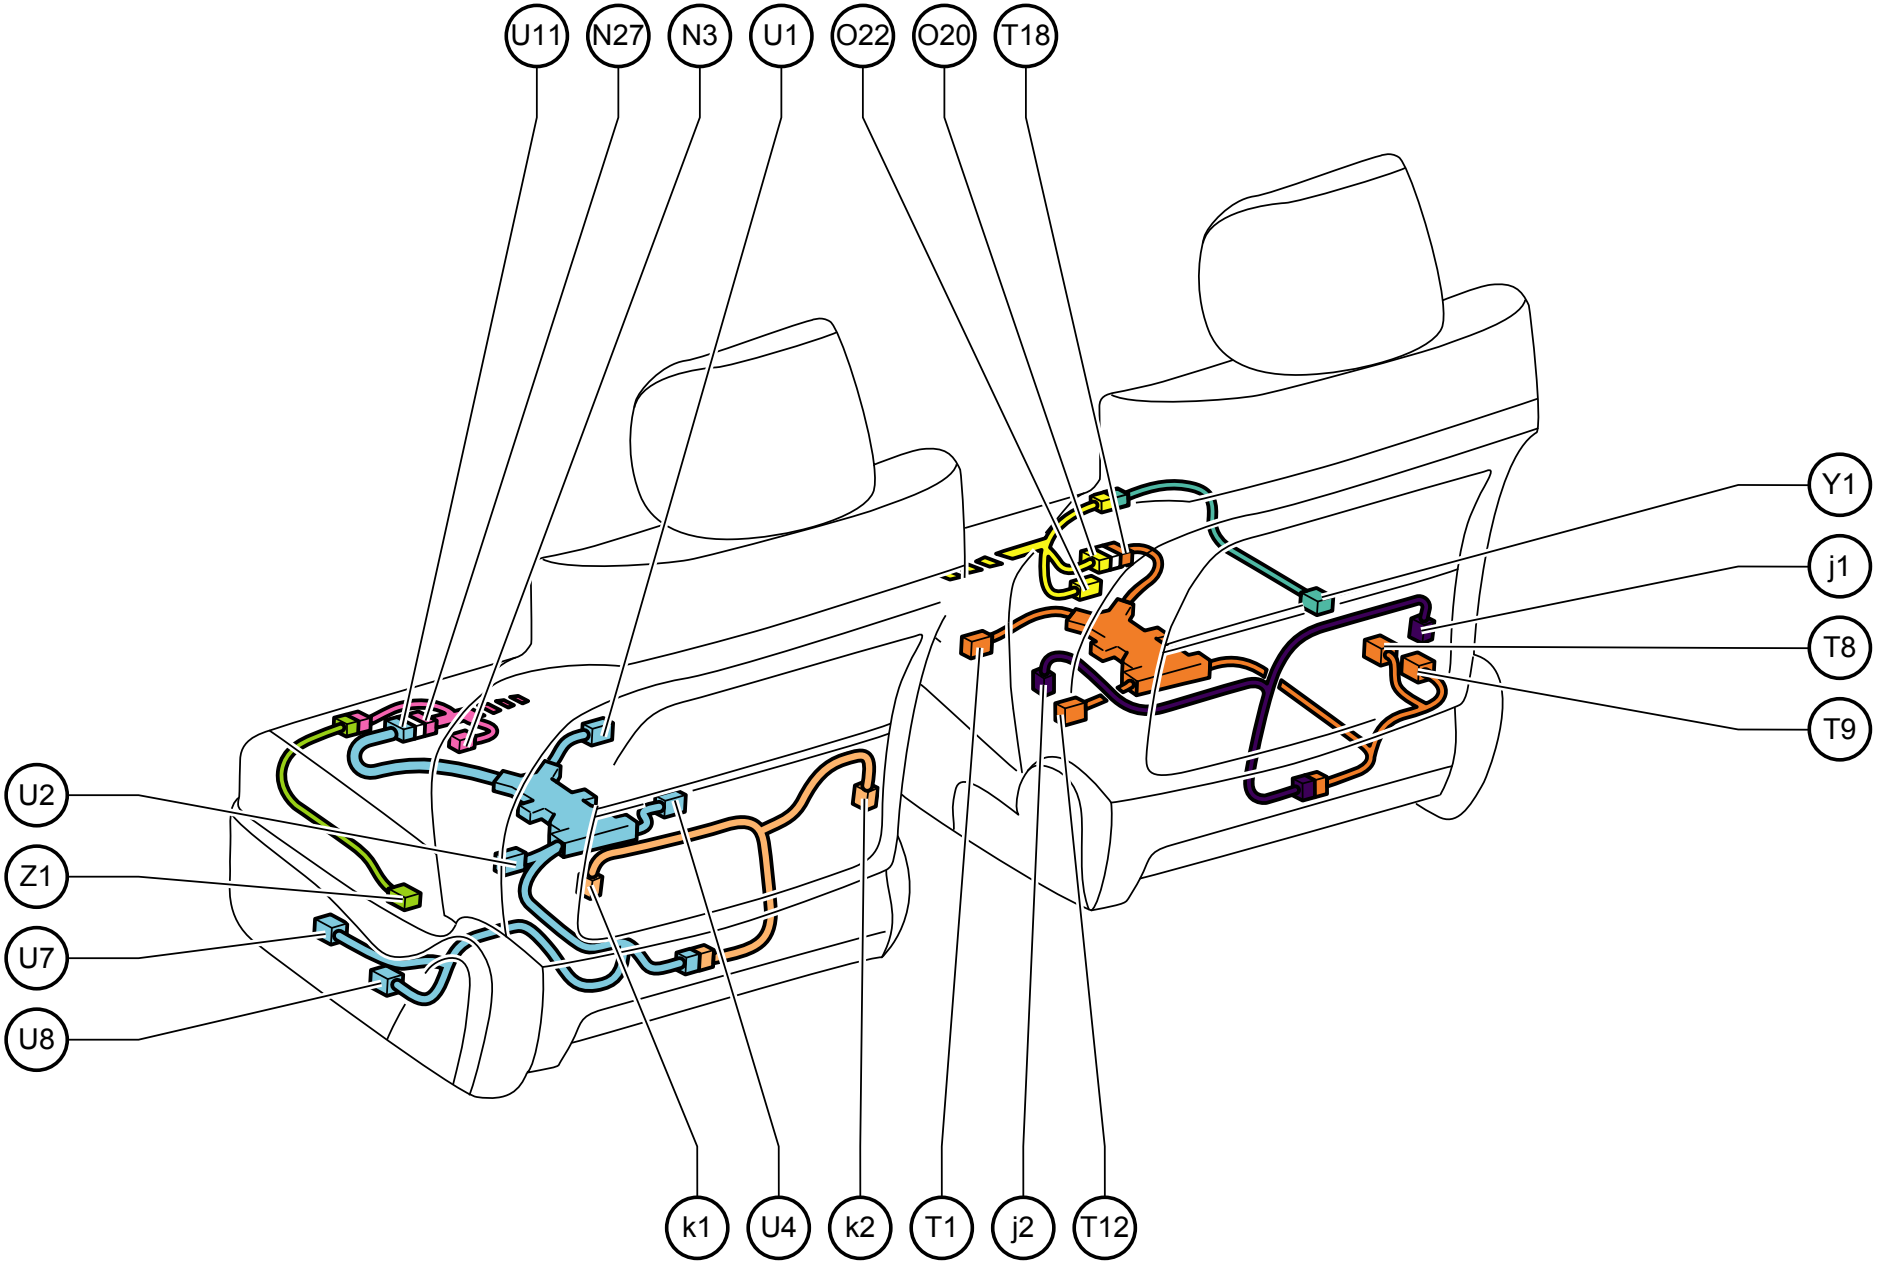

U11
N27
N3
U1
O22
O20
T18
Y1
j1
T8
T9
U2
Z1
U7
U8
k1
U4
k2
T1
j2
T12

N 3 Front Seat Inner Belt (Front LH)
N 27 Junction Connector

O 20 Junction Connector
O 22 Front Seat Inner Belt (Front RH)

T 1 Power Seat Motor (Front RH Seat Slide Control)
T 8 Power Seat SW (Front RH Seat)
T 9 Power Seat SW (Front RH Seat Lumbar Support Control)
T 12 Front Seat Inner Belt (Front RH)
T 18 Junction Connector

U 1 Power Seat Motor (Front LH Seat Slide Control)
U 2 Power Seat Motor (Front LH Seat Front Vertical Control)
U 4 Power Seat Motor (Front LH Seat Lifter Control)
U 7 Power Seat SW (Front LH Seat)
U 8 Power Seat SW (Front LH Seat Lumbar Support Control)
U 11 Junction Connector

Y 1 Side Airbag Squib (RH)

Z 1 Side Airbag Squib (LH)


j 1 Power Seat Motor (Front RH Seat Reclining Control)
j 2 Power Seat Motor (Front RH Seat Lumbar Support Control)

k 1 Power Seat Motor (Front LH Seat Reclining Control)
k 2 Power Seat Motor (Front LH Seat Lumbar Support Control)


N 3
White




N 27
White

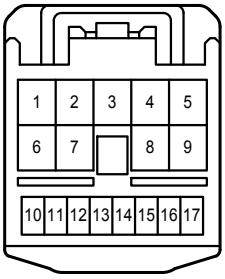


O 20
White

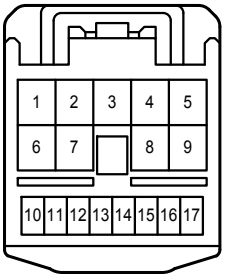


O 22
White




T 1
White




T 8
Black

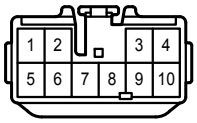


T 9
White

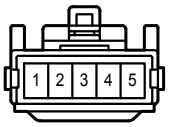


T 12
White




T 18
White

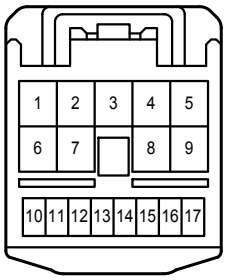


U 1
White




U 2
Orange




U 4
Blue




U 7
Black

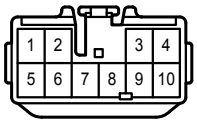


U 8
White

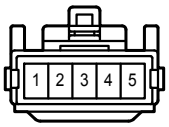


U 11
White

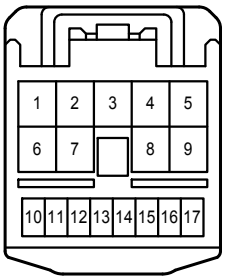


Y 1
White




Z 1
White




j 1
White



j 2
White



k 1
White



k 2
White

