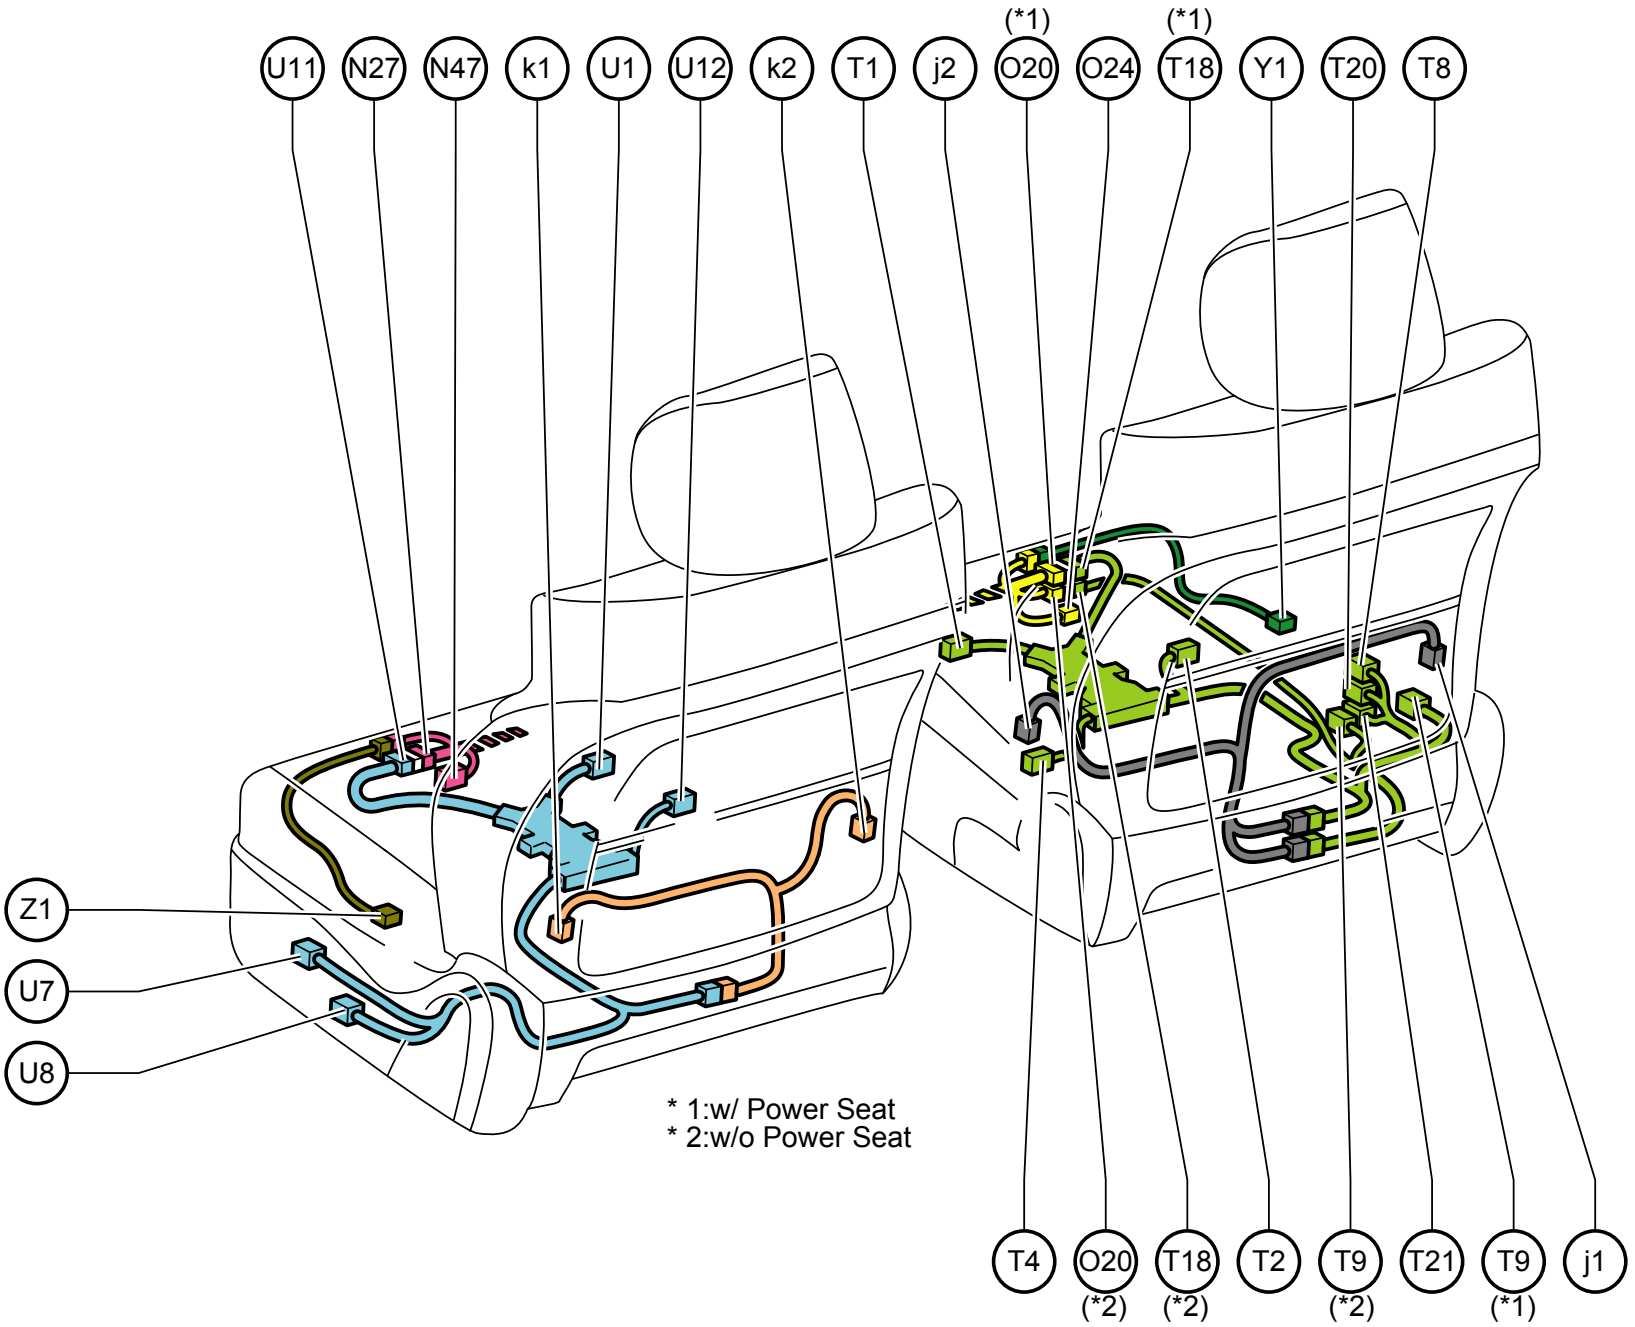

U11
N27
N47
k1
U1
U12
k2
T1
j2
(*1)
O20
O24
(*1)
T18
Y1
T20
T8
Z1
U7
U8
* 1:w/ Power Seat
* 2:w/o Power Seat
T4
O20
(*2)
T18
(*2)
T2
T9
(*2)
T21
T9
(*1)
j1

N 27 Junction Connector
N 47 Front Seat Inner Belt (Front LH)

O 20 Junction Connector
O 24 Front Seat Inner Belt (Front RH)

T 1 Power Seat Motor (Front RH Seat Slide Control)
T 2 Power Seat Motor (Front RH Seat Front Vertical Control)
T 4 Power Seat Motor (Front RH Seat Lifter Control)
T 8 Power Seat SW (Front RH Seat)
T 9 Power Seat SW (Front RH Seat Lumbar Support Control)
T 18 Junction Connector
T 20 Position Control ECU and SW
T 21 Position Control ECU and SW

U 1 Power Seat Motor (Front LH Seat Slide Control)
U 7 Power Seat SW (Front LH Seat)
U 8 Power Seat SW (Front LH Seat Lumbar Support Control)
U 11 Junction Connector
U 12 Front Seat Inner Belt (Front LH)


Y 1 Side Airbag Squib (RH)

Z 1 Side Airbag Squib (LH)


j 1 Power Seat Motor (Front RH Seat Reclining Control)
j 2 Power Seat Motor (Front RH Seat Lumbar Support Control)

k 1 Power Seat Motor (Front LH Seat Reclining Control)
k 2 Power Seat Motor (Front LH Seat Lumbar Support Control)


N 27
White

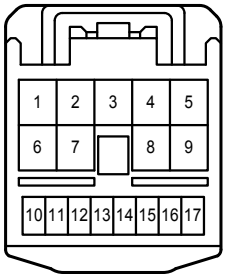

N 47
White




O 20
White

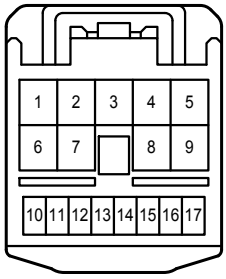


O 24
Gray




T 1
White




T 2
Orange




T 4
Blue




T 8
Black

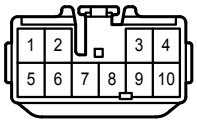


T 9
White

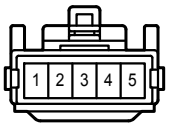


T 18
White

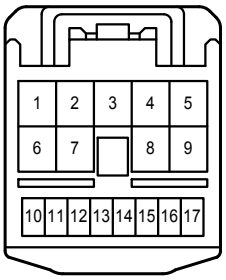


T 20
Gray

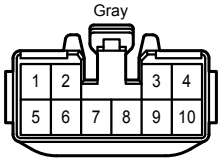


T 21
White

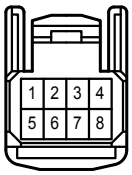


U 1
White




U 7
Black

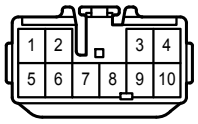


U 8
White

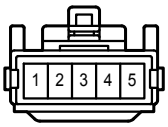


U 11
White

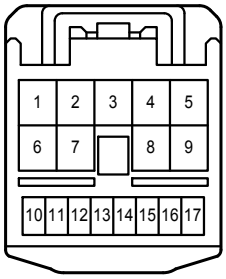


U 12
Blue




Y 1
White




Z 1
White




j 1
White



j 2
White



k 1
White



k 2
White

