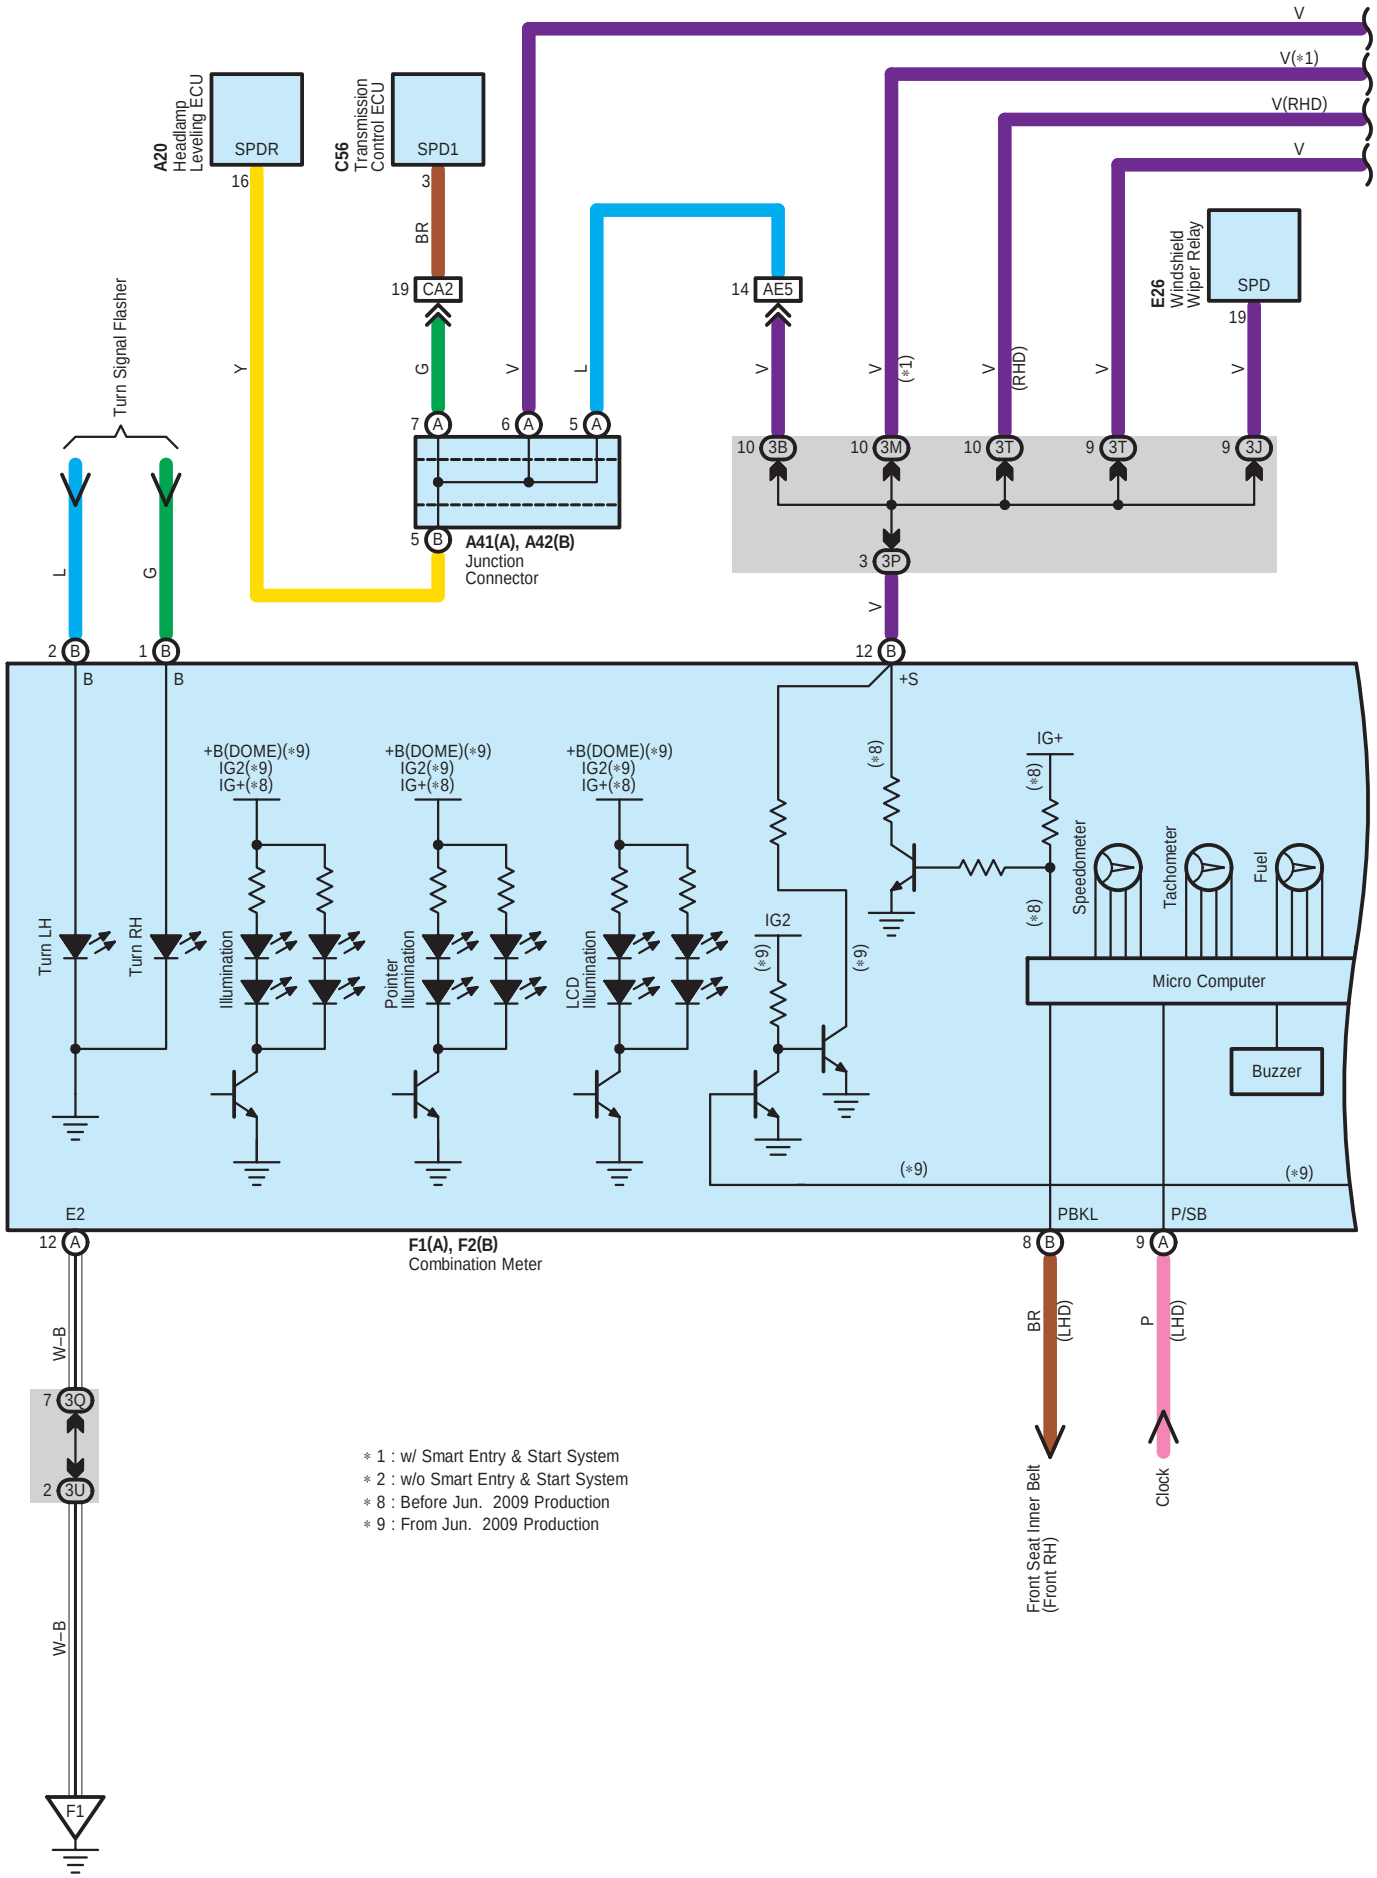
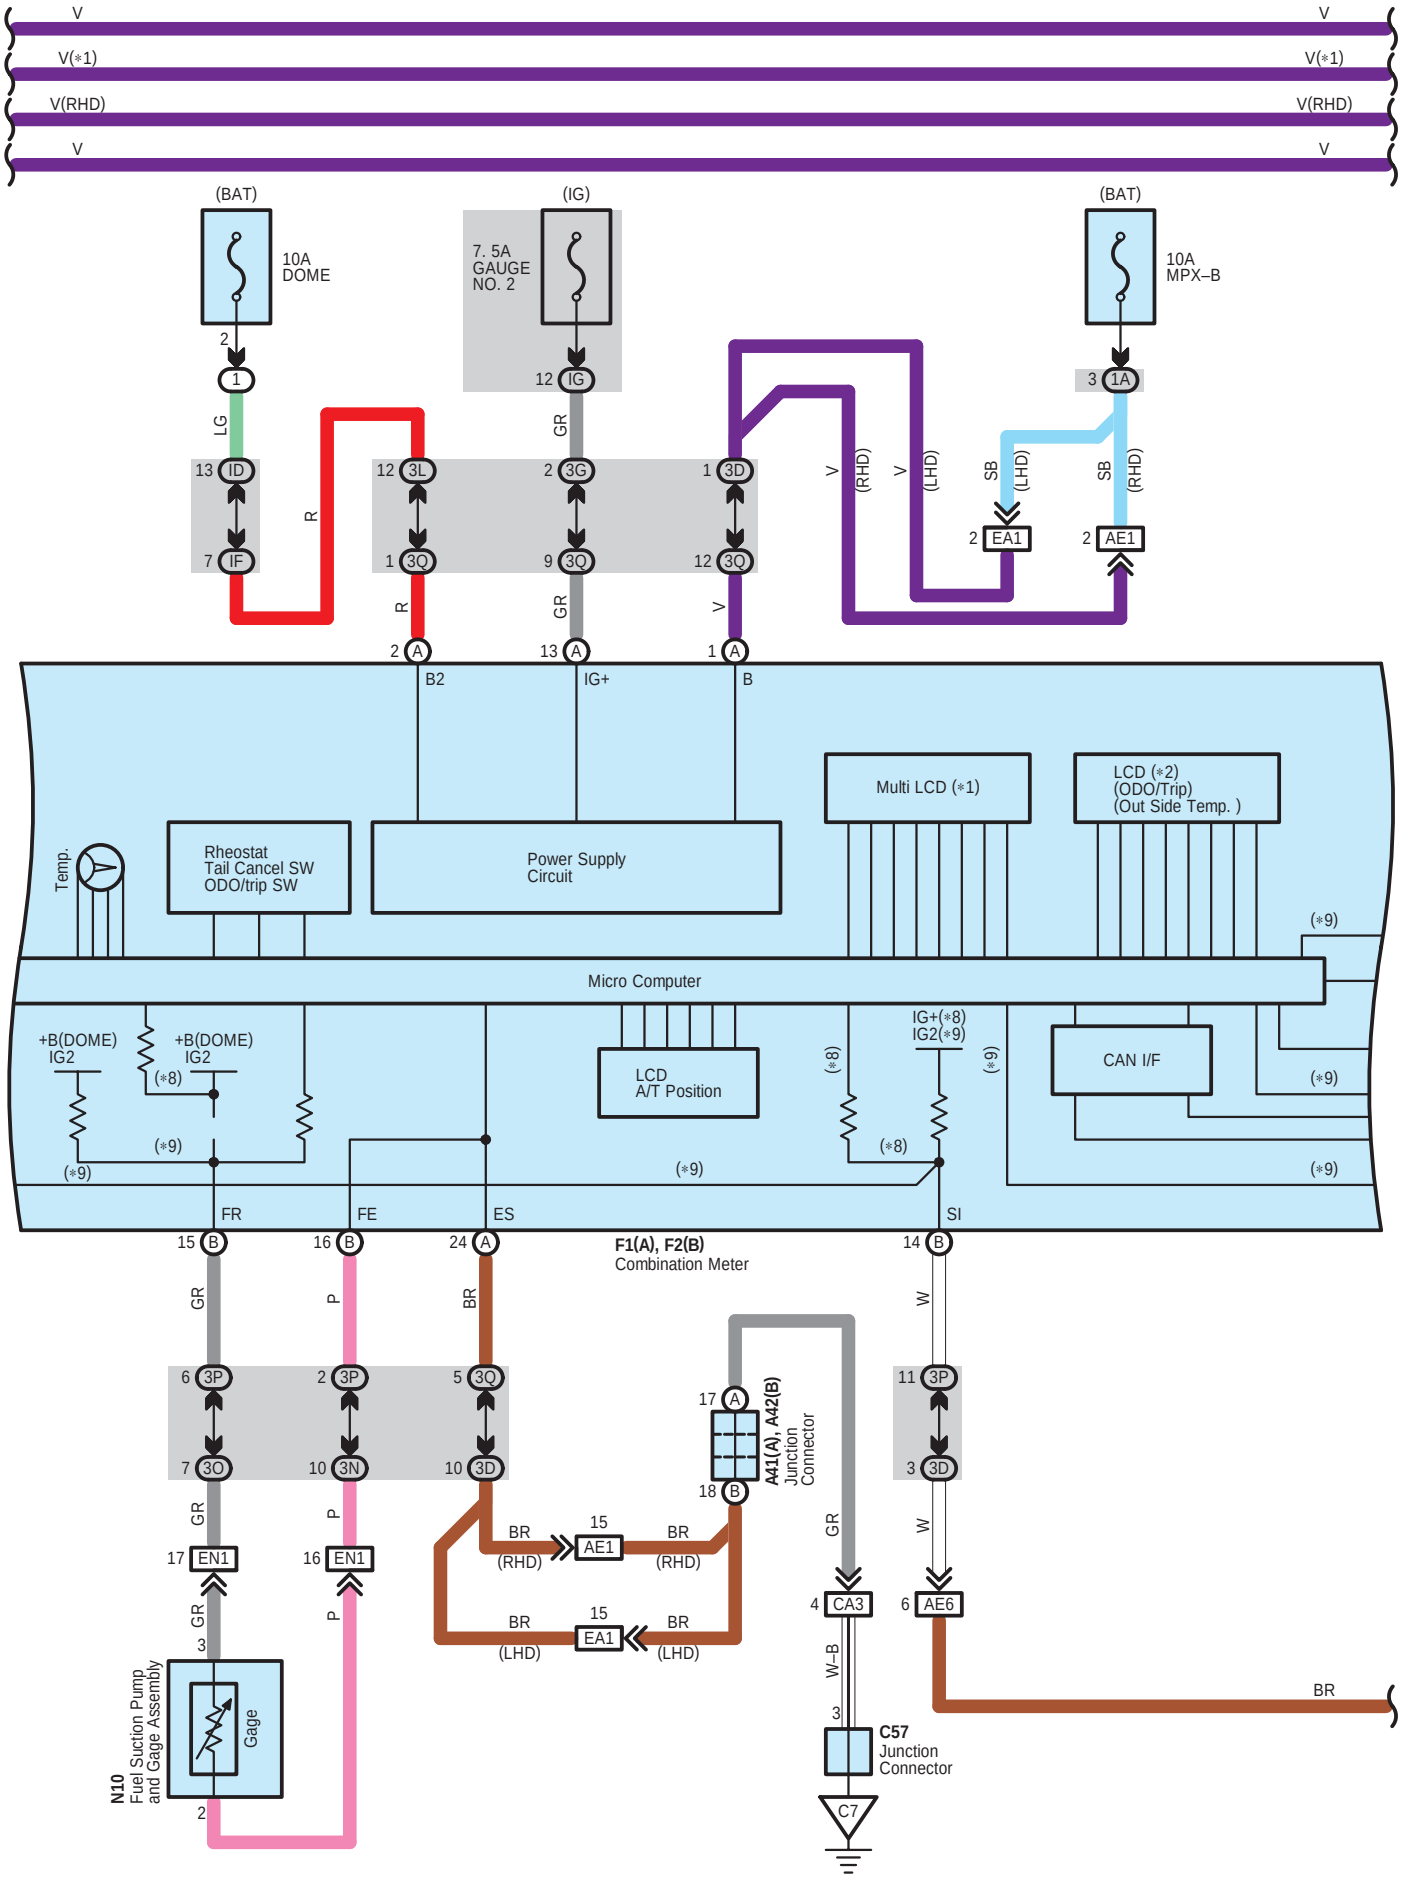
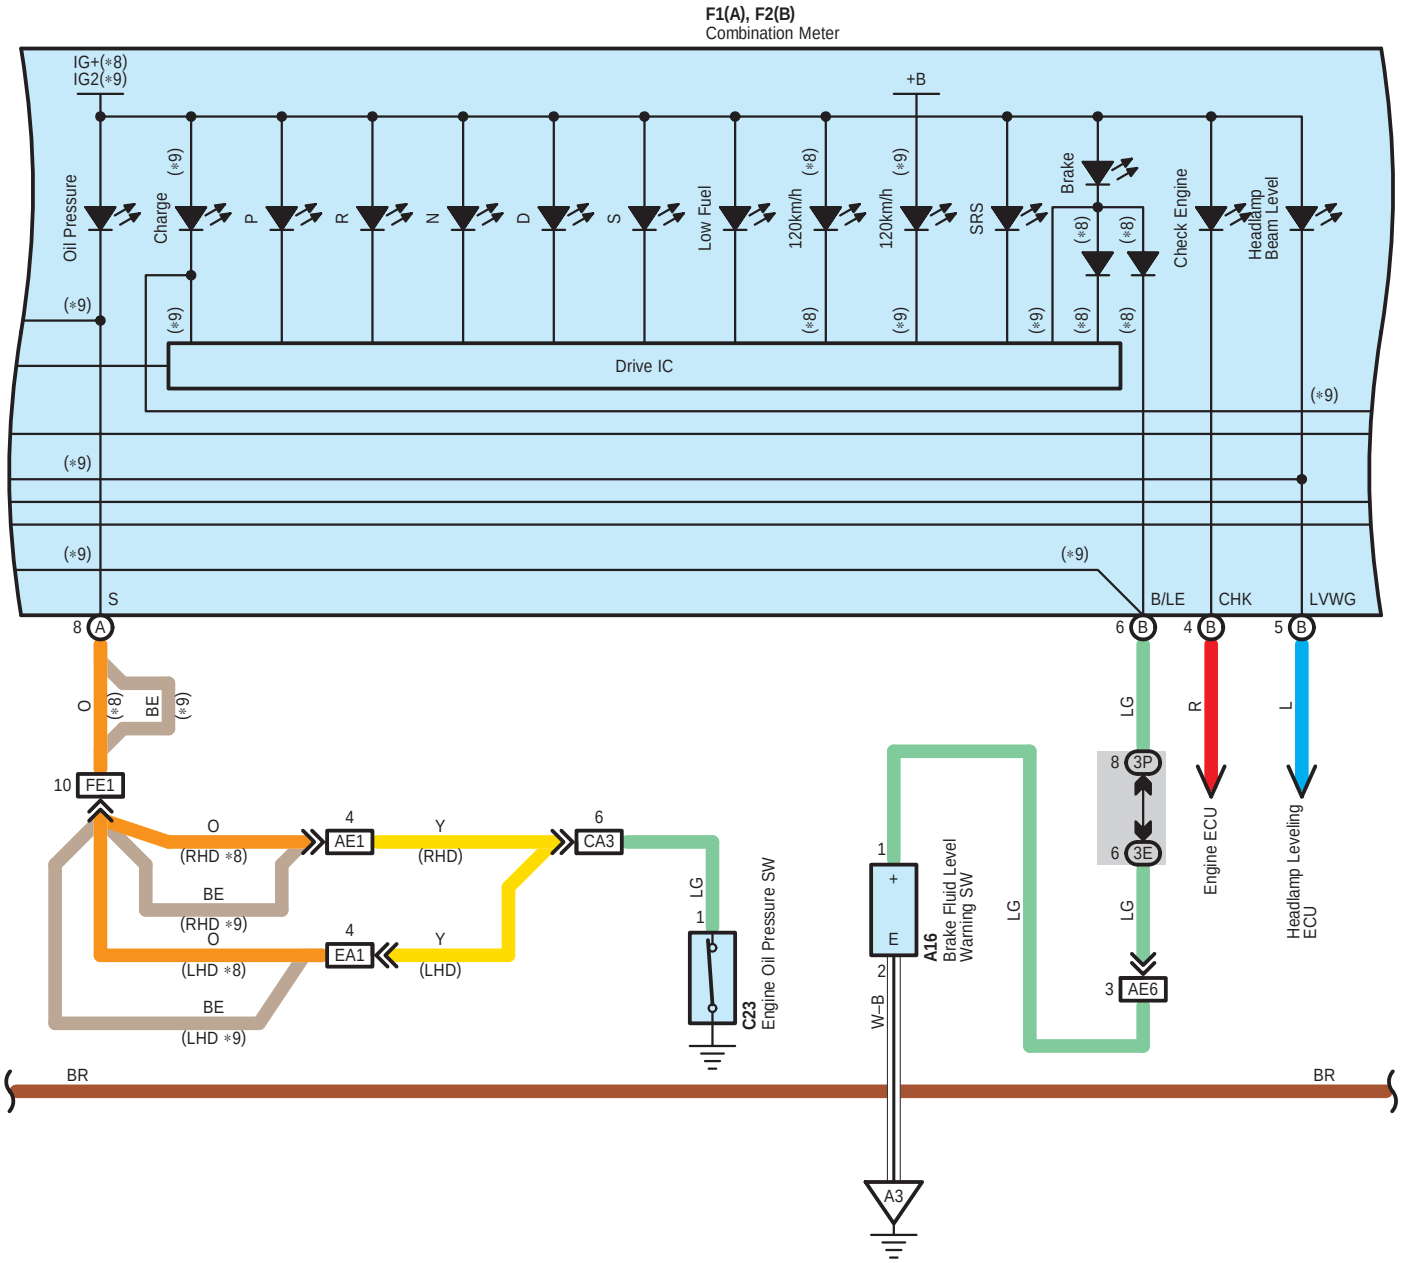
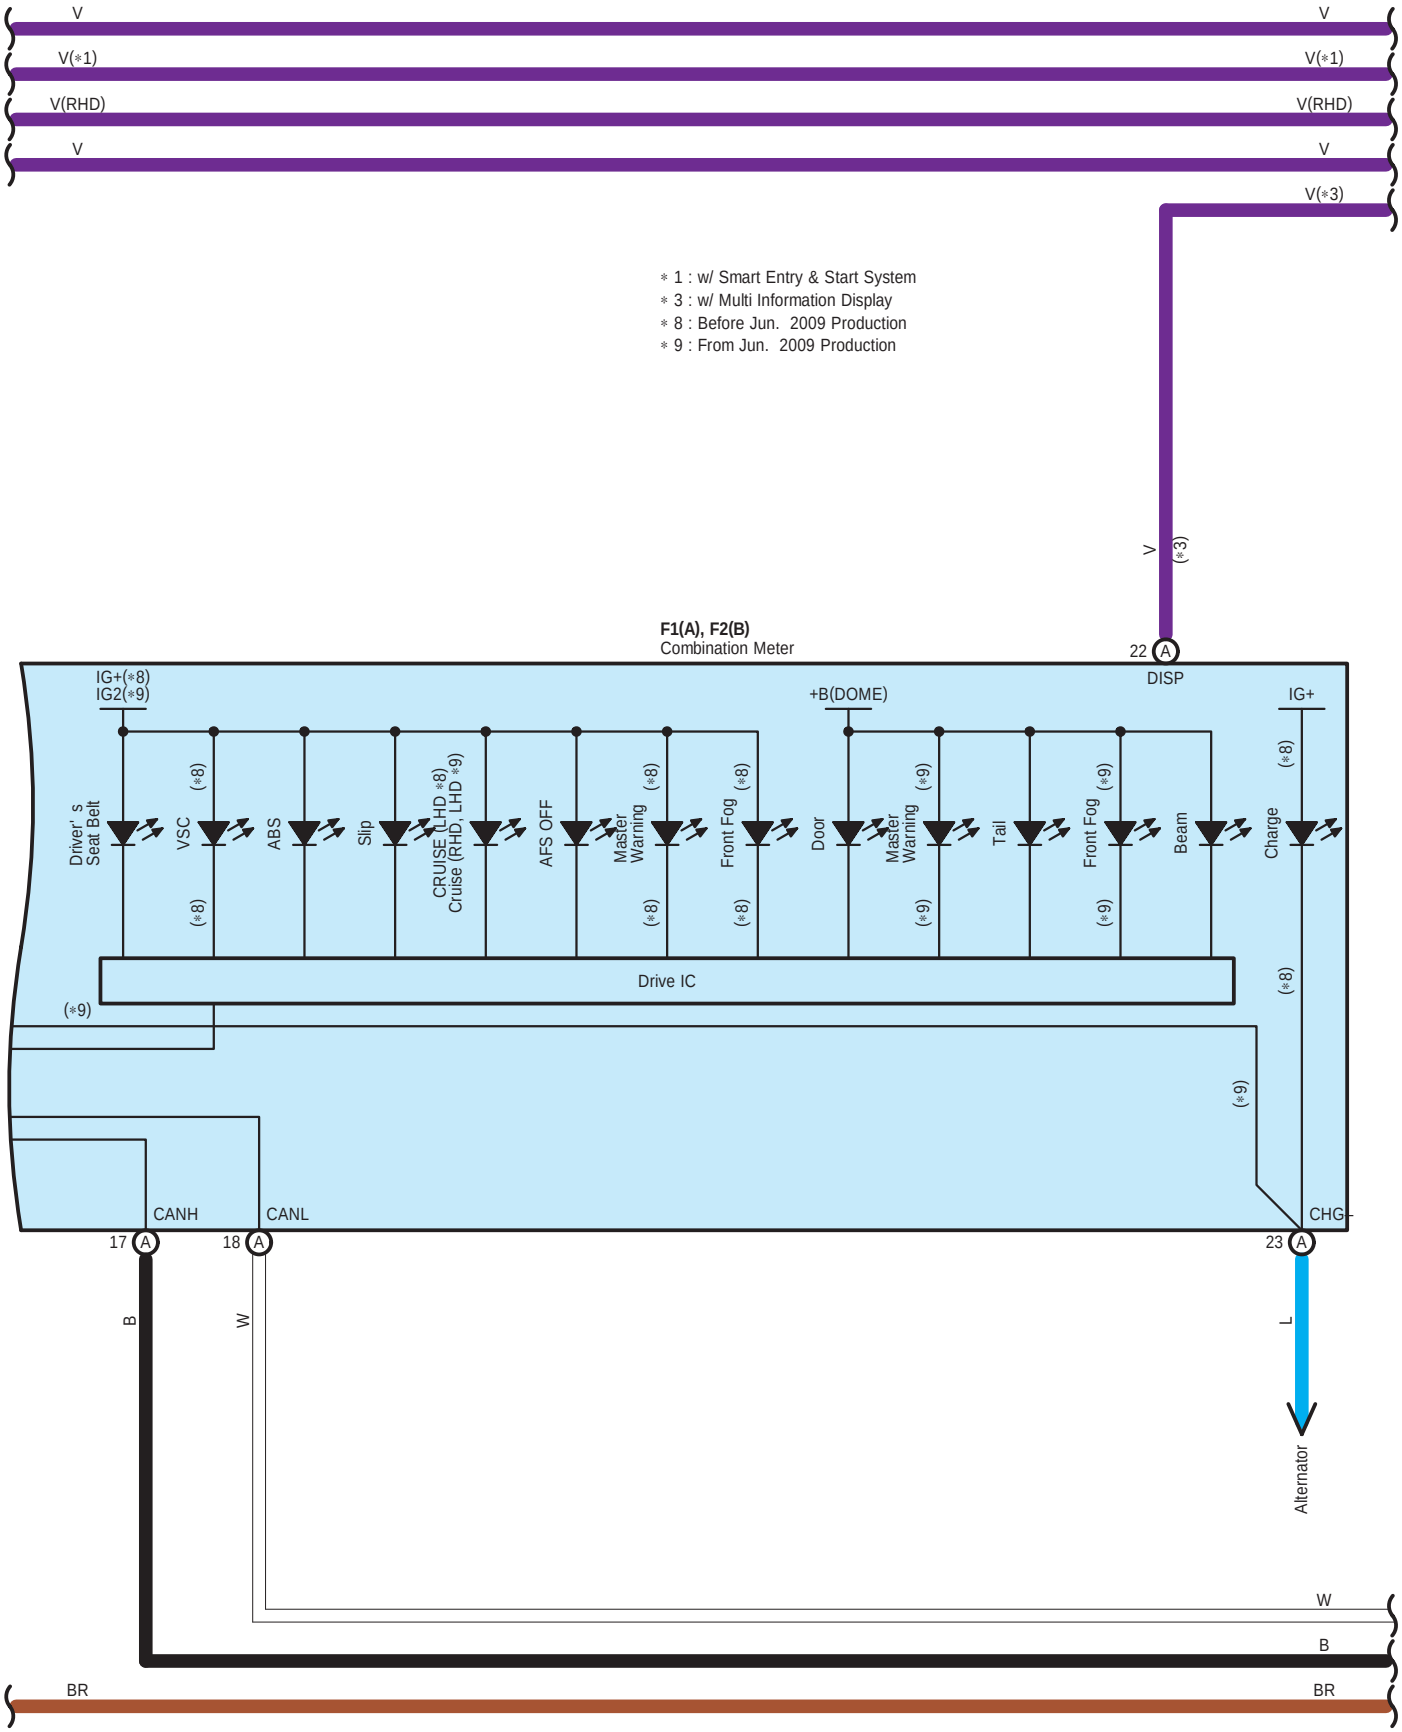
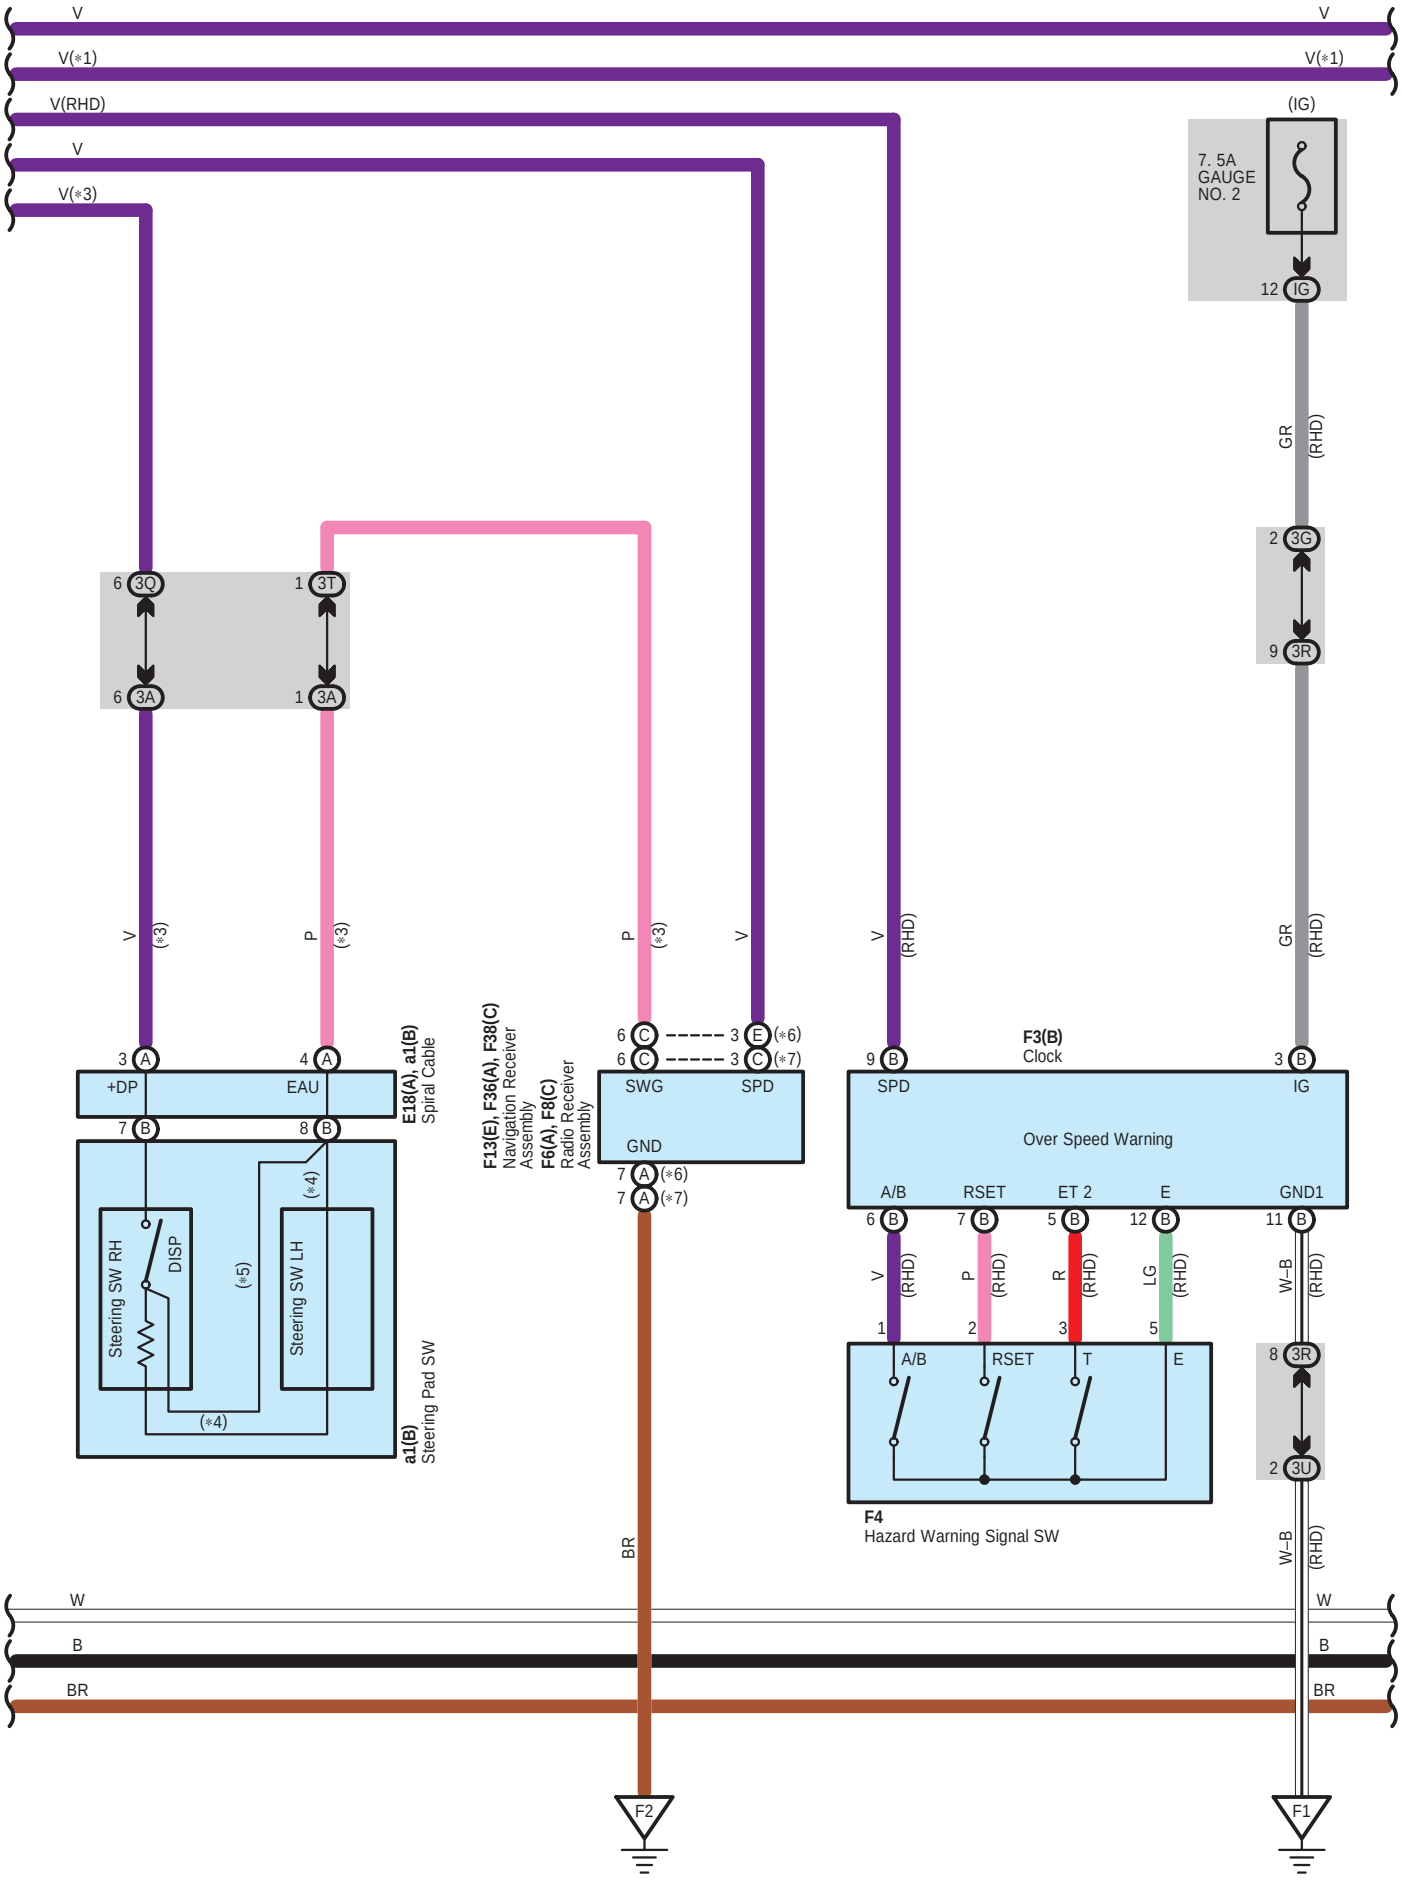

A20
Headlamp Leveling ECU
SPDR
16
C56
Transmission Control ECU
SPD1
3
BR
19
CA2
G
Y
V
L
14
AE5
V
V(*1)
V(RHD)
V
E26
Windshield Wiper Relay
SPD
19
V
Turn Signal Flasher
L
G
7 A
6 A
5 A
5 B
A41(A), A42(B)
Junction Connector
10 3B
10 3M
10 3T
9 3T
9 3J
3 3P
V
2 B
1 B
12 B
B
B
+S
+B(DOME)(*9)
IG2(*9)
IG+(*8)
+B(DOME)(*9)
IG2(*9)
IG+(*8)
+B(DOME)(*9)
IG2(*9)
IG+(*8)
IG+
(*8)
(*8)
Speedometer
Tachometer
Fuel
Turn LH
Turn RH
Illumination
Pointer Illumination
LCD Illumination
IG2
(*9)
(*9)
Micro Computer
Buzzer
(*9)
(*9)
E2
PBKL
P/SB
12 A
F1(A), F2(B)
Combination Meter
8 B
9 A
W-B
BR
(LHD)
P
(LHD)
7 3Q
2 3U
W-B
Front Seat Inner Belt (Front RH)
Clock
F1
* 1 : w/ Smart Entry & Start System
* 2 : w/o Smart Entry & Start System
* 8 : Before Jun. 2009 Production
* 9 : From Jun. 2009 Production



V
V(*1)
V(RHD)
V
(BAT)
10A
DOME
(IG)
7. 5A
GAUGE
NO. 2
(BAT)
10A
MPX–B
LG
GR
R
V
(RHD)
V
(LHD)
SB
(LHD)
SB
(RHD)
B2
IG+
B
Temp.
Rheostat
Tail Cancel SW
ODO/trip SW
Power Supply
Circuit
Multi LCD (*1)
LCD (*2)
(ODO/Trip)
(Out Side Temp.)
Micro Computer
+B(DOME)
IG2
+B(DOME)
IG2
(*8)
(*9)
LCD
A/T Position
IG+(*8)
IG2(*9)
CAN I/F
FR
FE
ES
SI
F1(A), F2(B)
Combination Meter
A41(A), A42(B)
Junction
Connector
BR
(RHD)
BR
(LHD)
W
W–B
C57
Junction
Connector
C7
N10
Fuel Suction Pump
and Gage Assembly
Gage
P


V
V
V(*1)
V(*1)
V(RHD)
V(RHD)
V
V



F1(A), F2(B)
Combination Meter
IG+(*8)
IG2(*9)
+B
Oil Pressure
Charge
P
R
N
D
S
Low Fuel
120km/h
120km/h
SRS
Brake
Check Engine
Headlamp Beam Level
Drive IC
S
B/LE
CHK
LVWG
8 A
6 B
4 B
5 B
10 FE1
AE1
EA1
CA3
AE6
3P
3E
C23
Engine Oil Pressure SW
A16
Brake Fluid Level Warning SW
Engine ECU
Headlamp Leveling ECU
A3
BR
BR



V
V(∗1)
V(RHD)
V
V
V(∗1)
V(RHD)
V
V(∗3)
∗ 1 : w/ Smart Entry & Start System
∗ 3 : w/ Multi Information Display
∗ 8 : Before Jun. 2009 Production
∗ 9 : From Jun. 2009 Production
V (∗3)
F1(A), F2(B)
Combination Meter
22 A
DISP
IG+(∗8)
IG2(∗9)
+B(DOME)
IG+
Driver' s Seat Belt
VSC
(∗8)
ABS
Slip
CRUISE (LHD ∗8)
Cruise (RHD, LHD ∗9)
AFS OFF
Master Warning
(∗8)
Front Fog
(∗8)
Door
Master Warning
(∗9)
Tail
Front Fog
(∗9)
Beam
Charge
(∗8)
Drive IC
(∗9)
(∗8)
(∗9)
CANH
CANL
CHG
17 A
18 A
23 A
B
W
L
Alternator
W
B
BR
BR


V
V(*1)
V(RHD)
V
V(*3)
V
V(*1)
(IG)
7. 5A
GAUGE
NO. 2
12 IG
GR (RHD)
2 3G
9 3R
6 3Q
6 3A
1 3T
1 3A
V (*3)
P (*3)
P (*3)
V
V (RHD)
GR (RHD)
3 A
4 A
+DP
EAU
E18(A), a1(B)
Spiral Cable
7 B
8 B
Steering SW RH
DISP
(*5)
Steering SW LH
(*4)
(*4)
a1(B)
Steering Pad SW
F13(E), F36(A), F38(C)
Navigation Receiver
Assembly
F6(A), F8(C)
Radio Receiver
Assembly
6 C
6 C
3 E (*6)
3 C (*7)
SWG
SPD
GND
7 A (*6)
7 A (*7)
9 B
SPD
F3(B)
Clock
3 B
IG
Over Speed Warning
A/B
RSET
ET 2
E
GND1
6 B
7 B
5 B
12 B
11 B
V (RHD)
P (RHD)
R (RHD)
LG (RHD)
W–B (RHD)
1
2
3
5
A/B
RSET
T
E
8 3R
2 3U
F4
Hazard Warning Signal SW
W–B (RHD)
BR
W
B
BR
W
B
BR
F2
F1

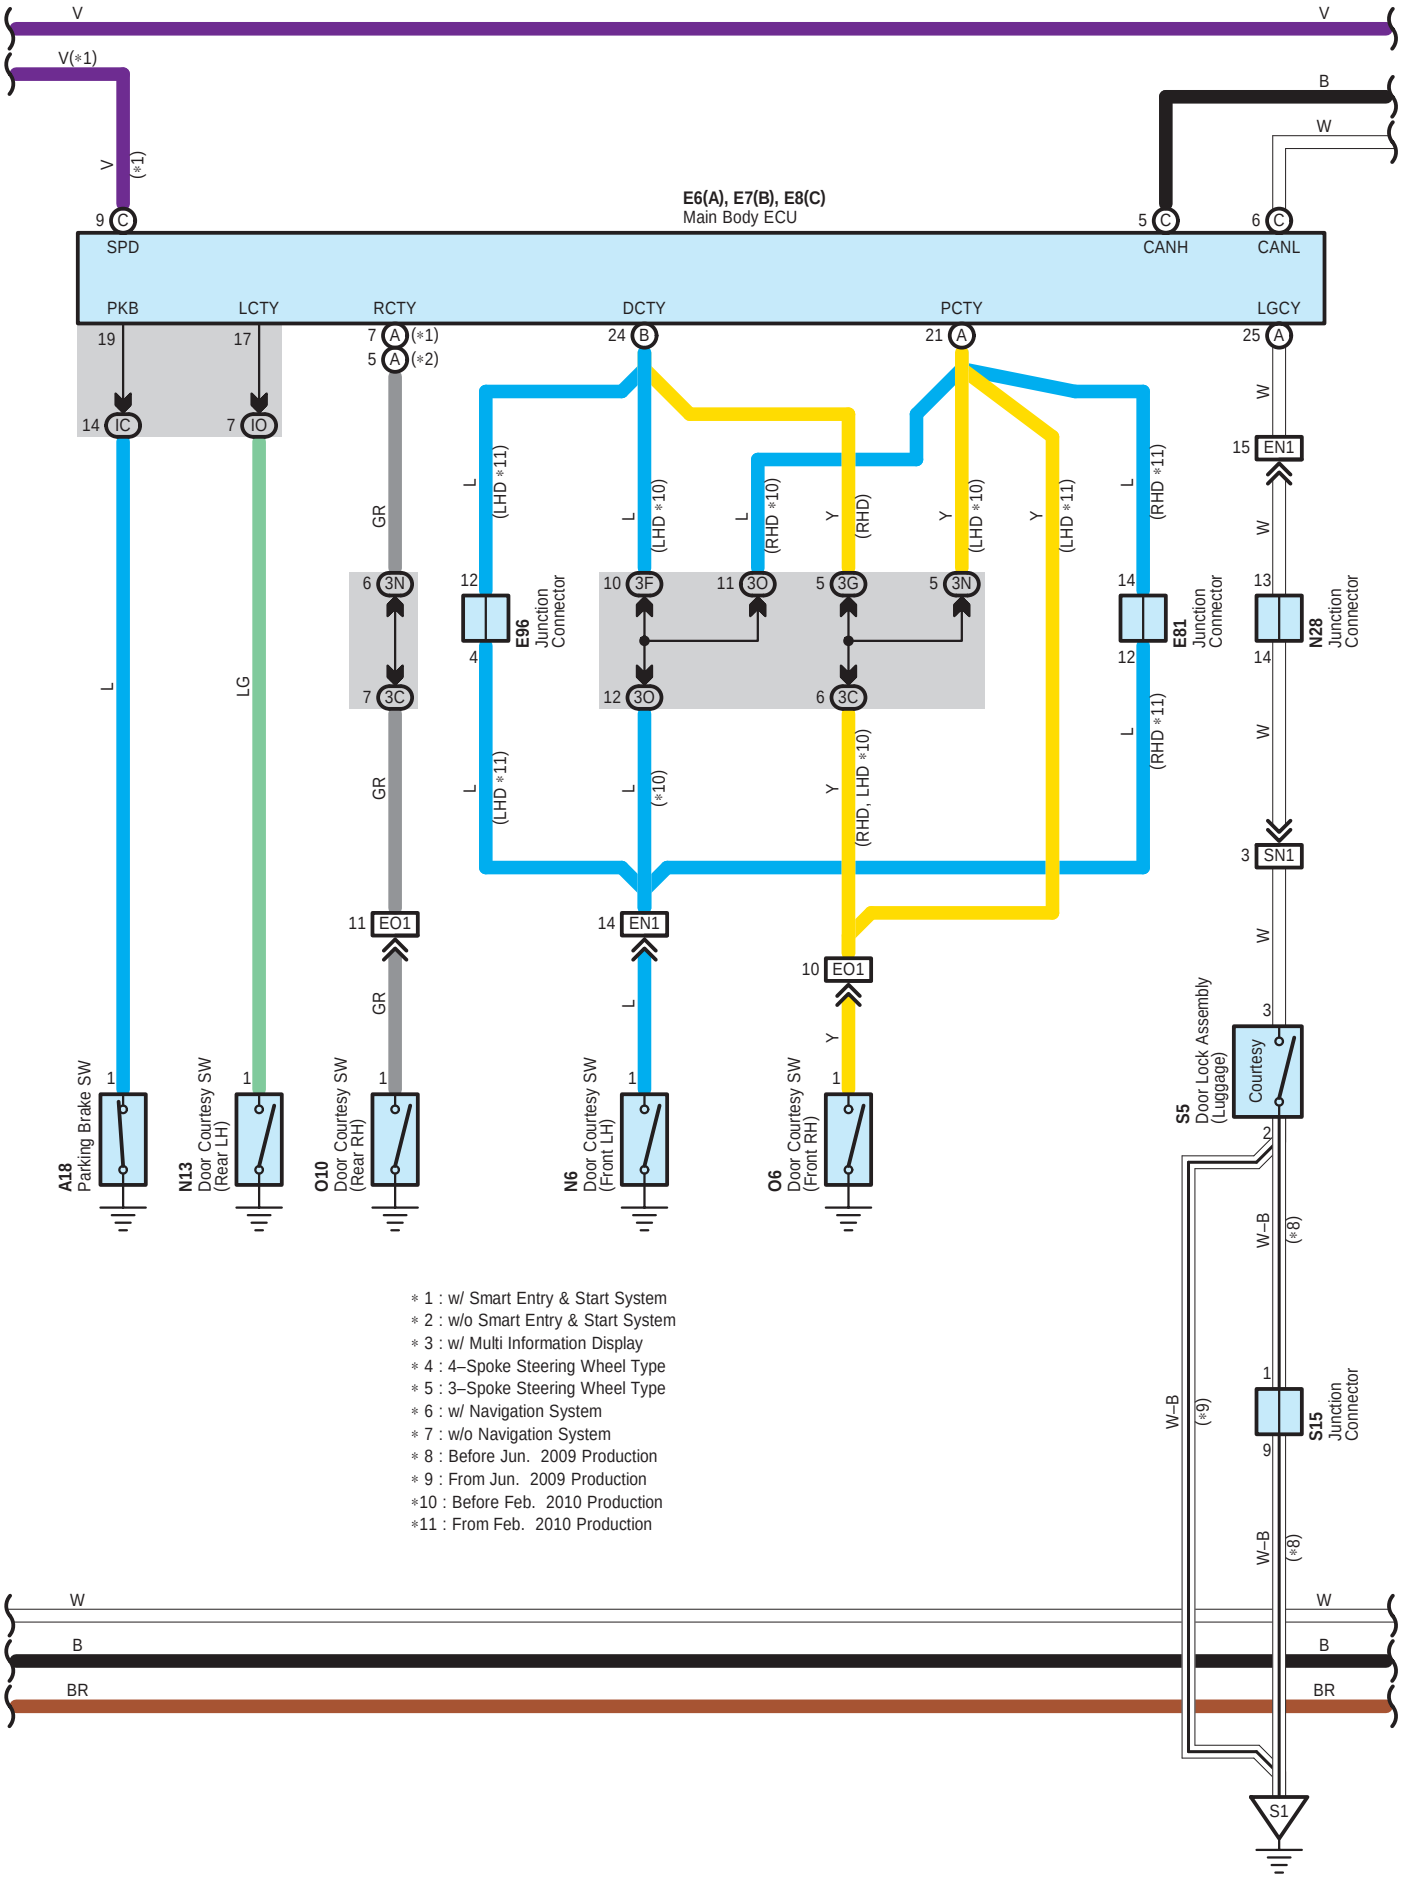

∗ 1 : w/ Smart Entry & Start System
∗ 2 : w/o Smart Entry & Start System
∗ 3 : w/ Multi Information Display
∗ 4 : 4–Spoke Steering Wheel Type
∗ 5 : 3–Spoke Steering Wheel Type
∗ 6 : w/ Navigation System
∗ 7 : w/o Navigation System
∗ 8 : Before Jun. 2009 Production
∗ 9 : From Jun. 2009 Production
∗10 : Before Feb. 2010 Production
∗11 : From Feb. 2010 Production

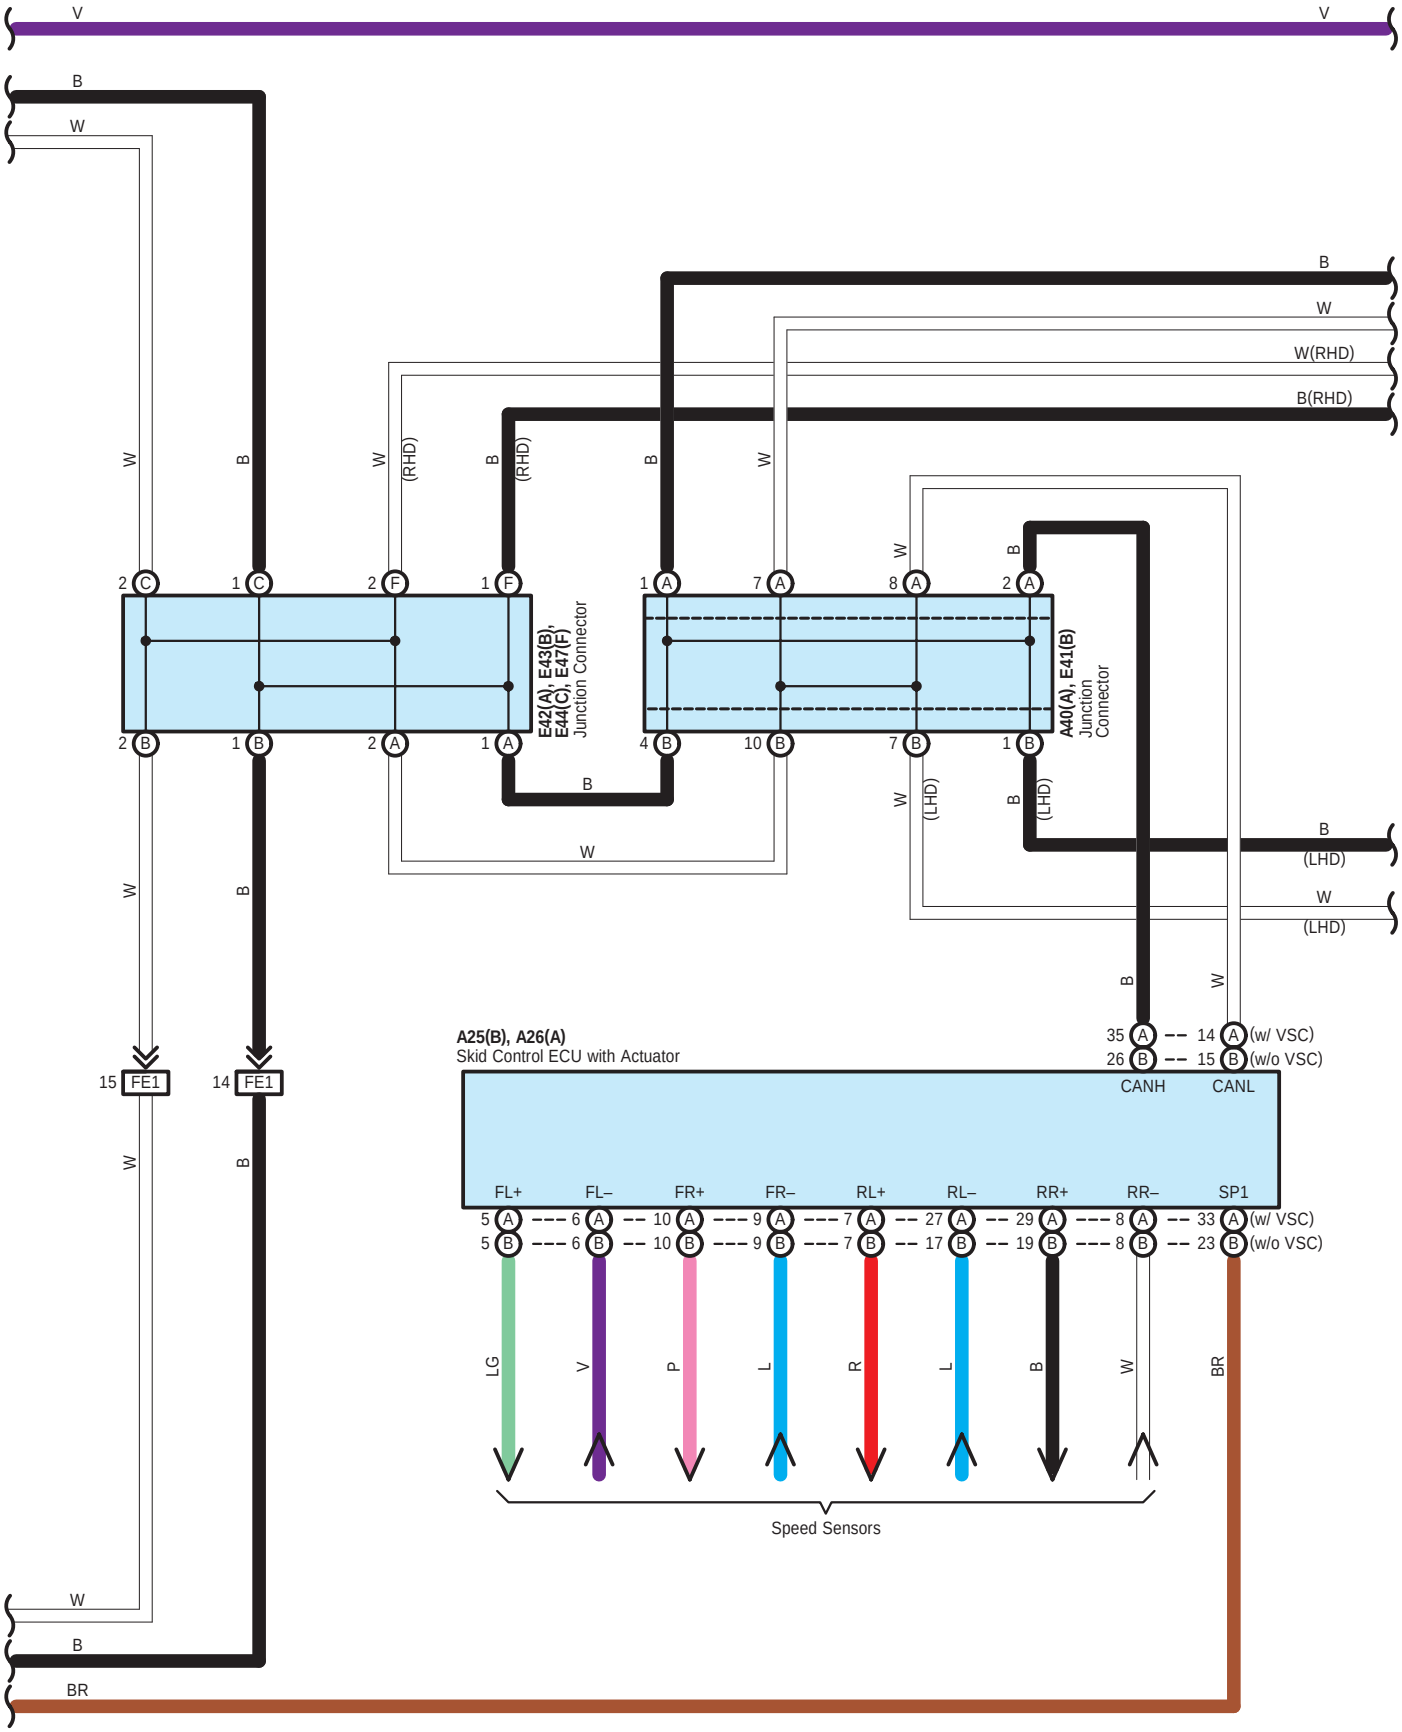
V
V
B
W
B
W
W(RHD)
B(RHD)
W
B
W
(RHD)
B
(RHD)
B
W
W
B
2 C
1 C
2 F
1 F
1 A
7 A
8 A
2 A
E42(A), E43(B),
E44(C), E47(F)
Junction Connector
A40(A), E41(B)
Junction
Connector
2 B
1 B
2 A
1 A
4 B
10 B
7 B
1 B
B
W
W
(LHD)
B
(LHD)
B
(LHD)
W
(LHD)
W
B
W
B
15 FE1
14 FE1
A25(B), A26(A)
Skid Control ECU with Actuator
35 A
26 B
14 A
15 B
(w/ VSC)
(w/o VSC)
CANH
CANL
FL+
FL–
FR+
FR–
RL+
RL–
RR+
RR–
SP1
5 A
5 B
6 A
6 B
10 A
10 B
9 A
9 B
7 A
7 B
27 A
17 B
29 A
19 B
8 A
8 B
33 A
23 B
(w/ VSC)
(w/o VSC)
LG
V
P
L
R
L
B
W
BR
Speed Sensors
W
B
BR

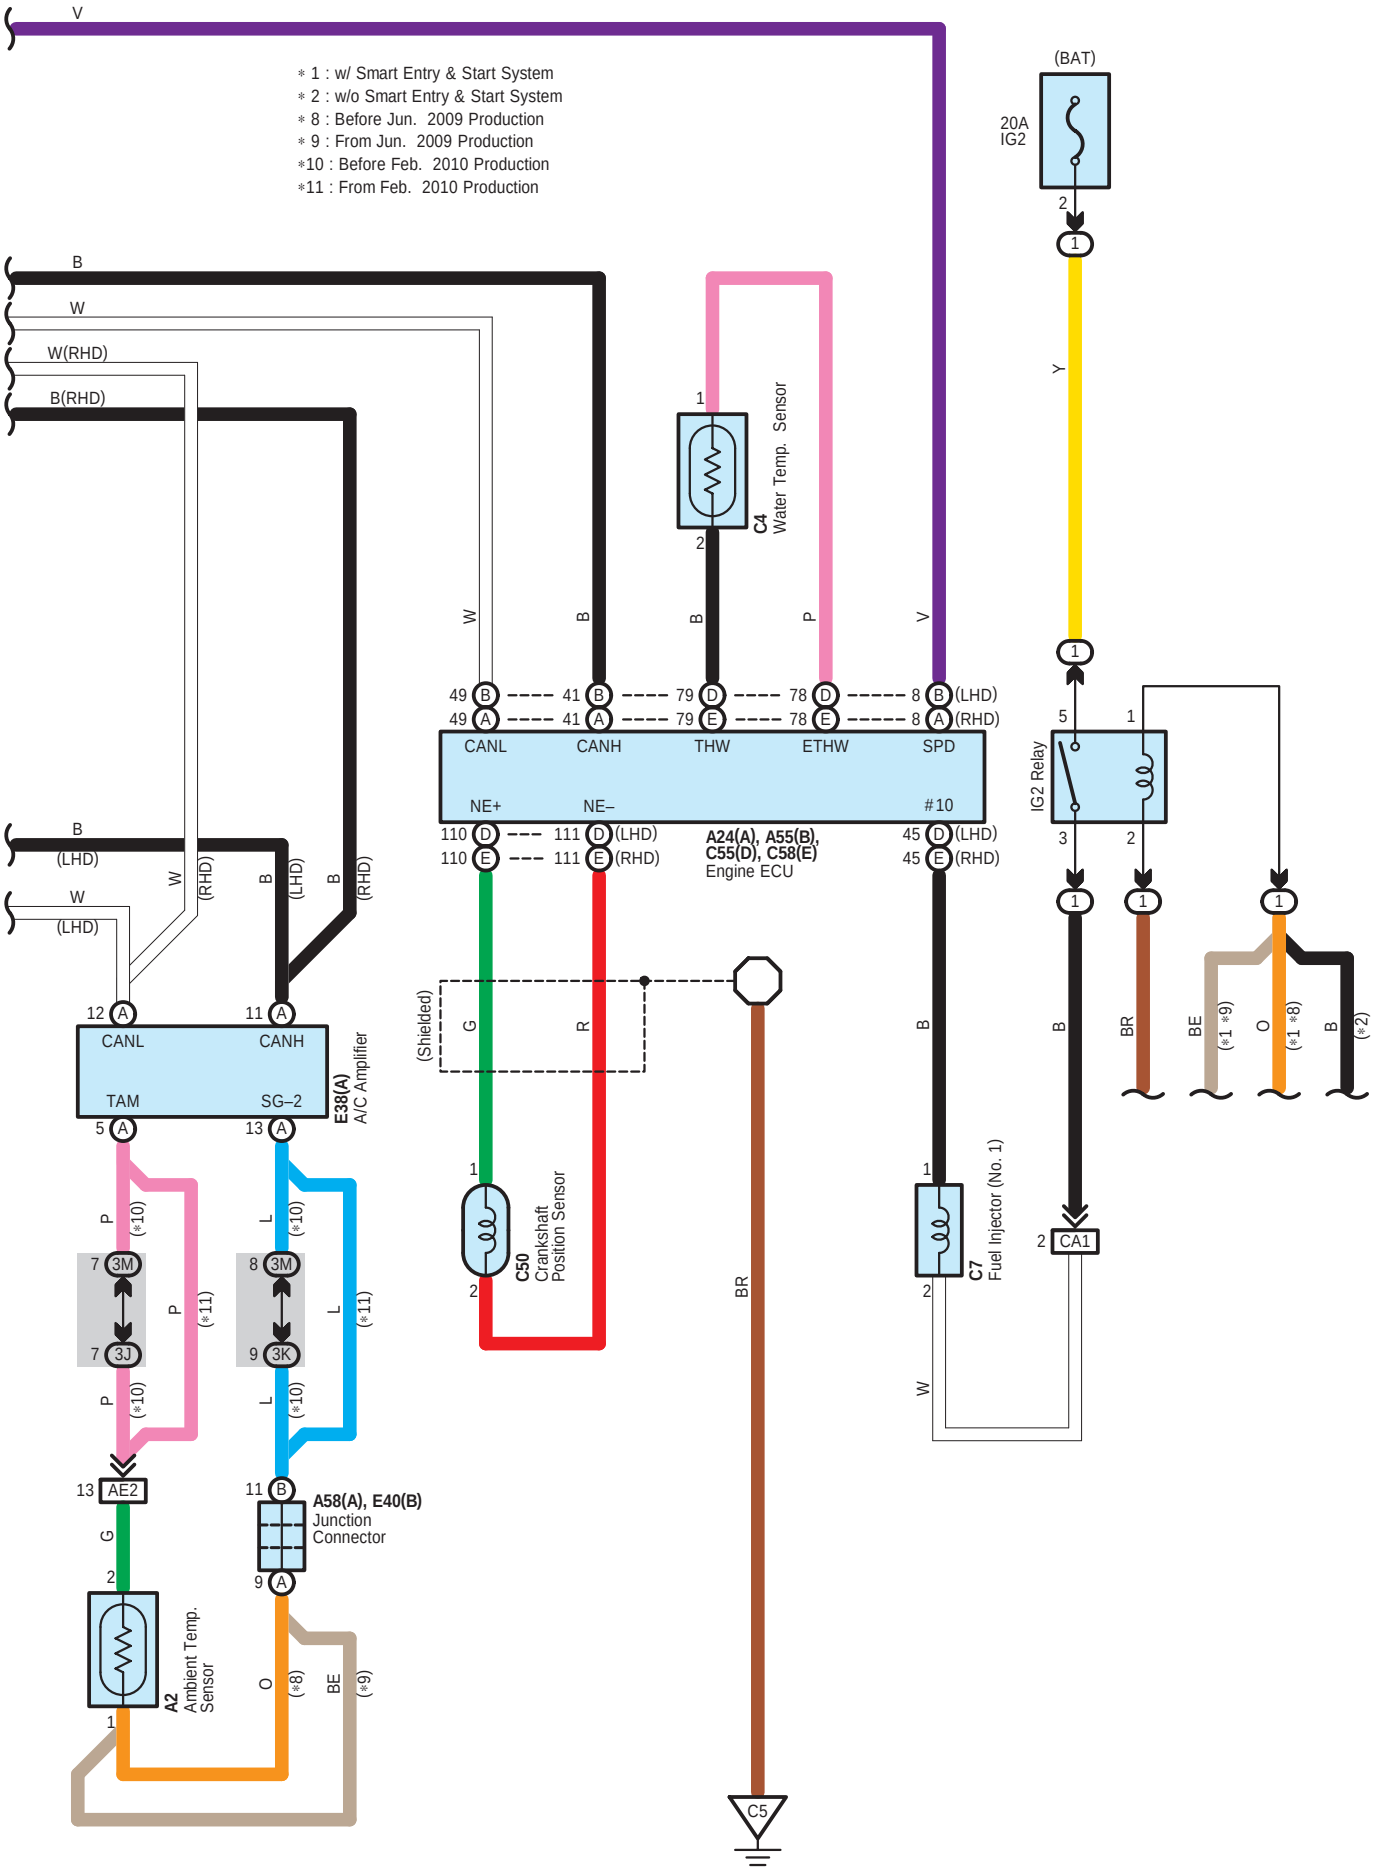
∗ 1 : w/ Smart Entry & Start System
∗ 2 : w/o Smart Entry & Start System
∗ 8 : Before Jun. 2009 Production
∗ 9 : From Jun. 2009 Production
∗10 : Before Feb. 2010 Production
∗11 : From Feb. 2010 Production
(BAT)
20A
IG2
IG2 Relay
C4
Water Temp. Sensor
A24(A), A55(B),
C55(D), C58(E)
Engine ECU
CANL
CANH
THW
ETHW
SPD
NE+
NE–
#10
(LHD)
(RHD)
(Shielded)
C50
Crankshaft
Position Sensor
C7
Fuel Injector (No. 1)
CA1
E38(A)
A/C Amplifier
TAM
SG–2
A2
Ambient Temp.
Sensor
A58(A), E40(B)
Junction
Connector
AE2
3M
3J
3K
C5

A 2
Black




A 16
Gray




A 18
White




A 20
White

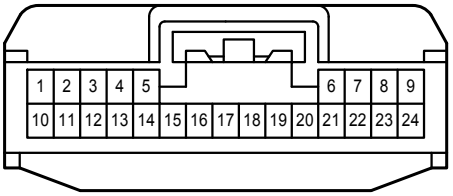


A 24
Black

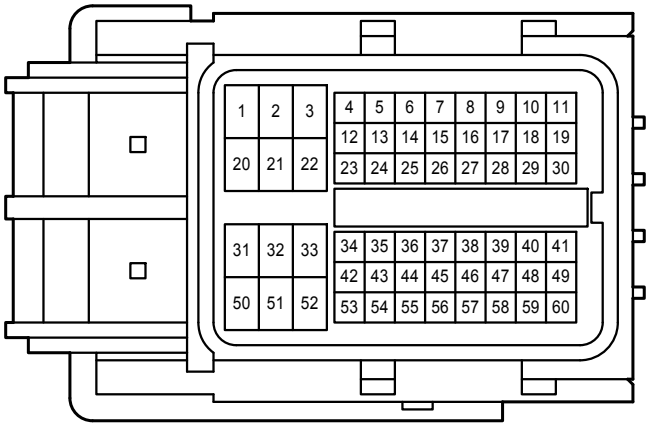


A 25
Black

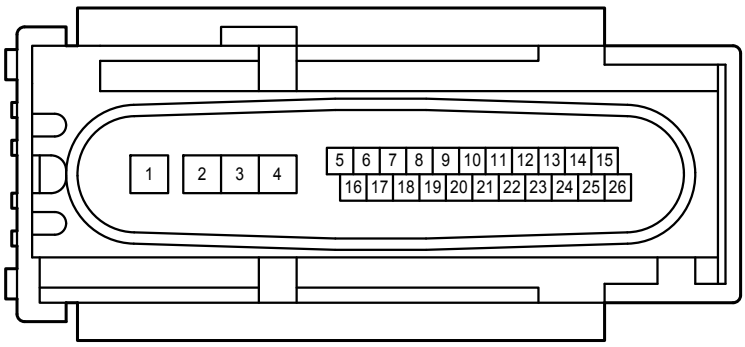


A 26
Black

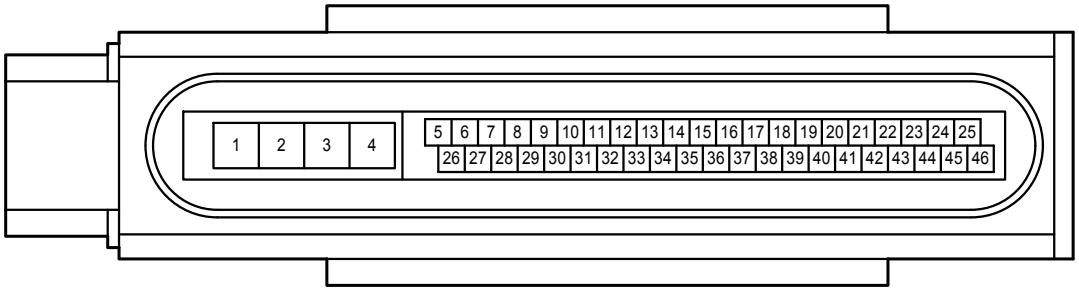


A 40
Blue

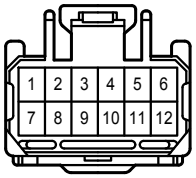


A 41
White

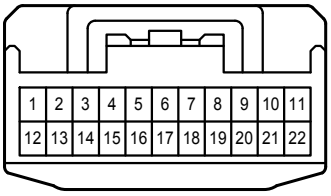


A 42
White

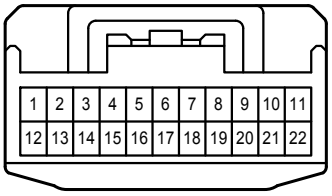

A 55
Black

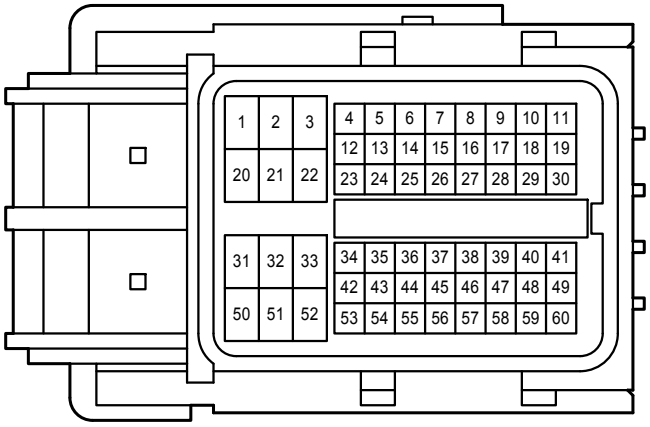


A 58
Black

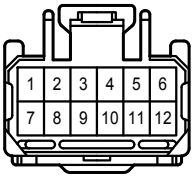

C 4
Black




C 7
Gray

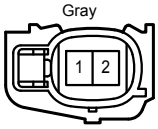


C 23
Gray




C 50
Black

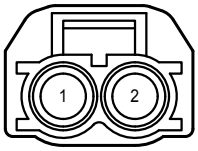

C 55
Black

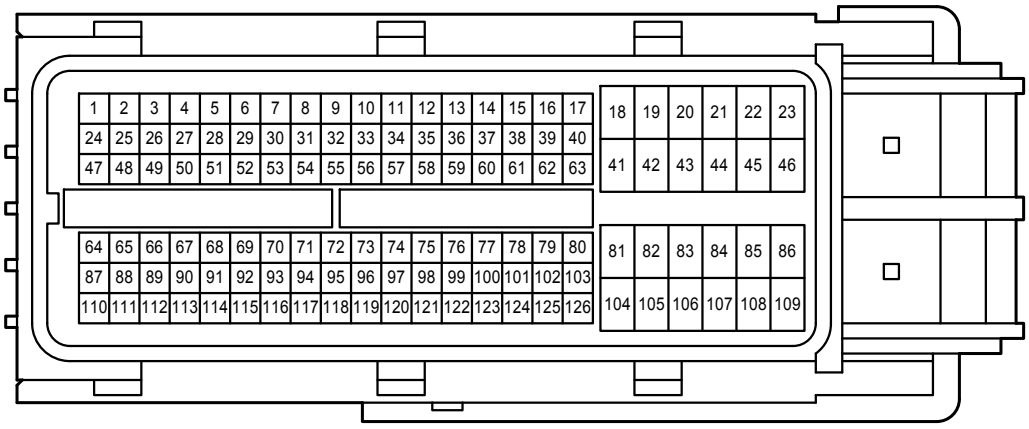


C 56
Black

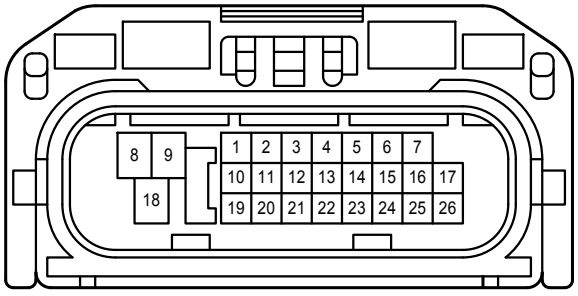


C 57
Gray




C 58
Black

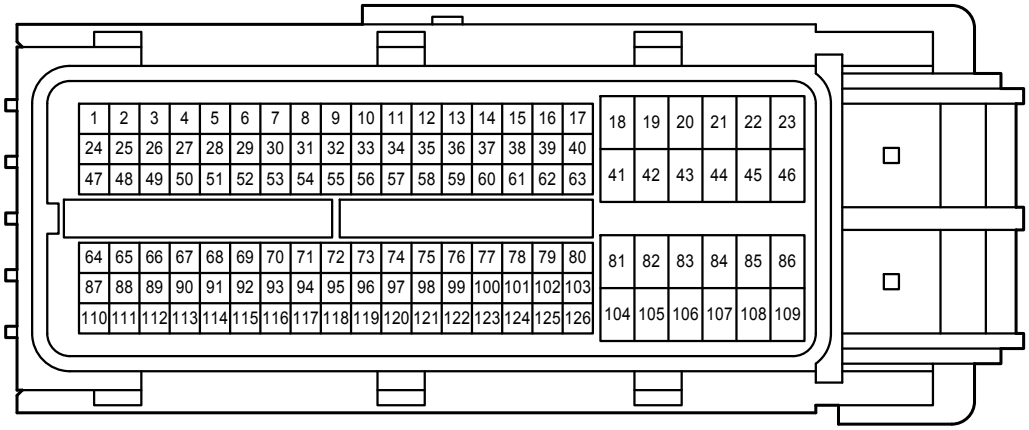


E 6
White

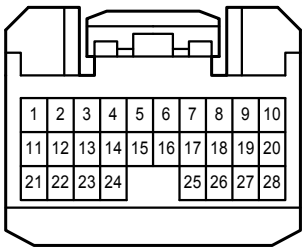

E 7
White

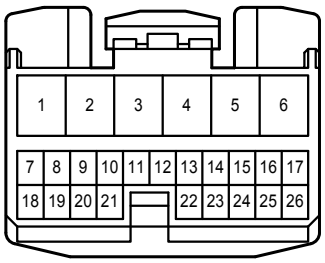


E 8
White

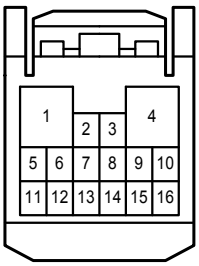


E 18
Black




E 26
White

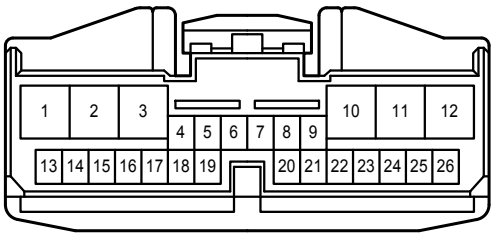


E 38
White

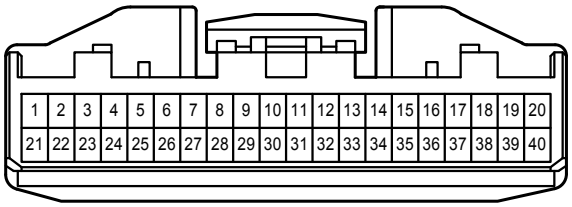


E 40
White

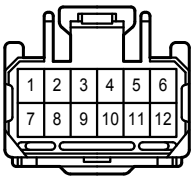


E 41
Blue

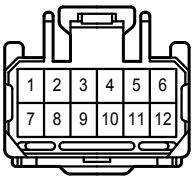


E 42
White




E 43
White




E 44
Black




E 47
Gray




E 81
White

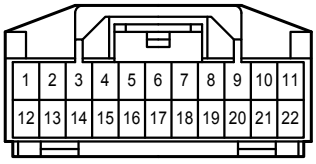


E 96
White




F 1
White

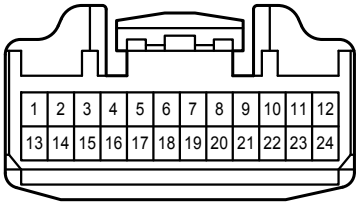

F 2
White

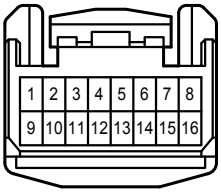


F 3
White

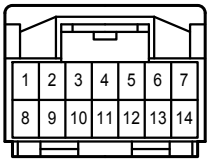


(RHD 2GR-FE)


F 4
White

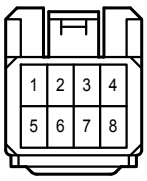


F 6
White

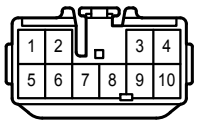


F 8
White

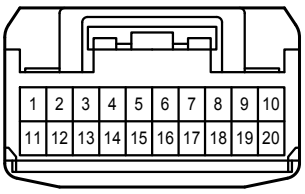


F 13
Gray

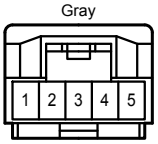

F 36
White

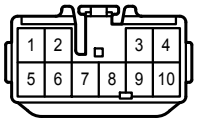

F 38
White

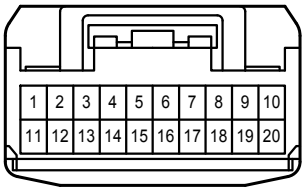

N 6
Black




N 10
White



N 13
White



N 28
Blue

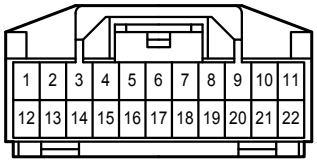


O 6
Black




O 10
White




S 5
Black

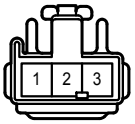


S 15
White




a 1
White

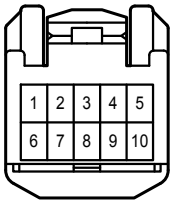


1A
White

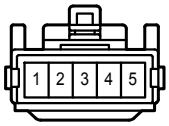


3A
White




3B
Gray




3C
White




3D
Gray




3E
White




3F
Gray




3G
White




3J
Gray




3K
White




3L
Gray




3M
White




3N
Gray




3O
White




3P
White




3Q
Gray




3R
White




3T
Gray




3U
White




IC
White

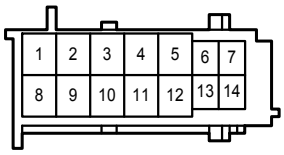


ID
White

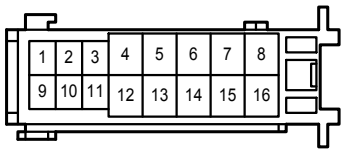


IF
White

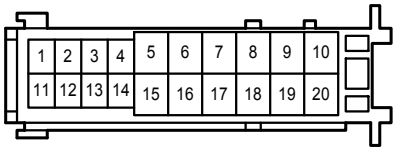


IG
White

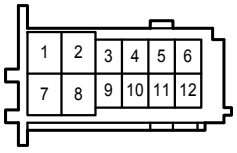


IO
White

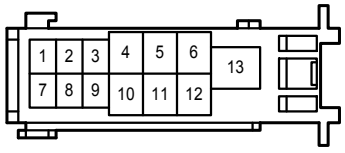


AE1
White

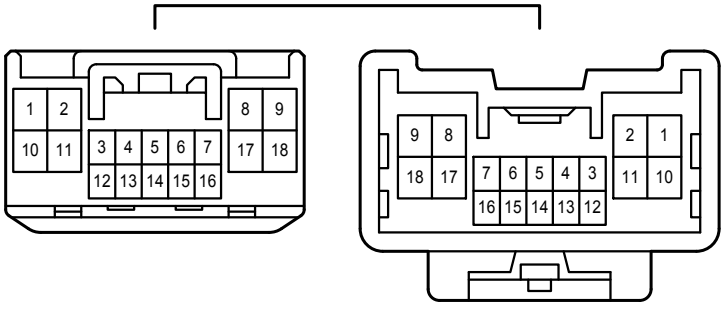


AE2
Gray

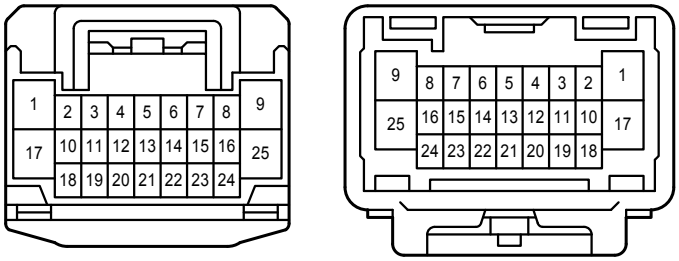


AE5
White

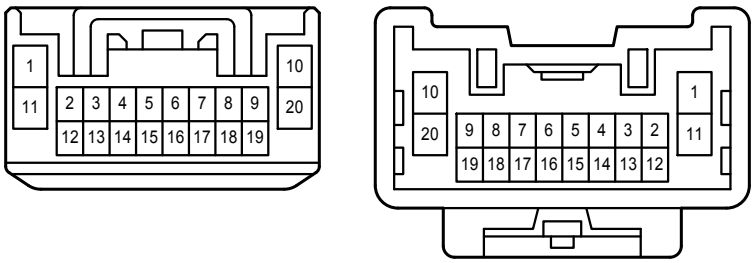


AE6
Gray

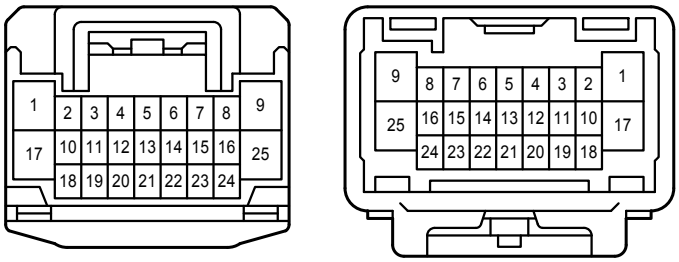


CA1
White

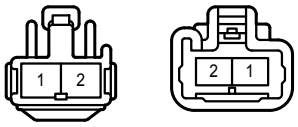


CA2
Black White

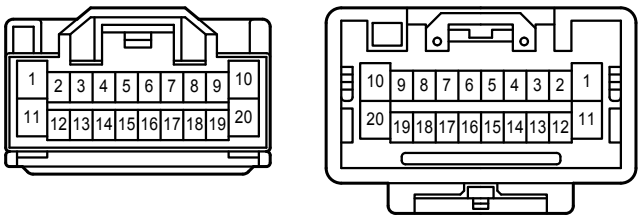


CA3
White

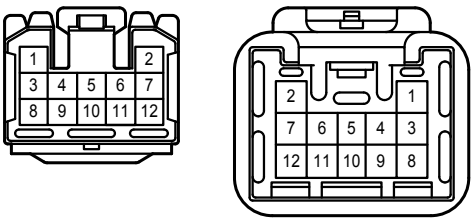


EA1
White

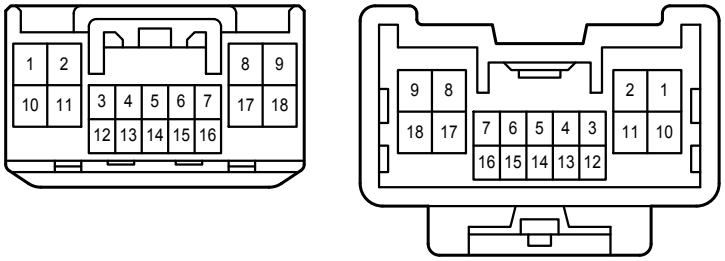


EN1
White

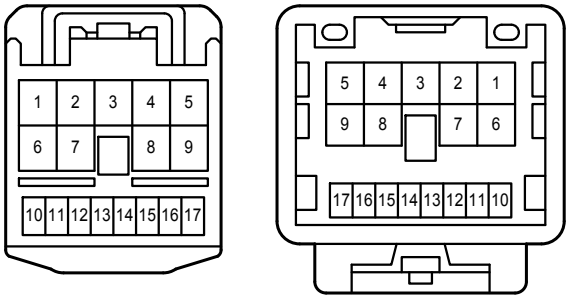

EO1
White

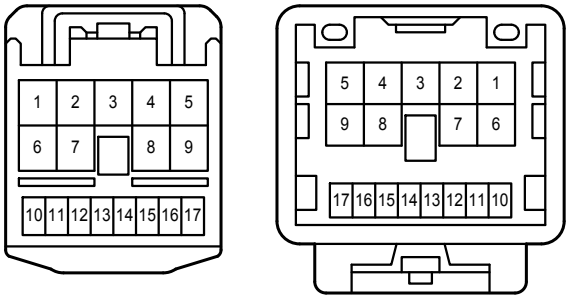

FE1
Gray

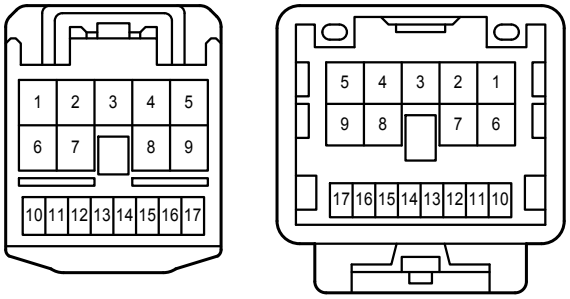

SN1
White

