





∗ 3 : Before Jun. 2009 Production
∗ 4 : From Jun. 2009 Production
∗ 5 : Before Jun. 2009 Production w/ Seat Position Memory
∗ 6 : From Jun. 2009 Production w/ Seat Position Memory
(BAT)
(ACC)
10A ECU–B NO. 1
7. 5A ECU–ACC
I2(A), (D)
Outer Rear View Mirror (LH)
Mirror Position Sensor
Up/Down
Left/Right
MV
M+
MH
VSRL
HSRL
VC
E1
E85(A), E86(B), E95(C)
Outer Mirror Control ECU
B
ACC
MVL
M+L
MHL
VSR
HSRL
+CB
E
MSWE
MM
M1
M2
GND
E88
Seat Memory SW
MRY
SET
E49
Junction Connector
E2


H3(A)
Outer Rear View Mirror (RH)
Mirror Position Sensor
M
Up/Down
Left/Right
SB
VC
GR
E1
V
VSSR
LG
HSSR
W
MV
B
M+
R
MH
8 A
2 A
3 A
9 A
5 A
10 A
4 A
GR
W–B
G
L
P
O
(*3)
BE
(*4)
LG
13 HE2
18 HE2
12 HE2
14 HE2
22 HE2
21 HE2
20 HE2
22 A
23 A
24 A
25 A
40 A
38 A
39 A
VC
E1
VSRR
HSRR
MVR
M+R
MHR
E85(A), E86(B), E95(C)
Outer Mirror Control ECU
SWM+
SWS
SWE
CAN
CGND
11 A
31 A
32 A
1 A
21 A
3
1
2
M+
S1
E
Left
Left/
Up
Down
Right/
Down
Right
Up
Left
Right
Left
Right
W
L
E82
Outer Mirror SW



(IG)
10A
GAUGE
NO. 1
16 IH
R
14 AE1
BE
(*4)
O
(*3)
10 CA2
R
1 A
PL
RL
RB
P
R
3 A
2 A
C1(A)
Park/Neutral
Position SW
B–W
P
24 E
25 E
P
R
A24(A), C58(E)
Engine ECU
E7(B), E8(C)
Main Body ECU
CANH
CANL
CANN
CANP
5 C
6 C
15 C
16 C
B
W
1 C
2 C
1 A
2 A
E42(A), E44(C)
Junction Connector
4 B
10 B
1 A
7 A
A40(A), E41(B)
Junction Connector
41 A
49 A
CANH
CANL
12 EN3
13 EN3
7 EN3
6 EN3
(*1)
N40
Junction Connector
(*2)
W
L
22
11
21
10
E81
Junction Connector
20
9
19
8
8 EO2
9 EO2
11 A
10 A
16 B
17 B
O20(A), T18(B)
Junction Connector
1 B
5 B
CANL
CANH
T21(B)
Position Control
ECU and SW
* 1 : w/ TOYOTA Link System
* 2 : w/o TOYOTA Link System
* 3 : Before Jun. 2009 Production
* 4 : From Jun. 2009 Production
* 7 : Before Feb. 2010 Production
* 8 : From Feb. 2010 Production
W
L


E7(B), E8(C)
Main Body ECU
DCTY
UL3
L2
SSW2
SSW1
W
L
O33(B), O34(C)
Junction Connector
O6
Door Courtesy SW
(Front RH)
E97(C)
Certification
ECU
CANH
CANL
ASEL
RC0
RDA
RSSI
O19
Electrical
Key Antenna
ANT
GND
O18
Door Control
Receiver
O21
Junction
Connector
O1
H8
Door Lock Assembly
(Front RH)
Key Unlock
Key Lock
E49
Junction
Connector
E2
F1
E1
E52
Power SW
SS2
SS1
GND
COM
Free
Full
Traveling
IG
IM


A 24
Black

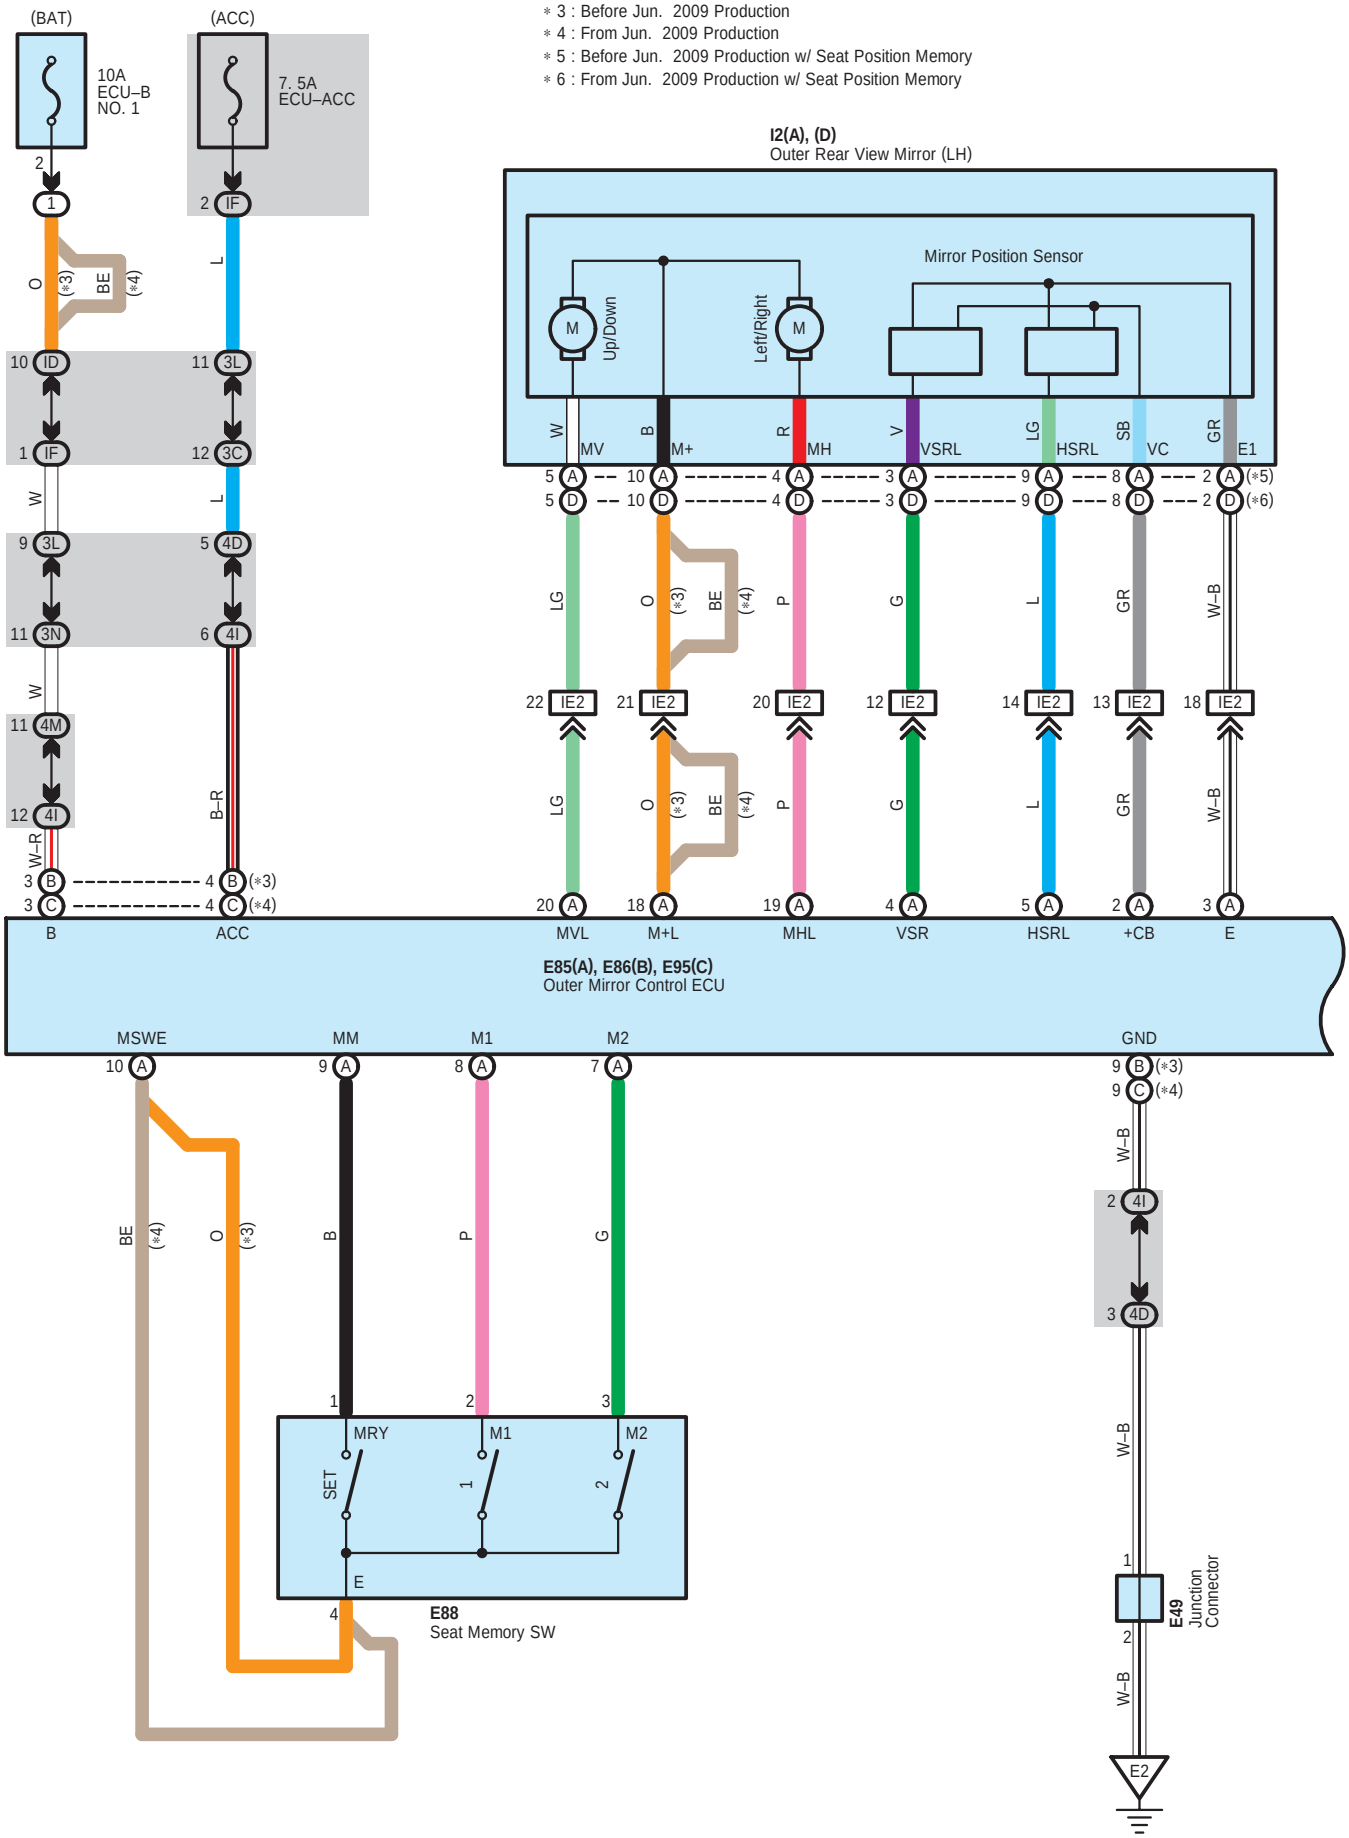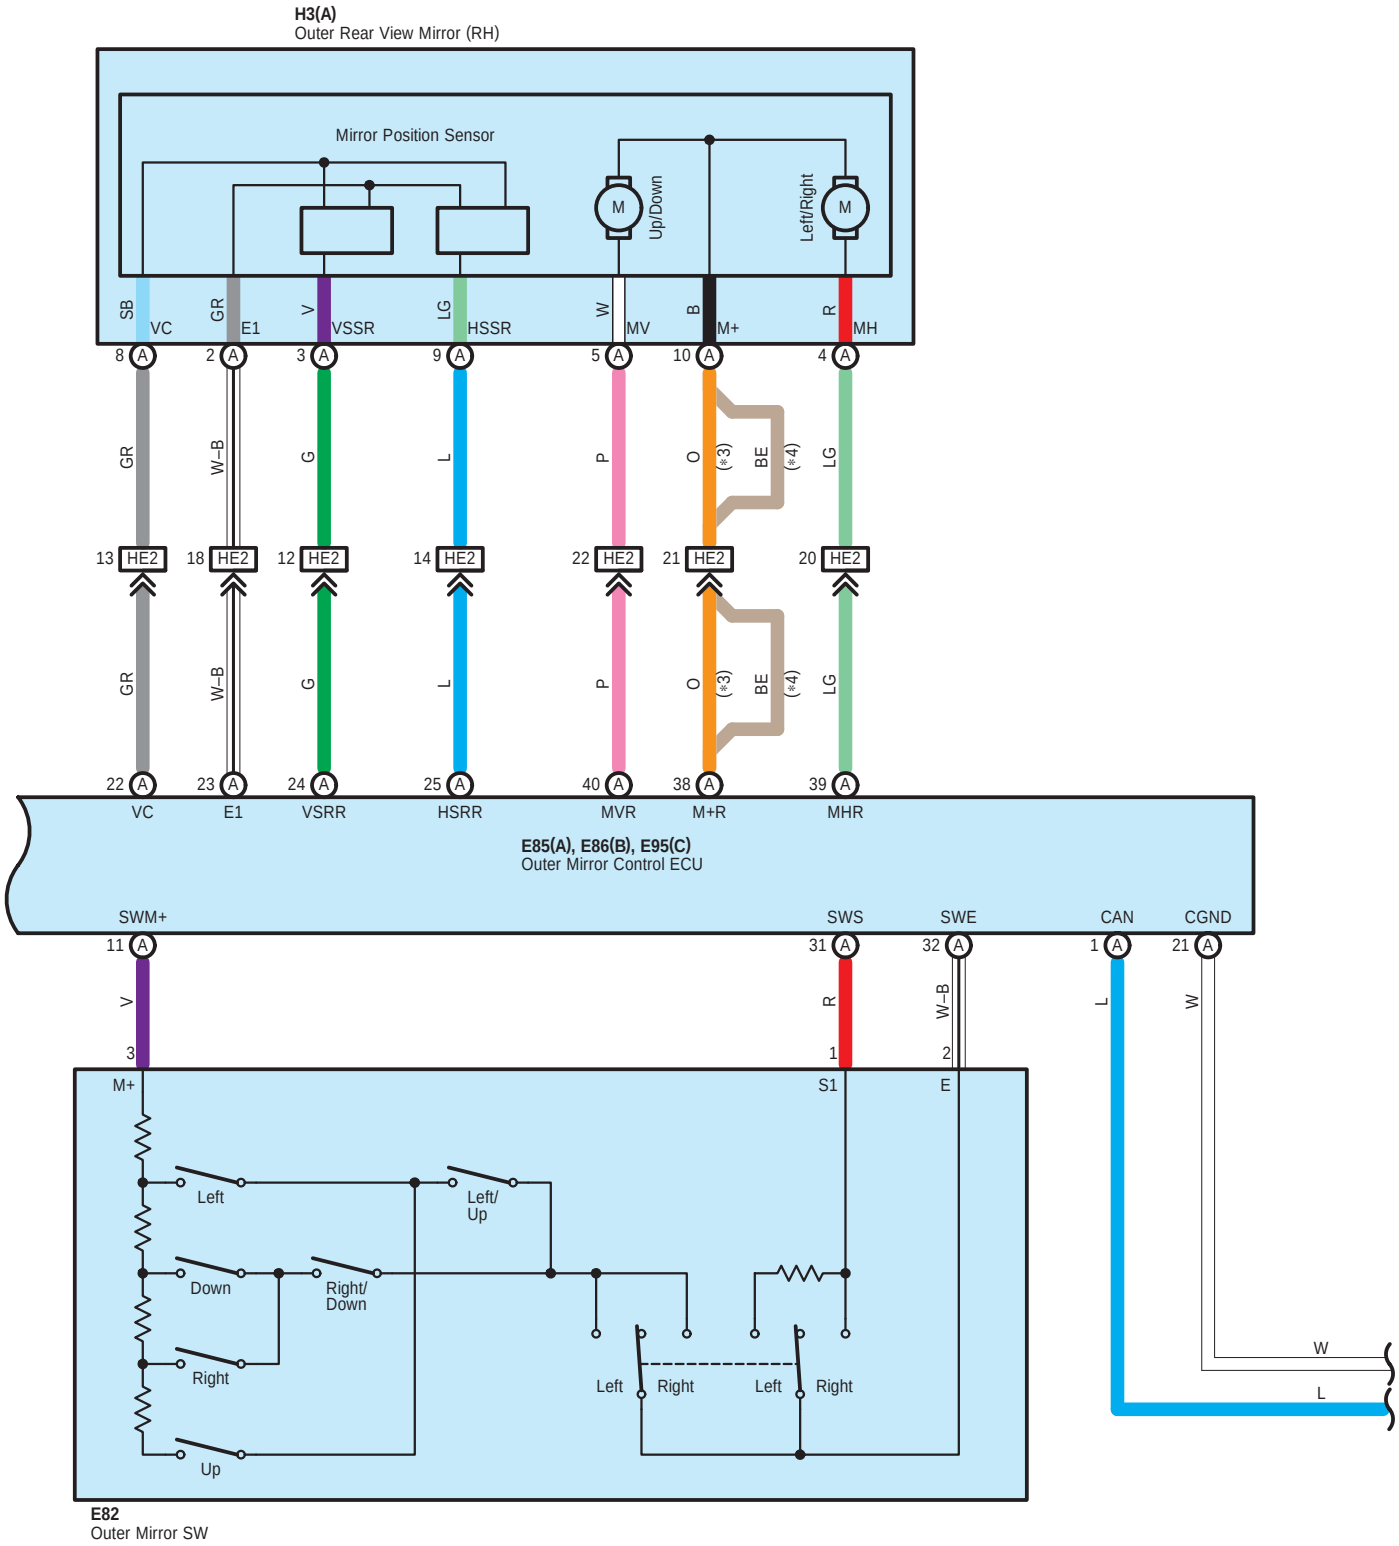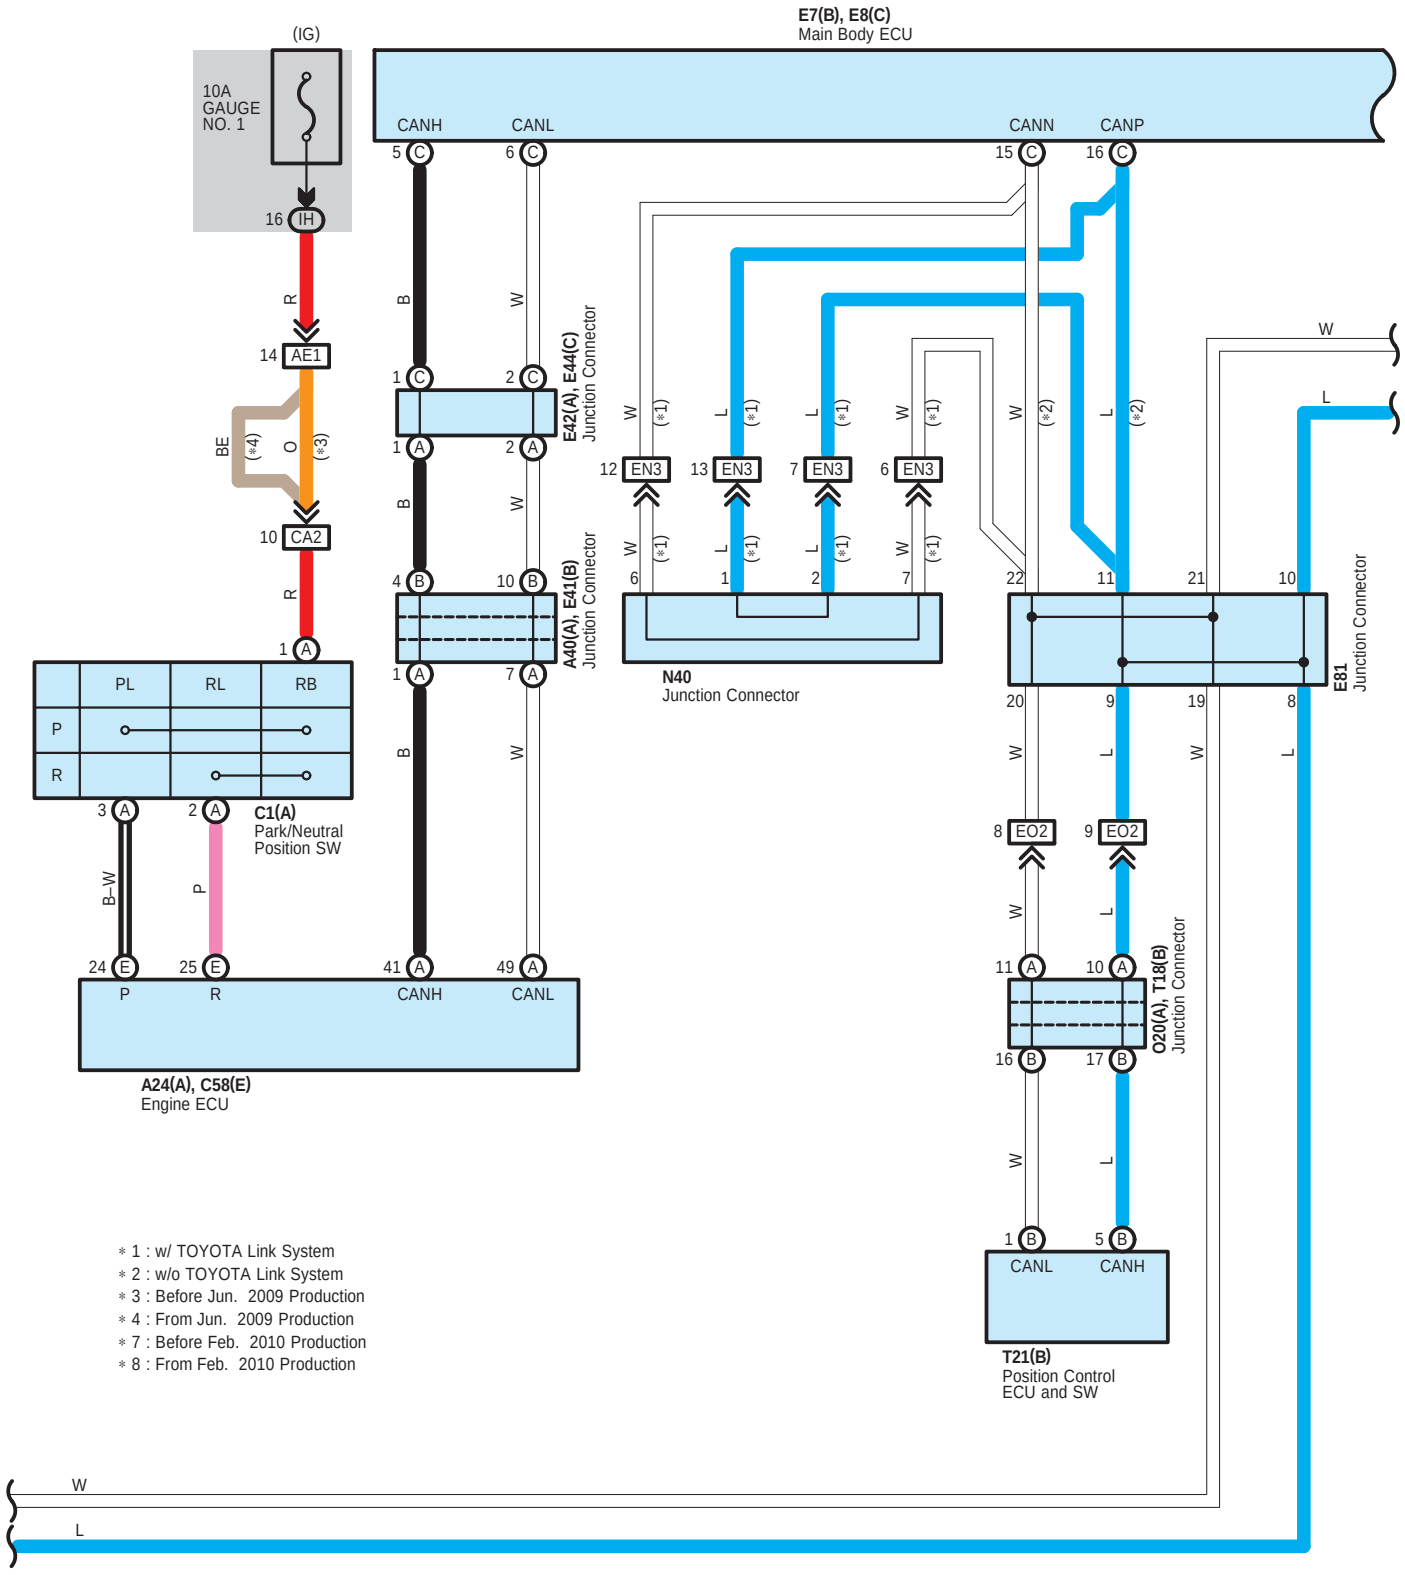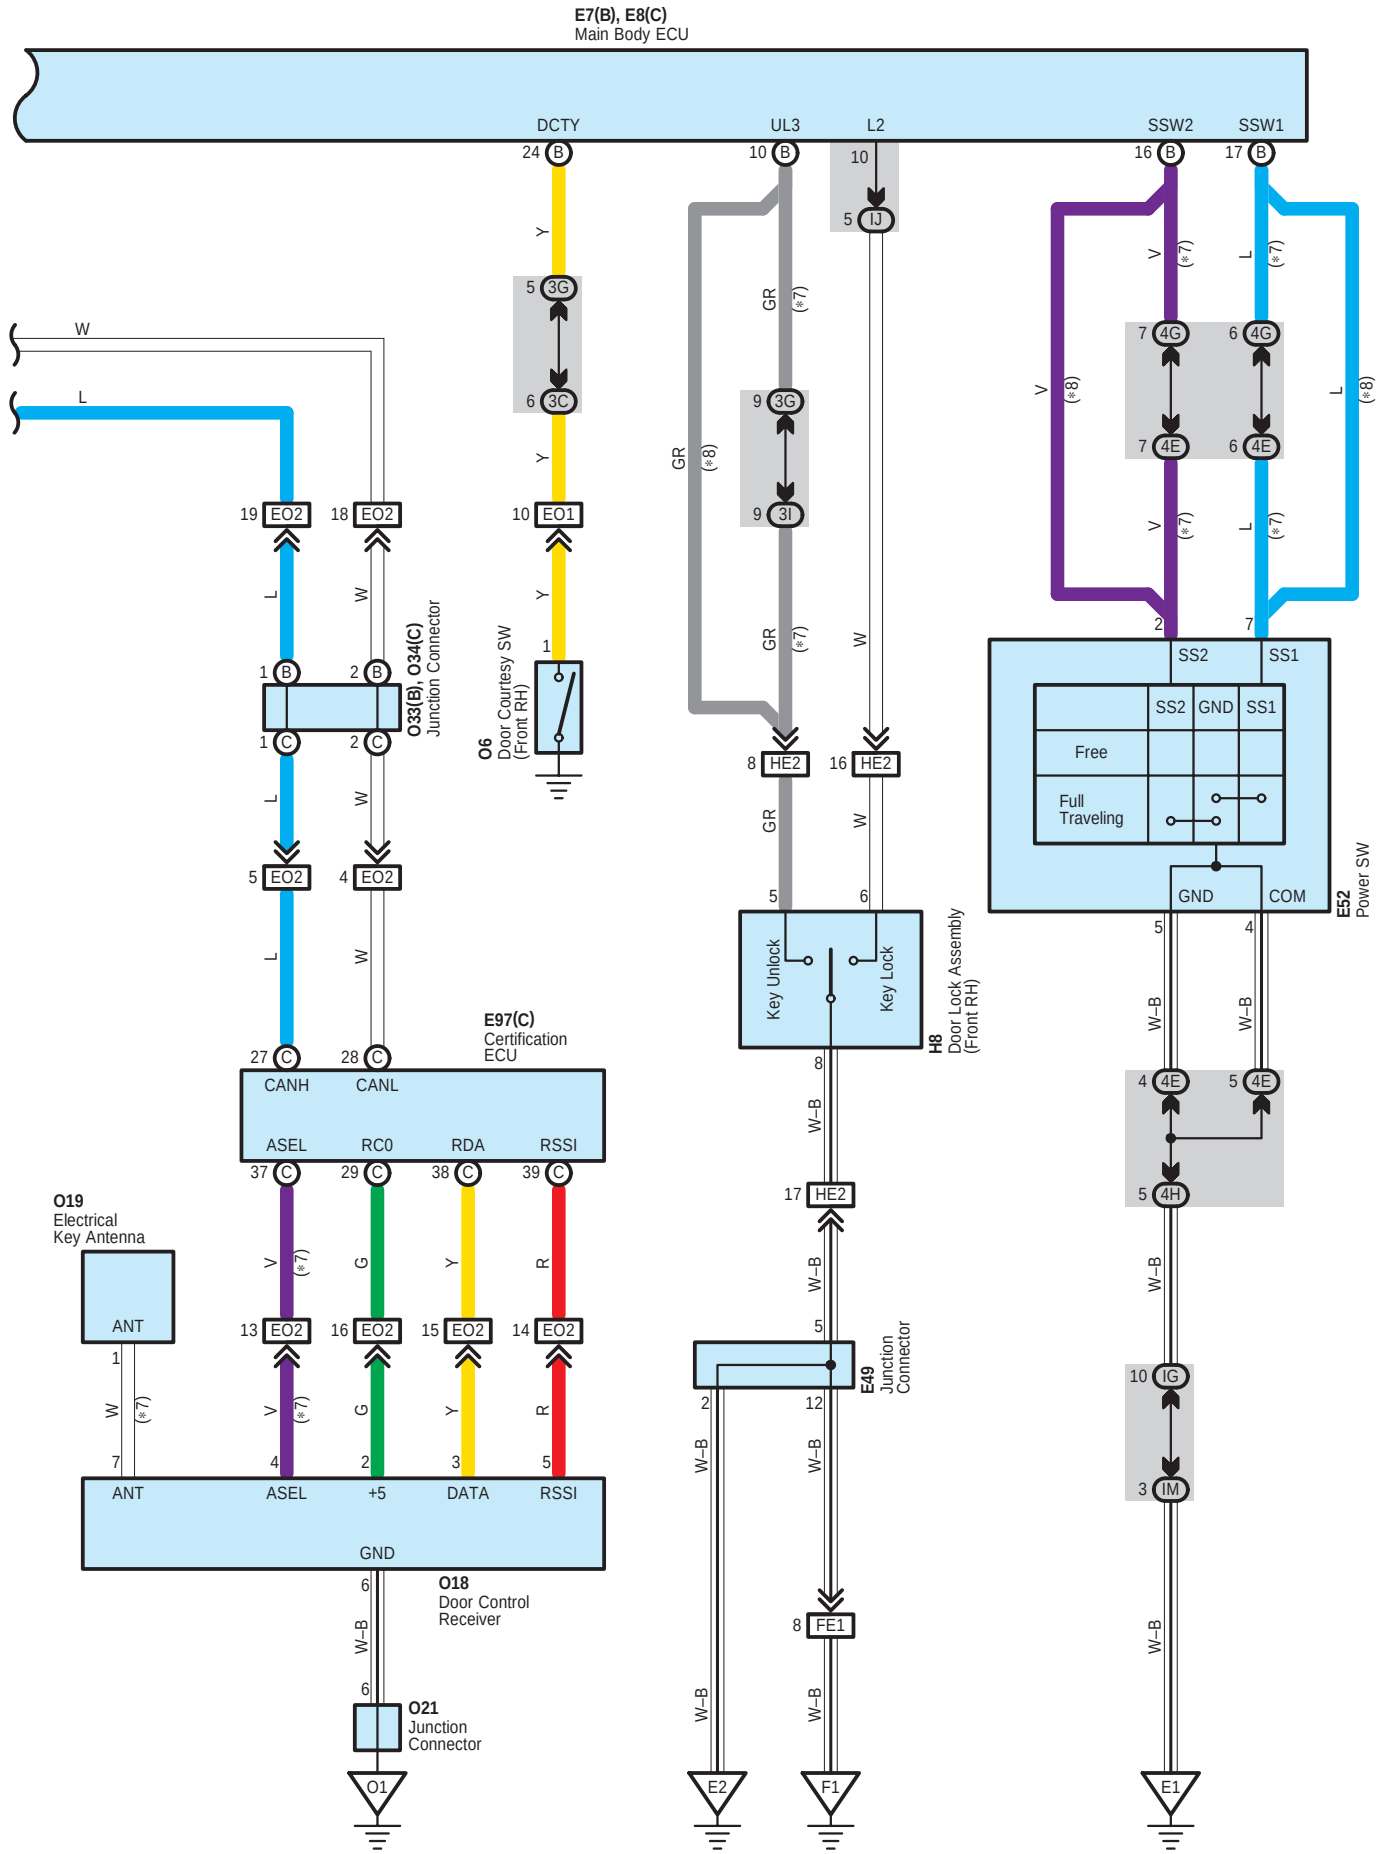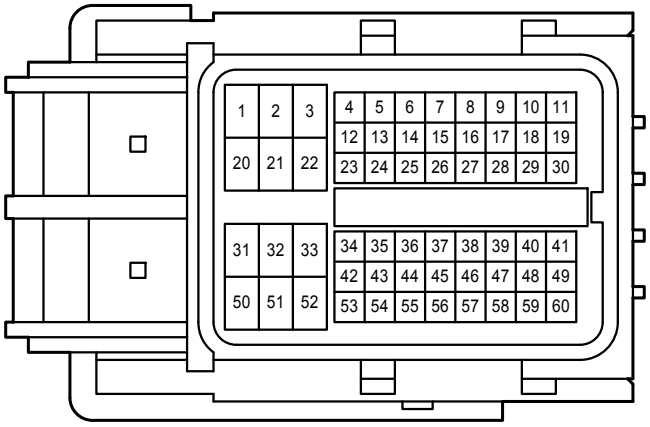


A 40
Blue

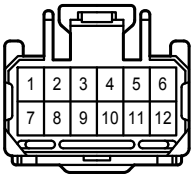


C 1
Gray

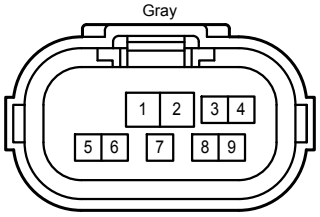


C 58
Black

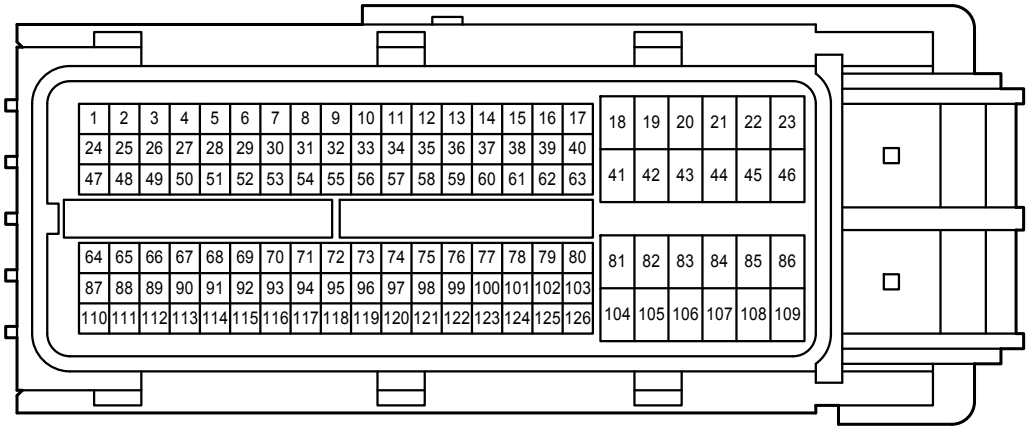


E 7
White

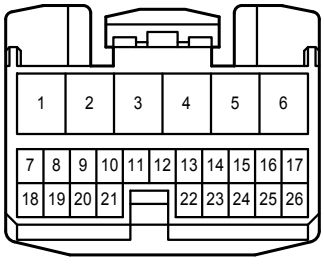


E 8
White

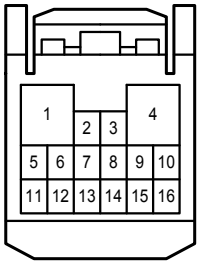


E 41
Blue

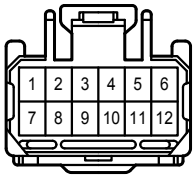


E 42
White




E 44
Black




E 49
Black

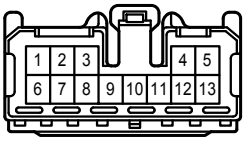


E 52
Black

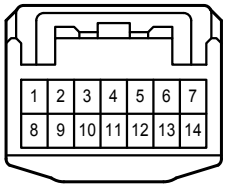


E 81
White

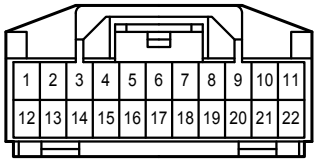


E 82
White

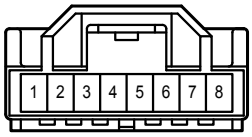


E 85
Black

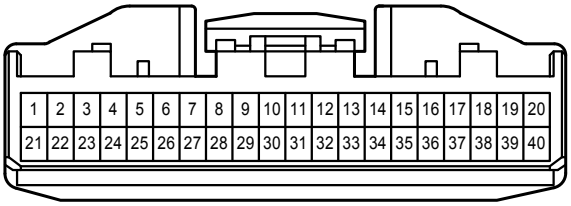


E 86
White

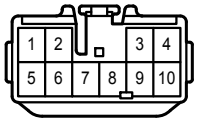


E 88
White

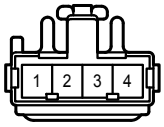


E 95
Black

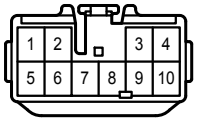

E 97
White

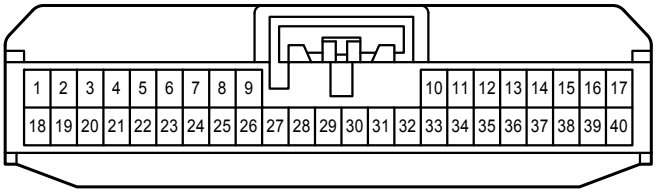


H 3
White

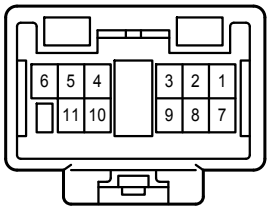


(2GR-FE w/ Seat Position Memory)

H 8
White

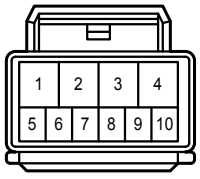


I 2
White

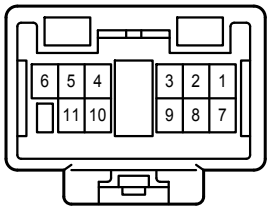


(From Jun. 2009 Production 2GR-FE w/ Seat Position Memory)

I 2
White

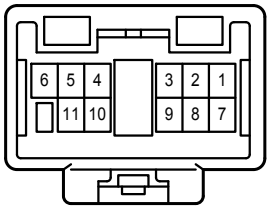

(Before Jun. 2009 Production 2GR-FE w/ Seat Position Memory)


N 40
White



O 6
Black




O 18
White

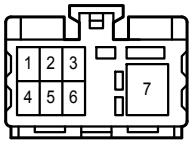


O 19
Gray




O 20
White

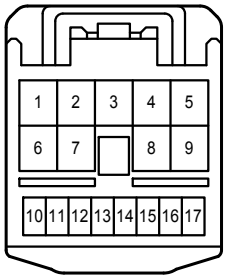


O 21
White

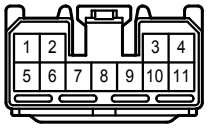


O 33
White




O 34
Gray




T 18
White

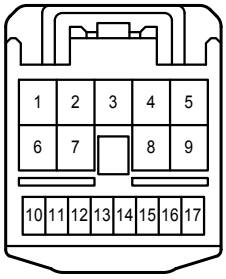


T 21
White

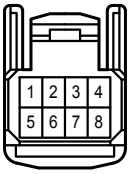


3C
White




3G
White




3I
White




3L
Gray




3N
Gray




4D
Gray




4E
White




4G
White




4H
Gray




4I
White




4M
White




ID
White

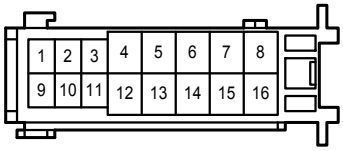


IF
White

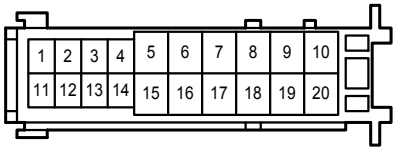


IG
White

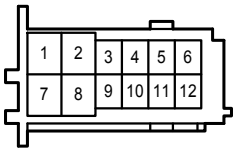


IH
White

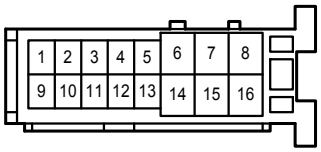


IJ
White

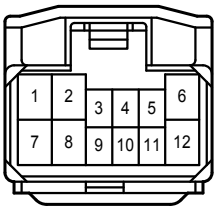


IM
White

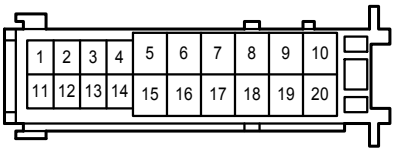


AE1
White

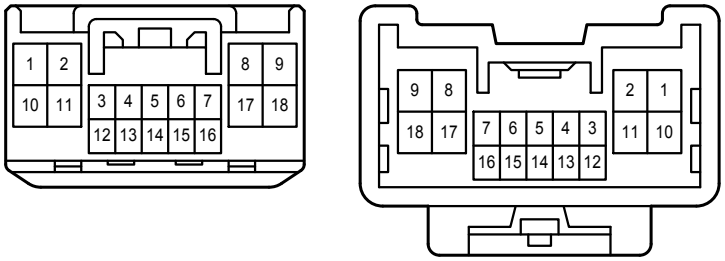


CA2
Black White

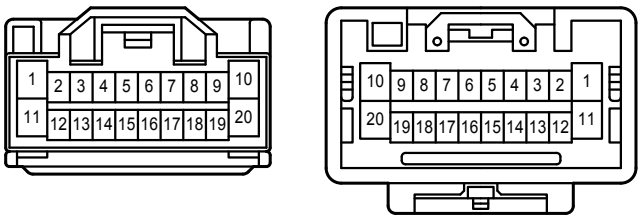


EN3
Gray

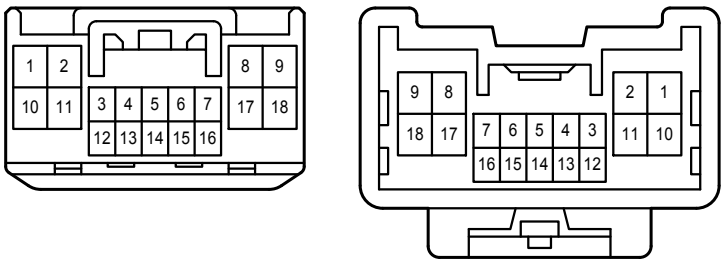


EO1
White

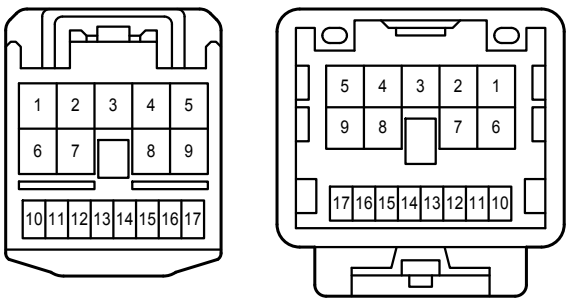


EO2
Blue

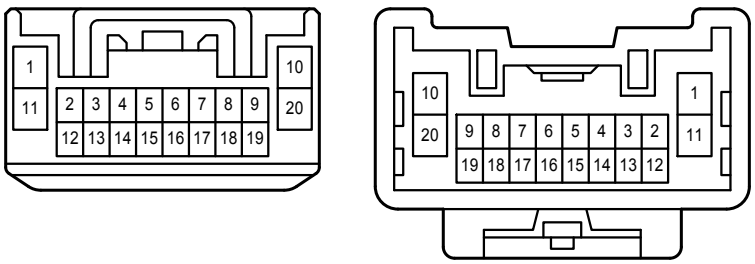

FE1
Gray

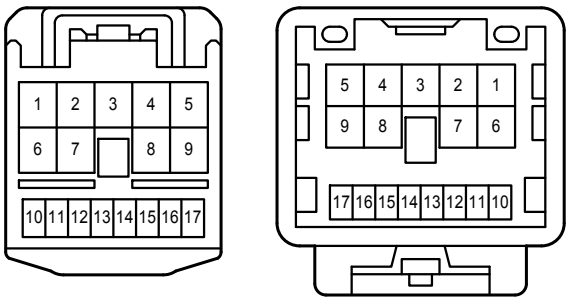

HE2
White

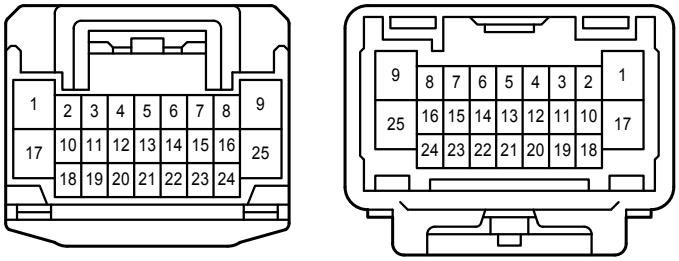

IE2
White

