
■ AUTOMATIC LIGHT CONTROL SYSTEM

- When the light control switch is in the AUTO position, the automatic light control system detects ambient light levels and controls the headlights and taillights (parking lights, taillights and license plate lights), or either of them.
- Ambient light levels are detected by the light control sensor that is integrated in the air conditioner system's solar sensor.
- The main body ECU controls this system.

▶ System Diagram ◀

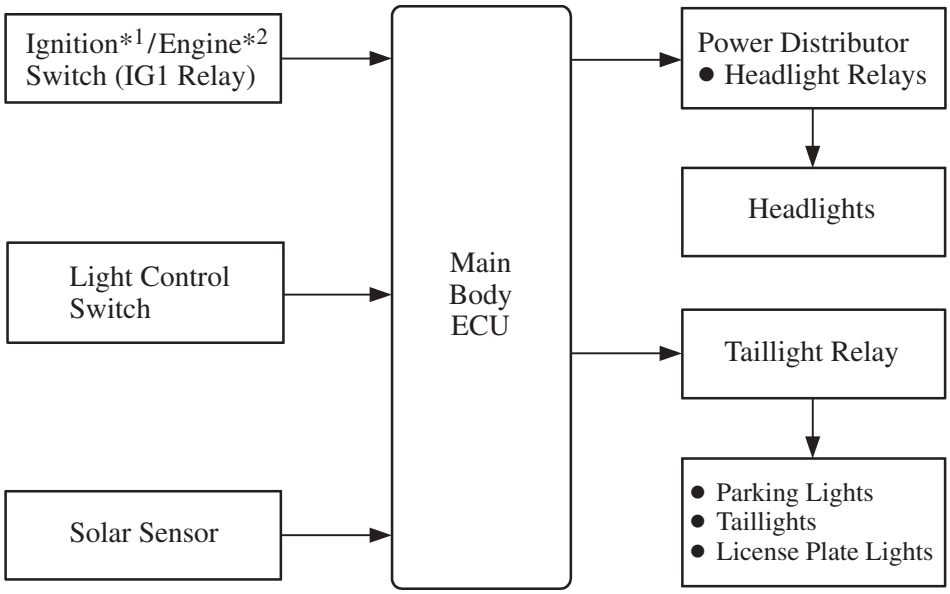

01YBE23P

*1: Models without the smart entry & start system
*2: Models with the smart entry & start system