
■LIGHT TURN-OFF SYSTEM

- The light turn-off system is used to prevent the driver from leaving the vehicle with the headlights, fog lights, parking lights, taillights, or license plate lights on.
- When all of the following conditions are met, the exterior lights turn off.
  - Power source* changes from IG-ON to OFF or ACC.
  - The light control switch is in any position except OFF.
  - The fog light switch is ON (Only for models with fog lights).
  - The driver's door is opened after the being closed.

*: The power source condition can be changed by operating the engine switch on models with the smart entry and start system, and the ignition switch on models without the smart entry and start system.

▶ System Diagram ◀

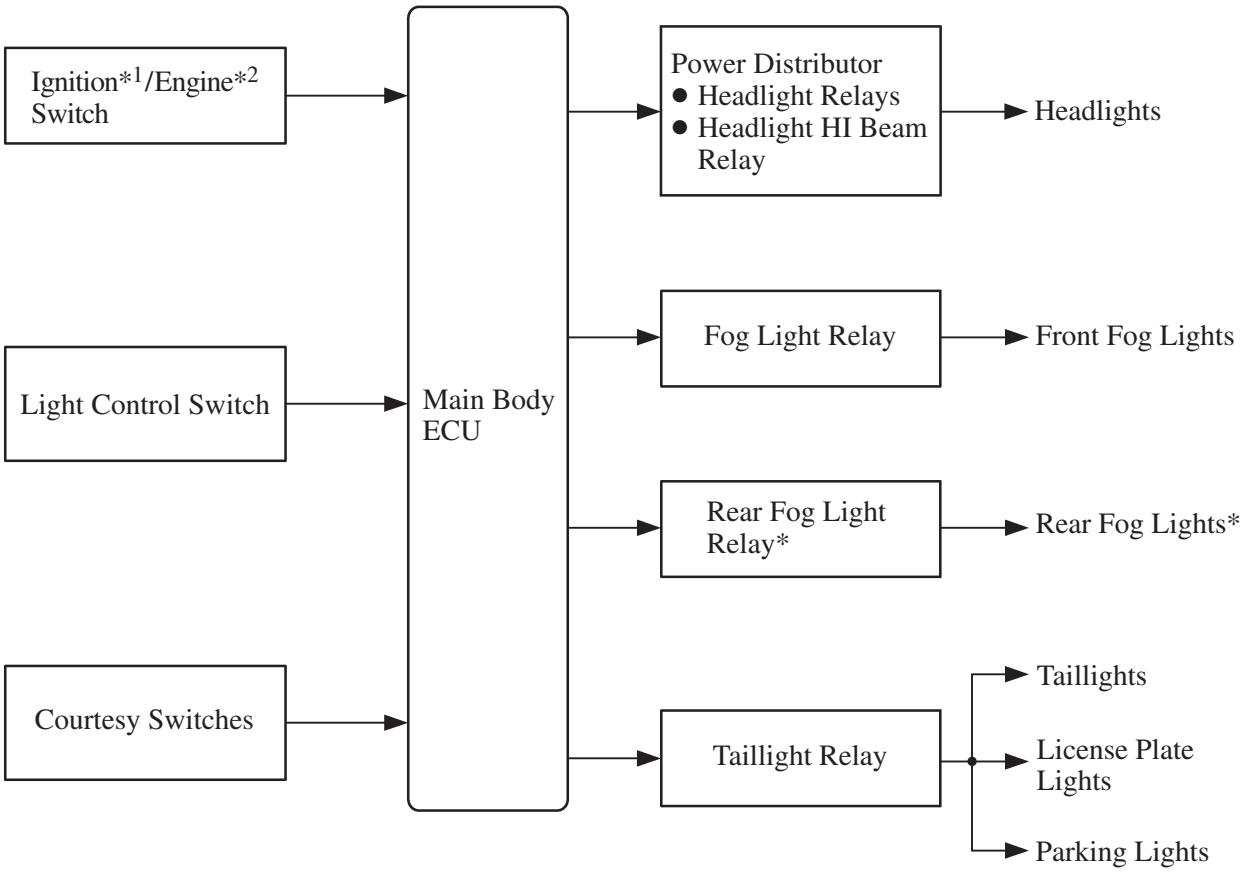

*1: Models without the smart entry and start system
*2: Models with the smart entry and start system
*3: Models with rear fog lights

01ZBE13P

BE