
■AIR OUTLETS AND AIRFLOW VOLUME

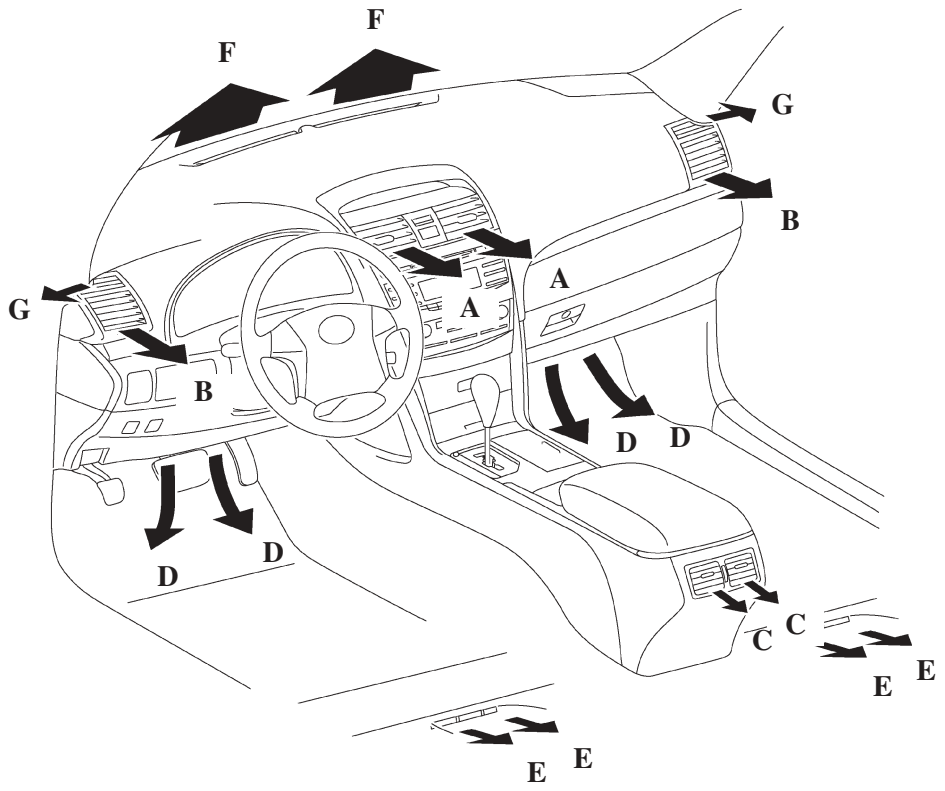

02KBE33TE

INDICATION	MODE	SELECTION		FACE			FOOT		DEF	
				CTR	SIDE	RR	FR	RR	CTR	SIDE
		AUTO	MANUAL	A	B	C	D	E	F	G
	FACE	○	○	◎	◎	◎	—	—	—	—
	B/L-U*1	○	○	◎	◎	◎	○	○	—	—
	B/K-L*2	○	—	○	○	○	◎	◎	—	—
	FOOT-F*3	○	—	—	○	○	◎	○	○	○
	FOOT-R*4	○	○	—	○	○	◎	◎	○	○
	FOOT-D*5	○	—	—	○	○	○	○	○	○
	F/D	○	○	—	○	○	◎	◎	○	○
	DEF	○	○	—	○	—	—	—	◎	◎

02HBE36TE

The size of the circle ○ indicates the proportion of airflow volume.

*1: Greater airflow volume at the upper area.
*2: Greater airflow volume at the lower area.
*3: Greater airflow volume at the front.
*4: Greater airflow volume at the rear.
*5: Greater airflow volume at the defroster.

BE