
■SYSTEM OPERATION

The states of the theft deterrent system are as follows:

State	Description	Theft detection
Disarmed State	The theft deterrent system is not set by the user.	—
Armed Preparation State	The standby state before the theft deterrent system activates when the system has already set.	—
Armed State	The theft deterrent system is being activated. (Theft can be detected.)	○
Alarm State	Theft has been detected and the warning operation activates.	○

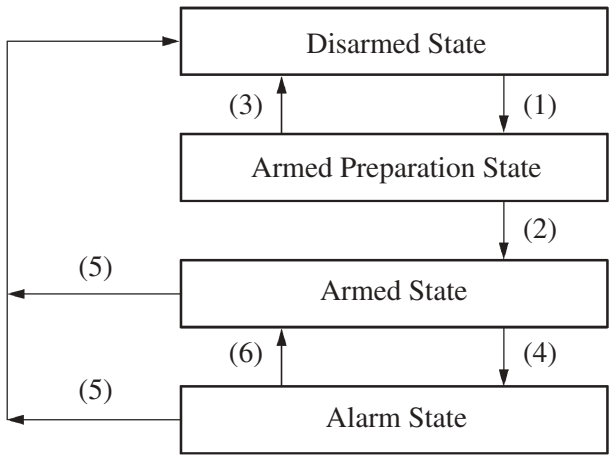

The theft deterrent system activates as described in the diagram below when one of items in the chart occurs in order to cause the system to enter the respective state.

Condition	Item
(1)	● There is no ignition key in the ignition key cylinder.*1 ● All doors, engine hood and trunk lid are closed. ● All doors are locked using the transmitter lock button, the smart entry and start system, or mechanical key*3.
(2)	● The system state is switched when the doors, engine hood, and trunk lid are all closed and locked, and 30 seconds have elapsed. (Except Chinese models) ● The system state is switched when the doors, engine hood, and trunk lid are all closed and locked, and 9 seconds have elapsed. (Chinese models)
(3)	The system state is switched when one of the following conditions is met. ● Any door, engine hood, or trunk lid is opened. ● Any door is unlocked using the transmitter unlock button, the smart entry and start system or mechanical key*3. ● Any door is unlocked using the transmitter unlock button or the smart entry start system.*4 ● The ignition key is inserted in the ignition key cylinder.*1 ● The engine switch is pushed.*2 ● A terminal is disconnected from the battery and reconnected.

(Continued)

Condition	Item
(4)*5	The system state is switched when one of the following conditions is met. ● Any door or engine hood is opened. ● Any door or trunk lid is unlocked using the transmitter unlock button or the smart entry and start system.*3 ● Any door or trunk lid is unlocked using the transmitter unlock button, the smart entry and start system or mechanical key.*4 ● A terminal is disconnected from the battery. (The self-power siren*6 will sound as a warning in the alarm state.) ● The intrusion sensor has detected an intruder. ● The ignition switch is turned ON without using the ignition key.*1 ● A terminal is disconnected from the battery and reconnected. (The vehicle horn and self-power siren*6 or security horn*7 will sound and the hazard warning lights, interior lights, head light*3 and tail light*3 will flash as a warning in the alarm state.)
(5)	The system state is switched when one of the following conditions is met. ● Any door is unlocked using the transmitter unlock button or the smart entry and start system.*3 ● Any door is unlocked using the transmitter unlock button, the smart entry and start system or mechanical key.*4 ● The trunk lid is opened using the transmitter trunk button or the smart entry and start system.*3 ● The trunk lid is opened using the transmitter trunk button, the smart entry and start system or mechanical key.*4 ● The engine is started. (The power source is IG ON.)
(6)	The system state is switched after the alarm time elapses.

*1: Models without smart entry and start system
*2: Models with smart entry and start system
*3: Only Australian and G.C.C. Countries models
*4: Except for Australian and G.C.C. Countries models
*5: If detection of the apparent theft continues, the warning resumes 5 seconds after the previous warning ends and is repeated a maximum of 10 times.
*6: Only Malaysian models
*7: Except for Malaysian models