
■ SYSTEM CONTROL


- By turning the seat ventilation volume switch clockwise from OFF in the left position, the ventilation volume can be adjusted to three levels. The indicator light illuminates green to indicate that the ventilation function is operating.
- When the user operates the seat ventilation volume, the blower motor in the seat back / seat cushion climate control blower operates to direct the air that is drawn in from behind the climate control blower to both the seatback and seat cushion pads.
- After the air is directed to both the seatback and seat cushion pads, it travels throughout the pads along the grooves that are provided in the pads. Then, it spreads to the entire seat along the slab urethane layer, and becomes discharged through the perforations in the genuine leather seat cover.

▶ Ventilation Function ◀

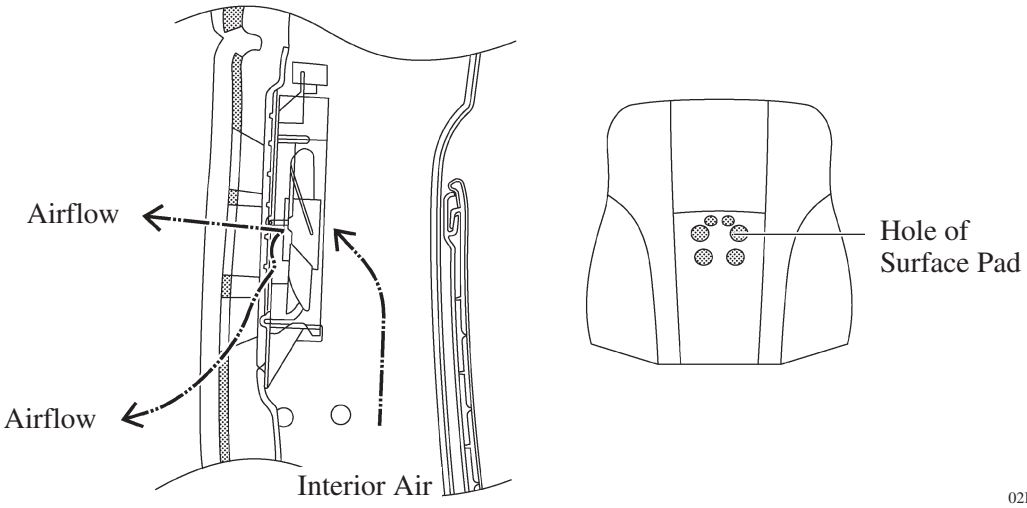

02KBE201Y

Seatback

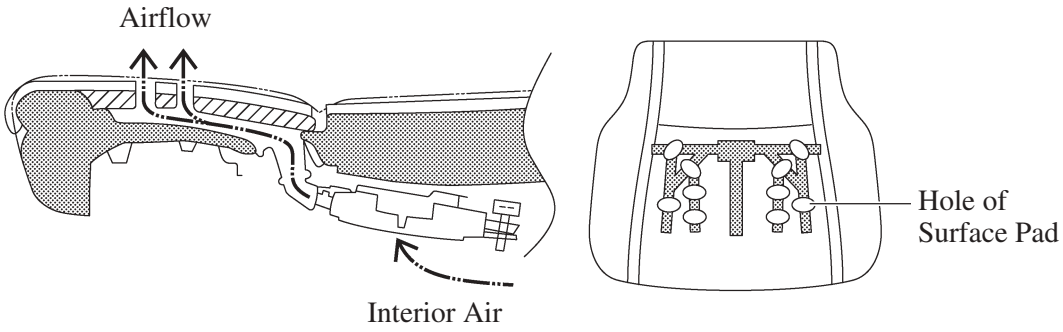

Seat Cushion

02KBE202Y

BE