■ SEAT BELT

1. General

The following types of seat belts are provided.


Seat Position	Seat Belt Type	Remarks
Driver	3-point ELR*1	Electrical Sensing Type Pretensioner, Force Limiter*4 and Tension Reducer
		Pre-crush Seat Belt*5
Front Passenger	3-point ELR*1	Electrical Sensing Type Pretensioner & Force Limiter*4
		Pre-crush Seat Belt*5
Rear Passenger (RH and LH)	3-point ELR*1 & ALR*2	—
Rear Passenger (Center)	3-point ELR*3	—

*1: Emergency Locking Retractor
*2: Automatic Locking Retractor
*3: ALR is used on only models for Australia and G.C.C. countries
*4: Only for models with SRS Airbag System
*5: Only for models with Pre-crash Safety System

2. Pretensioner and Force Limiter

In accordance with the ignition signal from the airbag sensor assembly, the seat belt pretensioner activates simultaneously with the deployment of SRS airbag for the driver and front passenger.
In the beginning of the collision if the tension of the seat belt applied to the occupant reaches a predetermined level, the force limiter activates to control the force.

▶ Front Airbag Operation ◀

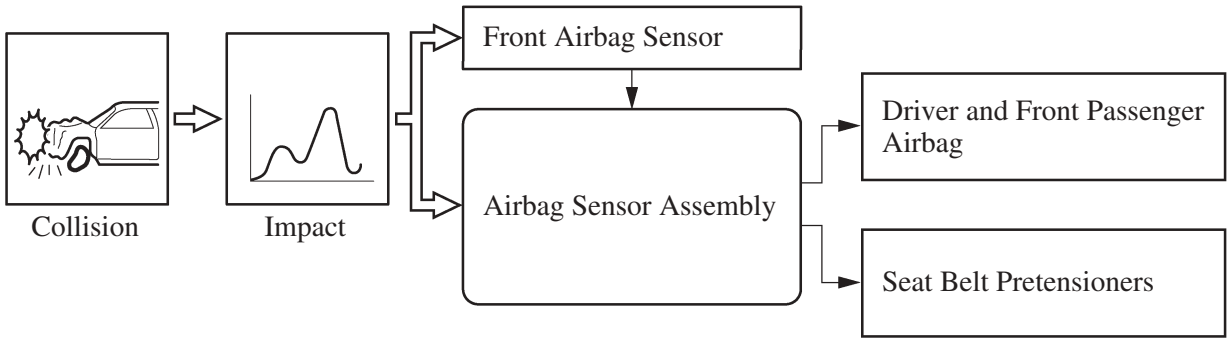

02KBO14TE