
■ PLANETARY GEAR UNIT

1. Construction

- The U250E automatic transaxle uses the gear layout in which the front and rear planetary gear units are placed on the input shaft (intermediate shaft), the counter drive and driven gears are placed on the front of the front planetary gear unit, and the U/D planetary gear unit is placed on the counter shaft.
- A centrifugal fluid pressure canceling mechanism is used.

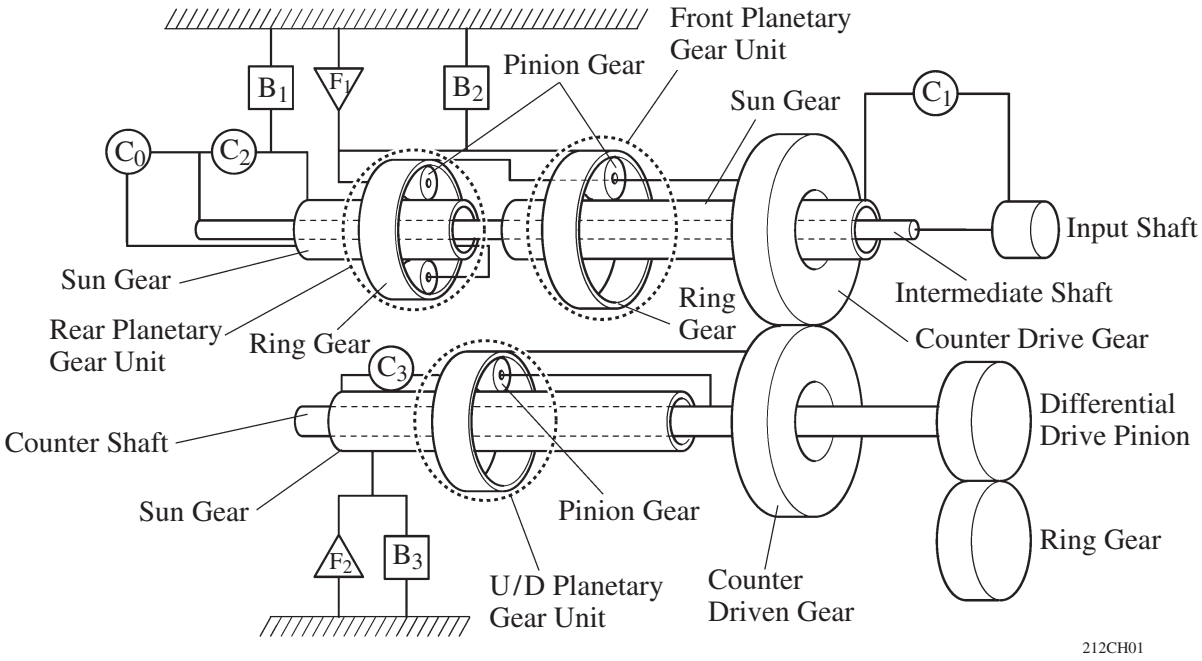

2. Function of Components

Component		Function
C_1	Forward Clutch	Connects input shaft and front planetary sun gear.
C_2	Reverse Clutch	Connects input shaft and rear planetary sun gear.
C_3	U/D Direct Clutch	Connects U/D planetary sun gear and U/D planetary carrier.
C_0	Direct & O/D Clutch	Connects input shaft and rear planetary carrier.
B_1	2nd & O/D Brake	Prevents rear planetary sun gear from turning either clockwise or counterclockwise.
B_2	1st & Reverse Brake	Prevents rear planetary carrier and front planetary ring gear from turning either clockwise or counterclockwise.
B_3	U/D Brake	Prevents U/D planetary sun gear from turning either clockwise or counterclockwise.
F_1	No.1 One-Way Clutch	Prevents rear planetary carrier and front planetary ring gear from turning counterclockwise.
F_2	U/D One-Way Clutch	Prevents U/D planetary sun gear from turning clockwise.
Planetary Gears		These gears change the route through which driving force is transmitted, in accordance with the operation of each clutch and brake, in order to increase or reduce the input and output speeds.


3. Transaxle Power Flow

Shift Lever Position	Gear	Solenoid Valve						Clutch				Brake			One-way Clutch	
		S4	SR	DSL	SL1	SL2	SL3	C_0	C_1	C_2	C_3	B_1	B_2	B_3	F_1	F_2
P	Park				○	○								○		
R	Reverse				○	○				○			○	○		
N	Neutral				○	○								○		
D, S5	1st				○	○			○					○	○	○
	2nd					○			○			○		○		○
	3rd		○		○			○	○					○		○
	4th		○	Δ*		Δ*	○	○				○		○		○
	5th	○	○	Δ		Δ	○	○			○	○				
4 or S4	1st				○	○			○					○	○	○
	2nd					○			○			○		○		○
	3rd		○		○			○	○					○		○
	4th		○	Δ		Δ	○	○				○		○		○
3 or S3	1st				○	○			○					○	○	○
	2nd					○			○			○		○		○
	3rd		○		○			○	○					○		○
2 or S2	1st				○	○			○					○	○	○
	2nd					○			○			○		○		○
L or S1	1st			○	○	○			○				○	○	○	○

○: ON Δ: Lock-up ON


*: Shift control operates only when 5th is prohibited while traveling uphill/downhill.

1st Gear (D, 4, 3, 2 Position or S mode)

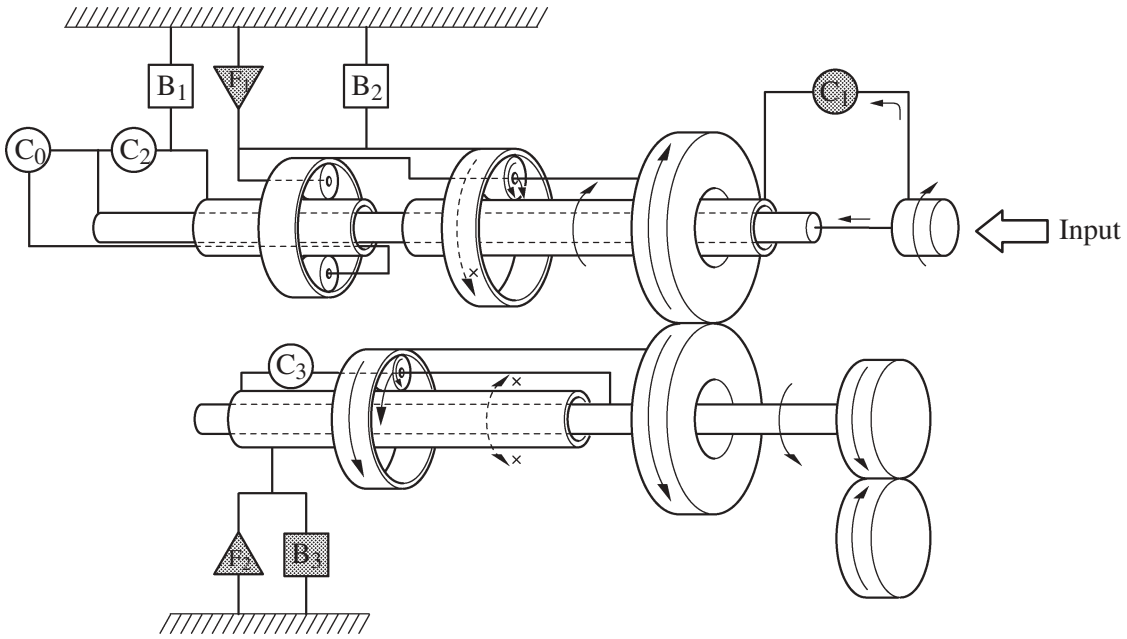


275CA44

1st Gear (L Position or S mode)

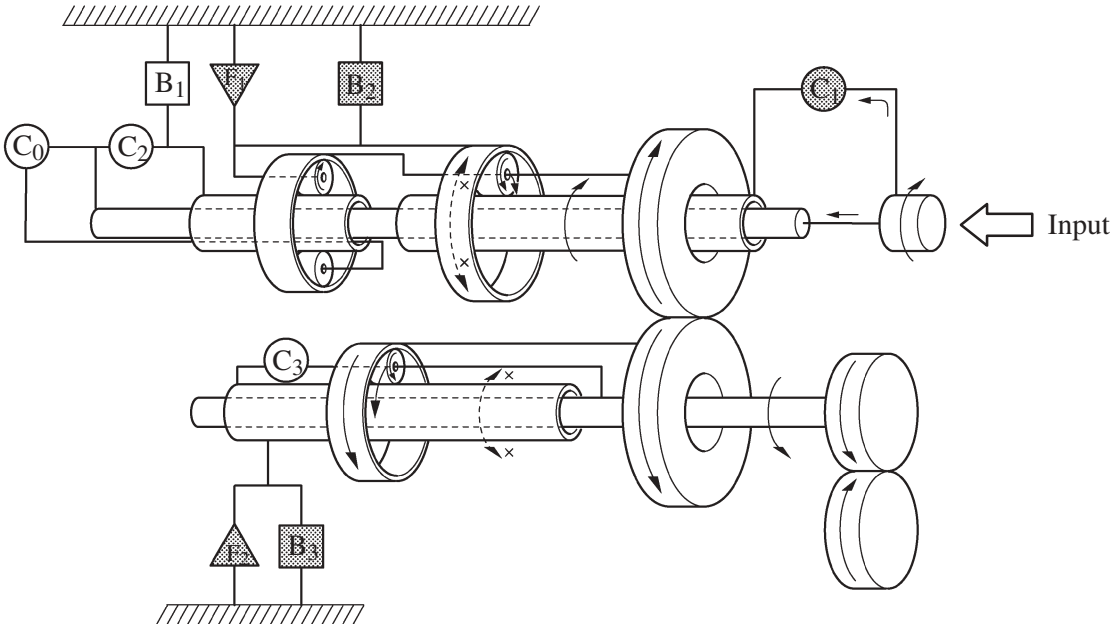


025CH04Y

2nd Gear (D, 4, 3, 2 Position or S mode)

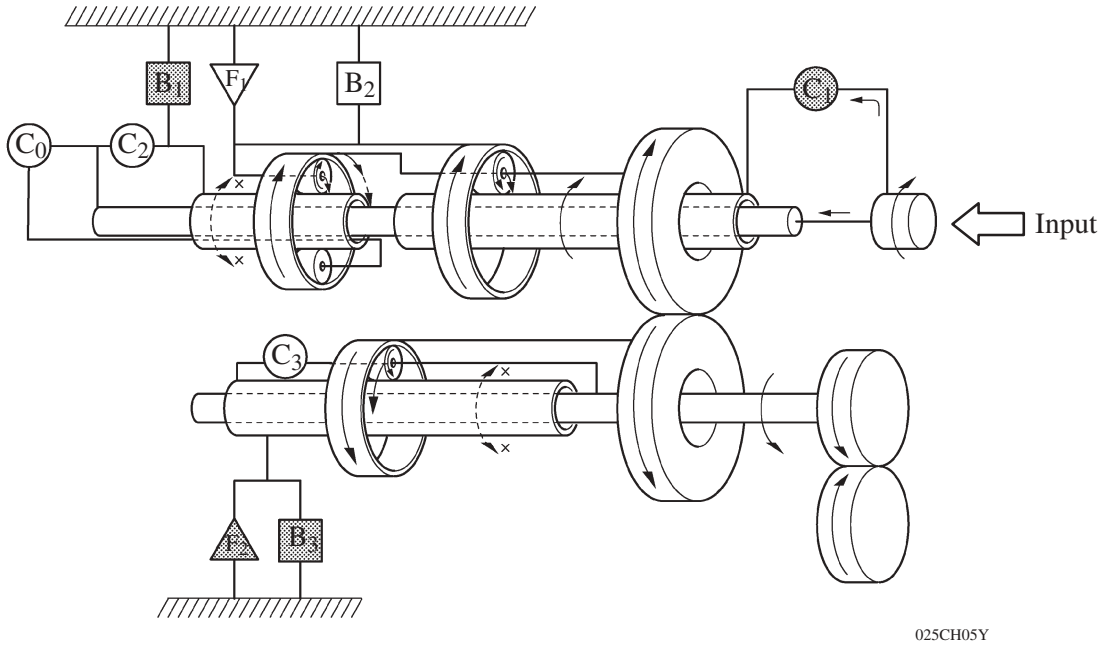


025CH05Y

3rd Gear (D, 4, 3 Position or S mode)

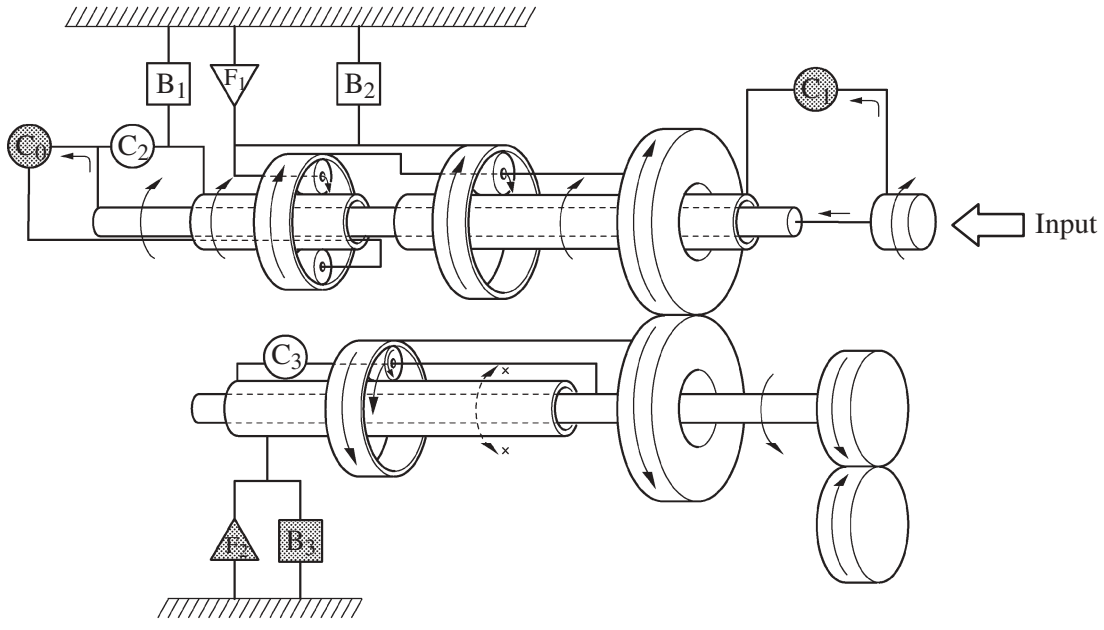


025CH06Y

4th Gear (D, 4 Position or S mode)

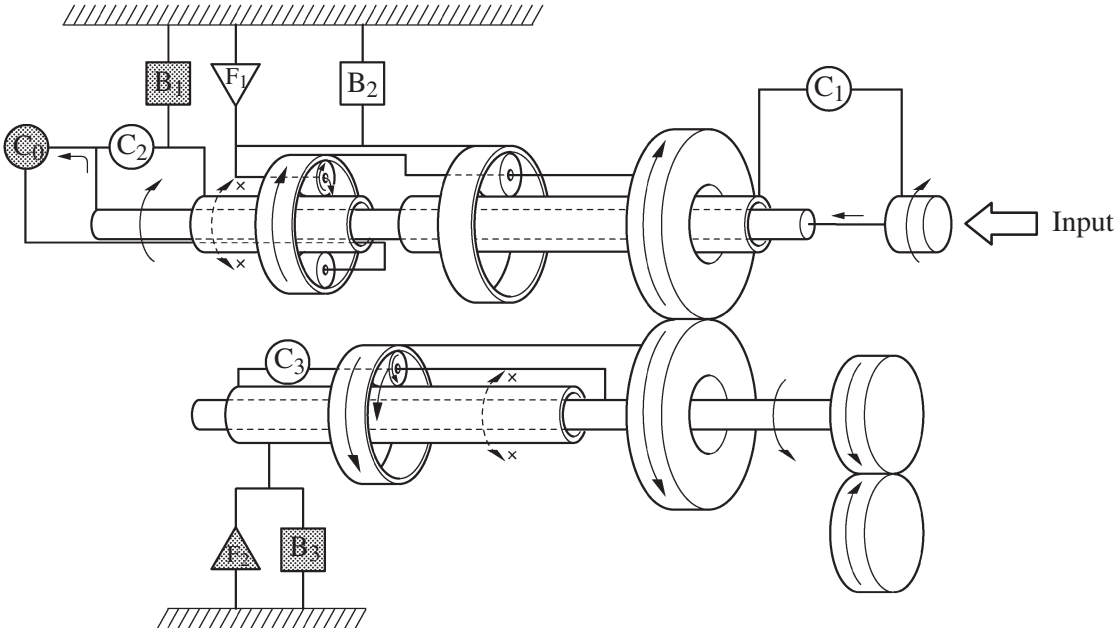


025CH07Y

5th Gear (D Position or S mode)

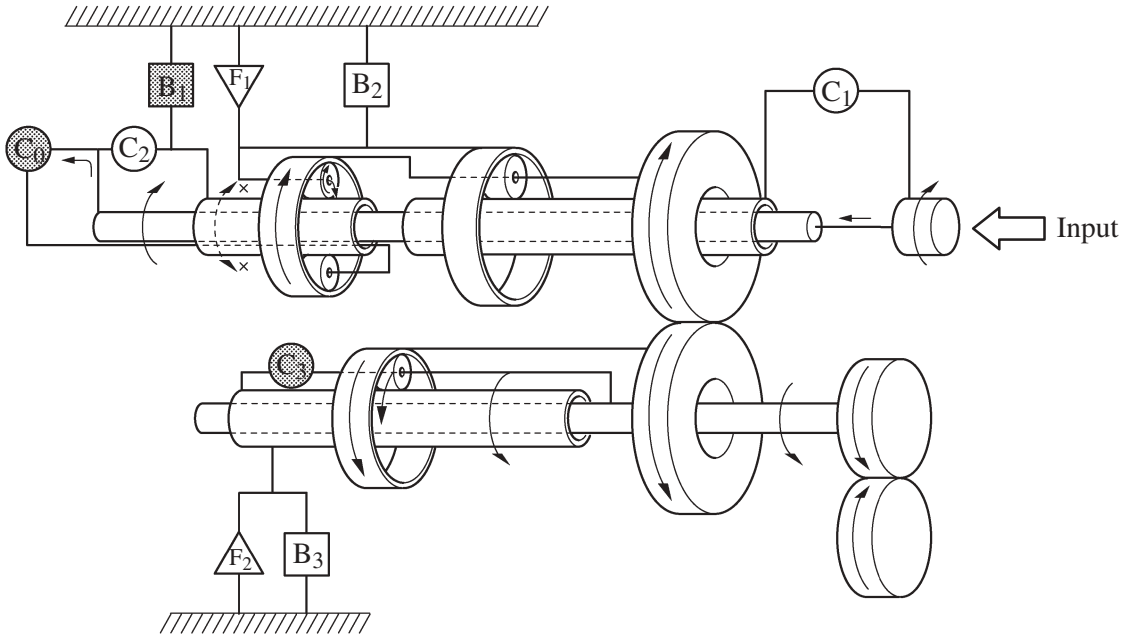

025CH08Y

Reverse Gear (R Position)

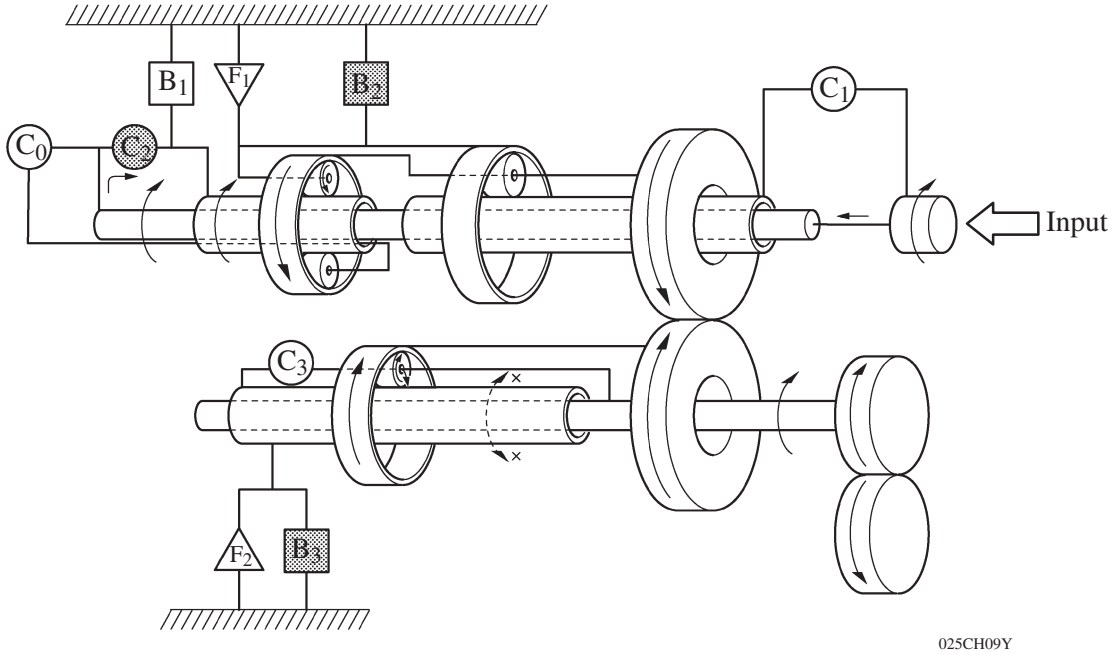

4. Centrifugal Fluid Pressure Canceling Mechanism

This mechanism is applied to C_0, C_1, and C_3 clutches when shifting from 2nd to 3rd, from 3rd to 4th and from 4th to 5th. The basic construction and operation of the mechanism are the same as those used on U241E. For detail, refer to U241E section on page CH-14.

