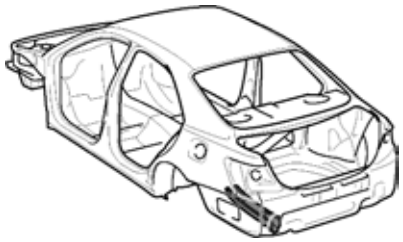
REAR FLOOR SIDE REAR MEMBER (ASSY)


F25752A


With the rear floor no.3 crossmember removed.

Symbol meaning

REMOVAL	▲1 ▲2 : Remove Weld Points
INSTALLATION	■1 ■2 : MIG Plug Weld

F25752B

REMOVAL·INSTALLATION

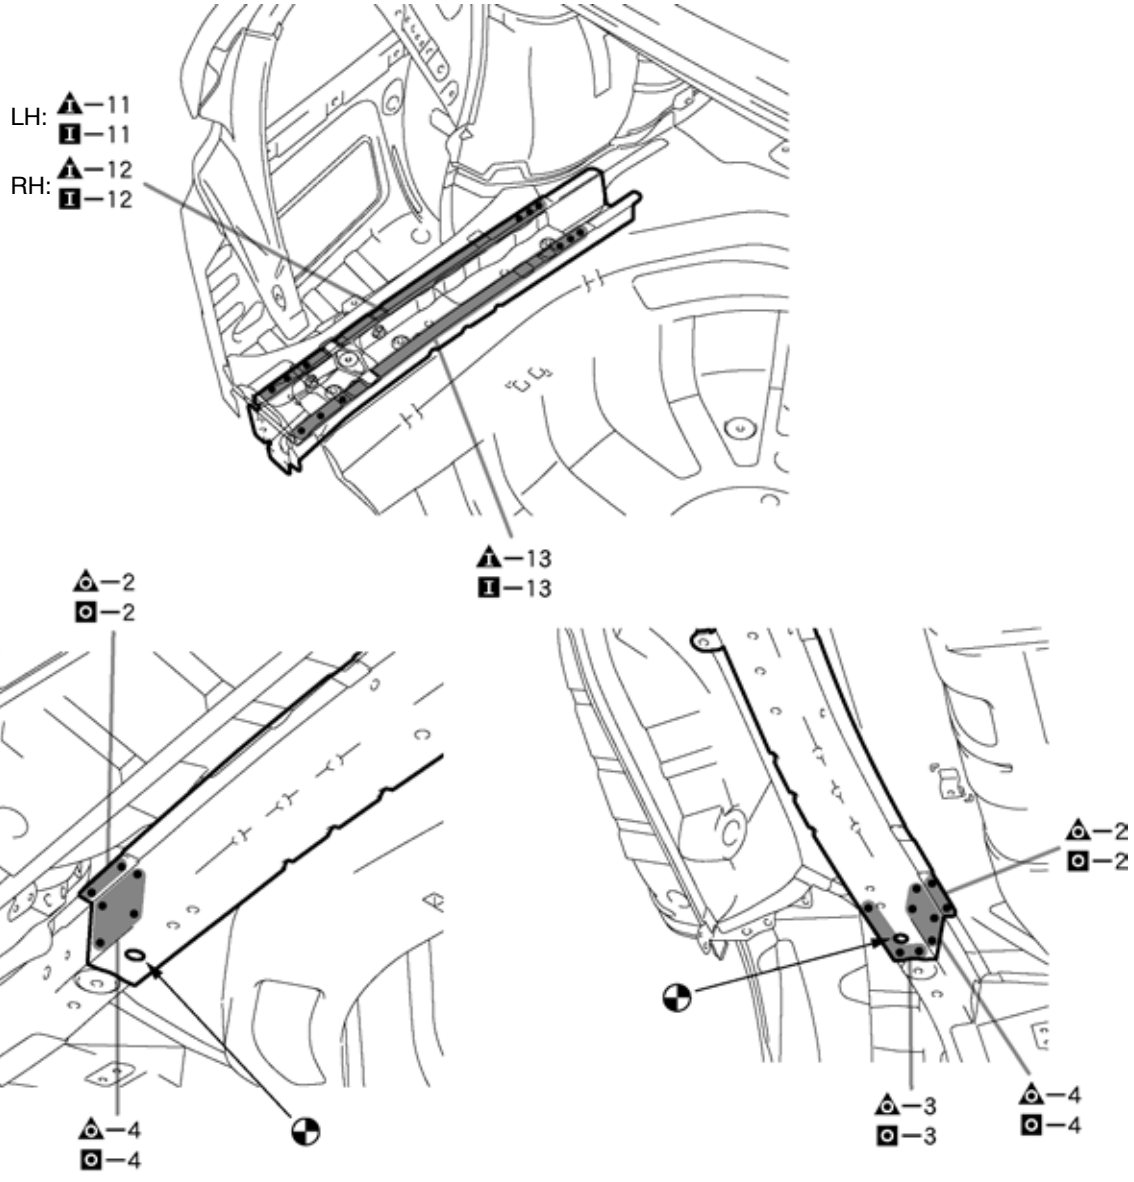

F25752

INSTALLATION POINT

1 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
2 After welding, apply undercoating to the corresponding parts.(See the paint·coating)
3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.