
FIT STANDARD/ADJUSTMENT METHOD/TORQUE SPECIFICATION

HOOD SUB-ASSEMBLY

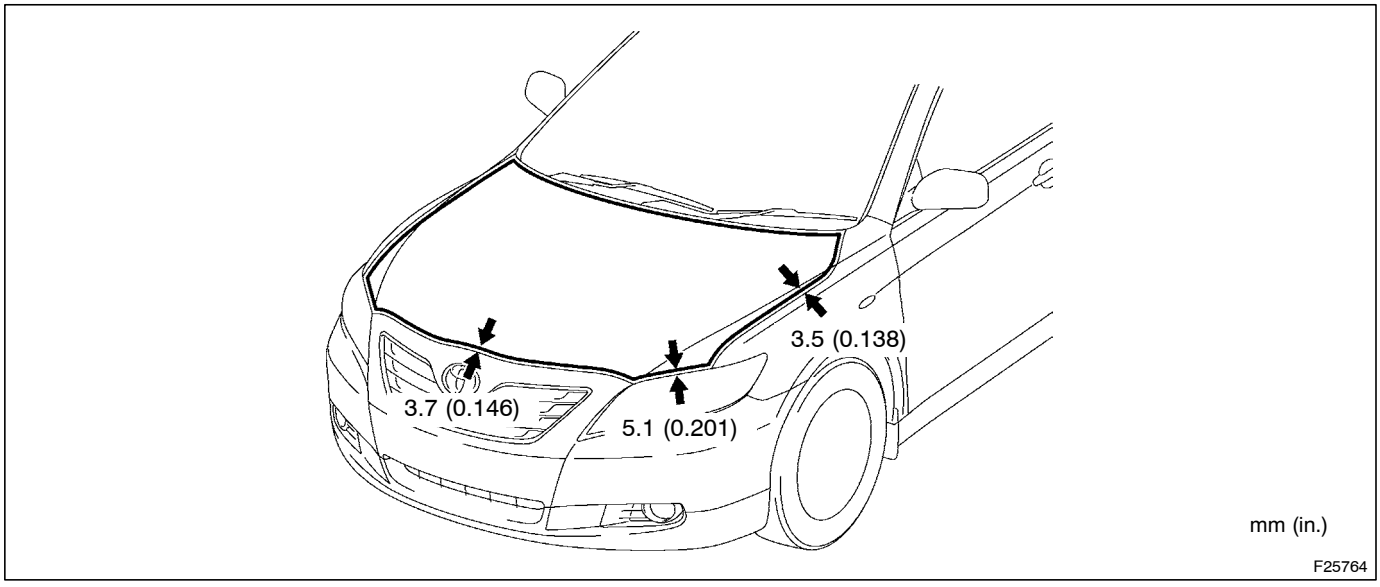

1. ADJUST HOOD SUB-ASSEMBLY

HINT:

- *Centering bolts are used to mount the hood hinge and hood lock. The hood and hood lock cannot be adjusted with the centering bolts on. Substitute the centering bolts with standard bolts (with washers) when making adjustments.*


a. Horizontally and vertically adjust the hood.

i. Loosen the hoold's 4 hinge bolts.

ii. Move the hood and adjust the clearance between the hood and front fender.

iii. Tighten the hood's 4 hinge bolts after the adjustment.

Torque:
13 N·m (133 kgf·cm, 10 ft.·lbf)

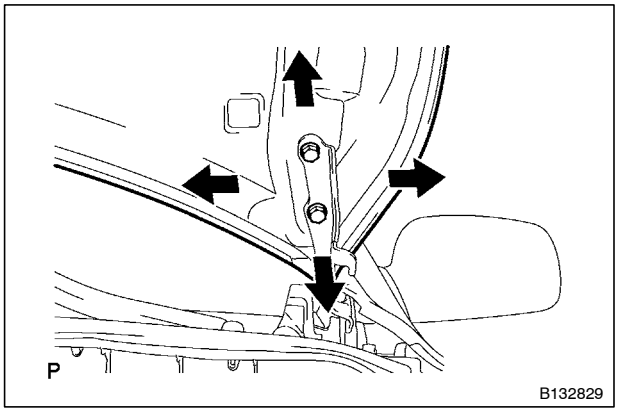


b. Adjust the height of the hood front end using the cushion rubber.

i. Adjust the cushion rubber so that the height of the hood and fender are aligned.

HINT:

Raise or lower the hood's front end by turning the cushion rubber.

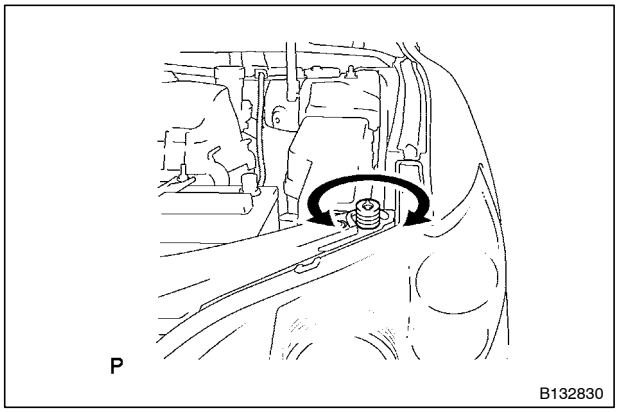


c. Adjust the hood lock.

i. Loosen the 3 bolts.


ii. Tighten the bolts after the adjustment.

Torque:
7.5 N·m (77 kgf·cm, 66 in.·lbf)

iii. Adjust the hood lock position so that the striker can enter it smoothly.

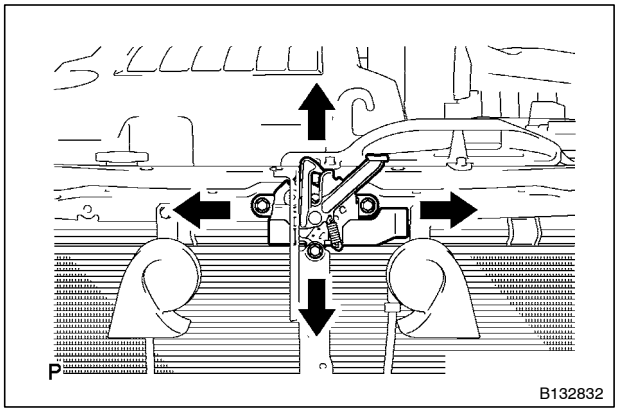

FRONT DOOR

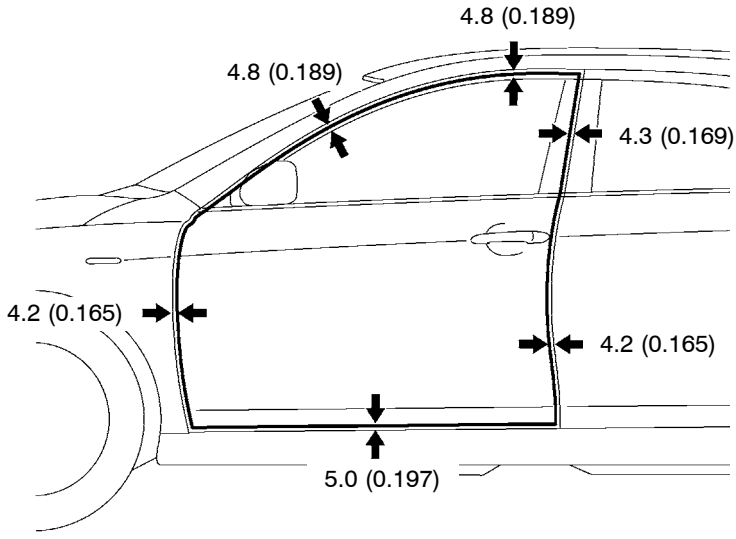

1. ADJUST FRONT DOOR

HINT:

- *Before adjusting the door position for vehicles equipped with side airbags and curtain shield airbags, be sure to disconnect the battery. After adjustment, inspect the SRS warning light, the side airbag system, and the curtain shield airbag system for normal operation. Then initialize both airbag systems.*
- *Use the same procedures for the RH side and LH side.*
- *The procedures listed below are for the LH side.*
- *Centering bolts are used to mount the door hinge to the vehicle body and door. The door cannot be adjusted with the centering bolts on. Substitute the centering bolts with standard bolts (with washers) when making adjustment.*

a. Using SST, loosen the body's hinge bolts and adjust the door position.

SST
09812-00010


b. Tighten the body's hinge bolts after the adjustment.

Torque:
26 N·m (265 kgf·cm, 19 ft.·lbf)

c. Loosen the door's hinge bolts and adjust the door position.

d. Tighten the door's hinge bolts after the adjustment.


Torque:
26 N·m (265 kgf·cm, 19 ft.·lbf)

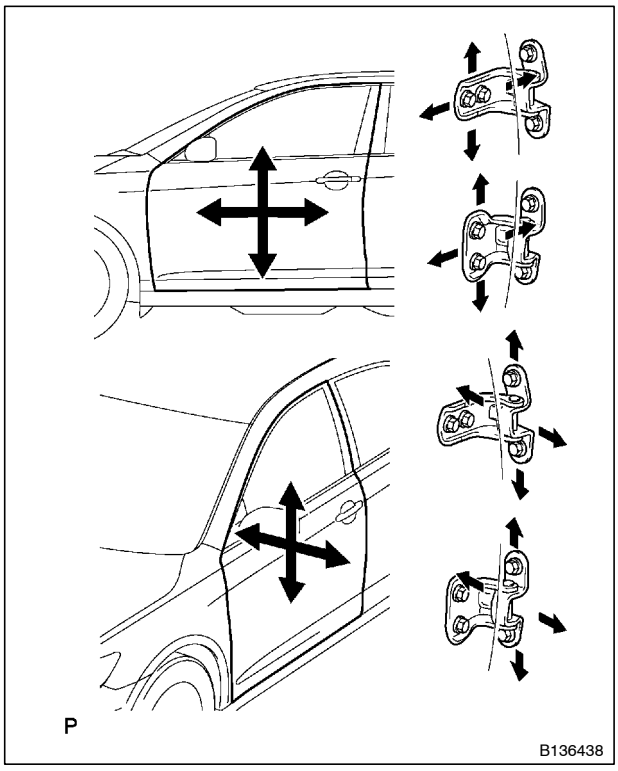


e. Using a "torx" socket wrench (T40), adjust the striker position by slightly loosening the striker mounting screws and hitting the striker with a plastic hammer.

f. Using a "torx" socket wrench (T40), tighten the striker mounting screws after the adjustment.

Torque:
23 N·m (235 kgf·cm, 17 ft.·lbf)

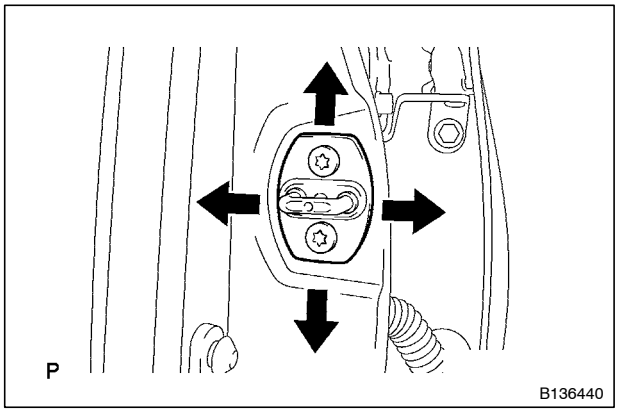

REAR DOOR

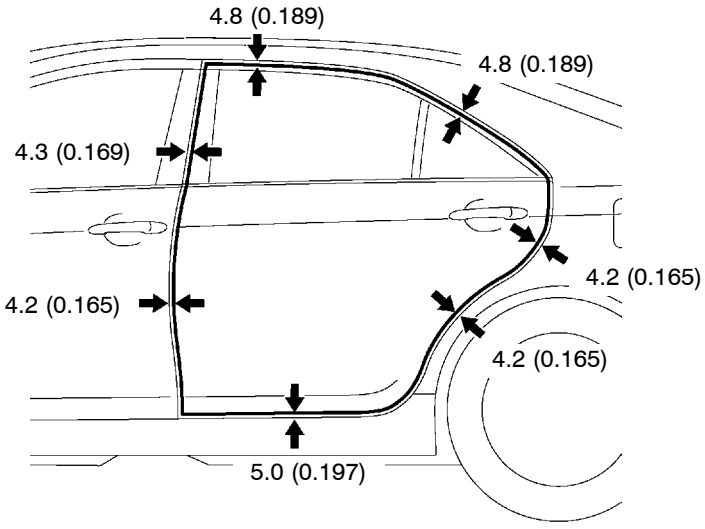

1. ADJUST REAR DOOR

HINT:

- *Before adjusting the door position for vehicles equipped with side airbags and curtain shield airbags, be sure to disconnect the battery. After adjustment, inspect the SRS warning light, the side airbag system, and the curtain shield airbag system for normal operation. Then initialize both airbag systems.*
- *Use the same procedures for the RH side and LH side.*
- *The procedures listed below are for the LH side.*
- *Centering bolts are used to mount the door hinge to the vehicle body and door. The door cannot be adjusted with the centering bolts on. Substitute the centering bolts with standard bolts (with washers) when making adjustments.*

a. Loosen the body's hinge bolts and adjust the door position.

SST
09812-00010


b. Tighten the body's hinge bolts after the adjustment.

Torque:
26 N·m (265 kgf·cm, 19 ft.·lbf)

c. Loosen the door's hinge bolts and adjust the door position.

d. Tighten the door's hinge bolts after the adjustment.


Torque:
26 N·m (265 kgf·cm, 19 ft.·lbf)

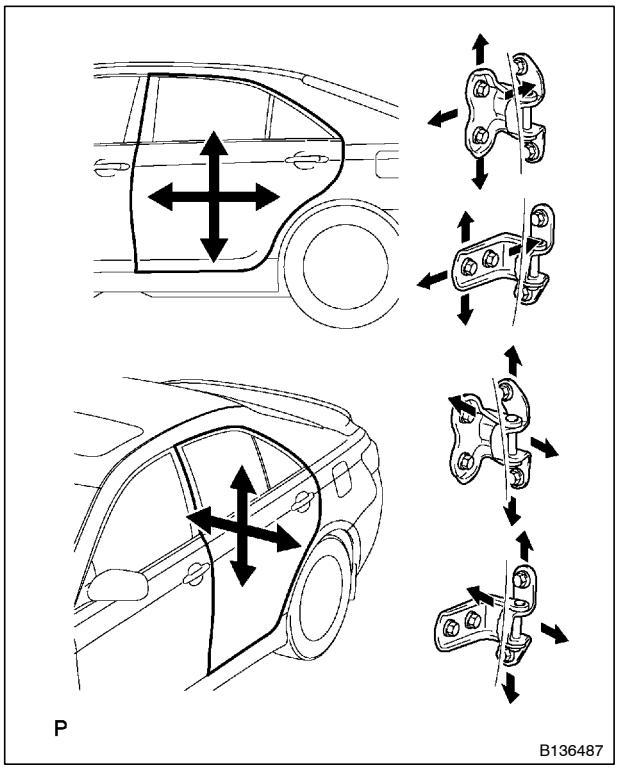


e. Using a "torx" socket wrench (T40), adjust the striker position by slightly loosening the striker mounting screws and hitting the striker with a plastic hammer.

f. Using a "torx" socket wrench (T40), tighten the striker mounting screws after the adjustment.

Torque:
23 N·m (235 kgf·cm, 17 ft.·lbf)

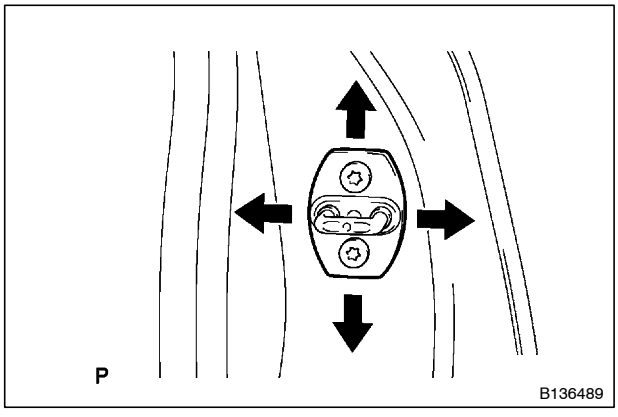

LUGGAGE COMPARTMENT DOOR

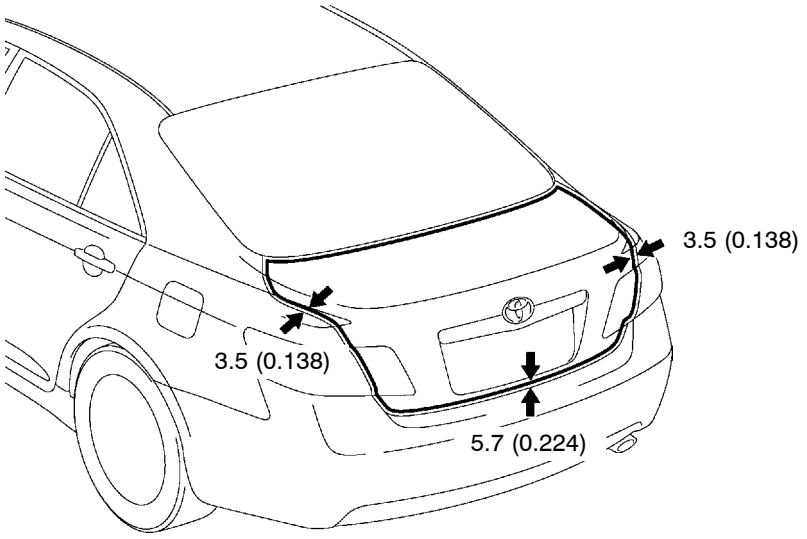


1. ADJUST LUGGAGE COMPARTMENT DOOR

HINT:

- *Centering bolts are used to mount the door hinge to the door. The door cannot be adjusted with the centering bolts on. Substitute the centering bolts with standard bolts (with washers) when making adjustments.*

a. Horizontally and vertically adjust the door by loosening the door side hinge bolts.

Torque:
7.5 N·m (77 kgf·cm, 66 in.·lbf)

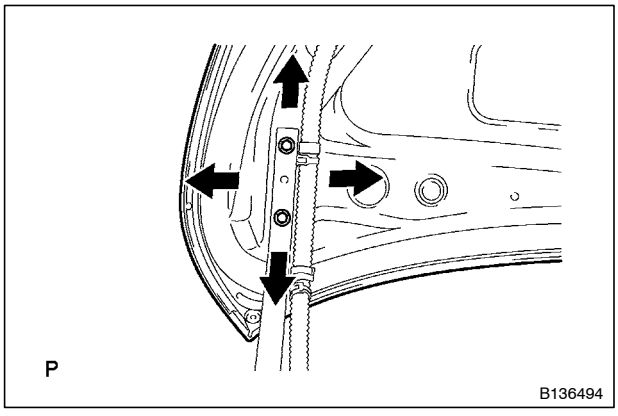

b. Adjust the striker position by slightly loosening the 2 striker mounting screws and hitting the striker with a plastic-faced hammer.

c. Tighten the striker mounting screws after the adjustment.

Torque:
5.5 N·m (56 kgf·cm, 49 in.·lbf)

