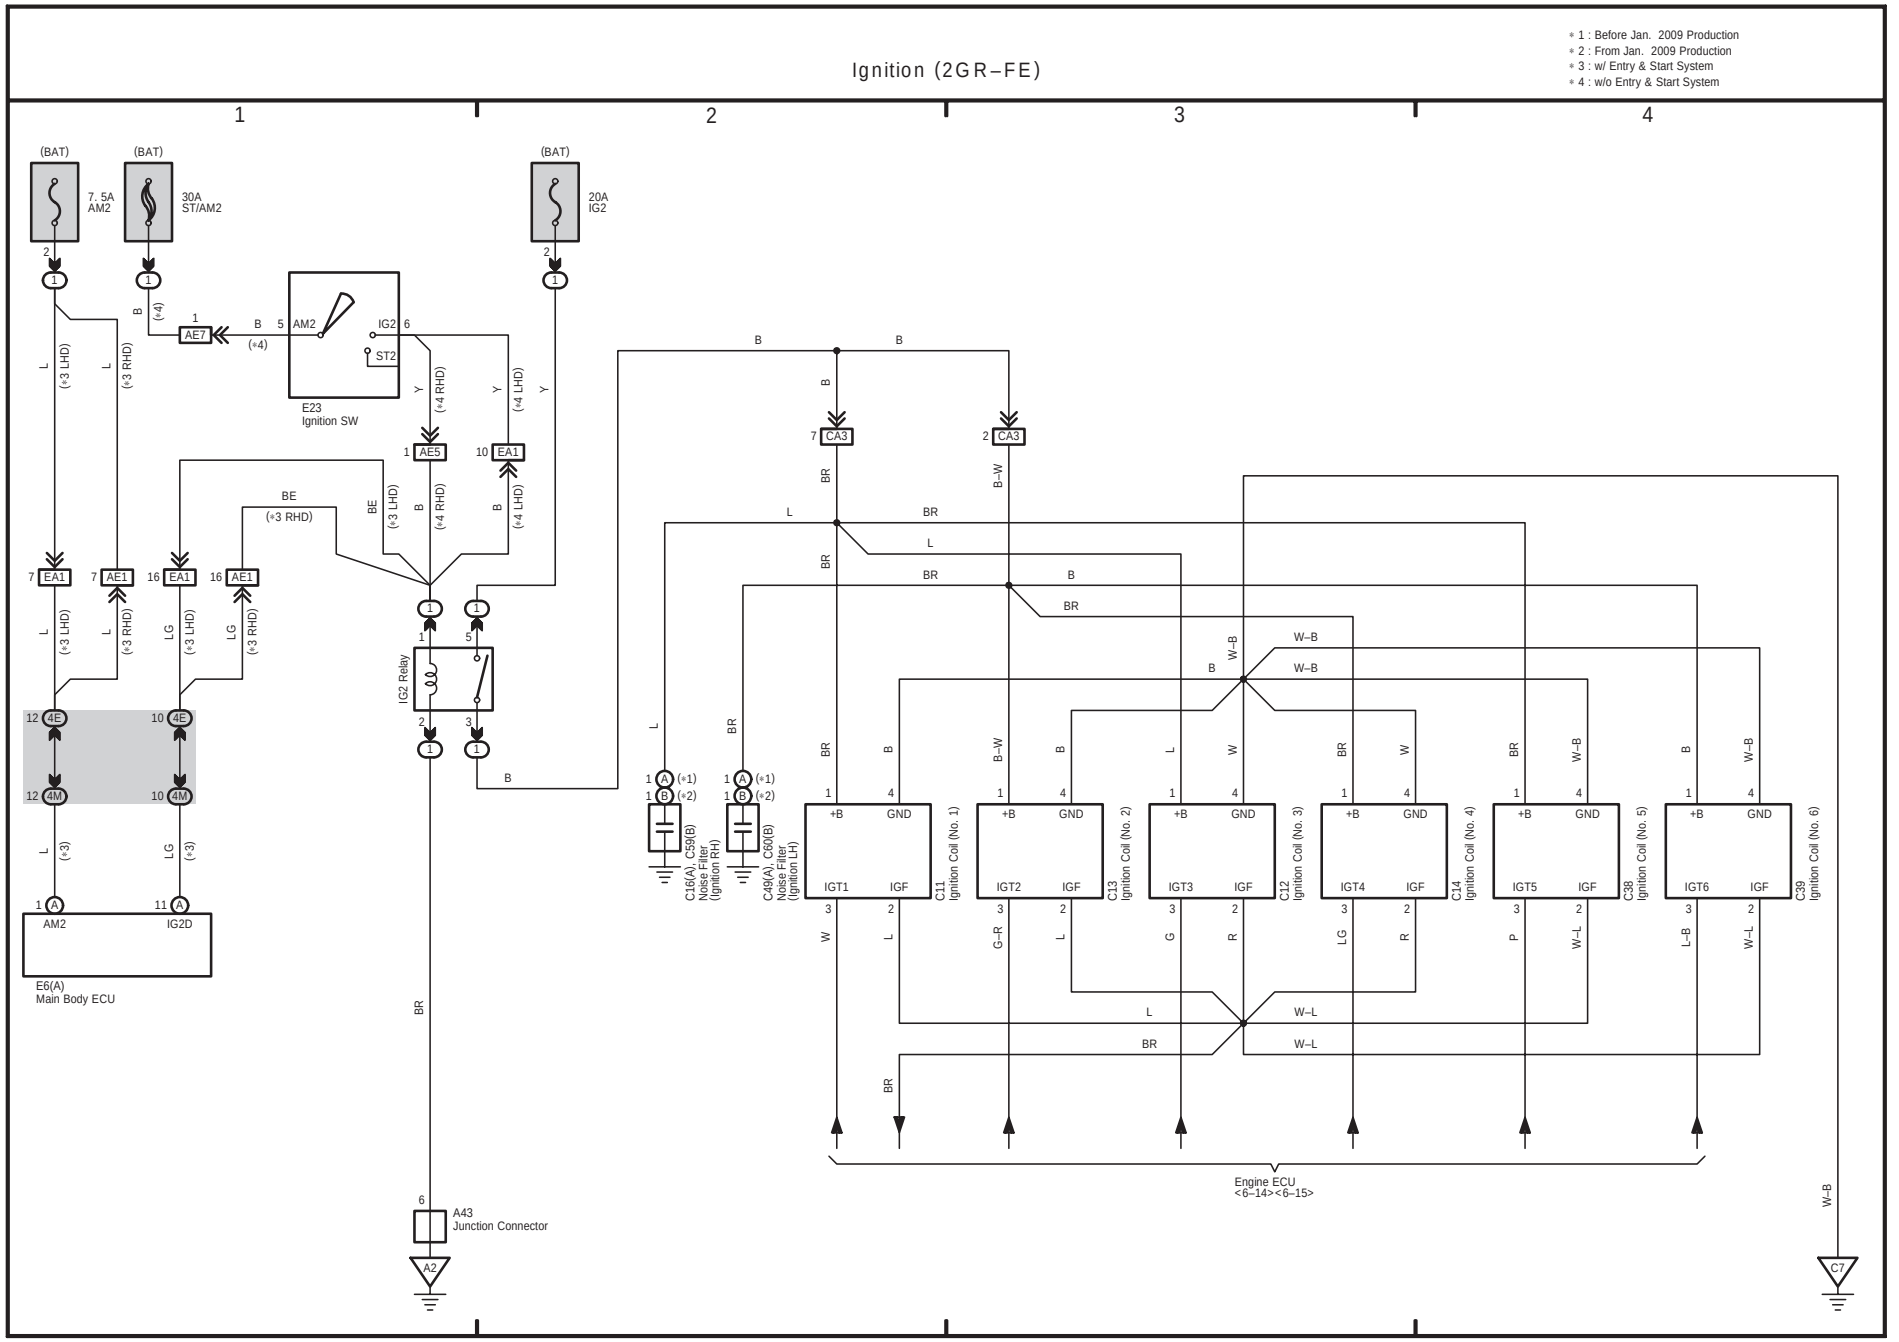

Ignition (2GR–FE)
* 1 : Before Jan. 2009 Production
* 2 : From Jan. 2009 Production
* 3 : w/ Entry & Start System
* 4 : w/o Entry & Start System
1
2
3
4
(BAT)
7. 5A AM2
30A ST/AM2
20A IG2
E23 Ignition SW
IG2 Relay
E6(A) Main Body ECU
A43 Junction Connector
C16(A), C59(B) Noise Filter (Ignition RH)
C49(A), C60(B) Noise Filter (Ignition LH)
C11 Ignition Coil (No. 1)
C13 Ignition Coil (No. 2)
C12 Ignition Coil (No. 3)
C14 Ignition Coil (No. 4)
C38 Ignition Coil (No. 5)
C39 Ignition Coil (No. 6)
Engine ECU
<6–14><6–15>
C7
A2