
■SYSTEM OPERATION

The states of the theft deterrent system are as follows:

State	Description	Theft detection
Disarmed State	The theft deterrent system is not set by the user.	—
Armed Preparation State	The standby state before the theft deterrent system activates when the system has already set.	—
Armed State	The theft deterrent system is being activated. (Theft can be detected.)	○
Alarm State	Theft has been detected and the warning operation activates.	○

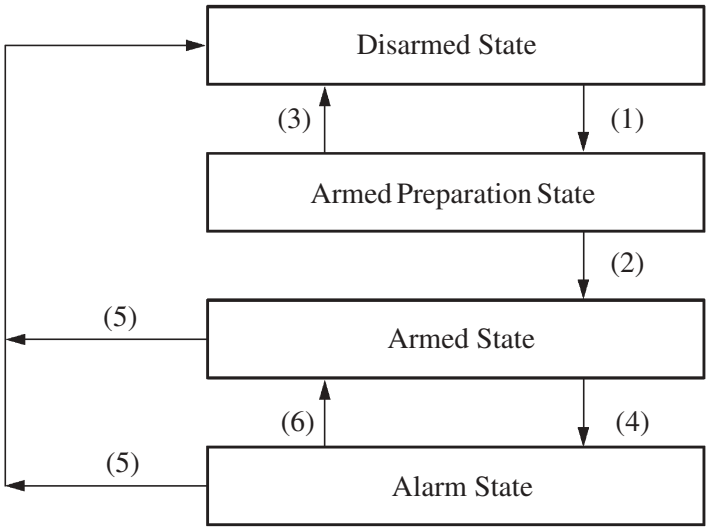

187BE40

The theft deterrent system activates as described in the diagram below when one of items in the chart occurs in order to cause the system to enter the respective state.

Condition	Item
(1)	● There is no ignition key in the ignition key cylinder. ● All doors, engine hood and trunk lid are closed. ● All doors are locked using the transmitter lock button.
(2)	The system state is switched when the doors, engine hood, and trunk lid are all closed and locked, and 30 seconds have elapsed.
(3)	The system state is switched when one of the following conditions is met. ● Any door, engine hood, or trunk lid is opened. ● Any door is unlocked. ● The ignition key is inserted in the ignition key cylinder. ● A terminal is disconnected from the battery and reconnected.

(Continued)

Condition	Item
(4)*	The system state is switched when one of the following conditions is met. ● With all doors closed, any door is opened. ● With all doors locked, any door is unlocked by a method other than the transmitter. ● The trunk lid and engine hood are opened by a method other than the transmitter. ● The ignition switch is turned ON without using the mechanical key. ● A terminal is disconnected from the battery and recconected.
(5)	The system state is switched when one of the following conditions is met. ● Any door is unlocked with the mechanical key or transmitter. ● The trunk lid is opened with the mechanical key or transmitter. ● The ignition switch is turned ON.
(6)	After 35 seconds, the alarm stops sounding and the system returns to the armed state.

*: If detection of the apparent theft continues, the warning resumes 5 seconds after the previous warning ends and is repeated a maximum of 10 times.