
# SRS AIRBAG SYSTEM

## ■ DESCRIPTION

### 1. General

- The driver and front passenger dual-stage SRS (Supplemental Restraint System) airbags supplement the seat belts to help to reduce the shocks to the head and chest of the driver and front passenger in the event of a frontal collision.
- The SRS side and curtain shield airbags help to reduce the shocks to the head and chest of the driver, the front passenger in the event of a side collision.
- The front passenger airbag door is designed to be invisible. This means that when the airbag inflates, the instrument panel will split along the cleavage line.
- A fuel cut control that stops the fuel pump when any airbags are deployed, is used. For details, see page EG-52.

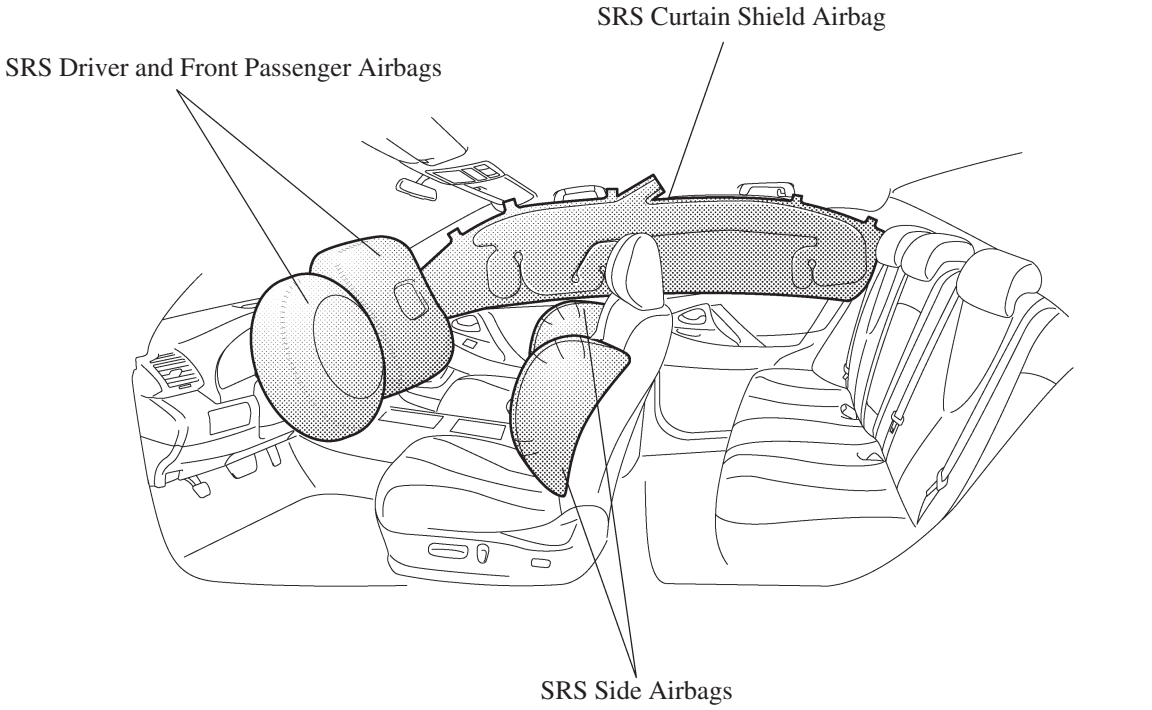


**LHD Model**