
■CHILD RESTRAINT SYSTEM

ISO-FIX bars for securing child seats has been provided behind the seat cushion of the rear seat.
Three CRS anchor brackets for securing a child seat are provided above the package tray trim.

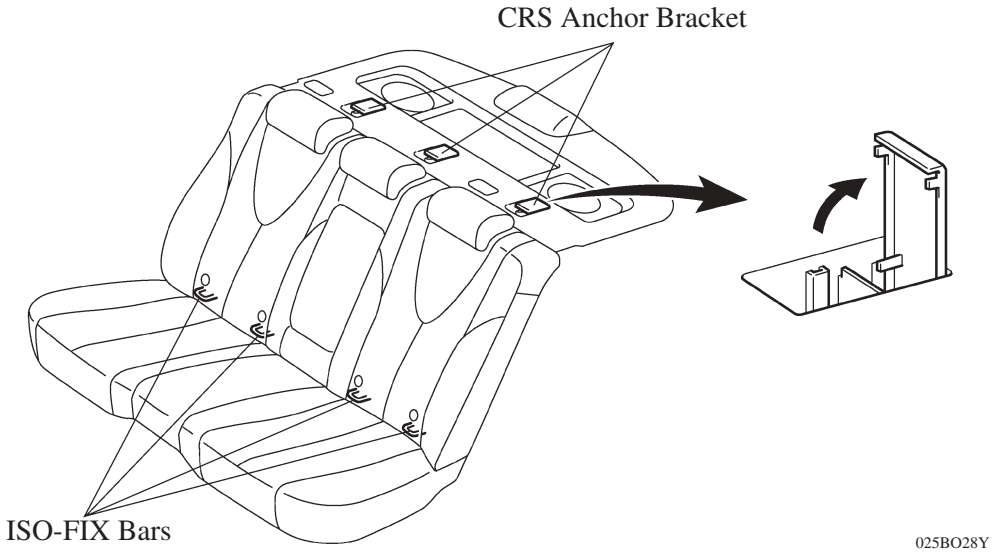

■SEAT BELT

1. General

The following types of seat belts are provided.

Seat Position	Seat Belt Type	Remarks
Driver	3-point ELR*1	Electrical Sensing type Pretensioner and Force Limiter
Front Passenger	3-point ELR*1& ALR*2	Electrical Sensing type Pretensioner and Force Limiter
Rear Passenger	3-point ELR*1& ALR*2	—

*1: Emergency Locking Retractor
*2: Automatic Locking Retractor

2. Pretensioner and Force Limiter

In accordance with the ignition signal from the airbag sensor assembly, the seat belt pretensioner activates simultaneously with the deployment of SRS airbag for the driver and front passenger.
In the beginning of the collision if the tension of the seat belt applied to the occupant reaches a predetermined level, the force limiter activates to control the force.

▶ Front Airbag Operation ◀

