
ENTRY AND START SYSTEM


■ DESCRIPTION


- This system is standard on the 2GR-FE engine models.
- The entry and start system not only has a wireless door lock remote control function and engine immobilizer function, but by carrying the key the following functions (entry function and push button start function) are also possible without having to use a key or transmitter button. It is an extremely convenient system.
  - The engine can be started by simply pressing the engine switch while depressing the brake pedal (Push Button Start Function)
  - Door unlock/lock (Entry Unlock/Entry Lock Functions)
  - The trunk can be opened (Trunk Open Function)
  - Wireless door lock control function.

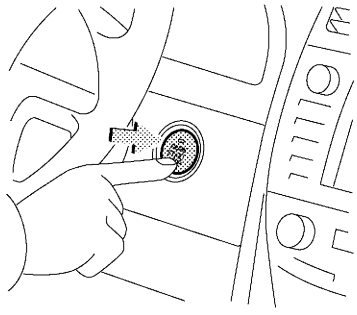


Entry Unlock / Lock Functions



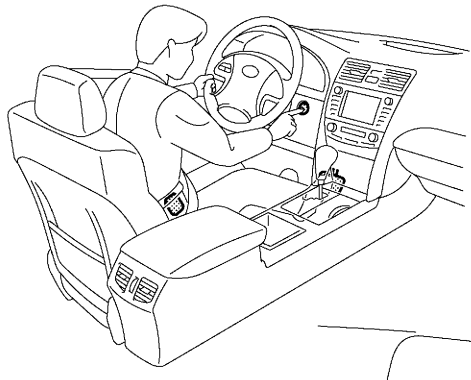

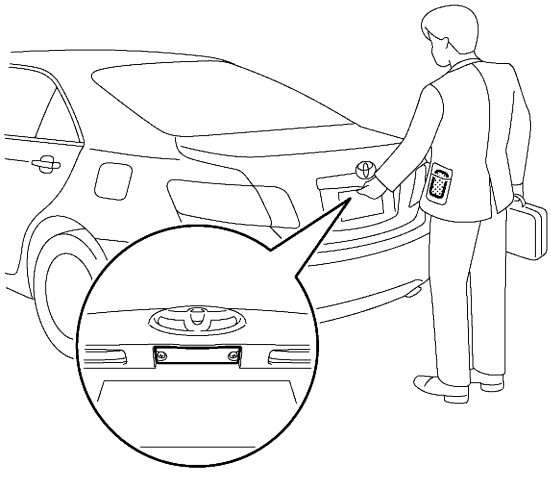

Trunk Open Function

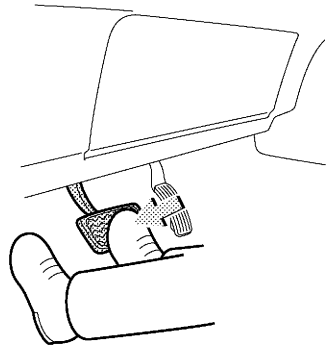

Push Button Start Function

025BE80P