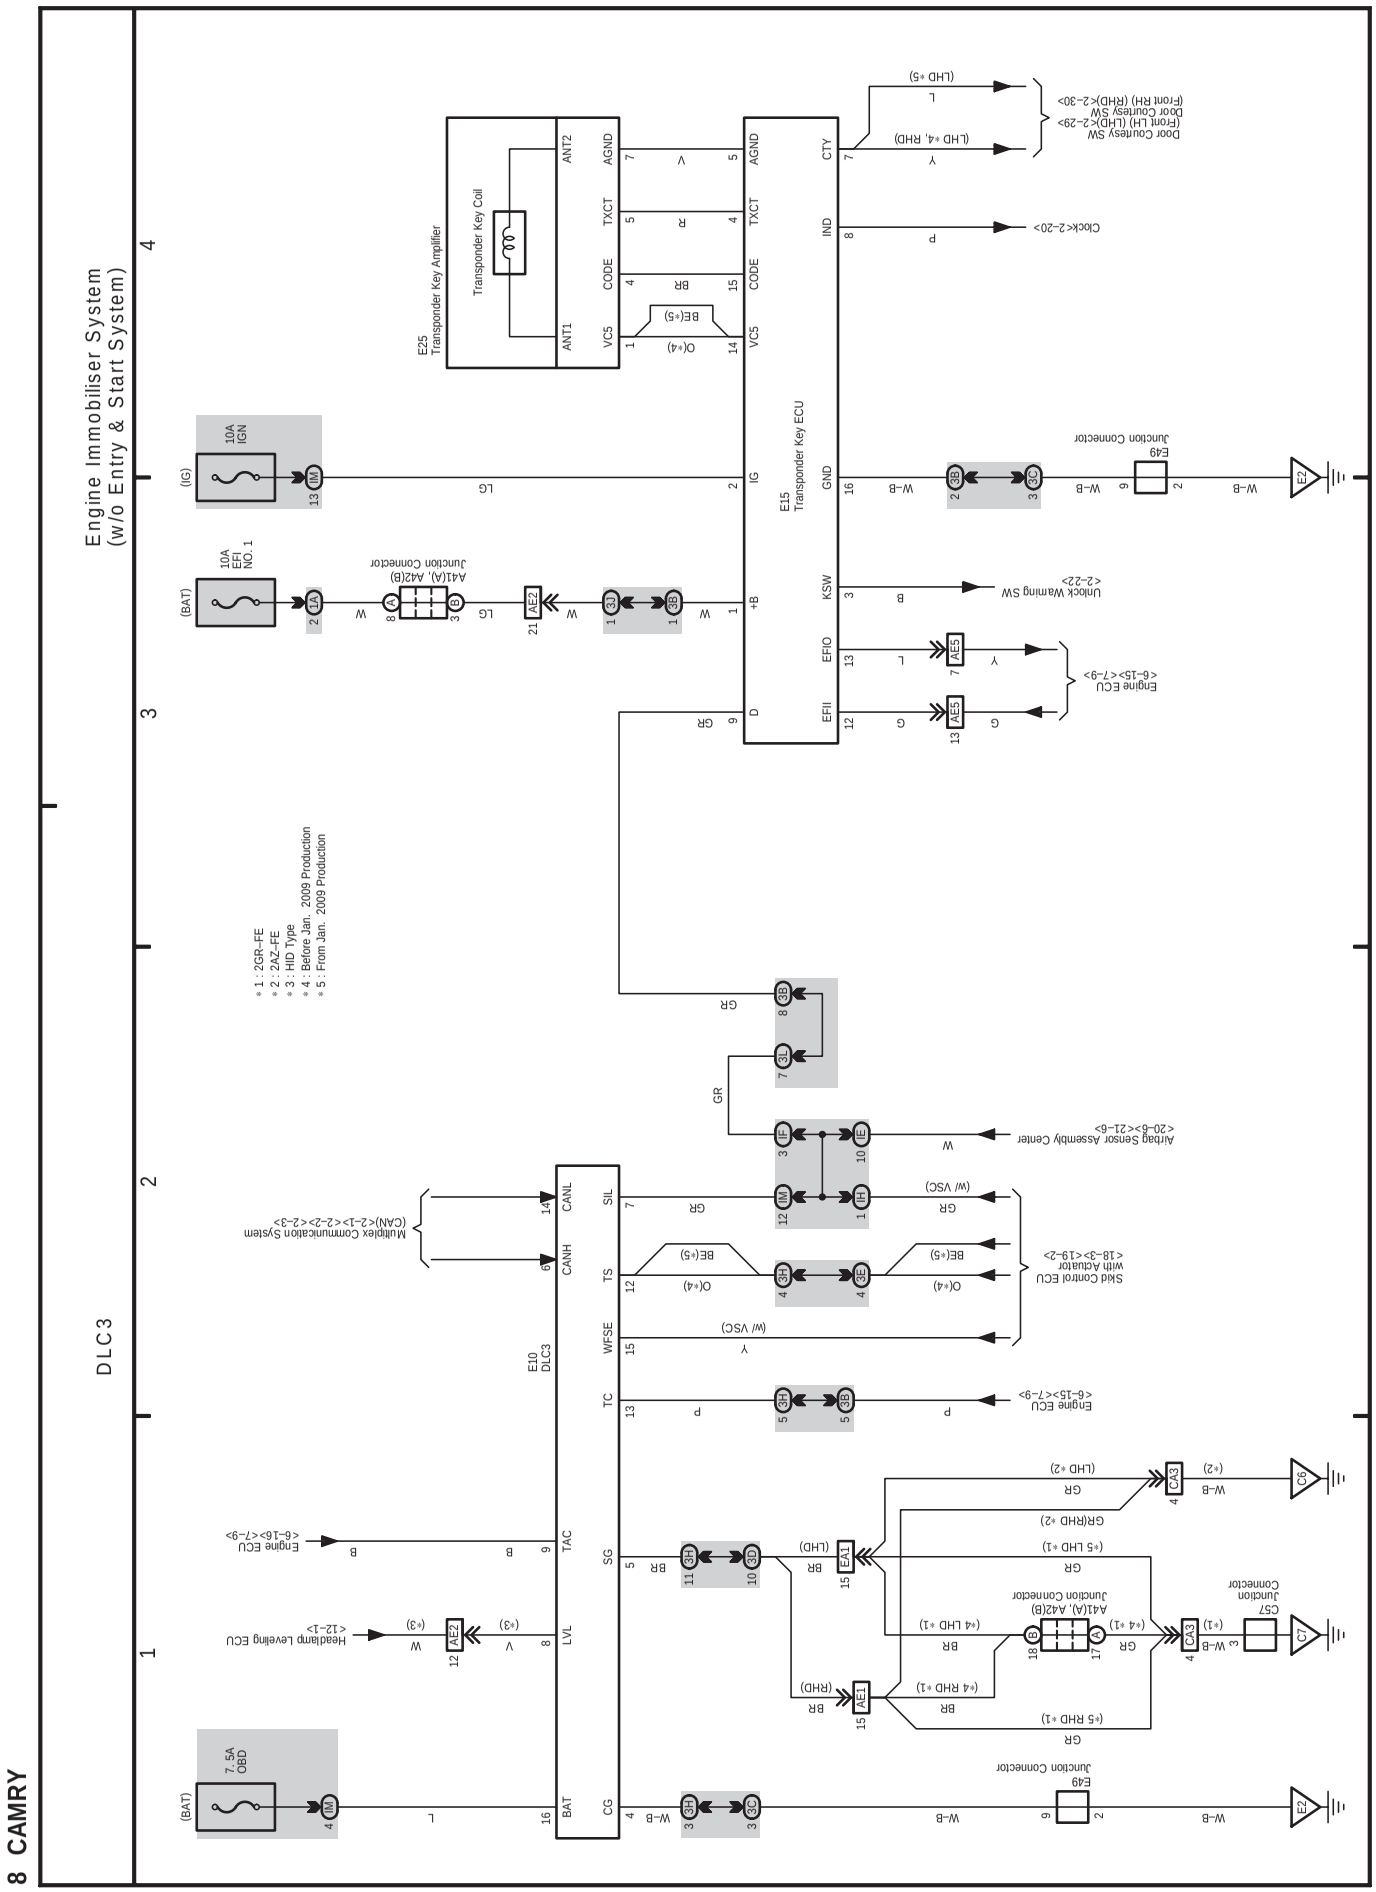

Engine Immobiliser System
(w/o Entry & Start System)
DLC3
E10
DLC3
E15
Transponder Key ECU
E25
Transponder Key Amplifier
Transponder Key Coil
10A
IGN
10A
EFI
NO. 1
7.5A
OBD
Junction Connector
E49
Engine ECU
<6-15><7-9>
Skid Control ECU
with Actuator
<18-3><19-2>
Airbag Sensor Assembly Center
<20-6><21-6>
Multiplex Communication System
(CAN)<2-1><2-2><2-3>
Headlamp Leveling ECU
<12-1>
Clock<2-20>
Unlock Warning SW
<2-22>
Door Courtesy SW
(Front LH) (LHD)<2-29>
Door Courtesy SW
(Front RH) (RHD)<2-30>
A41(A), A42(B)
Junction Connector
C57
Junction
Connector
C7
C6
* 1 : 2GR-FE
* 2 : 2AZ-FE
* 3 : HID Type
* 4 : Before Jan. 2009 Production
* 5 : From Jan. 2009 Production