
RADIATOR SUPPORT UPPER BRACE (ASSY)

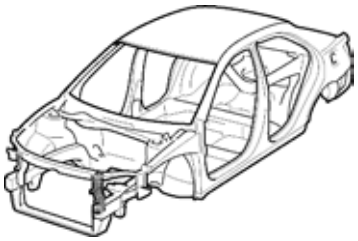

F25702A


With the radiator upper support removed.

Symbol meaning

REMOVAL	▲ ▲ : Remove Weld Points
INSTALLATION	■ I : MIG Plug Weld

F25702B

REMOVAL·INSTALLATION

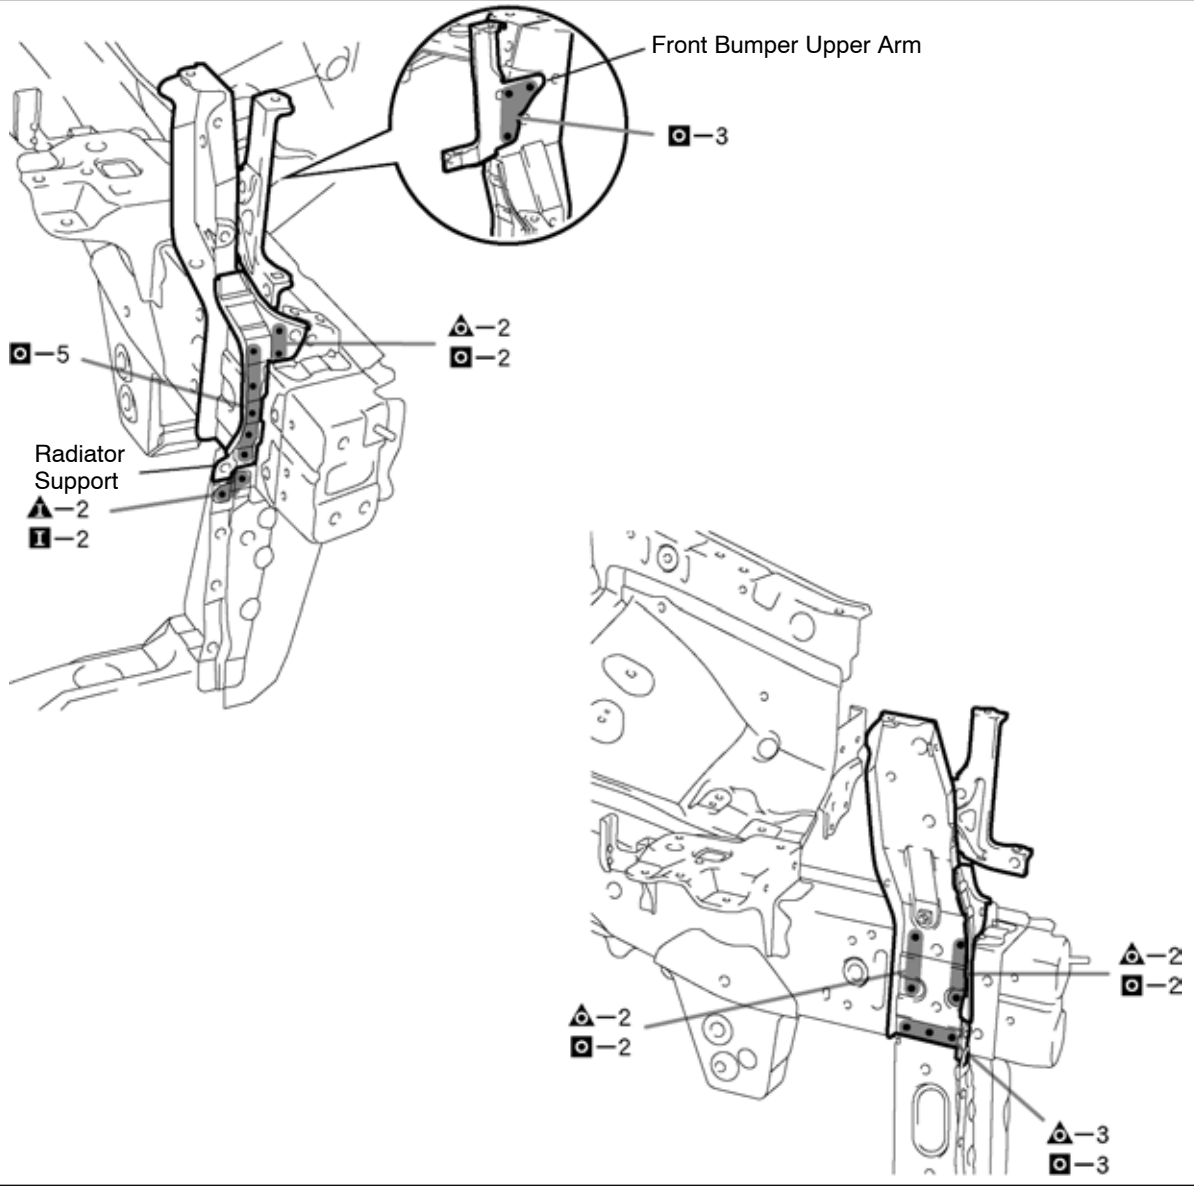

F25702


REMOVAL POINT


1 Remove the radiator support at the same time.

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

[for 2AZ-FE]

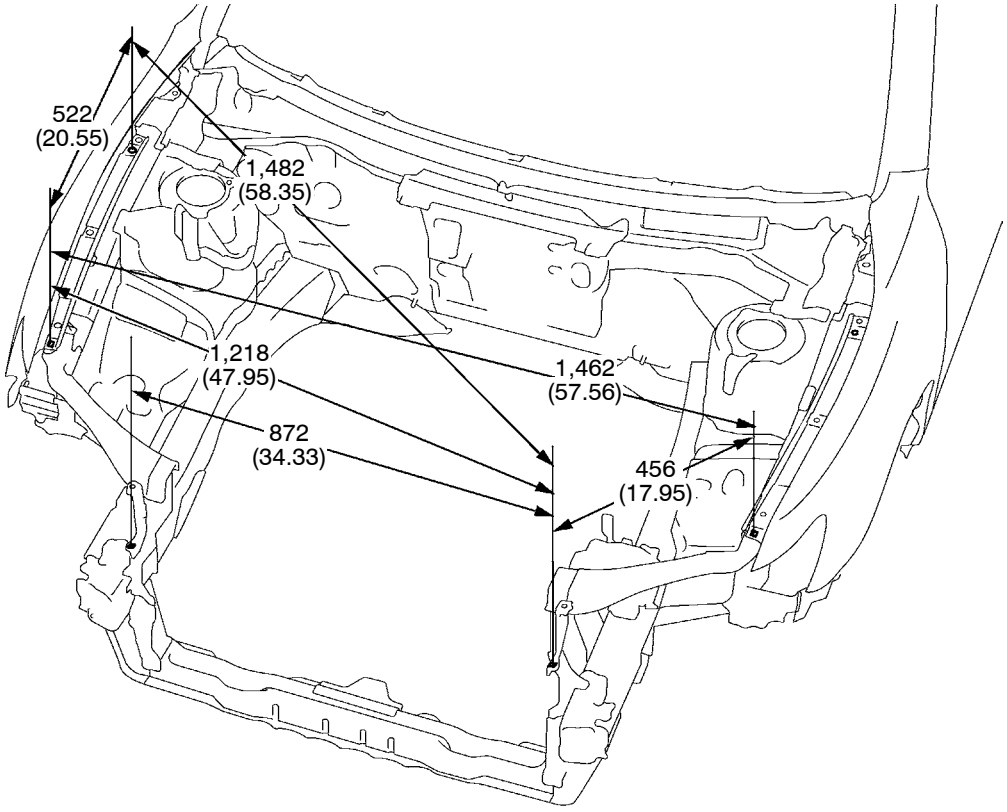

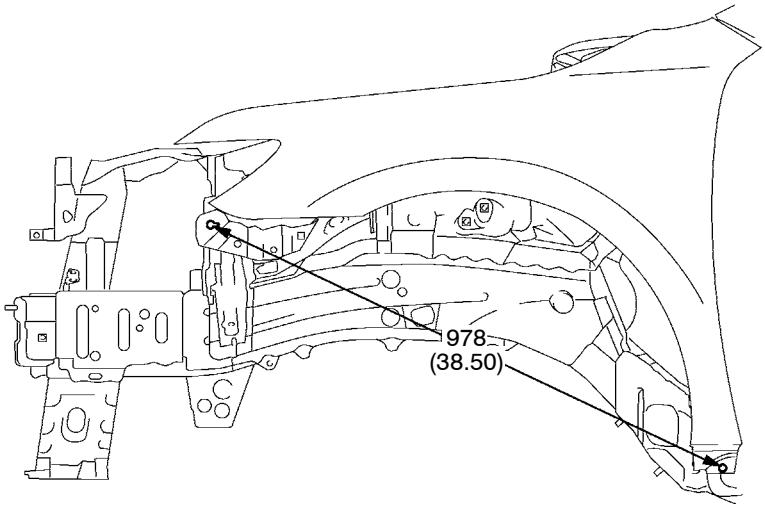


mm (in.)


F25704

INSTALLATION POINT

1 Measure the dimensions before installing the headlights.
2 These values are reference values.

[for 2GR-FE]

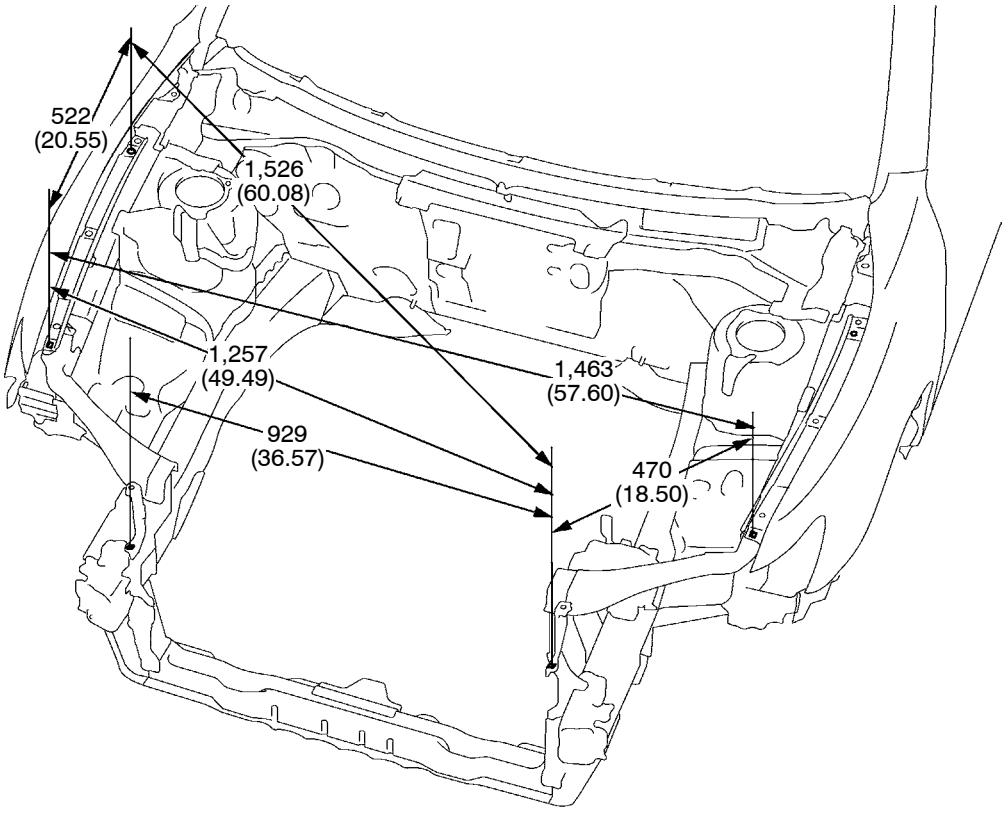

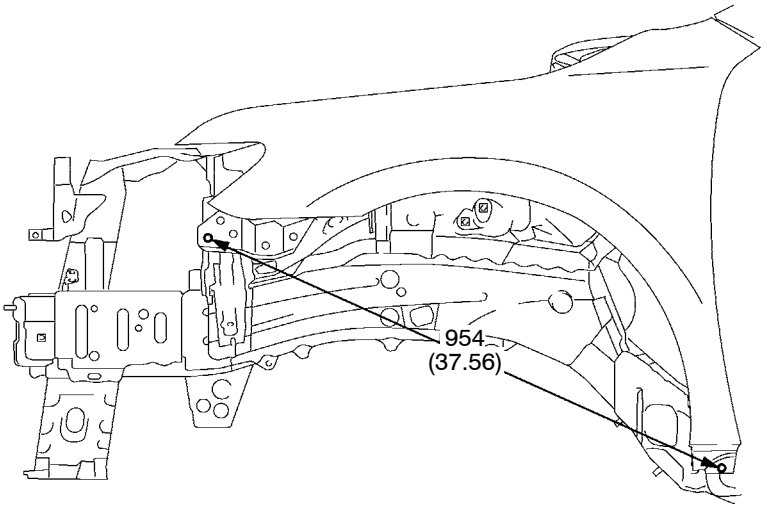

mm (in.)

F26101

INSTALLATION POINT

1 Measure the dimensions before installing the headlights.
2 These values are reference values.