
# FRONT SIDE MEMBER (CUT-P)

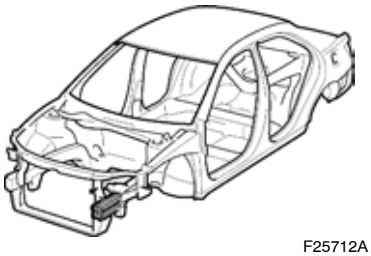

F25712A


With the radiator support removed.


Symbol meaning

: Remove Weld Points : Cut and Join Location

F25712B

**REMOVAL**

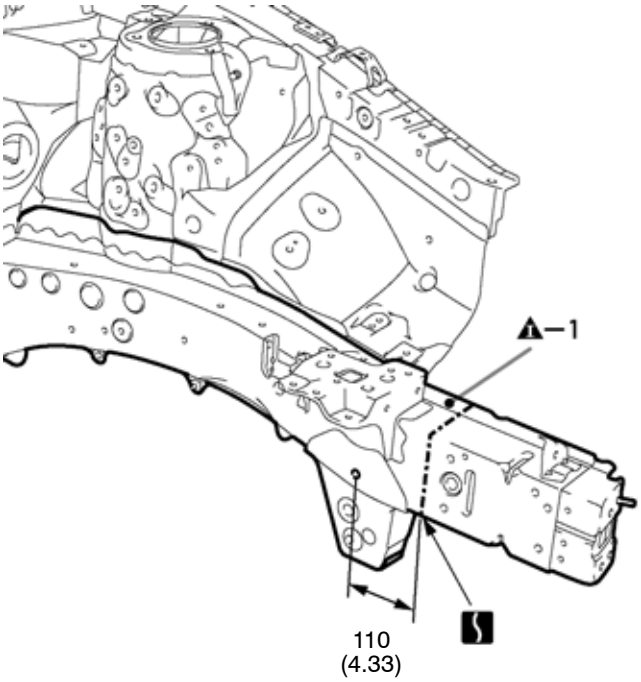

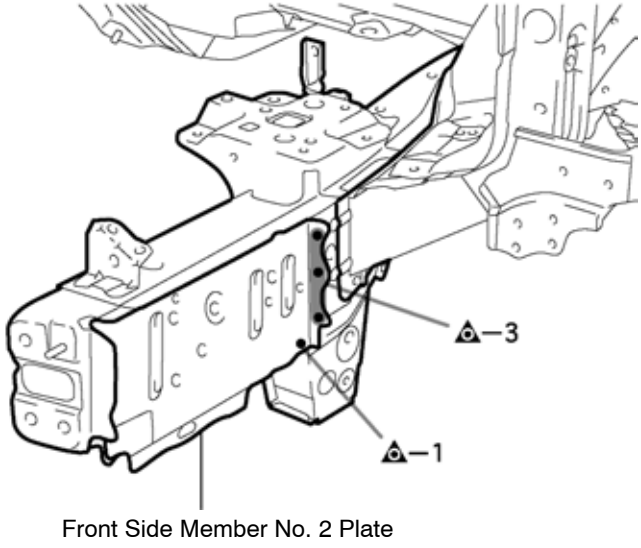
mm (in.)

F26351

**REMOVAL POINT**


1 Remove the front side member No. 2 plate at the same time.


Symbol meaning

: MIG Plug Weld : Butt Weld

F25713B

**INSTALLATION**

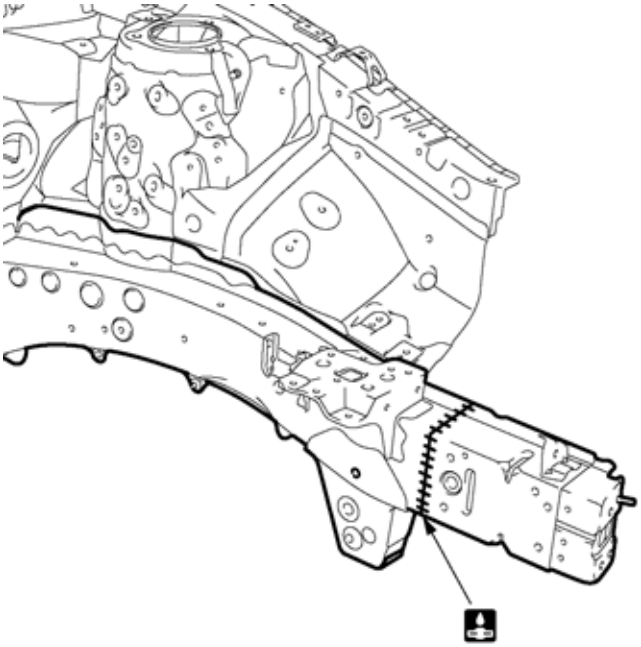

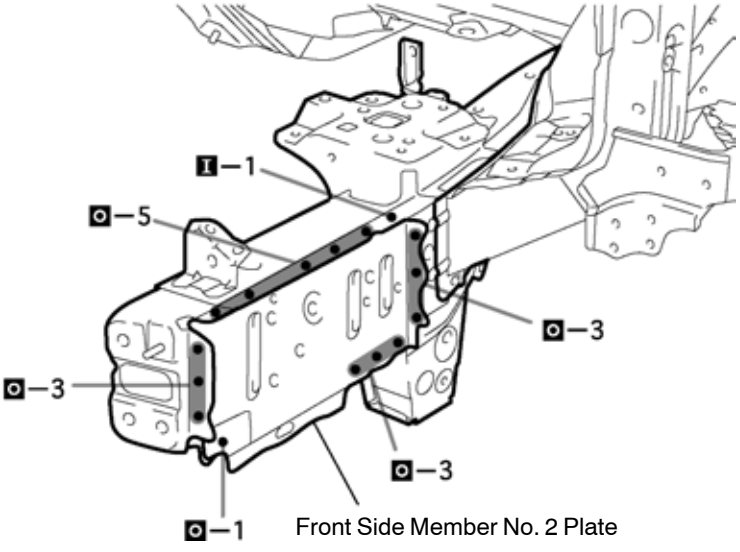


F26352

**INSTALLATION POINT**

1 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
2 After welding, apply undercoating to the corresponding parts. (See the paint·coating)
3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.